

Gotharman's F>< deFormer



Granular Effects Processor

User Manual V 040

Contents Of This Manual

Introduction	4
Structure	7
Getting Started	8
The User Interface	12
Well, Now It's Time For Some Action	14
Editing Parameters	15
Preset Parameters	17
Setup	17
Modulation Sources	18
Sampler	19
Sequencer Main	21
Sample/Start Seq	22
Tune/Xtra Seq	23
Distortion	24
Filter	25
Granular Effects (EFX)	27
Delay 1	29
Delay 2	31
Reverb 1	32
Reverb 2	33
PitchShaper	34
GlitchShifter 1 and 2	35
Sample Pitch	36
Variator	37
Time Stretcher	38
Abstruct0	39
AnaGran (Granulator)	40
Chorus	42
LFO's	43
Save Preset	45
Sample Record and Erase	46
Expansion Box	49
Xmit Preset	50

Update OS	51
Xmit OS	57
MIDI Implementation	58

Introduction

Thank you very much for purchasing/consider to purchase an FX deFormer.

FX deFormer is the smallest member of the deFormer family, with most of its features derived from its bigger brothers.

It has a simple monophonic sampler, a simple step sequencer, a distortion section and a filter, but the main powers in this box is in its granular effects section. It is updatable via MIDI, so updates might come now and then.

It has audio in an out, MIDI in and out and one expansion box connector.

It can hold 512 user programmable presets, that holds all settings for the sampler, the sequencer, the distortion, the filter, an optional expansion box and the granular effects.

The Play/Enter button can trigger a sample playback, start/stop sample playback, start/stop the sequencer or function as a bypass switch. It is up to the user, what it should do in each preset. It is also used for confirming a preset change.

The sampler can hold up to 10 minutes of samples, max 127. Sample select, sample start point and sample pitch can be modulated and controlled by the sequencer.

Samples can be recorded from FX deFormer's audio input or output, or imported as wav files, using the optional USB box.

The sequencer has up to 16 steps. It has 4 tracks, and a value can be adjusted for each step of each track. It can trigger a sampling, select samplings, control the sample start point and pitch, and modulate almost any parameter.

In the distortion section, you can choose from 4 different types of distortion: Valve, Sine, Fuzz and soft. The Distortion can process the audio input and the sampler.

In the filter section, you can choose from 8 different filter types: LPF, BPF, BP8, HPF, BEF, ADD, BASS and LOFI. The filter can be placed on the audio input and sampler, or inside the granular effect. This also has some special "Filter adjust" parameters, that can change the shape of the filter completely, and make new filter types.

In the granular effects section, delay 1 and 2, reverb 1 and 2, granulator, chorus, pitch shaper, glitch shifter 1 and 2, variator, time stretch, sample pitch and abstract0 are available. The granular effects can be applied to the audio input and the sampler.


Expansion boxes for analog control (AnaX), for analog filtering (SP box, Tube box or anAmoNo box) or for import/export of wav files and presets (USB box) can be connected to its expansion port.

Most parameters can be modulated by the sequencer, by 4 LFO's with variable wave shape and by MIDI CC's.

It is possible to have one sampling, 4 sequencer tracks, one distortion effect, one filter, one granular effect, one expansion box and 4 LFO's running at the same time.

I hope you will deForm some great tracks with it.

Gotharman's FX deFormer structure

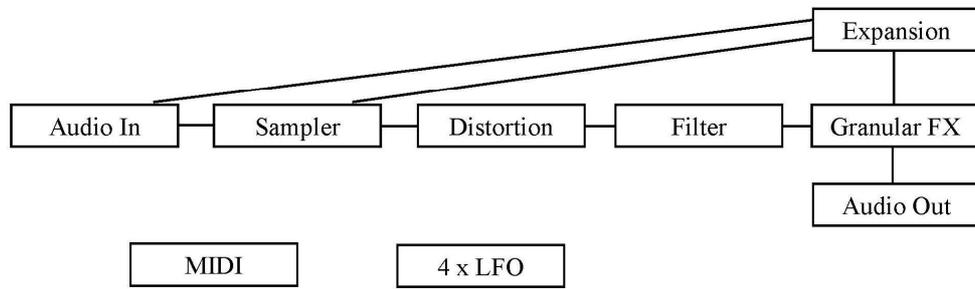

Getting Started

Well, now that you got your FX deFormer, you probably can't wait to get it up and going, so let's jump right to it.

Connecting:



On the left end panel of your FX deFormer, you will find the connections for audio input and output and for an expansion box.

Connect the audio output to a mixer or an amplifier, or anything else that ends out in a set of speakers, a single speaker, or even a pair of headphones, if you are in a neighbour friendly mood. Since it doesn't have build in speakers, it just needs to be connected to something, that can transfer its amazing sound to you.



On the right end panel of your FX deFormer, you will find the power switch and connections for power supply and MIDI in and out.

If you plan to control FX deFormer from a MIDI device, connect that to its MIDI input.

If you would like to effect some other gear through FX deFormer's filter and effects, connect this to the Audio Input. The input can be switched to accept standard line level equipment or Hi-Z equipment like a guitar.

It is also possible to synchronize FX deFormer's sequencer to another device that transmits MIDI clock, like it is possible to sync another device to FX deFormer's MIDI clock, via MIDI in and out.

If you have also purchased an expansion box, please also connect this to the "Expansion" connector, before turning your FX deFormer on. Please refer to the specific expansion box manual, for details about how to connect and use it together with FX deFormer. Using expansion boxes with FX deFormer might differ a little, from using them with LD. The differences are explained later in this manual.

Several expansion boxes are available, and more might come.



AnaX mkII banana and minijack models

Makes it possible to use your FX deFormer together with analog gear.

SP-Box

Adds an extra Emu SP-1200 audio output stage to your FX deFormer, with 12 bit converter and analogue filter.

Anamono Box

Adds an extra output stage, derived from my anAmoNo synthesizer, with 2 analogue filters, analog distortion and a unique G-Ray feedback circuit.


Tube Box

Adds an extra output stage with a real tube bandpass filter with drive.

USB box

Makes it possible to import/export wav files and presets.

Connect the supplied power adaptor to the Power input, and to a 100V to 240V power source.

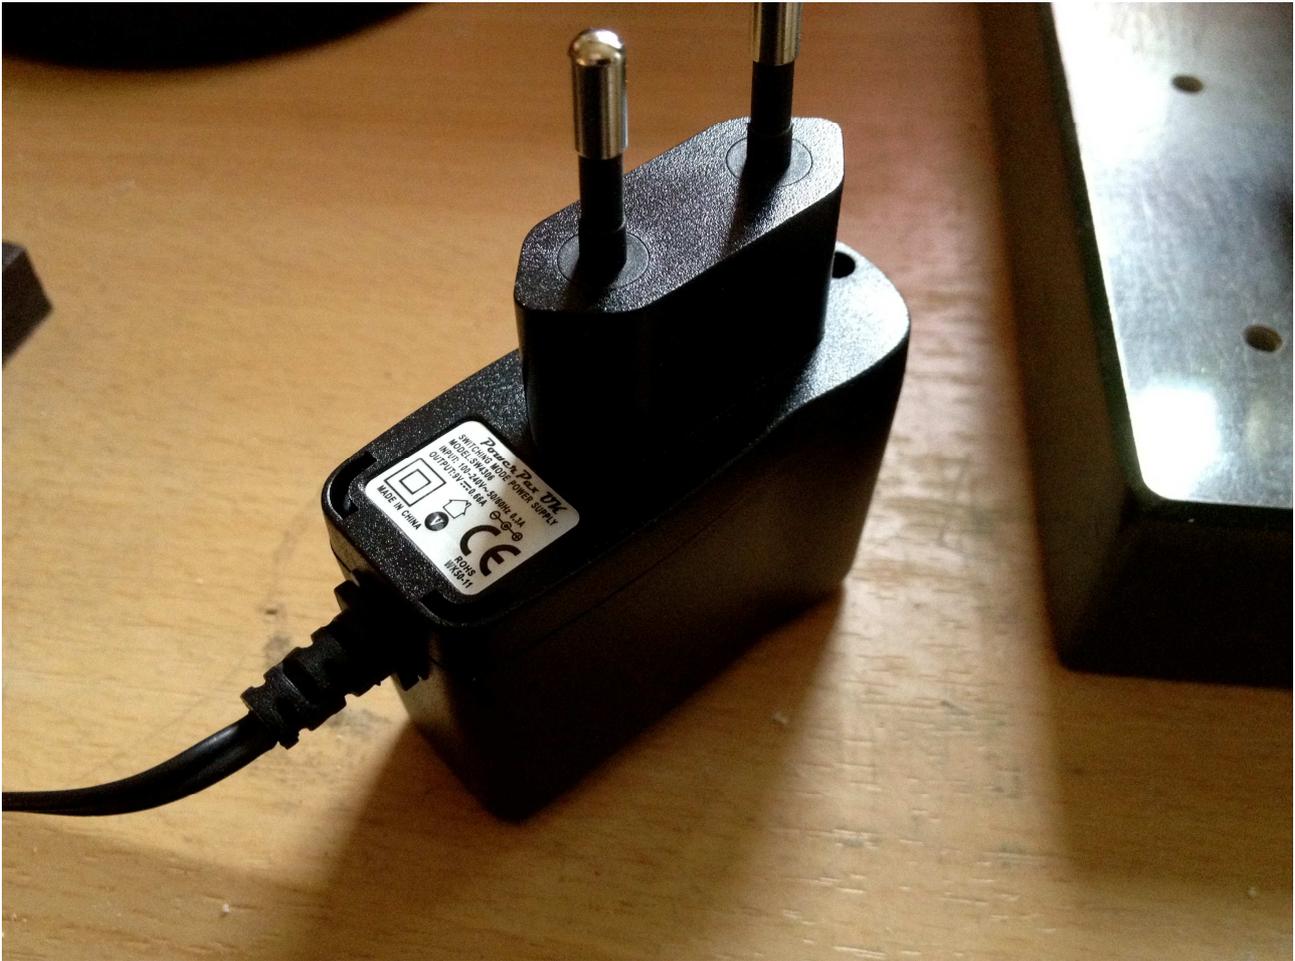

It's a 9V, 660 mA type with a 2.1 mm DC plug, with positive middle.

Turn it on

Toggle the power switch on the right end panel, so its pin is pointing down. Your FX deFormer should now turn on.

The User Interface



Play/Enter button

The function of this button is settable by the user, for each preset. It can trigger sample playback, start/stop sample playback, start/stop the sequencer or function as a bypass switch.

When changing preset, this must also be pushed, to confirm.

On various edit pages, it has other functions. This is described in the dedicated sections of this manual.

Dec and Inc buttons

On the preset select screen, these will select preset. In the edit menu's they will select among the different edit pages. Holding one of these buttons down, will cause FX deFormer to auto increment/decrement.

Dec + Play/Enter - Edit button

Holding the Dec button down, while pushing the Play/Enter button, will enter the edit menu's. From the Preset Select screen, it will enter the edit group menu. From the edit group menu, it will enter the actual parameter edit pages.

Inc + Play/Enter - Exit button

Holding the Inc button down, while pushing the Play/Enter button, will exit from any menu to the level above, with the preset select screen being the highest possible level.

Volume knob

Turns the output level of the FX deFormer up or down, depending on what direction you are turning it. Clockwise movement will turn the volume up, counterclockwise movement will turn the volume down.

The 3 Edit Knobs

The 3 edit knobs, placed right under the display, edits up to 3 parameters at a time on the various edit pages. When on the Preset select page, or the edit group select page (explained later), these knobs sends MIDI CC's 1, 2 and 3, both to the MIDI OUT and internally. Parameters assigned to be controlled by "cc1-3" will be affected, when turning these.

These are REAL potmeters, NOT jumpy rotary encoders.

Well, now it's time for some action

If you have followed the previous steps, your FX deFormer should now be turned on and connected. When it is turned on, it starts up on the preset select screen:

[MetalVerb1]
A01 (0- 0)

This is the FX deFormer main page.

On the top of the display it writes the name of the selected preset. It remembers what preset was selected, when it was turned off, and goes to that preset when it is turned on again.

On the bottom of the display it writes the selected preset bank and number. FX deFormer has sixteen banks (A-P) with each 32 presets (512 in all). The number shown in paranthes, are the MIDI bank select number (MIDI ctrl 32) followed by a slash and the MIDI program change number you will have to transmit to FX deFormer, for selecting this preset, from an external MIDI-device.

Listening to the pre-programmed presets

- On all the pre-programmed presets, the Play/Enter button is set up to either trigger a sampling, start/stop a sampling, or start/stop the sequencer.
- Push the " Play/Enter" button one time.
- The sequencer/sampling will now start to play back.
- To stop it, hit the " Play/Enter" button again.

Alternatively, you can connect an audio source to the audio input, and just listen to this getting treated by FX deFormer's effects. In that case, you do not have to push the Play/Enter button.

Listen to some other presets

Use the "Inc" and "Dec" buttons to select another preset.

The "Play/Enter" LED will start to flash.

Push the "Play/enter" button to confirm the change to another preset.

If the sequencer is playing back, the "Play/Enter" LED will now start to flash faster, until it reaches the sequencer end step. Then the "Play/Enter" LED will go out, and playback of the newly selected preset will start.

If the sequencer is stopped, it will change to the new preset, immediately when the "Play/Enter" button is pushed.

Editing parameters

From the preset select screen

[MetalVerb1] A01 (0- 0)

Hold the “Dec” button, and push the “Play/Enter” button one time, to enter this screen:

Setup

This is referred to as an ”Edit Group screen”.

By pushing the ”Inc” and ”Dec” buttons, you can select between various edit group screens:

Sampler

Seq Main

Sample/Start Seq

Tune/Xtra Seq

Distortion

Filter

EFX

LFO

Save Preset

Sample Rec

Expansion Box -USB box

Xmit Preset

Update OS

Xmit OS

To go back to the preset select screen, from the edit group screens, hold the “Inc” button, and push the ”Play/Enter” button.

To enter the parameters for the selected group, hold the “Dec” button, while hitting the ”Play/Enter” button.

The first parameter screen of the ”SAMPLER” group of parameters looks like this:

Samp . Play . Gain
1 Samp + 0

Use the 3 edit knobs right below the display to edit the parameter values.

Push the ”Inc” and ”Dec” buttons to select the various parameters.

Hold the “Inc” button, and push ”Play/Enter” to go back to the edit group select screens.

Preset Parameters

SETUP

The Setup section is where you adjust common settings, like settings for the audio input and MIDI settings.

The input gain setting is stored separately with each preset, all other settings in this section are global, and are stored automatically, when changed.

Inp – Line, Hi-Z. Selects the audio input to match a line level audio source, or a hi-z source, like a guitar. This parameter is global, and are automatically globally stored, when changed.

Gain – -128 to +127. Adjusts the level of the audio input. Negative values will damp the signal, positive values will gain the signal. This parameter is stored with each preset.

Used% – 0 to 100. Shows how many percent of the sample memory, that are in use. This is not an adjustable parameter.

Chan – 1 to 16. Common MIDI channel select. FX deFormer will receive note on's and off's, and will receive and transmit controllers on the channel selected here. This parameter is global, and are automatically globally stored, when changed.

Sync – Int, Ext. Clock select. Selects whether FX deFormer's sequencer should sync to its own internal clock source or to an external MIDI clock source. If "ext" is selected here, a MIDI clock transmitting device must be connected to FX deFormers MIDI IN. This parameter is global, and are automatically globally stored, when changed.

Xmit – Off, On. Selects whether or not FX deFormer should transmit MIDI clock pulses on MIDI OUT. Unlike most other MIDI gear, FX deFormer is able to re-transmit external MIDI clocks, that is present on its MIDI IN. This parameter is global, and are automatically globally stored, when changed.

Modulation Sources

Many of FX deFormer's parameters can be modulated. Here are a complete list of the possible modulation sources. Modulation destinations are explained in each parameter group section.

Lf1+ - LFO1

Lf1- - LFO1 inverted

Lf2+ - LFO2

Lf2- - LFO2 inverted

Lf3+ - LFO3

Lf3- - LFO3 inverted

Lf4+ - LFO4

Lf4- - LFO4 inverted

StQ+ - Sequencer sample start track

StQ- - Sequencer sample start track inverted

XtQ+ - Sequencer Xtra track

XtQ- - Sequencer Xtra track inverted

Cv1+ - AnaX CV input 1 –Only active with AnaX MkII expansion box connected

Cv1- - AnaX CV input 1 inverted –Only active with AnaX MkII expansion box connected

Cv2+ - AnaX CV input 2 –Only active with AnaX MkII expansion box connected

Cv2- - AnaX CV input 2 inverted –Only active with AnaX MkII expansion box connected

Cv3+ - AnaX CV input 3 –Only active with AnaX MkII expansion box connected

Cv3- - AnaX CV input 3 inverted –Only active with AnaX MkII expansion box connected

Cv4+ - AnaX CV input 4 –Only active with AnaX MkII expansion box connected

Cv4- - AnaX CV input 4 inverted –Only active with AnaX MkII expansion box connected

Cc1+ - MIDI controller 1

Cc1- - MIDI controller 1 inverted

Cc2+ - MIDI controller 1

Cc2- - MIDI controller 1 inverted

Cc3+ - MIDI controller 1

Cc3- - MIDI controller 1 inverted

Cc4+ - MIDI controller 1

Cc4- - MIDI controller 1 inverted

Cc5+ - MIDI controller 1

Cc5- - MIDI controller 1 inverted

Cc6+ - MIDI controller 1

Cc6- - MIDI controller 1 inverted

SAMPLER

All parameters in this section, is stored with each preset.

FX deFormer can hold up to 127 samples, with a total maximum length of 10 minutes, in its sample FLASH memory.

Samples can be recorded from its audio input, or imported as a wav file, if you have the USB box connected. How to record a sampling, are explained in the “Sample Rec” section, later in this manual.

In this section you can edit all the basic parameters of the sample, like sample select, tune, gain, and start/length, and set up sequencer control and modulation of these.

The function of the “Play/Enter” button, is also set up in this section.

Samp – 1 to 127, Seq. Selects the sample to play back. If set to “Seq”, the steps of the sequencer sample select track will select the samples to play back.

Play – Samp, Loop, Seq, Byp. Selects the function of the “Play/Enter” button. Settings can be:

-Samp: The “Play/Enter” button will trigger a playback of the selected sampling.

-Loop: The “Play/Enter” button will start/stop looped playback of the selected sampling.

-Seq: The “Play/Enter” button will start/stop sequencer playback.

-Byp: The “Play/Enter” button will function as a bypass switch, that will bypass distortion, filter and granular effect.

Gain – -128 to +127. Adjusts the level of the selected sampling. Negative values will damp the sampling output level, positive values will gain it.

Tune - -23 to +7, Seq. Adjusts the pitch of the selected sampling in semitones. Negative values will pitch the sampling down, positive values will pitch the sampling up. If set to “Seq”, the steps of the sequencer tune track will set the pitch of the sample.

Fine - -64 to +63. Fine tunes the pitch of the selected sampling. Negative values will pitch the sampling down, positive values will pitch the sampling up.

Cont – Off, On. Continue. When this is on, the selected sample will continue to play back from the point where it was stopped, when the “Play/Enter” button is pushed, and if Play mode is “Loop”. If this is off, it will always start playback from the selected start point.

CoRs – Off, On. Continue Reset. When this is off, a looped sample will still continue, even after another preset has been selected. This means, that if Continue is on, the same sample will continue to play back. If you do not wish this to happen, switch this parameter to On.

Strt – 0 to 253, Seq. The selected samplings start point. When triggering the sampling, playback will start from the adjusted point. This parameter is relative to the selected samplings length. . If set to “Seq”, the steps of the sequencer start track will set the start point of the sample.

Fine – 0 to 255. Fine adjustment of the selected samplings start point. . This parameter is relative to the selected samplings length.

Lngt – 0 to 255. The selected samplings playback length. When triggering the sampling, it will play back for the adjusted amount of time. This parameter is relative to the selected samplings length.

Fine – 0 to 255. Fine adjustment of the selected samplings playback length. . This parameter is relative to the selected samplings length.

TuneMod (2 parameters) – Lf1+ to Cc6-. Sample pitch modulation source.
- 0 to 255. Sample pitch modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

StartMod (2 parameters) – Lf1+ to Cc6-. Sample start point modulation source.
- 0 to 255. Sample start point modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

SelectMod (2 parameters) – Lf1+ to Cc6-. Sample select modulation source.
- 0 to 255. Sample select modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Sequencer Main

All parameteres in this section, is stored with each preset.

FX deFormer's sequencer has up to 16 steps. It has 4 tracks, and a value can be adjusted for each step of each track. It can trigger a sampling, select samplings, control the sample start point and pitch, and modulate almost any parameter.

The sequencer is playing back in a loop, starting with step 1, and then cycling through the next steps, in the tempo set by the BPM parameter, or synced to an external MIDI device, until it reaches the adjusted last step. Then it starts over again.

Last – 1 to 16. Selects the length of the sequence, in number of steps.

Scal – 1/32, 1/24, 1/16, 1/12, 1/8, 1/4, 1/2 , 1/1. Selects the time signature for the sequencer.

BPM – 50 to 305. The tempo of the sequence in BPM (Beats Per Minute). This parameter has no function, if "sync" in the "Common" section is set to "ext", or if an AnaX mkII expansion box is connected, and any of the trigger inputs is set to "clk".

Sample/Start Seq

All parameteres in this section, is stored with each preset.

Sample select and sample start point tracks.

Step – 1 to 16. Selects the step for editing.

Smpl – 1 to 127, Off. Selects the sampling to be triggered at the step selected for editing, if sample select in the Sampler section, is set to “Seq”. When selecting the value “Off” for any of these steps, the sequencer will not trigger the sampling, at that step.

Start – 0 to 255. Selects the sample start point at the step selected for editing, if sample start in the Sampler section, is set to “Seq”.

Tune/Xtra Seq

All parameteres in this section, is stored with each preset.

Sample tune and Xtra (for modulation) tracks.

Step – 1 to 16. Selects the step for editing.

Tune – -23 to +8. Selects the sample pitch at the step selected for editing, if Tune in the Sampler section, is set to “Seq”.

Xtra – 0 to 255. Sets a value in the step selected for editing, for modulation.

Distortion

All parameters in this section, is stored with each preset.

FX deFormer has a distortion, that can do anything from giving the sound a bit of grit, to totally destroy it.

Effect – Distortion effect select. Choices are:

-**Valve** – A digital simulation of a classic valve distortion.

-**Sine** – A noisy and warm sine shaping distortion.

-**Fuzz** – Simulates a classic fuzz distortion.

-**Soft** – Soft clipping. If the offset parameter is turned up, it will though bite!

Mix – 0 to 255. Mix between the clean sound, and the sound with added distortion.

Driv – 0 to 255. Drive. The higher the value, the more the sound will distort. If this is set to zero, no sound will pass through the distortion.

Offs – 0 to 255. Distortion offset. The more this is turned up, the more unsymmetric the distortion will be.

MixMod (2 parameters) – Lf1+ to Cc6-. Clean/distorted sound mix modulation source.

- 0 to 255. Clean/distorted sound mix modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

DriveMod (2 parameters) – Lf1+ to Cc6-. Drive modulation source.

- 0 to 255. Drive modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

OffsetMod (2 parameters) – Lf1+ to Cc6-. Offset modulation source.

- 0 to 255. Offset modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Filter

All parameters in this section, is stored with each preset.

This filter is placed right after the distortion. The sampler and audio input will go through the filter, when the “Conn” parameter are at setting “On”.

By other settings of the Conn (connection) parameter, it is possible to use the filter in combination with the selected granular effect.

Routing it to the feedback connection of a reverb, and modulate the cutoff frequency using an LFO, can really bring some interesting results.

Mix - -128 to +127. Filter mix. Adjusts the mix between the clean sound and the filter output. At position zero, you will only hear the output from the filter. At positions +127 and -128, you will only hear the clean sound. When turning this parameter from zero to +127, the pure sound will be added more and more to the filter output. When turning it from zero to -128, the pure sound will be subbed more and more from the filter output.

Conn – Selects where to place the filter. Choices are:

-Off – The filter is shut off.

-On – The filter is placed on the input of the granular effect. Both the clean and the effected sound will be filtered.

-Efx – The filter is placed on the input of the granular effect. Only the effected sound will be filtered.

-Feed – The filter is placed in the feedback path of the granular effect.

-Post – The filter is placed right after the feedback path of the granular effect.

-Outp – The filter is placed on the output of the granular effect.

Cut – 0 to 255. This parameter adjusts the cutoff frequency of the filter.

Reso – 0 to 255. Adjusts the resonance of the filter.

Type – The response (type) for the filter. Choices are:

Lpf – Lowpass.

Bpf – 4 pole bandpass.

Bp8 – 8 pole bandpass.

Hpf – Highpass.

Add – This is actually not a filter, since it doesn't filter out harmonics from the sound, but adds some.

Bef – Band reject filter.

Bass – Enhances the low frequencies of the sound, and passes the high frequencies through in a very poor way.

Lofi – A destructive lowpass filter.

folr – 0 to 255. An envelope follower is added to this filter. This parameter adjusts the speed of the envelope follower.

fEnv - -128 to +127. Adjusts how much the envelope follower will affect the filter cutoff frequency. Negative values will reverse the envelope.

mEnv - -128 to +127. Adjusts how much the envelope follower will affect filter mix. Negative values will reverse the envelope.

Filter adjust 1, 2 and 3 – 0 to 255. A deFormer speciality. With these 3 parameters you can adjust the filter response, and create completely new filter types. It's a bit hard to explain what exactly they do, and it is also a bit unpredictable. Tweak and listen.

CutMod 1 (2 parameters) – Lf1+ to Cc6-. Cutoff modulation source.

- 0 to 255. Cutoff modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

CutMod 2 (2 parameters) – Lf1+ to Cc6-. Cutoff modulation source.

- 0 to 255. Cutoff modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

ResoMod (2 parameters) – Lf1+ to Cc6-. Reso modulation source.

- 0 to 255. Reso modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Adj1Mod (2 parameters) – Lf1+ to Cc6-. Filter adjust 1 modulation source.

- 0 to 255. Filter adjust 1 modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Adj2Mod (2 parameters) – Lf1+ to Cc6-. Filter adjust 2 modulation source.

- 0 to 255. Filter adjust 2 modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Adj3Mod (2 parameters) – Lf1+ to Cc6-. Filter adjust 3 modulation source.

- 0 to 255. Filter adjust 3 modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Granular effects (EFX)

All parameters in this section, is stored with each preset.

Here you will find time and pitch based effects, like reverb, delay, granulators and pitch manipulators, with granular parameters.

Effect – Selects the Granular effect. Choices are, at this moment:

-Delay 1 – A delay effect with special granular parameters like "Beam" and "Size", and with a feedback that can go higher than infinite. Max delay time 6.4 sec.

-Delay 2 – A bright sounding 2-tap delay. Max delay time 3.2 sec.

-Reverb 1 – A FAT synthesized reverb with a very high resolution.

-Reverb 2 – Like reverb 1 with a bit lower resolution, but more parameters.

-PitchShp – PitchShaper . A one input pitchshaper, that re-pitches the input signal to a new adjustable pitch. All pitch variations in the sound will be removed, but can be added again, using the "Vari" parameter. Has a very wide pitch range.

-GlitchShf – GlitchShifter 1. This is not really a pitchshifter, but then again.... It does some weird stuff!

-GlitchSh2 – GlitchShifter 2. Almost the same as glitchshifter 1, but it sounds different.

-SamplePtc – Sampling Pitch Shifter. Changes the pitch of a sampling, without changing the length. It will also work on external signals, but it needs to be triggered by a sampling.

-Variator – A granular effect that creates new variations of the input sound, in both pitch and time.

-TimeStrtc – TimeStretch. Able to change the length of the input signal, without changing the pitch. It is also possible to change the pitch if desired.

-Abstract0 - This effect constantly records the audio applied to its input, in a time interval determined by a "RecT" parameter. It uses 3 "playback heads" to play back the recorded audio. Each of these playback heads can be switched on and off, and the playback length can be adjusted for each of them. Every time a head has played back the adjusted amount of time, it jumps to a new random location of the recorded piece, and starts playing back again. The playback pitch of head 2 and 3 can be adjusted. Since there are no feedback path in this effect, when common filter connection is set to "Feed", playhead 2 will be individually filtered.

-AnaGran - anAmoNo Granulator. This effect records the input signal and cuts it up into fragments, which sizes depends on both the Time and the Frgm (number of fragments) parameters. It is then possible to rearrange the order of these fragments, and to re-pitch or time-stretch them, using two 8-step granulator sequencers, to get something completely new out of the input signal.

-Chorus - A simple two-tap Chorus, with an added “Deep” parameter, that adjust the depth of a virtual chorus box. To obtain the classic chorus effect, you must apply LFO modulation to the Time 1 & 2 parameters.

The parameters:

Mix – 0 to 255. The wet/dry mix between the audio signal input and the granular effect.

EfxC – Off, On. Effects buffer clear. When this is set to “On”, the memory buffer of the granular effect will be cleared every time you change preset or effect.

When it is set to “Off”, FX deFormer will keep its granular memory buffer at any time, and sometimes it might play back fragments of a previously played back preset.

You will have to switch this on for every preset, where you want the effect buffer to be cleared.

Effects parameters

Delay 1

Grp – 0 to 3. Delay time group. This is a very coarse adjustment of the delay time.

Time – 0 to 255. Delay time.

Fine – 0 to 255. Delay time fine adjust.

Feed – 0 to 255. Delay feedback. At settings below 128, the feedback is decreasing. At setting 128 (middle position) the feedback is 1:1. Use this setting, if you want to use delay 1 as a loop recorder. At settings above 128, the feedback is increasing, and might cause distortion.

Size – 0 to 255. A granular parameter. The more this is turned up, the less space of the delay box is used, causing some echo's to repeat, and others not to sound at all.

Xfad – 0 to 255. Crossfade. Makes the delay effect sound smoother, by crossfading the feedback repeats into each other.

Mode – Crossfade mode.

-nrm – Normal crossfade mode. The repeats crossfades into each other.

-duck – Ducked crossfade mode. One repeat fades out, before the next fades in.

Dir – Delay playback direction.

-Fwd – Forwards.

-Bwd – Backwards

Beam – 0 to 255. A granular parameter, that "beams" some of the delay sound grains to another place.

Deep – 0 to 63. Simulates a delay box, with adjustable depth.

MixMod (2 parameters) – Lf1+ to Cc6-. Clean/effected sound mix modulation source.

- 0 to 255. Clean/effected sound mix modulation amount.

For a complete list of modulation source, please refer to the "Modulation Sources" list earlier in this manual.

TimeMod (2 parameters) – Lf1+ to Cc6-. Delay time modulation source.

- 0 to 255. Delay time modulation amount.

For a complete list of modulation source, please refer to the "Modulation Sources" list earlier in this manual.

FeedMod (2 parameters) – Lf1+ to Cc6-. Feedback modulation source.

- 0 to 255. Feedback modulation amount.

For a complete list of modulation source, please refer to the "Modulation Sources" list earlier in this manual.

DeepMod (2 parameters) – Lf1+ to Cc6-. Deep modulation source.
- 0 to 255. Deep modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Delay 2

Grp1 – 0 to 1. Delay time group tap 1. This is a very coarse adjustment of the delay time.

Tim1 – 0 to 255. Delay time tap 1.

Fin1 – 0 to 255. Delay time fine adjust tap 1.

Fed1 – 0 to 255. Delay feedback tap 1.

Size – 0 to 255. A granular parameter. The more this is turned up, the less space of the delay box is used, causing some echo's to repeat, and others not to sound at all.

Grp2 – 0 to 1. Delay time group tap 2. This is a very coarse adjustment of the delay time.

Tim2 – 0 to 255. Delay time tap 2.

Fin2 – 0 to 255. Delay time fine adjust tap 2.

Fed2 – 0 to 255. Delay feedback tap 2.

Deep – 0 to 63. Simulates a delay box, with adjustable depth.

Dir – Delay playback direction.

-Fwd – Forwards.

-Bwd – Backwards

MixMod (2 parameters) – Lf1+ to Cc6-. Clean/effected sound mix modulation source.

- 0 to 255. Clean/effected sound mix modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Time1Mod (2 parameters) – Lf1+ to Cc6-. Delay time 1 modulation source.

- 0 to 255. Delay time 1 modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Time2Mod (2 parameters) – Lf1+ to Cc6-. Delay time 2 modulation source.

- 0 to 255. Delay time 2 modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

DeepMod (2 parameters) – Lf1+ to Cc6-. Deep modulation source.

- 0 to 255. Deep modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Reverb 1

Time – 0 to 255. Reverb time. The total reverb time is a combination of time, timeX, feed and feedX.

Fine – 0 to 255. Reverb time fine adjust.

TimX – 0 to 255. Adjusts how much the following reverb taps will decrease in time. Lower settings is good for a short reverb, and higher settings for a long reverb.

Feed – 0 to 255. Reverb feedback.

FedX – 0 to 255. Adjusts how much the following reverb taps will decrease in feedback. Lower settings gives a delay effect. As this is turned up, it goes over in a metallic reverb type, and at higher settings it gives a more full reverb.

Size – 0 to 255. A granular parameter. The more this is turned up, the less space of the reverb box is used, causing some echo's to repeat, and others not to sound at all.

Levl – 0 to 255. Reverb level.

Dir – Reverb playback direction.

-**Fwd** – Forwards.

-**Bwd** – Backwards

MixMod (2 parameters) – Lf1+ to Cc6-. Clean/effected sound mix modulation source.

- 0 to 255. Clean/effected sound mix modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

TimXMod (2 parameters) – Lf1+ to Cc6-. TimeX modulation source.

- 0 to 255. TimeX modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

FedXMod (2 parameters) – Lf1+ to Cc6-. FeedX modulation source.

- 0 to 255. FeedX modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Reverb 2

Time – 0 to 255. Reverb time. The total reverb time is a combination of time, timeX, feed and feedX.

Fine – 0 to 255. Reverb time fine adjust.

TimX – 0 to 255. Adjusts how much the following reverb taps will decrease in time. Lower settings is good for a short reverb, and higher settings for a long reverb.

Feed – 0 to 255. Reverb feedback.

FedX – 0 to 255. Adjusts how much the following reverb taps will decrease in feedback. Lower settings gives a delay effect. As this is turned up, it goes over in a metallic reverb type, and at higher settings it gives a more full reverb.

Xfad – 0 to 255. Crossfade. Makes the reverb effect sound smoother, by crossfading the feedback repeats into each other.

Deep – 0 to 63. Simulates a reverb box, with adjustable depth.

Levl – 0 to 255. Reverb level.

Dir – Reverb playback direction.

-**Fwd** – Forwards.

-**Bwd** – Backwards

MixMod (2 parameters) – Lf1+ to Cc6-. Clean/effected sound mix modulation source.

- 0 to 255. Clean/effected sound mix modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

TimXMod (2 parameters) – Lf1+ to Cc6-. TimeX modulation source.

- 0 to 255. TimeX modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

DeepMod (2 parameters) – Lf1+ to Cc6-. Deep modulation source.

- 0 to 255. Deep modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

PitchShaper

Sens – 0 to 255. Pitch tracking sense. At lower settings it will find more pitch tracking points, which will make the pitch higher on complex sounds, while at higher settings it will find less pitchtracking points.

Pitc – 0 to 255. Pitch Coarse.

Fine – 0 to 255. Pitch Fine.

Feed – 0 to 255. Feedback.

Smot – 0 to 255. Output smoothing. The more this is turned up, the more it smoothen out the pitch changes are in the signal

ComX – 0 to 255. Complexity. The more this is turned up, the less complex the sound output will be.

FM – 0 to 255. The input signal modulates the pitch of the pitchshaper.

Vari – 0 to 255. The more this parameter is turned up, the more the PitchShaper will follow the pitch of the input sound.

Oct – -4 to +3. Changes the output pitch of the PitchShaper in octaves.

MixMod (2 parameters) – Lf1+ to Cc6-. Clean/effected sound mix modulation source.

- 0 to 255. Clean/effected sound mix modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

PitcMod (2 parameters) – Lf1+ to Cc6-. Pitch modulation source.

- 0 to 255. Pitch modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

FeedMod (2 parameters) – Lf1+ to Cc6-. Feedback modulation source.

- 0 to 255. Feedback modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

FmMod (2 parameters) – Lf1+ to Cc6-. FM amount modulation source.

- 0 to 255. FM amount modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

GlitchShifter 1 and 2

Sens – 0 to 255. Pitch tracking sense. At lower settings it will find more pitch tracking points, which will make the pitch higher on complex sounds, while at higher settings it will find less pitchtracking points.

Folr – 0 to 255. Envelope follower speed.

Pitc – -128 to +127. Pitch Coarse.

Feed – 0 to 255. Feedback.

ComX – 0 to 255. Complexity. The more this is turned up, the less complex the sound output will be.

MixMod (2 parameters) – Lf1+ to Cc6-. Clean/effected sound mix modulation source.

- 0 to 255. Clean/effected sound mix modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

PitcMod (2 parameters) – Lf1+ to Cc6-. Pitch modulation source.

- 0 to 255. Pitch modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

SensMod (2 parameters) – Lf1+ to Cc6-. Sense modulation source.

- 0 to 255. Sense modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

FeedMod (2 parameters) – Lf1+ to Cc6-. Feedback modulation source.

- 0 to 255. Feedback modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Sample Pitch

Sens – 0 to 255. Pitch tracking sense. At lower settings it will find more pitch tracking points, which will make the pitch higher on complex sounds, while at higher settings it will find less pitchtracking points.

Size – 0 to 255. The size of the RAM buffer used for the pitchshifting

Pitc – -128 to +127. Pitch Coarse.

Folr – 0 to 255. Envelope follower speed.

Feed – 0 to 255. Feedback.

MixMod (2 parameters) – Lf1+ to Cc6-. Clean/effected sound mix modulation source.

- 0 to 255. Clean/effected sound mix modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

PitcMod (2 parameters) – Lf1+ to Cc6-. Pitch modulation source.

- 0 to 255. Pitch modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

SizeMod (2 parameters) – Lf1+ to Cc6-. Size modulation source.

- 0 to 255. Size modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

FeedMod (2 parameters) – Lf1+ to Cc6-. Feedback modulation source.

- 0 to 255. Feedback modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Variator

Time – 0 to 255. The size of the RAM buffer used for the variator

Size – 0 to 255. The size of one grain.

Gran – 0 to 255. Determines the variation pattern.

Pitc – -128 to +127. Pitch Coarse.

Feed – 0 to 255. Feedback.

MixMod (2 parameters) – Lf1+ to Cc6-. Clean/effected sound mix modulation source.

- 0 to 255. Clean/effected sound mix modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

PitcMod (2 parameters) – Lf1+ to Cc6-. Pitch modulation source.

- 0 to 255. Pitch modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

GranMod (2 parameters) – Lf1+ to Cc6-. Gran modulation source.

- 0 to 255. Gran modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

FeedMod (2 parameters) – Lf1+ to Cc6-. Feedback modulation source.

- 0 to 255. Feedback modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Time Stretcher

Tune – -128 to +127. Pitch Coarse.

Size – 0 to 255. The size of the RAM buffer used for the TimeStretcher

Strc – -128 to +127. Time stretch. A negative value will stretch the sound longer, a positive value will compress the sound to appear shorter.

MixMod (2 parameters) – Lf1+ to Cc6-. Clean/effected sound mix modulation source.

- 0 to 255. Clean/effected sound mix modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

TuneMod (2 parameters) – Lf1+ to Cc6-. Pitch modulation source.

- 0 to 255. Pitch modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

SizeMod (2 parameters) – Lf1+ to Cc6-. Size modulation source.

- 0 to 255. Size modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

StretchMod (2 parameters) – Lf1+ to Cc6-. Stretch modulation source.

- 0 to 255. Stretch modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

AbstractO

RecT – 0 to 255. Adjusts the record buffer size. Determines for how long time it should record the input, before it starts over again.

Ply1, Ply2, Ply3 – Off, 1 to 255. Adjusts for how long time each of the playback heads should play back, until it jumps to a new random location.

Pit2, Pit3 - -128 to +127. Adjusts the pitch of the playback for playhead 2 and 3.

Psiz – Off, 1 to 255. This parameter adjusts the total playback buffer size, independent of the record buffer size. If this parameter is "Off", the RecT parameter determines the playback buffer size, but if it is at any other value, this parameter determines the playback buffer size. It can be used as a fast way of adjusting the playback length of all 3 playback heads at the same time. At low settings, granular effects with very small grains can be obtained. If the value of this is higher than the RecT parameter, it will play back areas of the record buffer, that is not being recorded, and create a "Freeze" effect.

MixMod (2 parameters) – Lf1+ to Cc6-. Clean/effected sound mix modulation source.

- 0 to 255. Clean/effected sound mix modulation amount.

For a complete list of modulation source, please refer to the "Modulation Sources" list earlier in this manual.

Pit2Mod (2 parameters) – Lf1+ to Cc6-. Pitch 2 modulation source.

- 0 to 255. Pitch 2 modulation amount.

For a complete list of modulation source, please refer to the "Modulation Sources" list earlier in this manual.

Pit3Mod (2 parameters) – Lf1+ to Cc6-. Pitch 3 modulation source.

- 0 to 255. Pitch 3 modulation amount.

For a complete list of modulation source, please refer to the "Modulation Sources" list earlier in this manual.

PsizeMod (2 parameters) – Lf1+ to Cc6-. Psize modulation source.

- 0 to 255. Psize modulation amount.

For a complete list of modulation source, please refer to the "Modulation Sources" list earlier in this manual.

AnaGran (Granulator)

Last – Value 1 to 16: Sets how many steps the granulator sequencers should go through, until they starts over again from step one.

Time – Value 0 to 255: Adjust the total size of the Granulator record and play buffer – How long time it will record the input signal, until it starts over again.

Fine – Value 0 to 255: Fine adjustment of the Time parameter.

FrGm – Values 1 to 8: Adjusts how many fragments (grains) the recorded input signal should be cutted up in, when played back.

Feed – Value 0 to 255: Adjusts how much of the Granulator output signal should be fed back to its input.

Dir – Values fwd, bwd: Sets the playback direction of the Granulator output, which can either be forwards or backwards.

Mode – Values pitc, strc, FusP, FusS: Sets the playback mode of the granulator sequencer.

-pitc: The second granulator sequencer will re-pitch the playback.

-strc: The second granulator sequencer will time stretch the playback.

Xfad – Values 0 to 255: Adjusts how much ducking crossfade that will be added between the granulator sequencer steps.

Step 1 to 8 Fram – Values 1 to 128: Adjusts which fragment of the sound buffer, that should be played back at each step of the granulator sequencer. Steps 1 to 8 are accessed turning the Step parameter.

Step 1 to 8 Pitch – Values -128 to +127: Adjusts how much the fragment of each granulator sequencer step, should be re-pitched or time-stretched. Steps 1 to 8 are accessed turning the Step parameter.

MixMod (2 parameters) – Lf1+ to Cc6-. Clean/effected sound mix modulation source.

- 0 to 255. Clean/effected sound mix modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

LastMod (2 parameters) – Lf1+ to Cc6-. Last step modulation source.

- 0 to 255. Last step modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

TimeMod (2 parameters) – Lf1+ to Cc6-. Time modulation source.

- 0 to 255. Time modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

FeedMod (2 parameters) – Lf1+ to Cc6-. Feedback modulation source.

- 0 to 255. Feedback modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Chorus

Time1 – Value 0 to 255: Adjusts the Chorus delay time for tap 1.

Feed1 – Value -128 to +127: Adjusts the Chorus feedback amount, which can be negative or positive, for tap 1.

Time2 – Value 0 to 255: Adjusts the Chorus delay time for tap 2.

Feed2 – Value -128 to +127: Adjusts the Chorus feedback amount, which can be negative or positive, for tap 2.

Deep – Value 0 to 255: Adjusts how deep the chorus box should be.

MixMod (2 parameters) – Lf1+ to Cc6-. Clean/effected sound mix modulation source.

- 0 to 255. Clean/effected sound mix modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Time1Mod (2 parameters) – Lf1+ to Cc6-. Time 1 modulation source.

- 0 to 255. Time 1 modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Time2Mod (2 parameters) – Lf1+ to Cc6-. Time 2 modulation source.

- 0 to 255. Time 2 modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

DeepMod (2 parameters) – Lf1+ to Cc6-. Deep modulation source.

- 0 to 255. Deep modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

LFO's

All parameters in this section, is stored with each preset.

FX deFormer has 4 LFO's, that are available as modulation sources. These can morph between triangle, sawtooth, square, pulse and random.

The LFO's themselves can also be modulated.

Parameters:

Rat1: 0 to 255. Adjusts the rate (or speed) of the LFO 1. From very slow to very fast.

Wav1: **tri** to **saw** to **sq** to **puls** to **rndm**. Selects the LFO 1 waveform. The numbers inbetween the waveform names, indicates that the LFO is morphing between two waveforms.

Rat2: 0 to 255. Adjusts the rate (or speed) of the LFO 2. From very slow to very fast.

Wav2: **tri** to **saw** to **sq** to **puls** to **rndm**. Selects the LFO 2 waveform. The numbers inbetween the waveform names, indicates that the LFO is morphing between two waveforms.

Rat3: 0 to 255. Adjusts the rate (or speed) of the LFO 3. From very slow to very fast.

Wav3: **tri** to **saw** to **sq** to **puls** to **rndm**. Selects the LFO 3 waveform. The numbers inbetween the waveform names, indicates that the LFO is morphing between two waveforms.

Rat4: 0 to 255. Adjusts the rate (or speed) of the LFO 4. From very slow to very fast.

Wav4: **tri** to **saw** to **sq** to **puls** to **rndm**. Selects the LFO 4 waveform. The numbers inbetween the waveform names, indicates that the LFO is morphing between two waveforms.

LFO1RateMod (2 parameters) – Lf1+ to Cc6-. LFO 1 rate modulation source.

- 0 to 255. LFO 1 rate modulation amount.

For a complete list of modulation source, please refer to the "Modulation Sources" list earlier in this manual.

LFO1WaveMod (2 parameters) – Lf1+ to Cc6-. LFO 1 wave modulation source.

- 0 to 255. LFO 1 wave modulation amount.

For a complete list of modulation source, please refer to the "Modulation Sources" list earlier in this manual.

LFO2RateMod (2 parameters) – Lf1+ to Cc6-. LFO 2 rate modulation source.

- 0 to 255. LFO 2 rate modulation amount.

For a complete list of modulation source, please refer to the "Modulation Sources" list earlier in this manual.

LFO2WaveMod (2 parameters) – Lf1+ to Cc6-. LFO 2 wave modulation source.
- 0 to 255. LFO 2 wave modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

LFO3RateMod (2 parameters) – Lf1+ to Cc6-. LFO 3 rate modulation source.
- 0 to 255. LFO 3 rate modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

LFO3WaveMod (2 parameters) – Lf1+ to Cc6-. LFO 3 wave modulation source.
- 0 to 255. LFO 3 wave modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

LFO4RateMod (2 parameters) – Lf1+ to Cc6-. LFO 4 rate modulation source.
- 0 to 255. LFO 4 rate modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

LFO4WaveMod (2 parameters) – Lf1+ to Cc6-. LFO 4 wave modulation source.
- 0 to 255. LFO 4 wave modulation amount.

For a complete list of modulation source, please refer to the “Modulation Sources” list earlier in this manual.

Save Preset

This section will describe how to save a preset on the FX deFormer.

All parameter settings and sequences will be saved within a preset. Only MIDI channel, sync options and input mode select are automatically saved as common data, and are not part of the preset.

From this edit group page:

Save Preset

Hold the "Dec" button, and Push the "Play/Enter" button, to go to this page:

[MetalVerb1] SAVE TO: A02

Here it is possible to select the memory location, on which you would like to save your preset. Push the "Inc" and "Dec" buttons to select. The "Play/Enter" LED will flash. There are 512 locations to choose from.

If a location reads this out:

[<empty>] SAVE TO: A02

No preset has previously been saved on this location. If you choose a preset, that already has a name, this will be overwritten by the new preset.

Push the "Play/Enter" button to proceed. This screen will appear:

Name 1-3	PUSH
Met	<Enter>

Use edit knob 1-3, to select the first 3 letters of the name in your preset.

Push the "Play/Enter" button to proceed.

Select the last nine letters of the preset name, the same way. When pushing the "Play/Enter" button, after letter 10-12 has been set, your preset will be stored.

Sample Rec

On these pages, you can record or erase a sampling. Samples can be recorded from FX deFormer audio input or output, or a mix between these.

With the optional USB box connected, it is also possible to import wav files as samples. For instructions on how to do this, please consult the separate Usb box manual.

Only the highest numbered sample can be erased. If you wish to arrange samples, this can be done by transferring samples between FX deFormer and the optional USB box.

When entering this edit group, by holding the “Dec” button, while pushing “Play/Enter”, the screen looks like this:

Record = <Inc> Erase = <Dec>

From this screen, push the “Inc” button to record a sample, or the “Dec” button to erase one.

Erase sampling

If you pushed “Dec”, you will now enter this page:

ERASE = <Enter> Sample 63

The number of the highest numbered sample is shown. If you would like to erase this, push the “Play/Enter” button. If not, hold “Inc”, while pushing “Play/Enter”, to exit.

Record a sampling

If you pushed “Inc” from the record/erase screen, you will now enter the sample record page.

This lets you record your own samplings. You should listen to FX deFormer’s audio output, and adjust the level of the device you would like to sample from, which should be connected to FX deFormer’s audio input, so the sound does not distort.

FX deFormer can record 10 minutes/127 samples.
The maximum length of a single sampling is 10 minutes.

The first page looks like this:

Source. Auto. PUSH
Inp Off <dec>

Source: Inp, -127 to +126, outp. Adjust edit knob 1 to select what you want to record. Turn it fully down to select “Inp” (input), fully up to select “Outp” (output), or set this anywhere inbetween, to record a mix of the input and output.

Auto: Off, 1 to 255. Adjusting edit knob 2, you can adjust an auto sample offset. If this is not off, but has a value, sample recording will not start immediately, when you hit the “Dec” button. It will not start until the level of the signal to be recorded, has reached the adjusted auto offset level.

Now push ”Dec” to activate recording. The display reads:

Recording... Stop = <inc>

Activate the source to record it. When you are done recording, push ”Inc” to go to this screen:

Audition = <inc> Name = <dec>

If you would like to audition your sampling, push the ”Inc” button. If you would like to save it, push ”Dec”. If you would not like to keep this sampling, hold “Inc”, while pushing “Play/Enter”, to exit.

If you choose to push "Dec", you will go to this screen:

Save = <Enter>

Push the "Play/Enter" button, to confirm that you would like to save your sampling, or hold "Inc", while pushing "Play/Enter, to exit without saving.

Expansion Box

If you have any of the optional expansion boxes connected to your FX deFormer, the name of the expansion box and its parameters/functions, will be shown on these pages.

All parameter adjustment will be saved within the selected preset, when it is saved.

For operation and parameters of the various expansion boxes, please refer to the specific manuals for these, except for a few changes:

AnaX mkII:

Trigger inputs can be sequencer clock, sequencer start/stop, or any sample number. When a sample number is selected, the sample will be selected and triggered, when a trigger is received.

Trigger outputs can be sequencer clock, sequencer start/stop, or LFO 1 to 4.

CV outputs can be any of the modulation sources.

SP box:

Audio BUS can be Output, sample or input.

Trigger input can be sequencer clock, sequencer start/stop, or any sample number. When a sample number is selected, the sample will be selected and triggered, when a trigger is received.

Tube box and anAmoNo box:

Audio BUS can be Output, sample or input.

USB box:

All functionality is the same. The screen is though smaller.

Xmit Preset

Send the currently selected preset as sysex data through MIDI out. Connect a computer or another MIDI device, that is able to record sysex data, to your FX deFormer's MIDI out, and use this function to transmit the preset data, for back-up or for sharing with other FX deFormer's. Notice that only the preset parameter data is sent, NOT the sample data. Hold the "Dec" button, while pushing the "Play/Enter" button to activate this function.

Receive preset:

Connect the MIDI in of your FX deFormer, to MIDI out of a computer, your second FX deFormer, or any other device that can transmit MIDI sysex (.syx) files.

Select the preset location, on FX deFormers preset select screen, on which you want the preset transferred to.

Transmit the preset file to your FX deFormer.

The name of the transferred preset will appear as the current preset name.

Listen to the preset.

To keep the transferred preset, you must remember to save it.

Update OS

Updating the FX deFormer firmware.

Occasionally there will be firmware updates available at:

<http://www.gotharman.dk/fxdefupdates.htm>

These will be bug fixes or implementation of additional functions or effects, so it might be a good idea to get familiar with, how to update the firmware of your FX deFormer.

You will need:

- Your FX deFormer
- A computer with internet connection
- A MIDI interface connected to your computer
- A MIDI cable

1. Go to the abovementioned deFormer website, and download the latest firmware to your computer. The firmware will usually consist of a file named t.ex:

fxd_068.syx


2. If you haven't done it already, go to:

<http://www.midiox.com/>


and download the free MIDI utility program MIDI-OX. And please donate, if you feel like. It is probably also possible to use other programs that supports .syx files, but the FX deFormer firmware updates has been created using MIDI-OX, so this program is probably the one that will work best.

3. Install MIDI-OX on your computer. You shall be very welcome to skip this step, if you have already done this.

4. After installing MIDI-OX, open the program, and click on "Options" > "Configure Buffers":

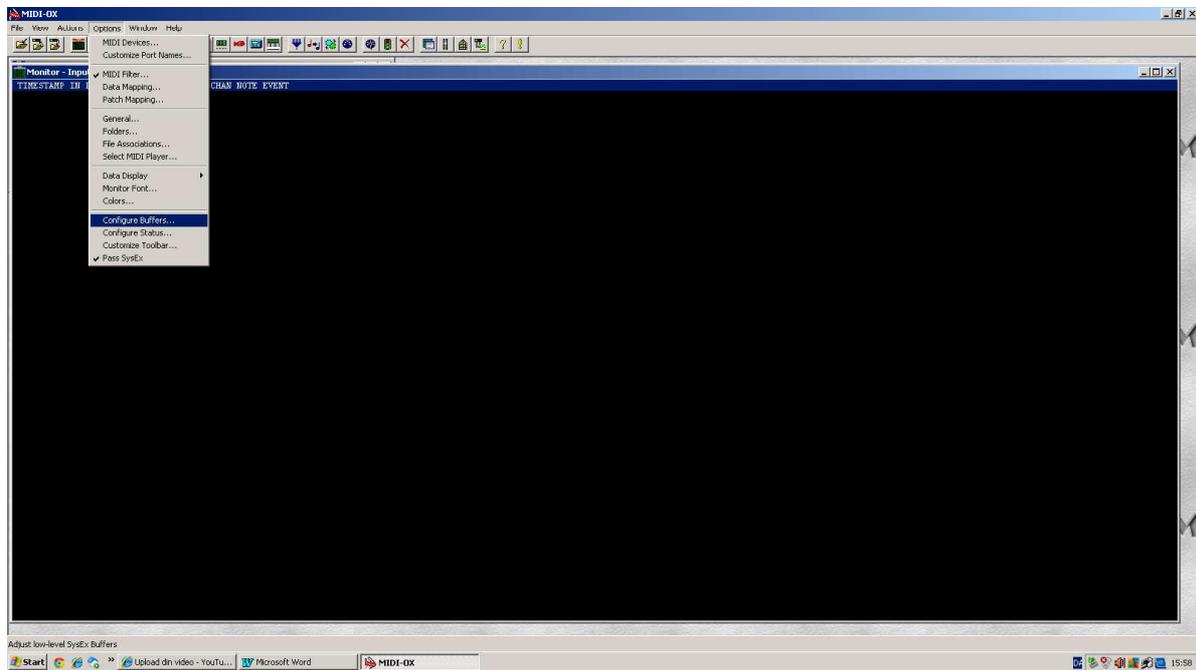


5. Enter the number "20000" in the "Bytes" box under "Low Level Output Buffers"

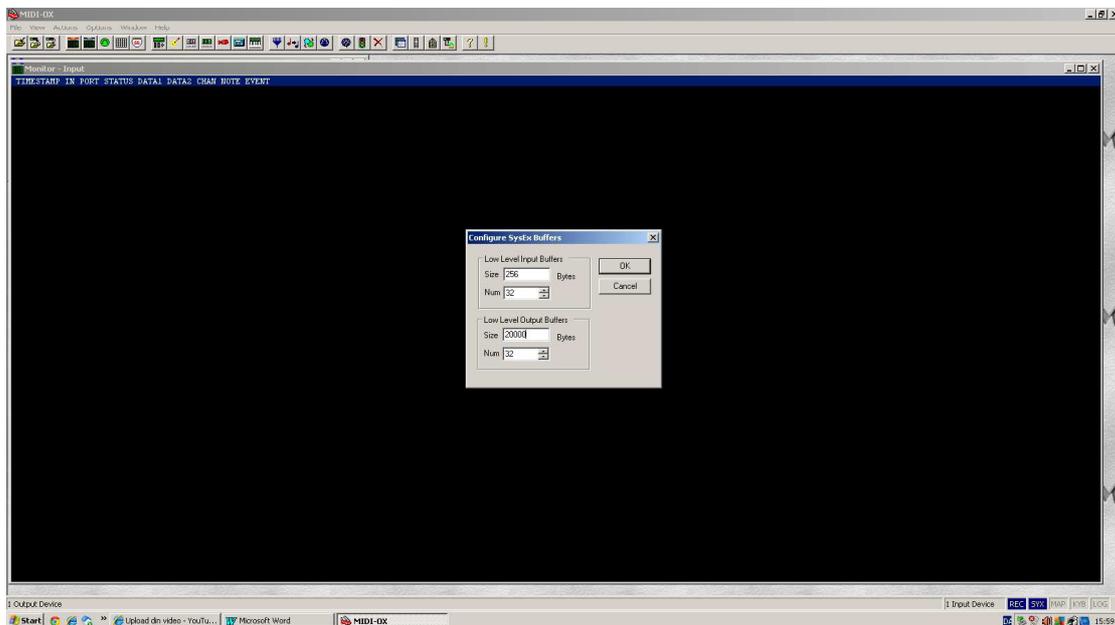


6. Click "OK".

7. Go to "Options" > "MIDI devices", and select the MIDI interface you intend to use for the updating, as your output device.
8. Connect MIDI out on the selected MIDI interface to MIDI in on your FX deFormer.
9. Click on "View" > "Sysex"

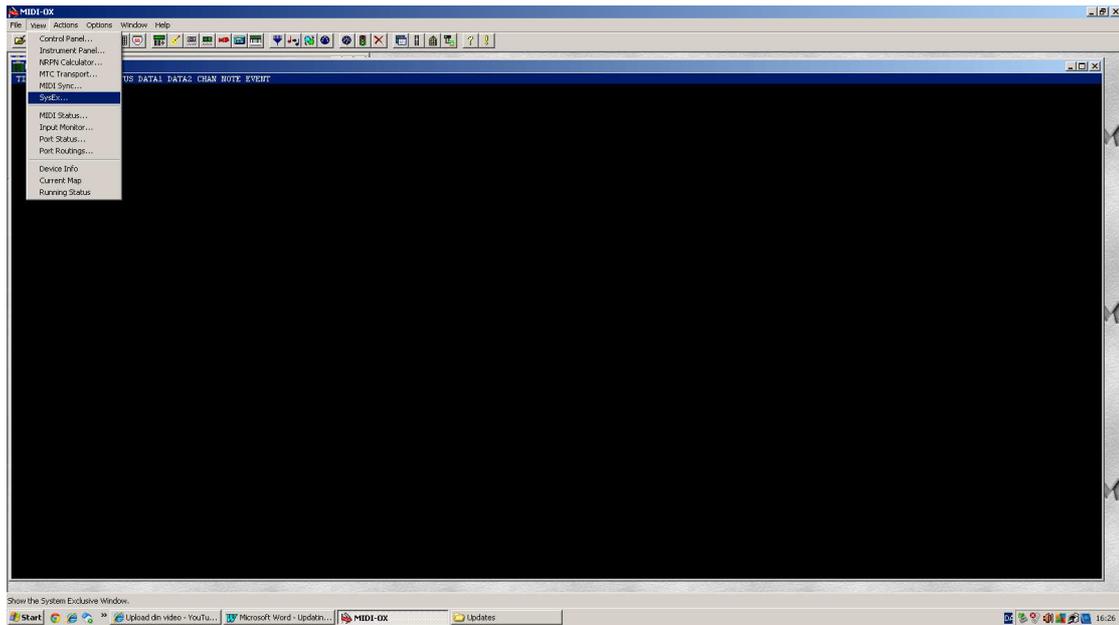

12. It now should look like this:

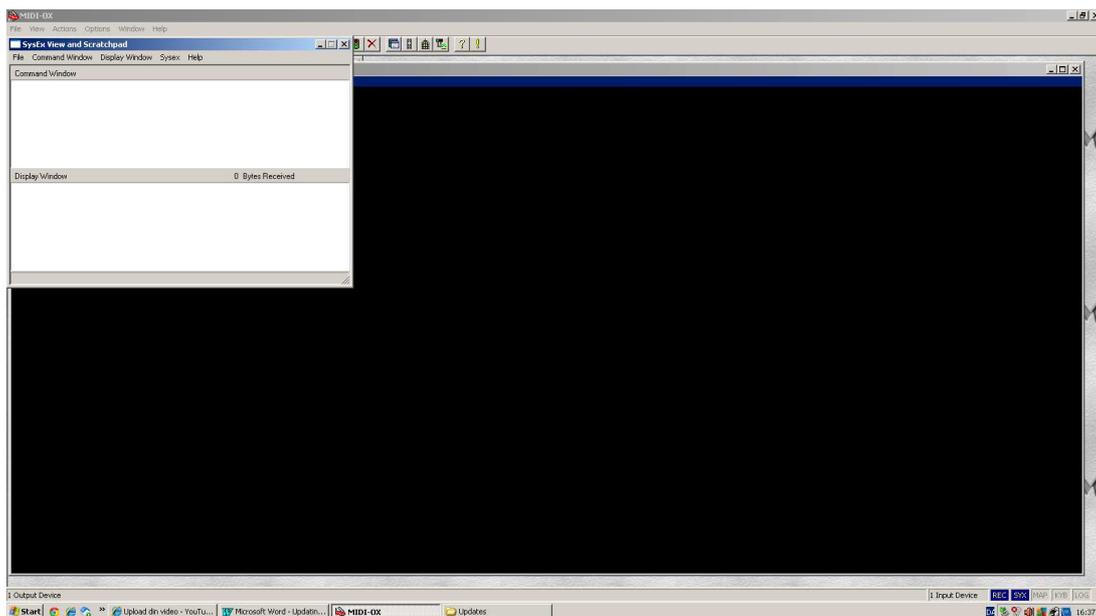

13. On your FX deFormer:

-Turn it off.

-Hold down the “Play/Enter” button, while turning it on.

-The display should now read:

Waiting for
MIDI data...

OR:

-From the preset select screen, hold the “Dec” button, while pushing “Play/Enter”, to enter the edit group pages.


Push the “Inc” button to scroll to this page:

Update OS

-Hold “Dec”, while pushing “Play/Enter”, and the display will read:

Waiting for
MIDI data...

14. On MIDI-OX, in the Sysex view: Click "File" > "Send sysex file".

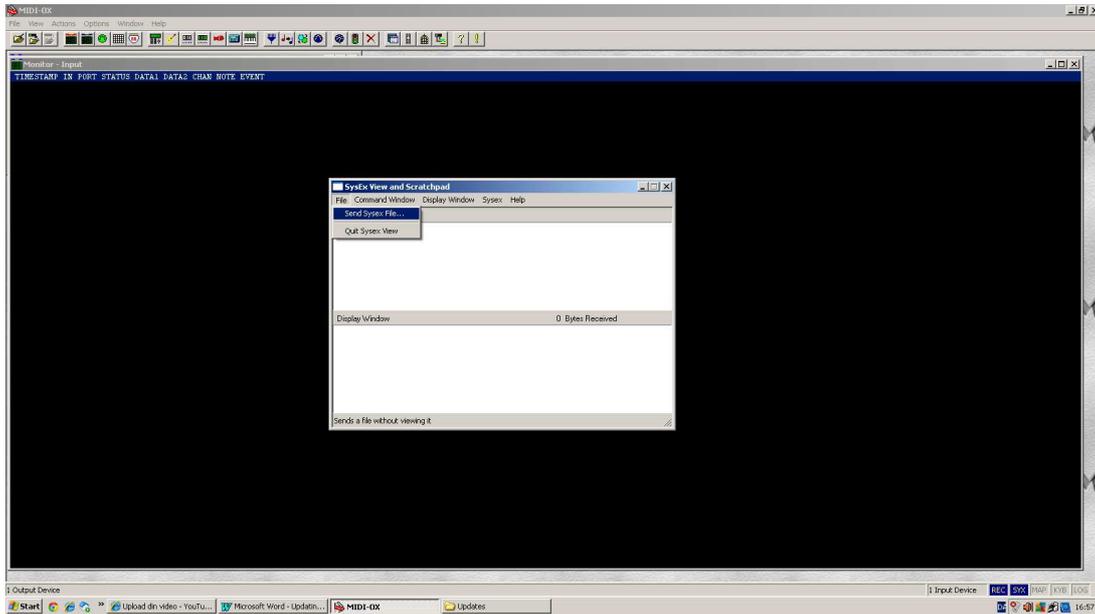

15. A file browser will open. Locate the .syx file you downloaded from the deFormer site, select it, and click "Open".

MIDI-OX will now transfer the file to your computers MIDI out, where you have, hopefully, connected your FX deFormer.

If you have, its display will now read:

```
Receiving...
0A
```

The hex number in the bottom of the display will be constantly incrementing. This indicates, that it is receiving the MIDI data. If this number stops incrementing, there might be something wrong with your MIDI connection, and you should turn off your FX deFormer, and check it out. If you are sure your connections are ok, try to go back to step 5, and put a higher number in the "Low level output buffers" box, for instance "40000".

When all data is received successfully, the display will change to:

```
Programming...
```

It will stay there for some minutes, and then it will change to:

```
UPDATE SUCCESSFUL
Pls turn me off
```

16. Turn off your FX deFormer, and turn it on again. Your FX deFormer has now been updated.

If your FX deFormer any where in the process reads:

CHECKSUM ERROR!

Something has went wrong somewhere. If it does this repeatedly, your MIDI cable might be bad, or your MIDI interface might not be stable enough to perform an update.

Xmit OS

If you want to keep a backup of your FX deFormer's firmware, before you update it, you can use this function. Connect a MIDI device that is capable of recording .syx files (Like a pc with MIDI-OX installed), and hold "Dec", while pushing "Play/Enter" to activate.

MIDI Implementation

Notes on/off

It is possible to play back the selected sampling from a MIDI keyboard connected to FX deFormer's MIDI in. The accepted notes are from C#2 (note number 37) and 2 and a half octave up, with the original sample pitch being played back at C4.

This receiving of notes, will always happen on the common midi channel, set in the "Setup" section.

MIDI controllers (MIDI CC's)

MIDI controllers 1 to 6 are received and used, if they are assigned as modulation sources to any parameters.

MIDI controllers 1 to 3 are transmitted, when turning the 3 edit knobs, on the Preset Select screen, or on any of the edit group select pages.

They are always transmitted and received on the common midi channel, set in the "Setup" section.

MIDI clock, start, continue and stop

Are received if the "Sync" parameter in the "Setup" section is set to "Ext", and transmitted if the "Xmit" parameter is set to "On". Unlike many other MIDI devices, FX deFormer will re-transmit a clock coming from an external device, if Xmit is on.

When receiving these messages, the internal sequencer will sync to the clock, and start or stop.

Program change

are received on the MIDI channel selected on the Setup page. Note, that it is only possible to select 128 presets via MIDI program change. To select between banks A to D, E to H, I to L or banks L to P, you must use bank change.

Bank change

(controller number 32) are received on the MIDI channel selected on the MIDI edit pages. A value of 0 will select preset banks A to D. A value of 1 will select preset banks E to H. A value of 2 will select preset banks I to L. A value of 3 will select preset banks L to P. All other values will be ignored. A bank change must be followed by a program change, to become effective.

Effect Bypass – MIDI CC 14

If FX deFormer receives a MIDI CC 14, with a value below 64, it will bypass distortion, filter and granular effect. If it receives the value 64 or above, it wil active these effects.

Written by
Flemming Christensen
"Gotharman"
2015

www.gotharman.dk