

Gotharman's Urano



Modular Synthesizer

User Manual 0.77

Table of Contents

In The Box	12
Introduction	13
The build-in modules	13
Some Features	14
Connecting Modules	14
8 Parts	14
Sequencer	14
Sample recorder/editor	14
Wavetable editor	14
Connectivity	14
Touch display	14
Solid	14
Cleaning	15
Getting Started	16
Connecting Urano	16
Starting Up	20
The User Interface	21
The Touch Screen Keyboard	23
Setting the number of octaves	24
Pitch Bend Function	25
The Main (Preset Select) page	26
Selecting a preset	27
Operating Urano	30
Starting and stopping the Sequencer, and trigger parts manually	30
Selecting a part	31
Selecting Module Numbers	31
Sequencer Note Track Steps view/edit	32
Parameter Fine Adjust / Selecting a Note Track Half Bar and/or a controller track bar, to be viewed/edited	33
Mute/Unmute Note Tracks, Start/Stop Seq/Song Recording	34
Toggling Sequencer Record On/Off	34
Copy Morph Layer A to Layer B	35

Selecting the next preset.....	36
Selecting the previous preset	36
Preset Reload / Advance Song realtime record step.....	37
Panic	37
Compare Edited Preset With Saved Preset	38
Shortcuts to Synth Modules	39
Function Buttons / Shortcuts	40
The Synthesizer Modules	42
The Part Overview Page	44
OSC – Oscillators.....	46
The OSC page, when Type 1, Type 2 or Reso is selected as type	49
The OSC page, when Perc, Prc2 or Prc3 is selected as type	51
The OSC page, when Cymb or Cym2 is selected as type	53
The OSC page, when Clap is selected as type.....	55
The OSC page, when SinF is selected as type	57
The OSC page, when Harm is selected as type.....	59
The OSC page, when Draw is selected as type	61
Draw Wave Edit:	62
The OSC page, when FOF is selected as type	63
The OSC page, when in Sampler and Chopped Keyboard modes	65
The OSC page, when in Wavetable mode	67
The MOD page, when Type1, Type2, Reso, SinF or Draw is selected as Type	69
The MOD page, when Perc, Prc2 or Prc3 is selected as Type	71
The MOD page, when Cymb or Cym2 is selected as Type	72
The MOD page, when Clap is selected as Type	73
The MOD page, when Harm is selected as Type	74
The MOD page, when FOF is selected as Type	76
The MOD page, when in sampler or chopped keyboard mode	78
The MOD page, when in Wavetable mode	79
Oscillator/Sampler/Chopped Keyboard/Noise/Wavetable mode select	81
Part Samples Select	83
The Mod2 page, when Type1, Type2, Reso, or SinF is selected as Type.....	85
The Mod2 page, when Perc, Prc2 or Prc3 is selected as Type	86

The Mod2 page, when Cymb or Cym2 is selected as Type	87
The Mod2 page, when Clap is selected as Type	88
The Mod2 page, when Harm is selected as Type	89
The Mod2 page, when Draw is selected as Type	90
The Mod2 page, when Draw is selected as Type	91
The Mod2 page, when in sampler or chopped keyboard mode	92
The Mod2 page, when in wavetable mode	93
Percussion Synthesizer	94
Quadrature Oscillators	98
Noise Generator	99
VCF - Analog Filters.....	100
VCF51-Dual Channel 12dB parameters	101
VCF52-Dual Channel Multi parameters.....	106
VCF1- Single Filter parameters	111
VCF2- Dual Filter parameters	116
VCF3- Tripple Filter parameters	121
VCF4- Gman's First Filter parameters.....	126
VCF5- MiniProphet Filter parameters	131
VCF6- SP Filter parameters.....	136
VCF7- Tubaz Filter parameters	141
VCF8- Dual Band SSI Filter parameters.....	146
VCF9- Xtra Distort Filter parameters	151
VCF10- SSI2140 Filter parameters.....	156
VCF11- Zatur Filter parameters	162
VCF12- FilterBank parameters.....	167
VCF13- Diode Drive Filter parameters.....	172
VCF14- Transistor Ladder Filter parameters.....	177
VCF49- User Filter Parameters DUAL	182
VCF50- User Filter Parameters SINGLE.....	187
DGF - Digital Gotharman Filters.....	192
VCA	199
MIX – Add Mixers	204
RING VCA	206

EFX - Effect Processors	209
Effect 1 to 6 types.....	210
Effect 7 and 8 types	213
Effects Select page.....	215
Mix Modulation and Backwards Delay.....	217
Effect Inputs.....	218
Effect 1 to 6 Parameters.....	219
Chorus.....	219
Resonator	221
Distortion	223
Bit Crush	226
Pitch Shifter	228
Stretcher	231
FM.....	233
Sample Pitch	235
Sample Pitch V2.....	237
Roto Pitch	239
Variator.....	241
PitchShaper.....	243
PitchShaper2.....	246
Time Stretch	249
Filter.....	251
Triple BPF	254
WaveFolder	256
FAT	258
EQ	260
EQ2	263
OverShifter	265
Bass Enhancer.....	267
Compressor.....	269
Expander.....	272
Delay1, Roto delay, Bright Delay and Bright Roto Delay.....	275
Reso EQ.....	277

Mod Delay	279
Comb Filter	281
Compressor 2.....	283
Effect 7 and 8 Parameters	286
Delay1, Roto delay, Bright Delay and Bright Roto Delay	286
Granulator SQ.....	289
Variator.....	292
Reverb.....	294
Granulator (unsynced).....	296
Xfade Granulator	299
Abstru0t0	302
Time Stretch	305
Roto Pitch	307
Sample Pitch V2.....	309
Mod Delay	311
Outputs Module	313
OUTPUT SEL.....	314
OUTPUT LEVEL.....	315
OUTPUT PAN.....	316
OUTPUT PAN SRC	317
OUTPUT PAN MOD	318
OUTPUT OUT	319
ENV – Envelopes.....	320
LFO.....	324
LFO Draw Waves.....	328
Editing the Draw Waves	329
Saving the Draw Waves	330
Copy Draw Waves.....	330
Random S/H Generators.....	331
Triggers In	332
Triggers Out	334
CV In.....	335
CV Out.....	336

CV Out Parameters	337
CV Out Modulation 1	338
CV Out Modulation 2	339
CV Out Modulation 3	340
CV Out Adjust	341
Parameter Randomizer.....	342
Part Trigger / Poly Setup.....	344
Zone Setup/MicroTunings	346
Connecting Modules.....	349
List Of Modulation/Audio Sources	350
Connect Modules Manually.....	358
Group Select	358
Connect Modules Via The Module Overview Page	359
Connect Modules Automatically	362
Sequencer	364
Entering the Sequencer	370
Sequencer Start Page	372
Sequencer Main Page	373
Setting the tempo	374
Skip Effect	374
Setting the Last Step of the currently selected note track.....	374
Setting the resolution for the currently selected note track.....	375
Turning the Metronome on and off	375
Setting the Sequencer Recording Mode.....	375
Double Note Track	375
Sequencer Reset/Continue.....	376
Clear Note Track	377
Note Tracks.....	378
Note Subtrack.....	379
Adjusting the offset of all steps.....	381
Gate Time Subtrack	383
Velocity Subtrack	385
Position Subtrack	387

Sub Position Subtrack	389
Templates and Note Scales	391
Templates for the Position Subtrack	393
Note Track Mod Page	395
Clear Note Track	397
Double Note Track	398
Halving the track resolution	398
Doubling the track resolution	398
Realtime recording of notes	399
Step Recording of Notes	401
Setting up a track/part to internal or external operation	402
The Controller Tracks	405
Controller track Step Values	406
Controller Tracks Templates	408
Controller Tracks CC page	410
Clear Controller Track	412
Double Controller Track	413
Controller Tracks Realtime Recording	414
CV Inputs Recording	415
Controller Tracks Step Recording	416
Clear Sequence	417
Swing All	418
Synth and Sequencer Morphing	419
Mor> preset parameters/Setup	420
Common Settings	423
Morph Setup	425
Common Settings 2 (COM2)	427
Initialize Preset	429
Parameter Snap Mode	430
Filter Boards Setup	431
VCF8 cutoff limitation	433
The User Filter	434
FLASH Memory Check	442

Delete a Sample Bank.....	443
Delete all Presets and Songs.....	444
C.P.....	445
Preset/Song Mode.....	446
Display Update Rate	447
Save Preset	448
Song Mode.....	452
Accessing Song Mode	453
The Song Edit Page	457
The Song Select Page	459
Song Realtime Recording.....	461
Save Song.....	465
Initializing a Song.....	469
Copy/Paste	471
Sequencer Steps Copy/Paste	474
Sample Record and Edit.....	477
Recording a sampling	478
Edit A Sampling.....	484
Adjusting the start and end points of a sample	486
Sample Chops	487
Wave Chop System	491
Deleting last recorded sampling.....	499
Deleting other samplings, than the last recorded one.....	501
Graphical sample editing.....	502
Sample Start Point.....	504
Sample End Point.....	505
Selecting and edit chop points	506
Adding a chop point	507
Adding a chop point at the selected end point	509
Delete a chop point	510
Saving the chop points	512
Creating a new sampling from a portion of the selected sampling	513
Assembling a Wavetable	515

WaveBuilder	519
WaveTable Editor	522
USB	529
USB Sample Preview	531
Open a directory (or folder)	532
Importing files.....	533
Importing multiple files	535
Reload multiple files	536
Import Multiple Samplings From Directory As one sampling with Chop points	538
Make a new directory	541
Delete file from USB drive	542
Export samples, presets, songs and User filter parameters to a USB drive	543
Updating the Urano firmware	545
MIDI Specs	551
Safe Boot Mode	554
Setting the internal Trigger Out Voltage Jumper	555
Installing/exchanging Analog FilterBoards	565
History	582
Urano Specs	586

Modular deforming!

In The Box

In the Urano box should be:

- Urano itself
- A power supply –Multi plug –Works in most countries.

If any of these items are missing, please get in touch with Gotharman's.

Introduction

Urano is a modular synthesizer with memory. All connections between modules, module settings, sequences and sample assignments can be memorized for instant recall.

Like many other Gotharman instruments, each preset contains 2 versions of the preset, that can be morphed between. With one knob, you can morph all the settings of a complete modular system!

It will also hold all your samplings and wavetables in memory, even after a power recycle.

And it connects to your Eurorack...

Unlike the Anamono X, which had 2 separate bus systems, one for audio and one for modulation, Urano only has one bus, that handles both audio and modulation, so everything can be connected to everything.

The build-in modules:

- **8 Oscillators** - Waveforms, draw waves, pitched noise, drum oscillators, samplings, wavetables, linear FM and PM. Oscillator 1 and 2 has quadrature outputs.
- **Noise Generator** – While the oscillators can output pitched noise, a simple unpitched white noise generator is also available.
- **Up to 4 analog filters** . Compatible with the Gotharman filter board system. Comes with 4 analog filters installed as standard.
- **8 digital filters** - 27 filter types. Standard filters, triple filters, sharp filters, tube filters...
- **8 VCA's** - with ADSR envelope, various curves and a clip parameter. Can be triggered by any source.
- **8 Effects Processors** - Many of the LD effects plus a new reverb, a wavefolder and some new pitch effects.
- **8 LFO's** - With variable waveform, draw waves and curve. Key syncable. Can trigger parts and clock the sequencer.
- **8 Envelopes** - ADSR + decay envelope with loop options. Can be triggered by any source.
- **5 Random Generators** .
- **4 Ring VCA's** .
- **2 Mixer modules** , that can add extra inputs to any module.
- **Output module** - Sends up to 8 sources to the outputs, and handles the stereo panning.
- **Trigger Input module** - Assign the trigger inputs to parts and sequencer functions.
- **Trigger Output module** - Sends any sources to the trigger outputs.
- **CV Output module** - Send any sources to the CV outputs. Can scale to 1V/oct and 1.2V/oct.

Some Features

Connecting Modules

Urano has different ways of connecting the modules. They can be connected manually, by setting the source and the amount, for audio and modulation, by turning a knob, they can be connected via an overview module grid, using the touch interface, and modules in the audio path, can be added and removed into/from the signal chain, by using Urano's auto functions.

8 Parts

The modules can be arranged into 8 parts, to make it possible to make tracks on Urano with 8 different sounds. Any module can be used by any part, and the modules can even be used by multiple parts at the same time. Part 1-4 can be poly-chained.

On an initialized preset, the modules are arranged in the 8 parts, each with oscillator, filter, VCA, effects processor and envelope, to make it possible to make tracks instantly. In the standard configuration, part 1-4 also has an analog filter included.

Sequencer

An LD3 style sequencer is available to compose music with the parts. It has 8 note tracks and 16 controller tracks.

Sample recorder/editor

Samples can be recorded from the audio inputs and outputs, imported via USB, and edited.

Wavetable editor

Not only can the Urano oscillators 1-4 play back wavetables. Urano also has a wavetable editor built in, where you can edit and draw wavetables on the touch screen, and, of course, save these.

Connectivity

Urano can interface with other instruments via MIDI and minijack connectors.

Touch display

It comes with a 4.3" touch display. Most operations can be performed via knobs and buttons, but sometimes the touch display can help speeding up the workflow. The touch interface on Gotharman instruments work in a very simple way, without any annoying "touch gestures".

Solid

Built to last in a steel box with extruded aluminium sides. All powdercoated with a "Black Sand" finish, that is very resistant to scratches and dust. All knobs, buttons and connectors are of the highest quality.

Cleaning

For cleaning your instrument, to my experience it is best to use some standard windows cleaner, which usually comes as a spray bottle. Before you use it, please make sure, that it contains **no alcohol**. Spray a little of this on a cloth and clean.

DO NOT USE any kind of alcohol or any of these alcohol wipes, which has become popular under the current pandemic.



If you do, this might happen:



Getting Started

Connecting Urano



On the back panel of your Urano, you will find the power switch, connection for power supply, audio inputs and outputs and MIDI in and out.

Audio In L and R

The two rightmost 1/4" jack connectors, marked "AUDIO IN R L" are always the stereo audio inputs.

Connect any line stereo/mono audio sources to the audio input, for sampling and/or processing through Urano's effects and optional analog filters.

Audio Out L(hp) and R

The next 2 1/4" jack connectors are the main stereo outputs. You would probably like to connect these audio outputs to a mixer or an amplifier, or anything else that ends out in a speaker/a set of speakers. Since Urano doesn't have built in speakers, it just needs to be connected to something, that can transfer its amazing sound to you. These should be connected, using 1/4" mono jack cables.

The left audio output (marked "AUDIO OUT L(hp)") doubles as a stereo headphone connector. Please make sure that nothing is connected to the right audio output, when plugging headphones into this connector.

The Volume knob on the Urano front panel will affect the level of these outputs.

Audio In 3 and 4

Connect any line stereo/mono audio sources to these audio inputs, for sampling and/or processing through Urano's effects and optional analog filters.

This set of inputs are mixed with the audio inputs 3 and 4 minijacks on the Urano top panel.

Audio Out 3 and 4

An extra set of audio outputs, that like the first set, outputs line level audio.

When your Urano has 4 analog filters installed, these outputs will output the signals sent to VCF3 and 4. With only 2 analog filters installed, these will output the signals sent to them from the Output module.


The Volume knob on the front panel does not affect the output level of these outputs.

This set of outputs are also outputted through a pair of mini jacks, on the Urano top panel.

MIDI In and Out

If the Urano touch screen keyboard and step buttons seems a bit too limited, you might want to connect a MIDI keyboard to MIDI in, in order to take full advantage of Urano's fully chromatically playable sounds. It is also possible to connect anything that transmits a MIDI clock, if you would like the sequencer of Urano to sync to the rest of your setup.

On MIDI out, MIDI clock, MIDI CC's from the Urano edit knobs, and notes and CC's from its sequencer are transmitted. Connect any MIDI gear to this, that you would like to control from Urano.

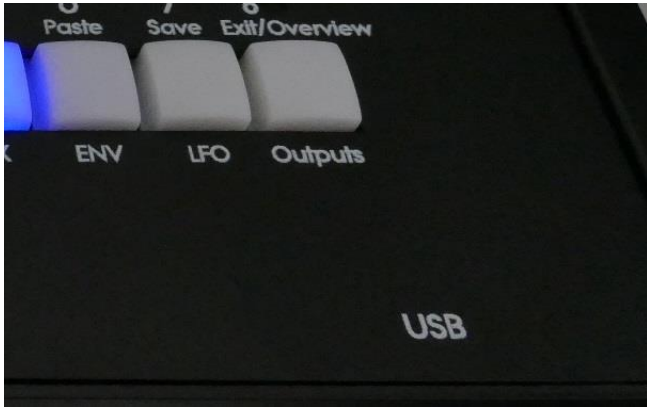

On the front panel of your Urano, you will find the USB connector.

USB Connector

To the USB connector, a USB drive can be connected.

This should be:

- Maximum 32 GB
- FAT formatted

With a USB drive connected, you can:

- Import, export and back up samples as .wav files
- Import deFormer .lds samples
- Import, export and back up Urano presets and songs
- Update Urano

To import a .wav file from another device, it must be:

- Mono or stereo
- 44.1 KHz sample rate – Urano will import other sample rates, but they will play back in a wrong speed
- 16 bit or 24 bit native PCM
- Standard wav's or broadcast wav's

Top panel connectors



On the Urano top panel, you will find a number of mini jack connectors. These are mainly there to make it possible to connect Urano to a Eurorack system, but you can, of course, connect it to anything analog.

Trigger Inputs: Signals below 1V is considered as a trigger off. Signals above 1V is considered as a trigger on. The trigger inputs can handle up to +/-45V. Minijacks.

Trigger Outputs: The output range is 0V to 5 or 12V (settable via jumper). Minijacks.

CV Inputs: The input range is -5V to +5V, and it has input protection, that will protect the circuits up to +/-45V. When controlling a part trigger note with a CV input, the input is scaled to 1V/oct. Minijacks.

CV Outputs: The output range is -5V to +5V. Minijacks. These outputs can be scaled to 1V/oct and 1.2V/Oct.

Audio In 3/4: Are sent to the audio/modulation bus and the sample recorder. These are both present as minijacks and 1/4" jacks. When connecting signals to both the minijacks and the 1/4" jacks at the same time, the signals are mixed. The 1/4" jacks are compatible with standard line level sources, while the minijacks are compatible with eurorack +/- 5V sources.

Audio Out 3/4: Audio from the output module can be sent to these. When dual line analog filter boards are installed, the audio sent to analog filter 3 and 4 are output from these connectors, and the signals sent from the output module are ignored. These are both present as minijacks and 1/4" jacks. The 1/4" jacks outputs on standard line level, while the minijacks outputs +/- 5V.

Starting Up

Connect the supplied power adaptor to the Power input, and to a 100V to 240V power source – Usually a wall socket.




It's a 9V, minimum 2.0A type with a 2.1 mm DC plug, with positive middle. The power supply on the picture is only for reference. The actual one might look different.

Turn it on

Push the "I" on the power switch. Your Urano should now turn on.

The User Interface

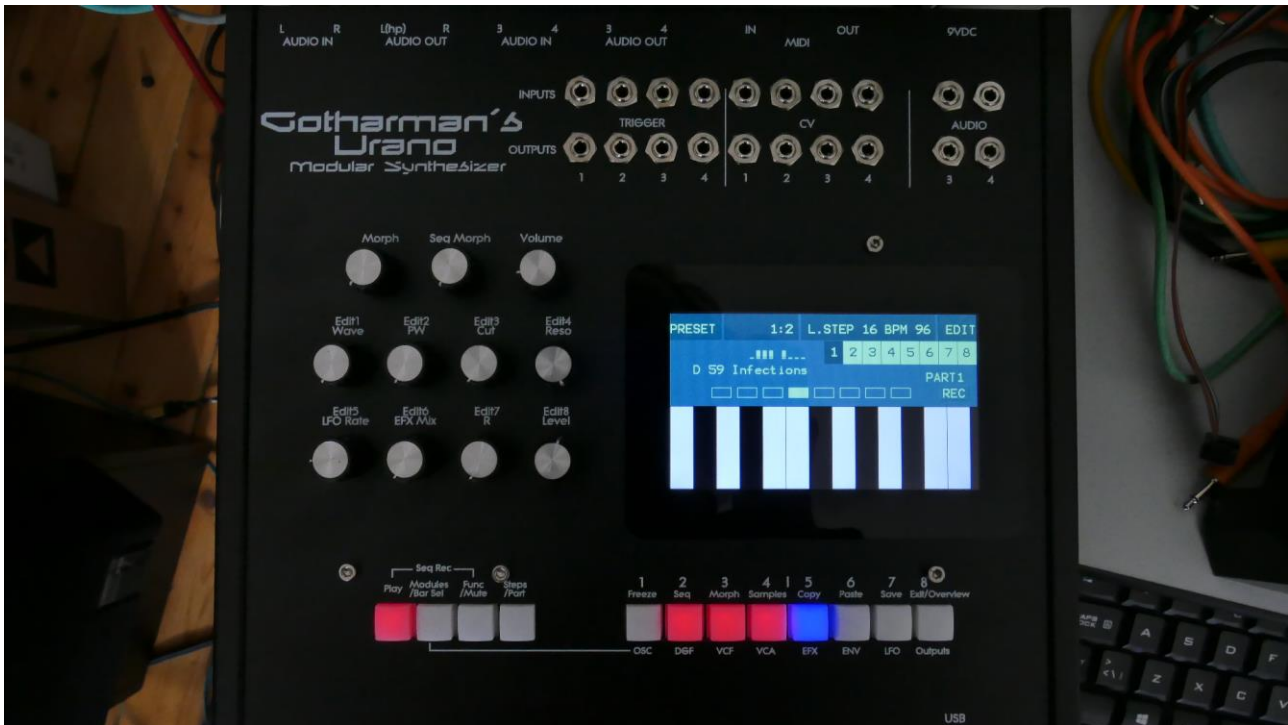

Urano has a highly sensitive and responsive capacitive touch display, 8 step/trigger/part select/quick jump buttons, a Modules/Bar Sel button, a Func/Mute button, a Steps/Part button and a Sequencer Play button. It has 8 Edit/Quick Edit Knobs for controlling and editing parameters and sending MIDI CC's, a (synth) Morph knob, a Sequencer Morph knob and a volume knob.

Pushing the **Trigger 1-8** buttons, with Modules/Bar Sel, Func/Mute and Steps/Part unlit, will trigger the respective Urano part. Each trigger button will send a settable note number (Settable in the Synth "Trig" section). When a part is triggered, the button will light up.

The **Play** button will start and stop Sequencer playback. When the sequencer is playing back, the Start/Stop button will light up.

When the **Modules/Bar Sel** button is held down, it is possible to select one of 8 half bars, for the currently selected sequencer note track, that will be monitored on the trigger/step buttons, when the Steps/Part button is lighting up, by pushing any of the 8 trigger buttons.

When it is lighting up, the 8 trigger buttons functions as **quick jump** buttons, to the modules listed right below the trigger buttons. These will primary take you to modules, that are used by the currently selected part.

When the **Func/Mute** button is held down, it is possible to **mute/unmute** the 8 sequencer note tracks, by pushing any of the 8 trigger buttons. When it is lighting up, the 8 trigger buttons functions as **Quick Jump** buttons, that will take you to the edit pages, which names are showed right above each step button. It is also possible to switch effect freeze on/off, select Morph layer, Copy/Paste and exit from pages, using this button combination

When the **Steps/Part** button is held down, the 8 trigger buttons functions as **Part Select** buttons. Pushing any of these, will select part 1 to 8.

When it is lighting up, the 8 trigger buttons will show the **steps** of the selected sequencer note tracks half bar. The half bar to be monitored, can be selected by the Modules/Bar Sel + trigger button combination described earlier. Steps that are on will light up, steps that are off will not light.

The **Morph** knob (**MIDI CC#1**) will morph between the two layers of Synth parameters, and the **Seq Morph** knob (**MIDI CC#2**) will morph between the two layers of Sequencer parameters.

The **Volume** knob always adjusts the audio output volume.

The **Edit 1-8 Knobs** to the left of the display, adjusts the parameters on each edit page. On the **Preset Select screen**, they controls the quick edit parameters (named on the knobs), or if the Qedit parameter on the MOR>COMMON2 page is off, they acts as modulation sources, that controls any parameters that has knob1 to 8 set as modulator, and transmits MIDI CC's, if The KnbCC parameter is on.

The Quick Edit Knobs controls:

- Edit Knob 1: Oscillator Wave (**MIDI CC#4**).
- Edit Knob 2: Oscillator PW (**MIDI CC#5**).
- Edit Knob 3: VCF/DGF Cutoff (**MIDI CC#8**).
- Edit Knob 4: VCF/DGF Reso (**MIDI CC#9**).
- Edit Knob 5: LFO Rate (**MIDI CC#10**).
- Edit Knob 6: EFX Mix (**MIDI CC#11**).
- Edit Knob 7: VCA Envelope Release Time (**MIDI CC#12**).
- Edit Knob 8: VCA Level (**MIDI CC#7**).

By touching the row of numbers (1 to 8) in the upper right corner of the main (preset select) page, you can select which module numbers should be affected by the Quick Edit Knobs.

When 1 to 4 is selected, Edit Knob 3 and 4 will edit the analog filters (VCF). When 5 to 8 is selected, Edit Knob 3 and 4 will edit digital filter 5 to 8 (DGF).

The Touch Screen Keyboard

The Urano display is touch sensitive. The touch interface is used for navigating through the edit and settings pages, and in the bottom of most pages, a fully playable touch keyboard is present.



On the Preset and Song Select pages, it is, besides from playing notes on the touch keyboard, also possible to apply modulation to the sound, by placing your finger on different positions between the top and the bottom of the keyboard. This is referred to as Y modulation. On any other pages, the keyboard only plays notes.

On the Preset and song Select (Main) pages, the keyboard can be on up to 3 octaves, and Pitch Bend can also be controlled through playing the keyboard.

The touch keyboard is always controlling the currently selected part.

It is possible to select the keyboard octave, by touching any of the 8 squares just above the keyboard.

The Y position modulation is transmitted, received and recorded as MIDI CC#16.

Setting the number of octaves



To change the number of touch keyboard octaves, touch the “oct” switch, which is located to the left, right above the keyboard. Every time you touch it, it will toggle between 1oct, 2oct and 3oct.

When 2 octaves are selected, the upper and lower octaves get divided by a line in the middle of the keyboard. When 3 octaves are selected, the upper, middle and lower octaves get divided by 2 lines.



Pitch Bend Function



Usually, when swiping your finger across the touch keyboard, each note will trigger a sound.

It is though also possible to use finger swiping to pitch bend the sound. To make this possible, you must set the keyboard in Bend mode, by touching the “BND” button, which is located to the right, just above the keyboard, so that this turns dark blue.

Now new notes will only be triggered, the moment you put your finger on the keyboard, and swiping your finger over the middle of the keyboard, will activate the bend function, and you can now pitch bend the sound up and down by swiping. The pitch bender is centered around the middle of the touch keyboard.

The Main (Preset Select) page



This is the first screen you will see, right after Urano's start-up screen, unless you left your Urano in Song mode, the last time it was turned off. Here you can change preset, jump to Urano's edit and settings pages, and set the touch keyboard octave, as described on the previous pages.

On the top of this screen, the Sequencer bar/beat, that is currently being played back, is shown.

To the right of the bar/beat indicator, you will find the last step of the currently selected sequencer note track and the tempo of the currently selected preset in BPM. Touching this field, will enter the sequencer main page, where you can set the last step and resolution of the currently selected note track, set the sequence tempo, erase and double the note track, switch the metronome on and off, and set the skipper effect.

Right below the last step/bpm field, you will find a row of 8 number touch buttons, numbered 1 to 8. Touch any of these to select the module number, which you would like to edit with the Quick Edit Knobs.

In the right side, right below the numbers, the selected part number is indicated. Right below this, you will find a sequencer record indicator (REC). When the REC indicator is red, the sequencer is in record mode. Touching the REC indicator, will switch the sequencer in and out of recording mode.

In the left side of the screen, the number and name of the currently selected preset/song is shown.


Below the preset name/number, you will find the touch screen keyboard.

Right above the preset name, 8 small VU-meters are shown. These shows the activity of part 1 to 8.

Touch the “EDIT” field in the upper right corner of the screen, to enter the edit and setup pages.
Touch the “PRESET” field, to select a memorized preset.

Selecting a preset

Touch the “PRESET” field. A list of 5 presets near the currently selected preset, will now appear:

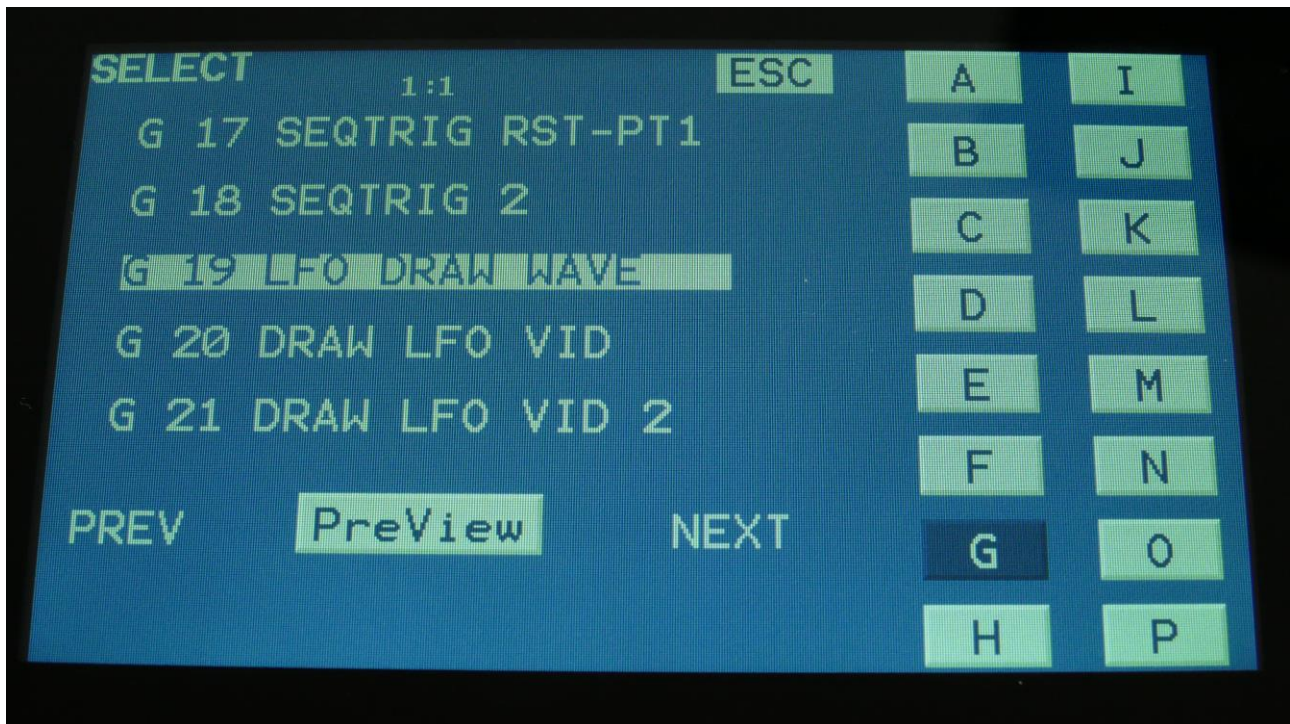

Touch “PREV” or “NEXT” to view the previous or next 5 presets, touch the buttons named A to P to select a specific preset bank, and finally touch the preset name of the preset you would like to select. 1024 presets can be selected, from A01 to P64.

Urano will now jump back to the main Preset Select screen, and show the name of the newly selected preset.


If the sequencer is playing back, the Play LED will now start to flash, and the text "NEXT:" will show right above the new presets name, awaiting track 1 to reach its start/end step. As soon as this happens, Urano will switch to the newly selected preset, the Play LED will stop flashing, and "NEXT:" will disappear. It is also possible to immediately switch to the next preset, by pushing the Play button, while it is flashing.

If the sequencer is not playing back, Urano will immediately switch to the new preset, when you touch the preset name.

When Urano is turned off, it will remember which preset was selected, and start up with this, when turned on again. It will also remember if it was in preset or song mode, and start up in the same mode, and if it was in song mode, it will also remember which song was selected.

Presets can also be selected, using the buttons.

If you activate the PreView mode, by touching the PreView field, so it turns black with white text, you can preview the presets, without Urano jumping back to the main Preset Select screen.

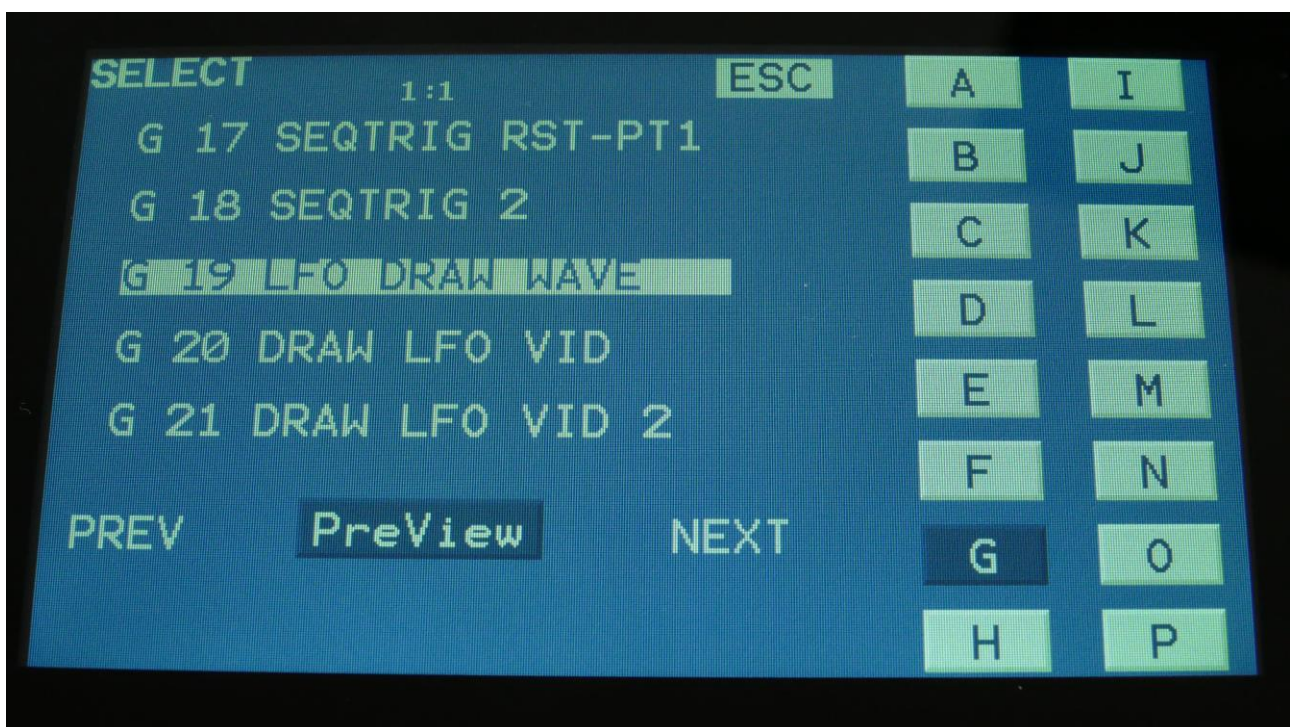


If the sequencer is running, it will still wait for track 1 to reach step 1, until it jumps to the next preset. This is indicated by the Play LED flashing. Here it is also possible to make the preset switch happen immediately, by pushing the Play button, while it is flashing.

If any parameters of the preset has been edited, and the edits has not been stored, a “*” will appear right between the preset number and the preset name.

When this appears, you will need to save your preset, in order to keep your edits.
Please see how to do this in the “Save Preset” section, later in this manual.

Operating Urano

Starting and stopping the Sequencer, and trigger parts manually

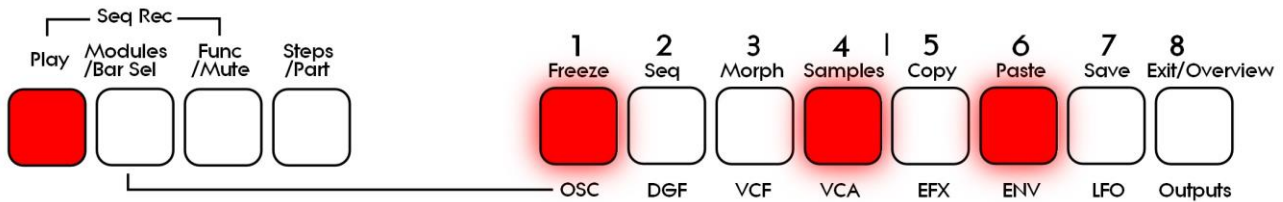


To start the sequencer playback, push and release the Play button, so that it lights up.

The sequencer will now start to play back. When the Modules/Bar Sel, the Func/Mute and the Steps/part buttons are not lighting up, every time a part is triggered to play back, the corresponding step button will light up shortly.

The sequencer playback will either start from the selected start steps of each track (CONT button light blue), or it will continue to play back from the point, where it was stopped (CONT button dark blue).


The CONT touch button can be found on the Seq Main/Last Step page.

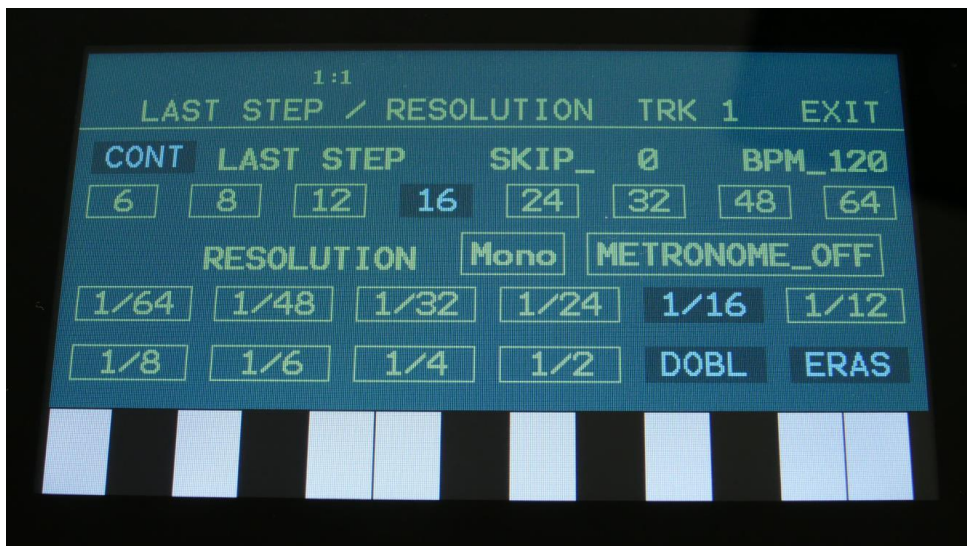

To stop the sequencer, simply hit the Play button again, so that it is no longer lighting up.

To trigger the 8 parts manually, make sure that neither the Modules/Bar Sel button, the Func/Mute button or the Steps/Part button is lighting up, and then push any of the 8 step buttons, to trigger the sounds that is programmed on each part.

Selecting a part

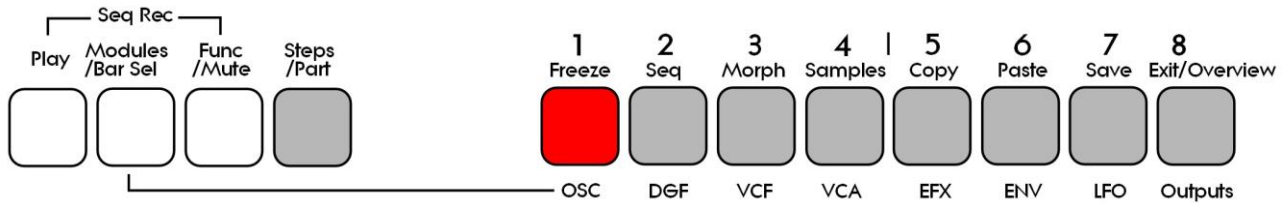

Push and hold the Steps/Part button.

The selected part number will now be shown, by one of the 8 step buttons lightning up. The number above the step button, is the part number that is currently selected.

To select another part, while still holding down the Steps/Part button, push any of the 8 step buttons.

The selected part, is the part which parameters will be shown on the display, when entering the edit pages.

Selecting a part, also selects the equally numbered Sequencer Note Track.

When entering the Sequencer Controller tracks 1 to 8, track 1 to 8 is selected in the same way.


When entering the Sequencer Controller tracks 9 to 16, 1 will equal 9, 2 will equal 10, and so on.

The Sequencer Controller tracks are selected separately from the parts.

Selecting Module Numbers

When located on any of these edit pages: OSC, DGF, VCA, LFO, ENV and EFX, pushing the above mentioned button combination, will not select the part for editing. Instead this will select the module number for editing (i.e. OSC1-8, DGF1-8 and so on...).

Sequencer Note Track Steps view/edit

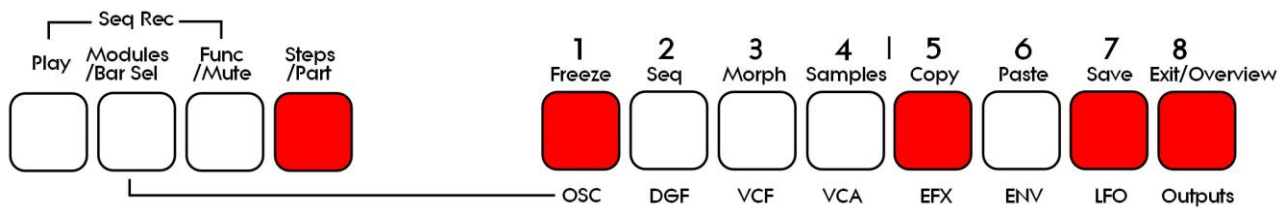

First, select the part, for which you would like to view/edit the note steps, as described on the previous page of this manual. You can, of course, select another part at any time, also after you have entered note step edit mode.

To enter note step edit mode, push and release the Steps/Part button. This should now light up. Any note sequencer steps that are switched on to play back, on the first half bar of the selected note track, will now also light up on the 8 step buttons.

If the sequencer is running, the light state of each step button will be reversed, when a step is playing back.


To switch a step on or off, simply hit the corresponding step button, as it will toggle its state.

When the sequencer are in recording mode (the Play button is flashing), pushing any of the step buttons, will set record mode to step mode, and select this step for recording. The step button will now flash.

When using the Urano sequencer as a usual step sequencer, the steps will play back from left to right. In this case, step 1 plays back at position 1, step 2 plays back at position 2 and so on. On the Urano sequencer, it is though possible to break this pattern, and make each step play back on any position, using the position subtrack. It is even possible to make more steps playing back at the same position, for polyphonic step sequencing.

Only 8 steps (one half bar) are shown at a time. The note tracks of Urano have 64 steps. Please read on, to experience how to switch between half bars (step 1-8, 9-16, 17-24 and so on...).

Parameter Fine Adjust / Selecting a Note Track Half Bar and/or a controller track bar, to be viewed/edited

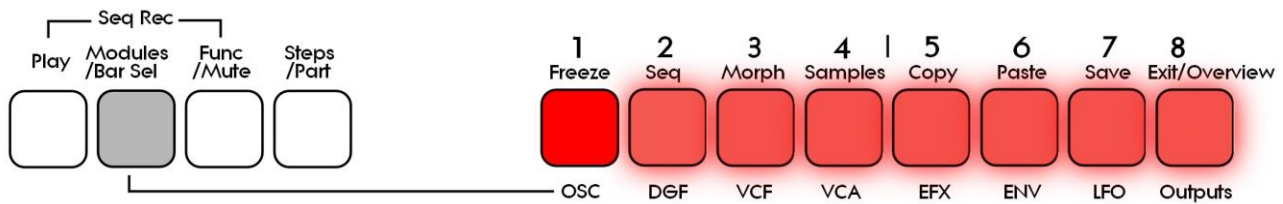

To fine adjust a parameter, first adjust the parameter, as you would normally do, with a knob. Then push and hold the Modules/Bar Sel button, while adjusting the parameter again, using the knob. The parameter will now be adjusted inside a narrow range, and it will be easier to set it at a specific value.

Selecting bars:

Note tracks: When you are located on any other pages, than the sequencer controller tracks pages, a half bar is selected to be viewed for a note track. The selected half bar, is the half bar that is shown on the step buttons, and one half of the bar shown on the note track pages.


Push and hold the Modules/Bar Sel button. The step button that indicates the selected half bar will now light up, while the other 7 step buttons will be flashing. Now push a step button, to select the desired half bar. Step button 1 will select the first half bar of bar one, step button 2 will select the second half bar of bar one, step button 3 will select the first half bar of bar 2 and so on...

Controller tracks: When you are located on any of the sequencer controller track pages, a bar can be selected to be viewed for the currently selected controller track. The selected bar, is the bar that is shown on the controller track pages.

While the note tracks have up to 64 steps divided into 4 bars, the controller tracks have up to 128 steps, divided into 8 bars. Each of these 8 bars can be selected, using the 8 step buttons.

Push and hold the Modules/Bar Sel button. The step button that indicates the selected bar will now light up, while the other 7 step buttons will be flashing. Now push a step button, to select the desired bar. Step button 1 will select bar 1, step button 2 will select bar 2, step button 3 will select bar 3 and so on...

Mute/Unmute Note Tracks, Start/Stop Seq/Song Recording

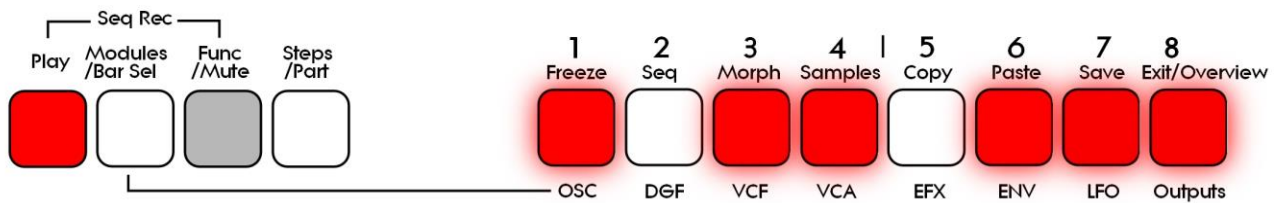

To mute, unmute or view the mute state of the 8 note tracks, push and hold the Func/Mute button.

Unmuted tracks will now be shown by a step button that is lighting up, and shortly flashes off, every time the track is triggering.

Muted tracks are shown by a step button that is unlit, and that lights up shortly, every time the track would have triggered something, if it weren't muted.


To mute or unmute a track, simply hit the corresponding step button, while still holding down the Func/Mute button.

Toggling Sequencer Record On/Off

By pushing and holding the Func/Mute button, and then pushing the Play button, when the sequencer is not in Song mode, Sequencer realtime recording mode will be toggled on or off. When the sequencer is in recording mode, the Play button will flash.


When the sequencer is in Song mode, this button combination will toggle Song realtime recording on or off.

Copy Morph Layer A to Layer B

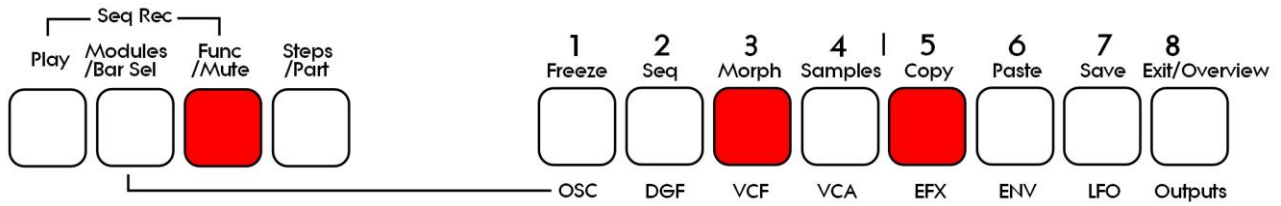

Push and release the Func/Mute button, so that it lights up, to enter the function buttons. Now push and release step button 5 (Copy), so that this also lights up. Instructions for copy and panic will now be shown on the screen. Push and release step button 3 (Morph). Morph layer A synth parts and sequencer parameters have now been copied to morph layer B. If you turn the Morph knob, you should now hear the same sound/sequence, no matter what position the knob is in.


Selecting the next preset

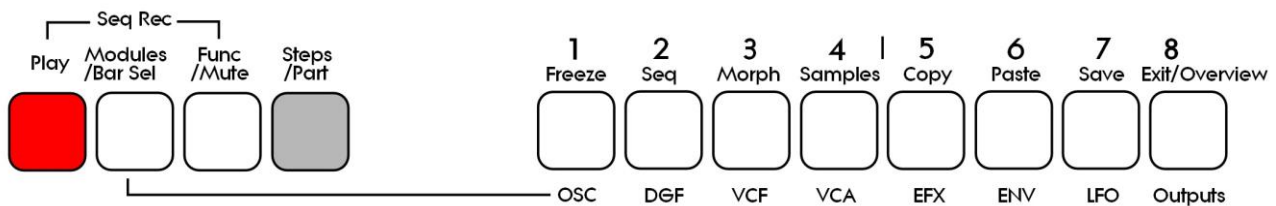

Push and hold the Steps/Part button while pressing the Play button. Urano will now select the next preset. If the sequencer is playing back, the Play button will now start to flash, and the text “NEXT:” will show right above the new presets name, awaiting track 1 to reach its start/end step. As soon as this happens, Urano will switch to the newly selected preset, the Play button will stop flashing, and “NEXT:” will disappear. It is also possible to make the preset switch immediately, by pushing the Play button, while it is flashing.

If the sequencer is stopped, Urano will immediately switch to the new preset.


Selecting the previous preset

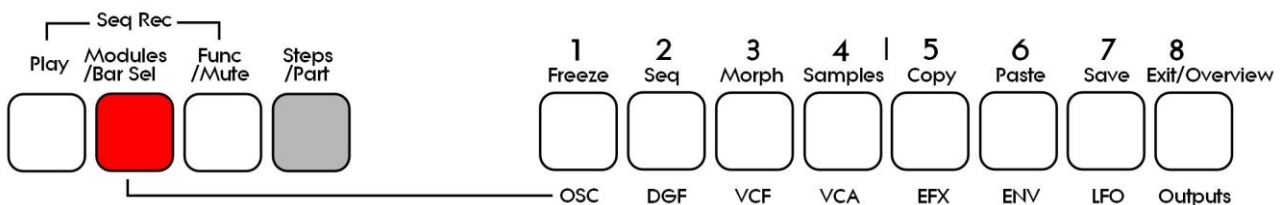

Push and hold the Steps/Part button while pressing the Modules/Bar Sel button. Urano will now select the previous preset. If the sequencer is playing back, the Play button will now start to flash, and the text “NEXT:” will show right above the new presets name, awaiting track 1 to reach its start/end step. As soon as this happens, Urano will switch to the newly selected preset, the Play button will stop flashing, and “NEXT:” will disappear. It is also possible to make the preset switch immediately, by pushing the Play button, while it is flashing.

If the sequencer is stopped, Urano will immediately switch to the new preset.


Preset Reload / Advance Song realtime record step

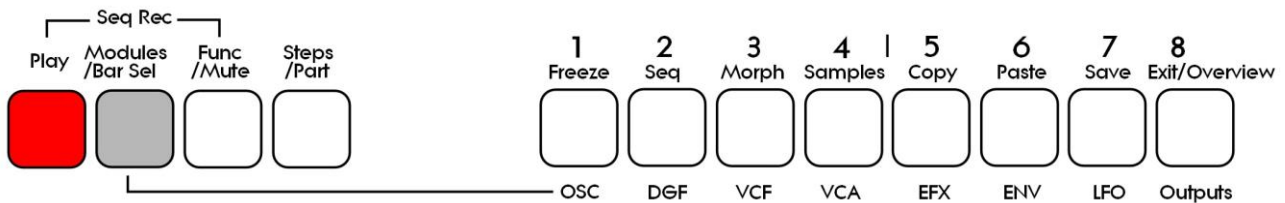

Push and hold the Morph Set button, while pressing the Play button, to reload the currently selected preset.

While realtime recording a song, reloading the preset, will cause the song recorder to advance to the next song step. This is useful for recording track mutes of the same preset into the song.


Panic

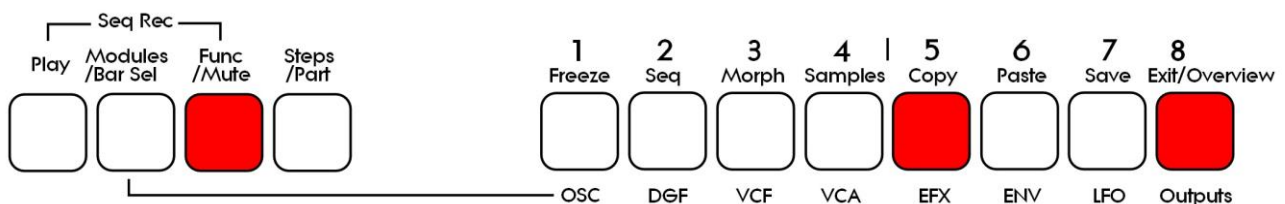

Push and release the Func/Mute button, so that it lights up, to enter the function buttons. Now push and release step button 5 (Copy), so that this also lights up. Instructions for copy and panic will now be shown on the screen. Push and release step button 8 (Exit).

Now all internal sounds will be shut off.

Compare Edited Preset With Saved Preset

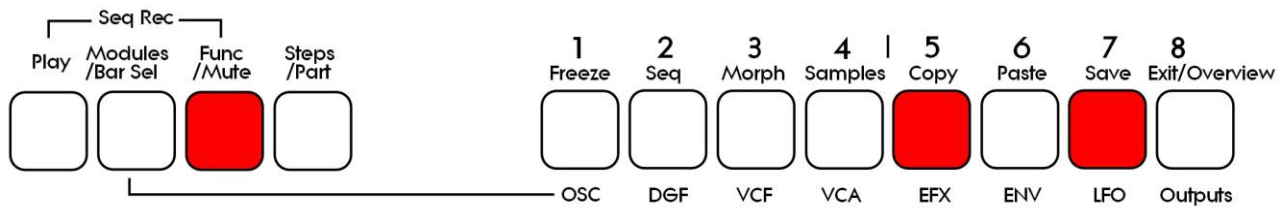

When you are editing a preset, and you would like to compare this with the originally saved preset, this is possible, using the Compare function.

To listen to the previously saved preset:

- Push and release the Func/Mute button, so that it lights up.
- Push and release step button 5 (Copy).
- Push and release step button 7 (Save).

You can now play with the previously saved preset.

To de-active the Compare function, and jump back to the edited preset:


- Hit step button 7 (Save) again.

To de-activate the Compare function, and discard your edits:

- Hit step button 5 (Copy). Urano will now ask you to confirm, that you wish to discard your edits, by pushing step button 5 (Copy) again.

If you are absolutely sure, that you would like to discard your edits, hit this button.

Shortcuts to Synth Modules

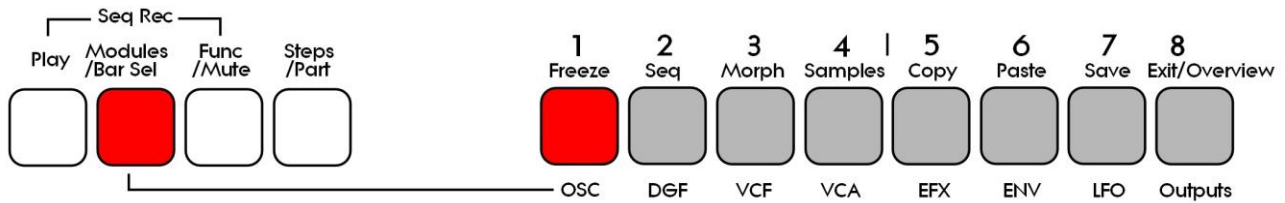

No matter where you are located in the Urano menu system, it is possible to quick jump to the synth modules, using the push buttons.

To do so, push and release the Modules/Bar Sel button, so that this lights up, and push the step button, that has the name of the module, which you would like to jump to, below it.

When you enter a module this way, Urano will jump to the previous selected modules. To select any of the modules on a module page (i.e. Oscillator 1-8), press and hold the Steps/Part button, while pushing step button 1 to 8.

The modules, which can be accessed via the push buttons:

OSC: Oscillator 1-8.

DGF: Digital Gotharman Filter 1-8.

VCF: Analog Filter 1-4.

VCA: VCA 1-8.


EFX: Effect Processor 1-8.

ENV: Envelope 1-8.

LFO: LFO 1-8.

Outputs: The outputs module.

Function Buttons / Shortcuts

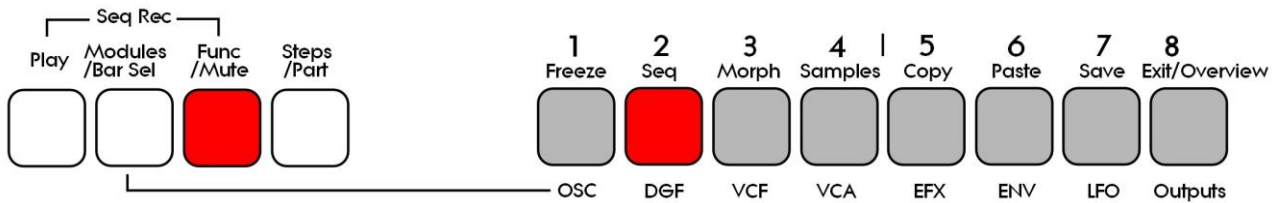

Push and release the Func/Mute button, so that it lights up. Now push and release the step button, that has the name of the edit page over it, that you wish to jump to, or the function, that you wish to activate.

Functions, which can be activated by the function buttons:

Freeze: If any of the effect processors have their Freeze control set to “Buton”, it is possible to manually freeze or un-freeze this/these effects, by pushing step button 1 (Freeze). When manual Freeze is on, this button will light up.

Morph: Pushing step button 2 in function button mode, will switch the synth and sequencer parameters to be edited, between morph layer A and B. When this button lights up, the parameters of Layer B is edited (i.e. the parameter setting that you will morph to, when turning up any of the Morph knobs). When this button is not lighting up, the parameters of Layer A is edited (the layer which you morph from, when the morph knobs are turned fully down).

Copy: Pushing this function button, will make Urano copy the settings of the complete currently selected preset, except if you are located on the Part Overview page. It is then possible to Paste the settings of separate modules, using the Paste button.

When you are located on the Part Overview page, only the parameter settings for the modules used by the currently selected part are copied. In order to paste these copied settings to another preset, you must enter the desired preset, enter the Part Overview page, and then push the Paste function button. The module settings held in the copy buffer is then pasted to the exact same modules, that were used by the copied part.

Paste: When you are located at a page, for which the copy buffer is holding settings for, the paste function button will light up. If you are located on the synth module or sequencer pages, a page will pop up, asking where to paste from and too. If you are located on the Part Overview page, the copied part will be pasted. If you are located at any other pages, the whole copied preset will just be pasted to the currently selected one.

For more info about the Copy/Paste system, please see the Copy/Paste chapter later in this manual.

Save: This function button will take you to the save preset/song pages. For more information about this, please see the “Save Preset” and “Save Song” chapters, later in this manual.

Exit/Overview: When you are located on any other page, than the Main (Preset Select) page, pushing this function button, will take you back to the previous page (1 level up). If you are located on the Main (Preset Select) page, it will take you directly to the Part Overview page.

Pages, which can be reached via the Function Buttons

When pushing some of these buttons a number of times, it will toggle through a number of pages:

Seq: Sequencer Main > Note Tracks 1-8 > Controller Tracks 1-8, Controller Tracks 9-16.

Samples: Sample Rec > Start Recording > Stop Recording > Save Sampling.


Samples and then Exit: Sample Edit.

Save: Save To Preset select > Save to name > Saving Preset.

Exit/Overview: Exits from any page. From the Main (Preset Select) page, it jumps to the Part Overview page.


The Synthesizer Modules

Urano has a lot of different built in modules. To access these, from the Main (Preset Select) page, touch the “EDIT” field in the upper right corner, to access the Synth Modules page.

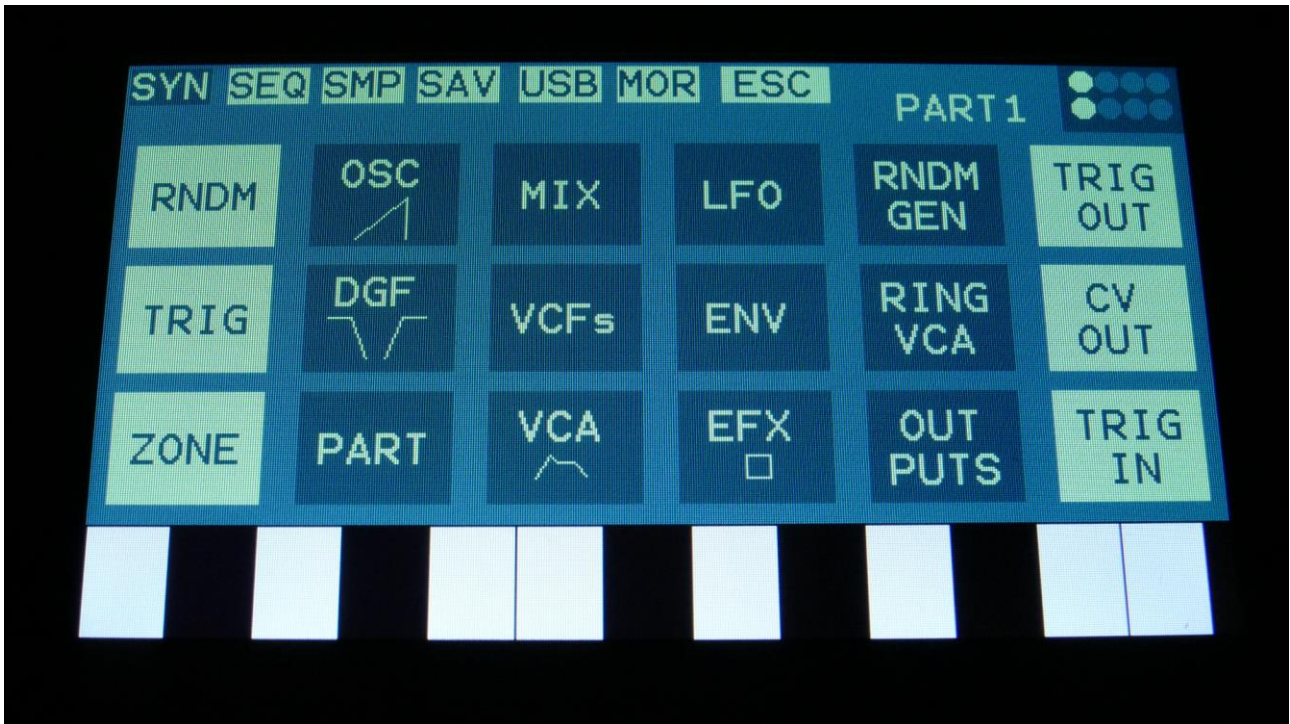

Here you have an overview of the different types of modules. To access a specific module, simply touch the module type, that you would like to enter. It is also possible to enter the modules by pushing the Modules/Bar Sel button, and then pushing a step button. Please see “Operating Urano”, for more information about this.


In the upper right corner of this page, the current sequencer position is shown with dots.

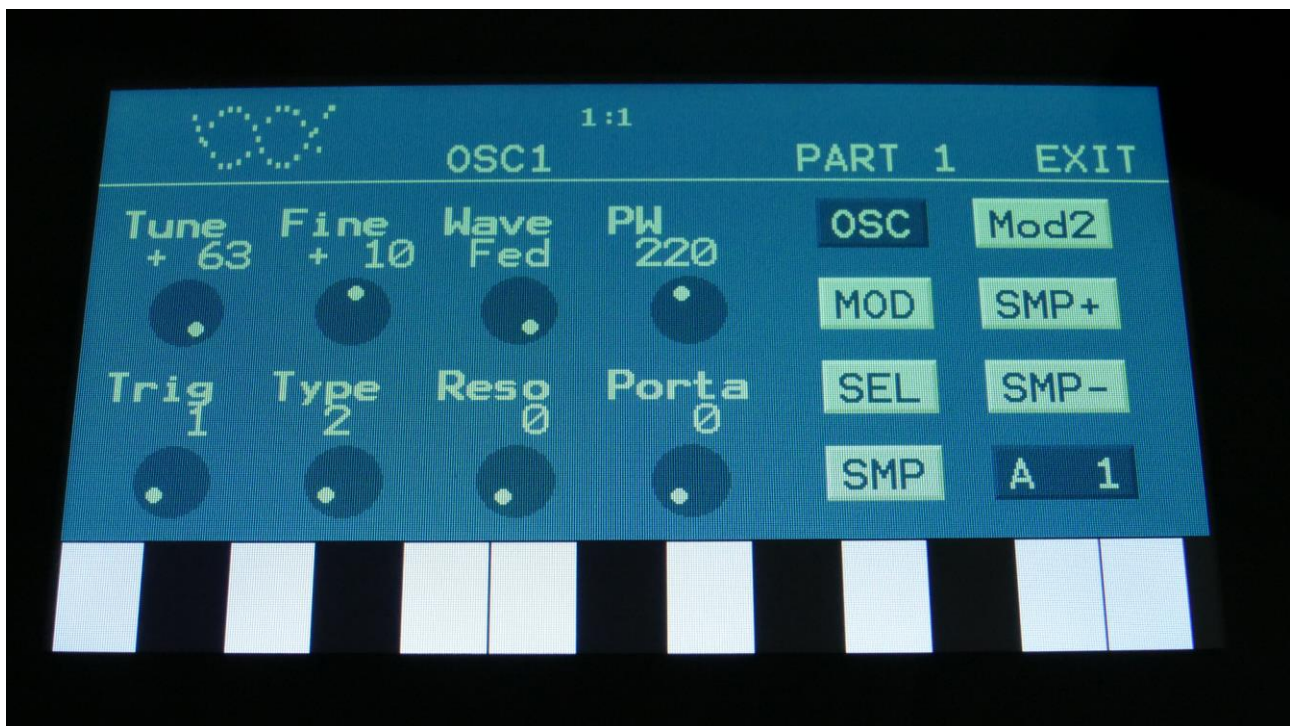

When you have entered a module type, that contains more than one of the same type, you can select the different module numbers, by pushing and holding the Steps/Part button, and then pushing step button 1-8.


The Part Overview Page

From Synth Modules page, it is also possible to access the Part Overview page, by touching the “PART” field. This page can also be accessed from the Main (Preset Select) page, by pushing the Exit/Overview function button.

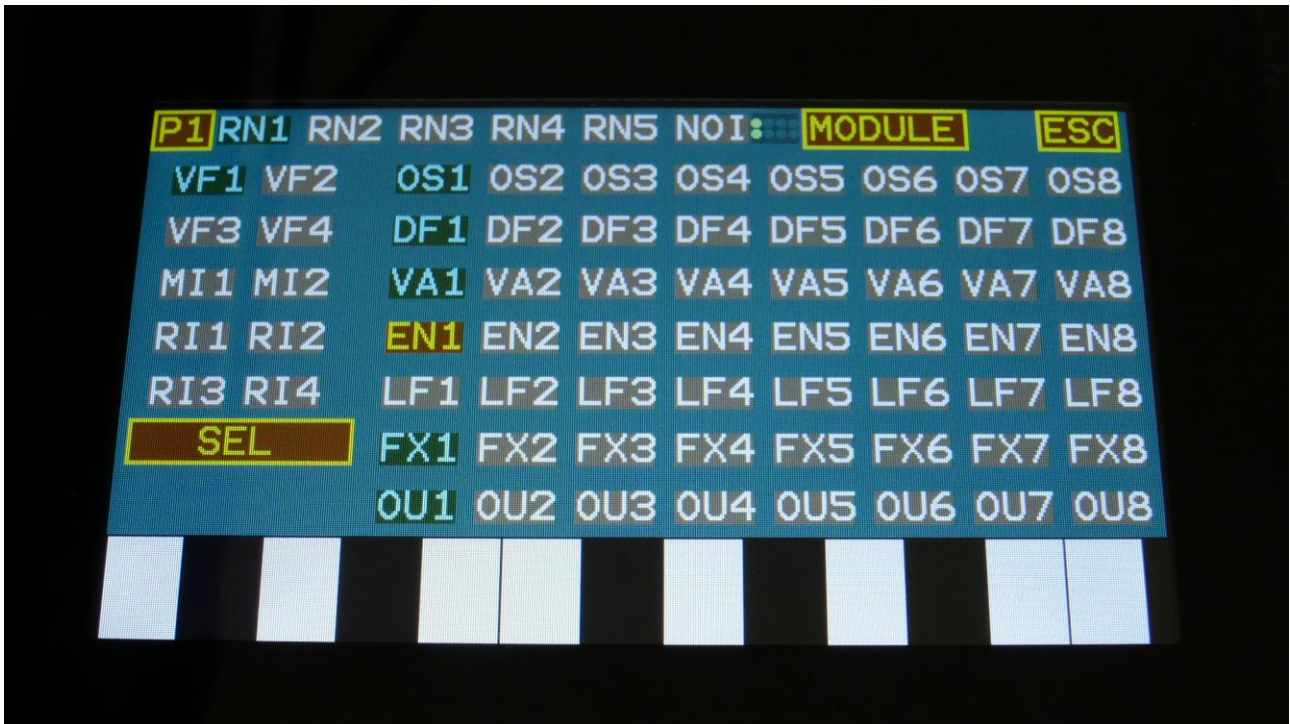

On this page you have an overview of all the Urano synth modules, and you can easily see, which modules are used by the currently selected part. The colored modules are used by the part, the greyed out modules are not. You can select parts 1-8, by pushing and holding the Steps/Part button, while pushing a step button.

In order to determine which modules are used by the selected part, Urano first checks which modules that are connected to the part trigger, and then it checks which modules that are connected to these modules. So if you for instance is using the same LFO in multiple parts, Urano will see all the modules as connected, and it might look something like this:

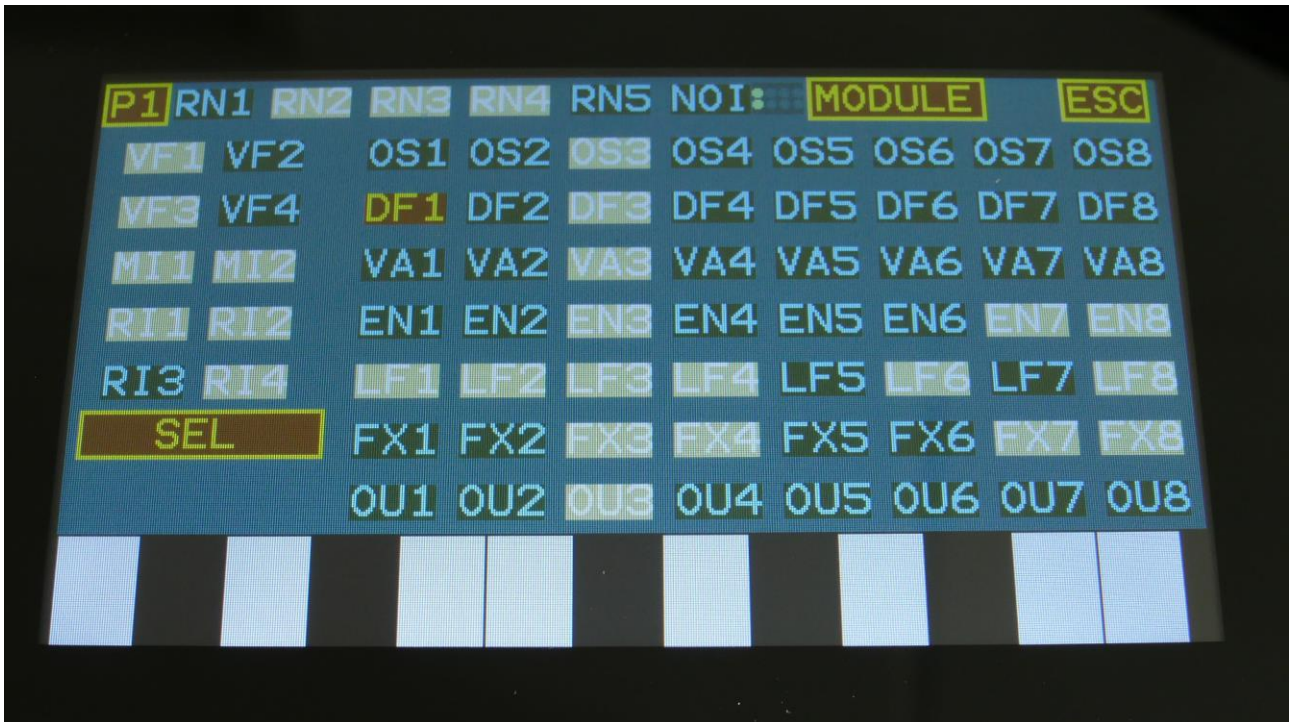


On the other hand, if no modules are connected to the part trigger, all modules will be greyed out.

On this page, you can select a module by touching it. When you do this, the module will turn brown. To enter the module itself, touch the “MODULE” button in the upper right corner.

When a module is selected, its main parameters can be adjusted directly on the Part Overview page, using Edit Knob 1-8.

It is also possible to connect modules directly on this page, but this will be described in the “Connecting Modules” chapter, later in this manual.

OSC – Oscillators

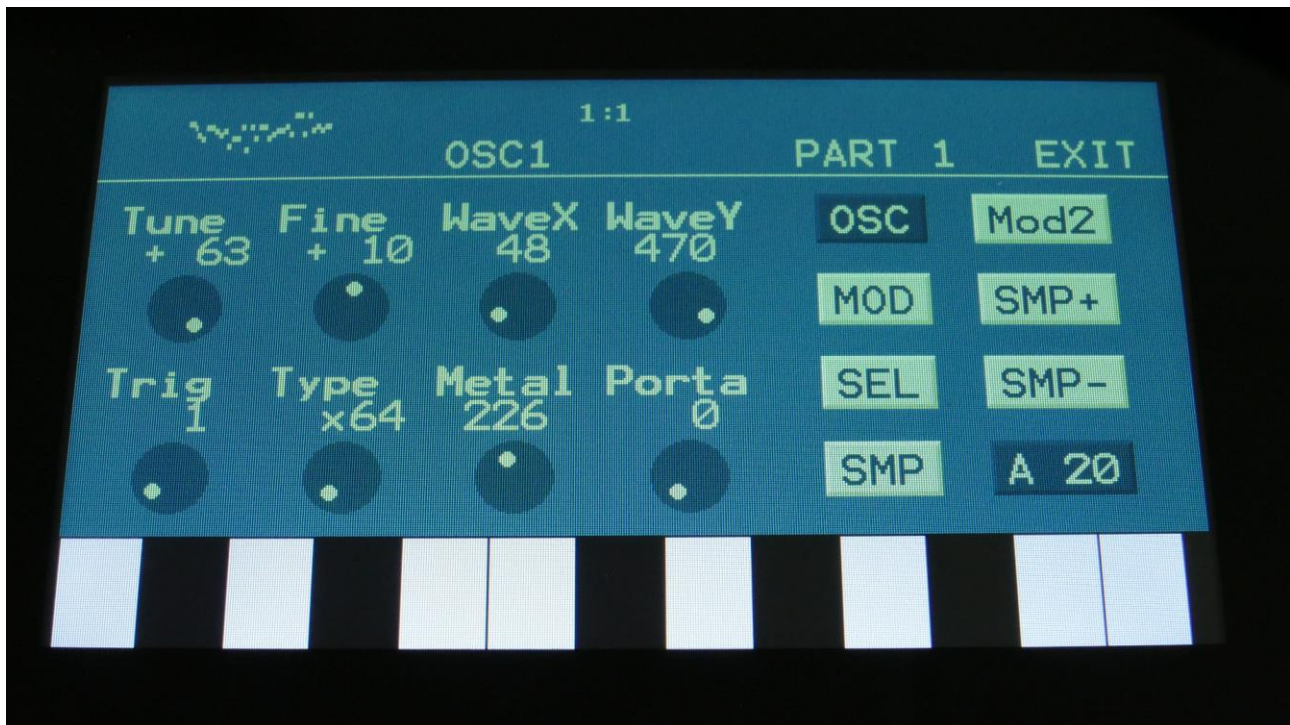

The 8 Urano oscillators can run in several different modes, for maximum flexibility. The outputs of the oscillators can be connected to any audio and modulation inputs. To select a specific oscillator, push and hold the Steps/Part button, while pushing step button 1-8.

On the Oscillator SEL page, various oscillator modes can be selected:

- Osc**: Various oscillator types, including draw waves, percussion and resonator types. Described a bit below. Tune, wave, PW and other parameters can be adjusted and modulated.
- Smp**: Sample Playback. Pitch, sample start, sample length, chop point select and portamento can be adjusted and modulated.
- ChKy**: Chopped sample keyboard. The chop points of the selected sampling, will be spread over the keyboard. Pitch, sample start, sample length, chop point select and portamento can be adjusted and modulated.
- Noise**: Pitched noise generator. Pitch and PW can be adjusted and modulated. Linear FM and Phase Modulation are available.

-Wtbl: Wavetable oscillator (Only oscillator 1-4). Plays back 32 KB wavetables with 8 or 64 single cycle waveforms. Morphs smoothly between each cycle. WaveX, WaveY, Metal and portamento can be adjusted and modulated.

Any wav file held in the sample bank(s) can be selected and used as a wavetable. Wavetables can be imported to the sample banks, and edited/created using the wavetable editor.

Linear FM and Phase Modulation are available.

When Osc has been selected as the oscillator mode, several oscillator types are available:

-Type1 : Morphs between sine wave, triangle wave, sawtooth wave, pulse wave and feedback wave. PW works on all waveforms. Pitch, wave, PW and portamento can be modulated. This oscillator type has a fat sound, without any aliasing. Linear FM and Phase Modulation are available.

-Type2 : Morphs between sine wave, triangle wave, sawtooth wave, pulse wave and feedback wave. PW works on all waveforms. Pitch, wave, PW and portamento can be modulated. This oscillator type has a more organic sound than type1, and the pitch tracking on the higher notes are more smooth and precise. Linear FM and Phase Modulation are available.

-Reso: Resonator oscillator. An oscillator that is partly generated by a special Gotharman engineered filter, that has multiple resonances in its feedback path. Great for emulating string instruments, and for new synthetic sounds. Morphs between sine wave, triangle wave, sawtooth wave, pulse wave and feedback wave. PW works on all waveforms and Reso, the amount of resonances, can be adjusted. Pitch, wave, reso, PW and portamento can be modulated. Linear FM and Phase Modulation are available.

-Perc, Prc2, Prc3 : Percussion oscillators. Special oscillators for creating drum sound. Each of the 3 models has different characteristics. Detune, attack, noise amount, PW and portamento can be adjusted and modulated.

-Cymb, Cym2 : Cymbal oscillators. Special oscillators for creating hihat, cymbal and other metallic sounds. Cym2 are a bit more aggressive than Cymb. Detune, FM, PW and portamento can be adjusted and modulated.

-Clap: Hand Clap oscillator. A noise source controlled by a special hand clap envelope, to emulate the classic hand clap sounds. Tune, detune, PW, clap envelope amount and portamento can be adjusted and modulated.

-**SinF**: Sine Function oscillator. A quite unusual oscillator inspired by the microGothar SiF oscillators. At some setting this generates different sounds on each key! Pitch, wave, PW and portamento can be adjusted and modulated. Linear FM and Phase Modulation are available.

-**Harm**: Harmonic oscillator. An oscillator which alters the harmonic content of its waveform by shaping a sine wave. Linear FM and Phase Modulation are available.


-**Draw**: Draw Wave oscillator. An oscillator which plays back waveforms that you can draw yourself! All draw waveforms are completely editable, and 15 of these are stored within each preset. It is also possible to warp and wavefold these waveforms. Linear FM and Phase Modulation are available.

-**FOF**: Generates a resonant spectrum by adding peaks of one waveform on top of a basic waveform. This can generate some really interesting resonant sounds. The basic waveform can be morphed between sine wave and triangle wave, the frequency for the peak tone can be set, and the peak rate can be shifted.

On the following pages, the different oscillator mode parameters will be described in detail.

Oscillator parameters

The OSC page, when Type 1, Type 2 or Reso is selected as type

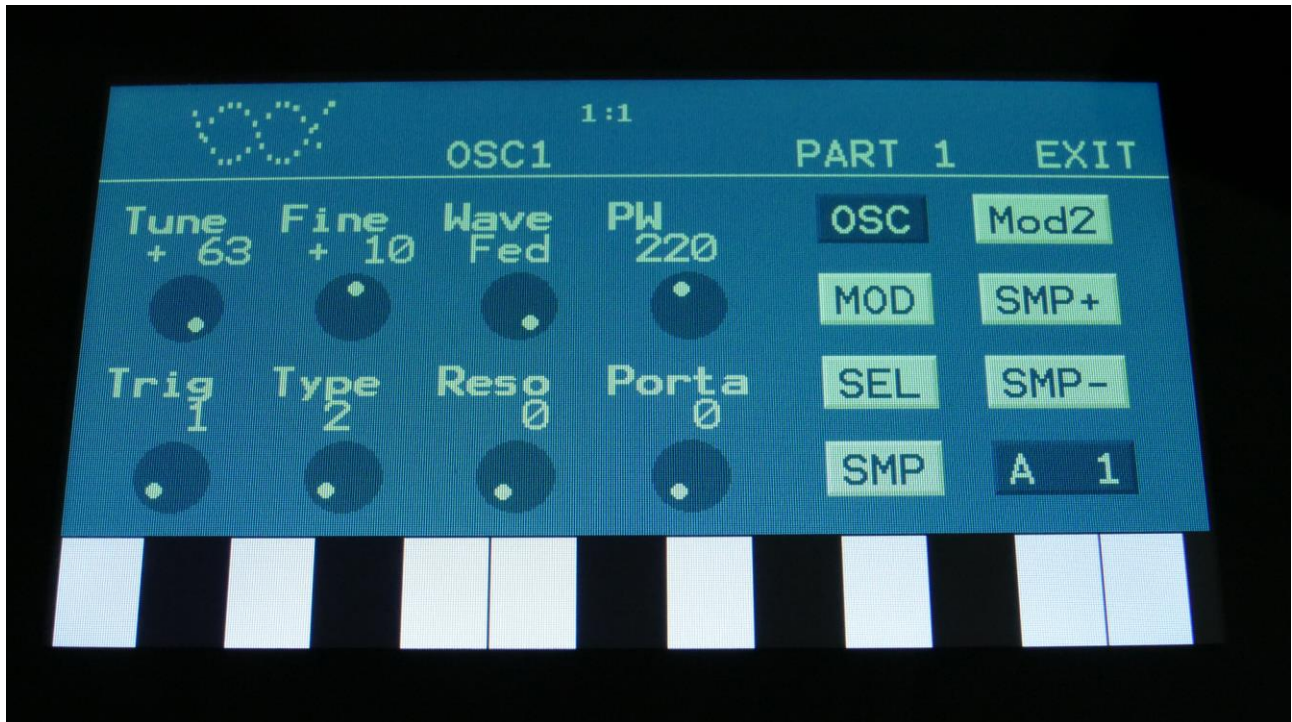

In the upper left corner of the oscillator page, the currently generated waveform is shown.

Touch the buttons named OSC, MOD, SEL, SMP and Mod2, to enter other oscillator pages, like Modulation and oscillator/sampler/noise/Wavetable mode select.

Tune: Adjust the basic pitch in semitones. Range: -64 to + 63.

Fine: Fine tuning of the pitch. Range: -256 to +255.

Wave: This parameter lets you morph between sine, triangle, saw, pulse and feedback waves.

PW: Adjusts the pulse width of the waveform. Unlike many other oscillator designs, the pulse width can be adjusted on all of Urano's waveforms, not just the pulse wave.

Trig: Sets the part number, which will send note values to the oscillator. Range: Off, 1-8.

Type: Sets the oscillator type. Choices are:

1: Bright oscillator. This oscillator has a bright tone with a high harmonic content. Great for advanced filtering sounds. The pitch modulation in the upper notes is though not super smooth.

2: Smooth oscillator. This oscillator has a very smooth sound, and the pitch modulation is smooth over the whole note range. Great for lowpass filtered and natural sounding sounds.

Reso: Resonator oscillator. An oscillator that is partly generated by a special Gotharman engineered filter, that has multiple resonances in its feedback path. Great for emulating string instruments, and for new synthetic sounds.

Perc, Prc2, Prc3: Percussion oscillators 1, 2 and 3.

Cymb, Cym2: Cymbal oscillators.

Clap: Hand clap oscillator.

SinF: microGothar Sine Function oscillator.

Harm: Harmonic oscillator.


Draw: Draw Wave oscillator.

FOF: FOF oscillator.

Reso: The amount of resonances fed back, when the resonator oscillator is selected. The higher this parameter is set, the more resonances are fed back into the oscillator. Even at setting zero, some resonances are fed back. Range: 0 to 511.

Porta: Portamento. The more this is turned up, the slower the oscillator pitch will slide from one note to another. Range: 0 to 511.

The OSC page, when Perc, Prc2 or Prc3 is selected as type

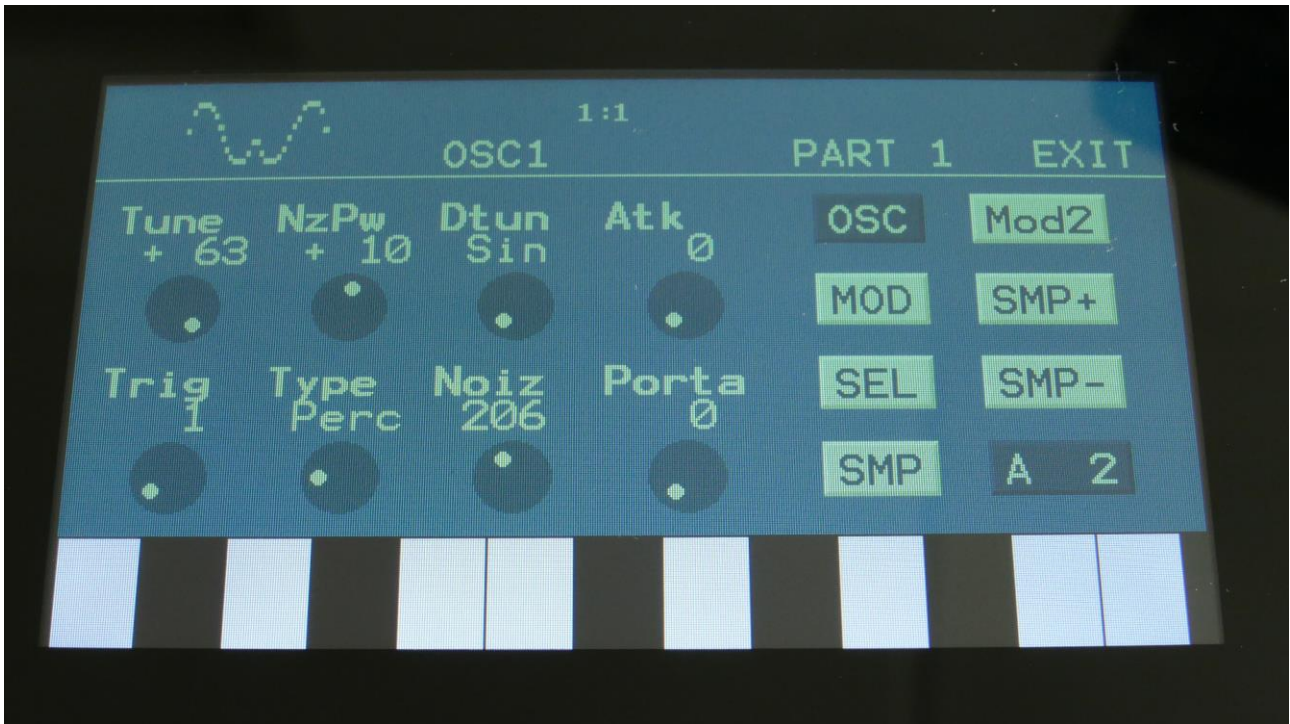

In the upper left corner of the oscillator page, the currently generated waveform is shown.

Touch the buttons named OSC, MOD, SEL, SMP and Mod2, to enter other oscillator pages, like Modulation and oscillator/sampler/noise/Wavetable mode select.

Tune: Adjust the basic pitch in semitones. Range: -64 to + 63.

NzPw: Sets the intensity of the FM noise. Range: -256 to +255.

Dtun: Detunes percussion wave 2 from percussion wave 1. Value 0 to 511.

Atk: Will morph from the percussion waves body (0) to the percussion waves attack (511). Modulate this parameter with an envelope, to imitate the strike of a drum. Value 0 to 511.

Trig: Sets the part number, which will send note values to the oscillator. Range: Off, 1-8.

Type: Sets the oscillator type. Choices are:

1: Bright oscillator. This oscillator has a bright tone with a high harmonic content. Great for advanced filtering sounds. The pitch modulation in the upper notes is though not super smooth.

2: Smooth oscillator. This oscillator has a very smooth sound, and the pitch modulation is smooth over the whole note range. Great for lowpass filtered and natural sounding sounds.

Reso: Resonator oscillator. An oscillator that is partly generated by a special Gotharman engineered filter, that has multiple resonances in its feedback path. Great for emulating string instruments, and for new synthetic sounds.

Perc, Prc2, Prc3: Percussion oscillators 1, 2 and 3.

Cymb, Cym2: Cymbal oscillators.

Clap: Hand clap oscillator.

SinF: microGothar Sine Function oscillator.

Harm: Harmonic oscillator.


Draw: Draw Wave oscillator.

FOF: FOF oscillator.

Noiz: Adds noise FM to modulate the pitch of the percussion waves. Range: 0 to 511.

Porta: Portamento. The more this is turned up, the slower the oscillator pitch will slide from one note to another. Range: 0 to 511.

The OSC page, when Cymb or Cym2 is selected as type

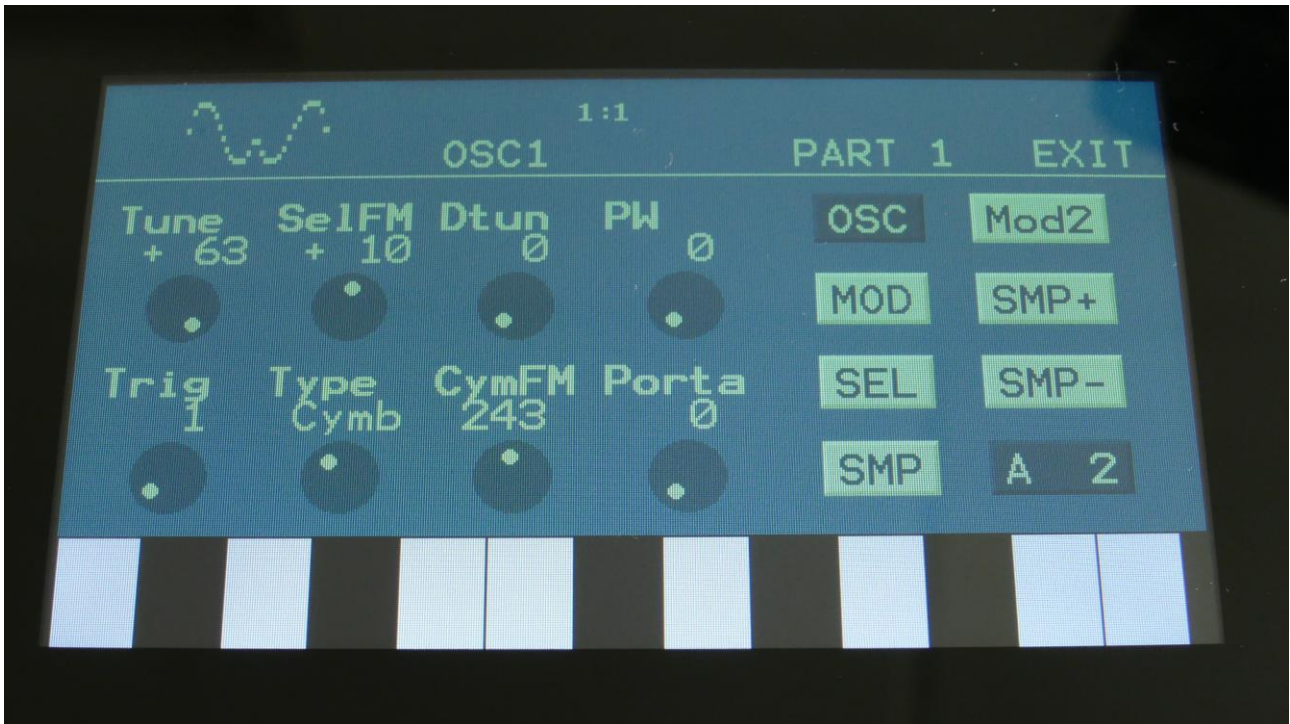

In the upper left corner of the oscillator page, the currently generated waveform is shown.

Touch the buttons named OSC, MOD, SEL, SMP and Mod2, to enter other oscillator pages, like Modulation and oscillator/sampler/noise/Wavetable mode select.

Tune: Adjust the basic pitch in semitones. Range: -64 to + 63.

SelfFM: Sets self FM amount of the first square wave oscillator (A modulator). Range: -256 to +255.

Dtun: Sets self FM amount of the first square wave oscillator (A modulator). Value 0 to 511.

PW: Sets the pulse width of all square waves. Value 0 to 511.

Trig: Sets the part number, which will send note values to the oscillator. Range: Off, 1-8.

Type: Sets the oscillator type. Choices are:

1: Bright oscillator. This oscillator has a bright tone with a high harmonic content. Great for advanced filtering sounds. The pitch modulation in the upper notes is though not super smooth.

2: Smooth oscillator. This oscillator has a very smooth sound, and the pitch modulation is smooth over the whole note range. Great for lowpass filtered and natural sounding sounds.

Reso: Resonator oscillator. An oscillator that is partly generated by a special Gotharman engineered filter, that has multiple resonances in its feedback path. Great for emulating string instruments, and for new synthetic sounds.

Perc, Prc2, Prc3: Percussion oscillators 1, 2 and 3.

Cymb, Cym2: Cymbal oscillators.

Clap: Hand clap oscillator.

SinF: microGothar Sine Function oscillator.

Harm: Harmonic oscillator.


Draw: Draw Wave oscillator.

FOF: FOF oscillator.

CymFM: Set the FM amount between the square wave oscillators. Range: 0 to 511.

Porta: Portamento. The more this is turned up, the slower the oscillator pitch will slide from one note to another. Range: 0 to 511.

The OSC page, when Clap is selected as type

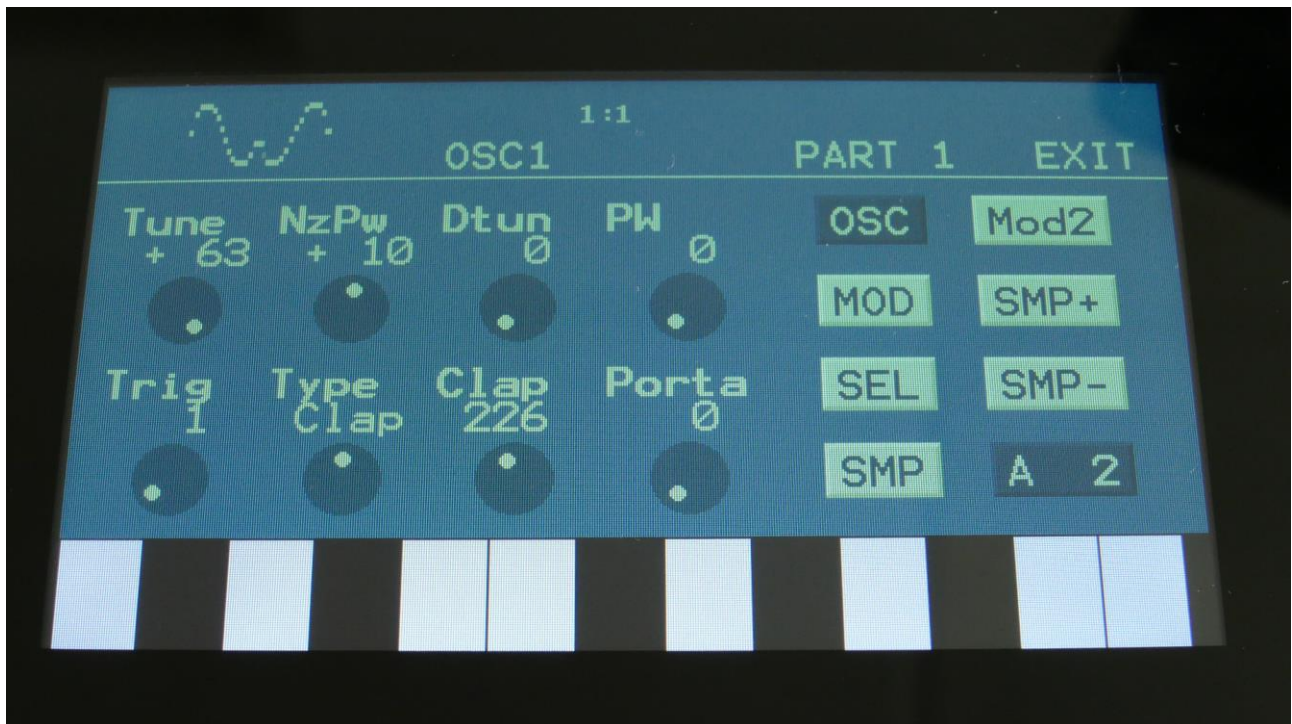

In the upper left corner of the oscillator page, the currently generated waveform is shown.

Touch the buttons named OSC, MOD, SEL, SMP and Mod2, to enter other oscillator pages, like Modulation and oscillator/sampler/noise/Wavetable mode select.

Tune: Value -64 to +63. When the Clap oscillator is selected, the Tune parameter sets the speed of the clap envelope.

NzPw: Value -256 to +255. Sets the intensity of the Clap noise.

Dtun: Value 0 to 511. Detunes the noise sound.

PW: Value 0 to 511. Sets the pulse width of a square wave, that is placed on top of the noise signal. 0: No square wave is added.

Trig: Sets the part number, which will send note values to the oscillator. Range: Off, 1-8.

Type: Sets the oscillator type. Choices are:

1: Bright oscillator. This oscillator has a bright tone with a high harmonic content. Great for advanced filtering sounds. The pitch modulation in the upper notes is though not super smooth.

2: Smooth oscillator. This oscillator has a very smooth sound, and the pitch modulation is smooth over the whole note range. Great for lowpass filtered and natural sounding sounds.

Reso: Resonator oscillator. An oscillator that is partly generated by a special Gotharman engineered filter, that has multiple resonances in its feedback path. Great for emulating string instruments, and for new synthetic sounds.

Perc, Prc2, Prc3: Percussion oscillators 1, 2 and 3.

Cymb, Cym2: Cymbal oscillators.

Clap: Hand clap oscillator.

SinF: microGothar Sine Function oscillator.

Harm: Harmonic oscillator.


Draw: Draw Wave oscillator.

FOF: FOF oscillator.

Clap: Value 0 to 511. Sets how much the clap envelope should shape the noise signal.

Porta: Portamento. The more this is turned up, the slower the oscillator pitch will slide from one note to another. Range: 0 to 511.

The OSC page, when SinF is selected as type

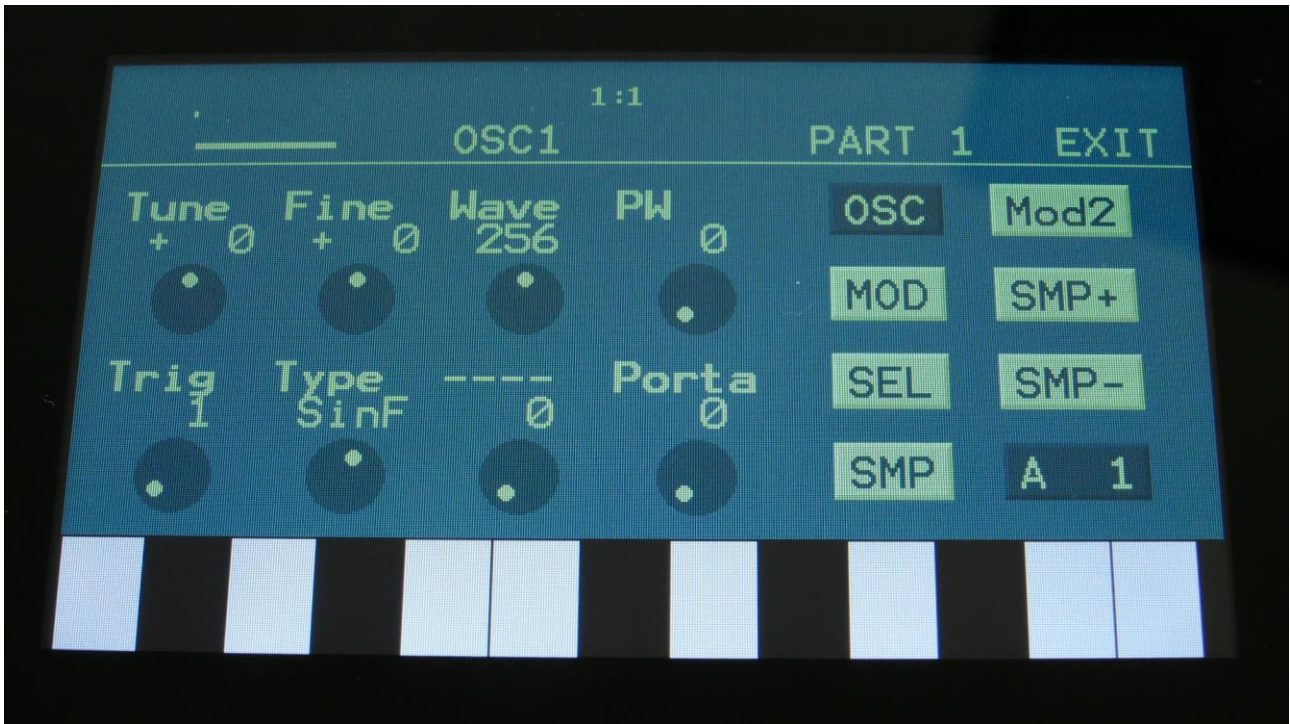

In the upper left corner of the oscillator page, the currently generated waveform is shown.

Touch the buttons named OSC, MOD, SEL, SMP and Mod2, to enter other oscillator pages, like Modulation and oscillator/sampler/noise/Wavetable mode select.

Tune: Adjust the basic pitch in semitones. Range: -64 to + 63.

Fine: Fine tuning of the pitch. Range: -256 to +255.

Wave: This parameter morphs through different variations of the Sine Function waveforms.

PW: Adds harmonics to the waveform.

Trig: Sets the part number, which will send note values to the oscillator. Range: Off, 1-8.

Type: Sets the oscillator type. Choices are:

1: Bright oscillator. This oscillator has a bright tone with a high harmonic content. Great for advanced filtering sounds. The pitch modulation in the upper notes is though not super smooth.

2: Smooth oscillator. This oscillator has a very smooth sound, and the pitch modulation is smooth over the whole note range. Great for lowpass filtered and natural sounding sounds.

Reso: Resonator oscillator. An oscillator that is partly generated by a special Gotharman engineered filter, that has multiple resonances in its feedback path. Great for emulating string instruments, and for new synthetic sounds.

Perc, Prc2, Prc3: Percussion oscillators 1, 2 and 3.

Cymb, Cym2: Cymbal oscillators.

Clap: Hand clap oscillator.

SinF: microGothar Sine Function oscillator.


Harm: Harmonic oscillator.

Draw: Draw Wave oscillator.

FOF: FOF oscillator.

Porta: Portamento. The more this is turned up, the slower the oscillator pitch will slide from one note to another. Range: 0 to 511.

The OSC page, when Harm is selected as type

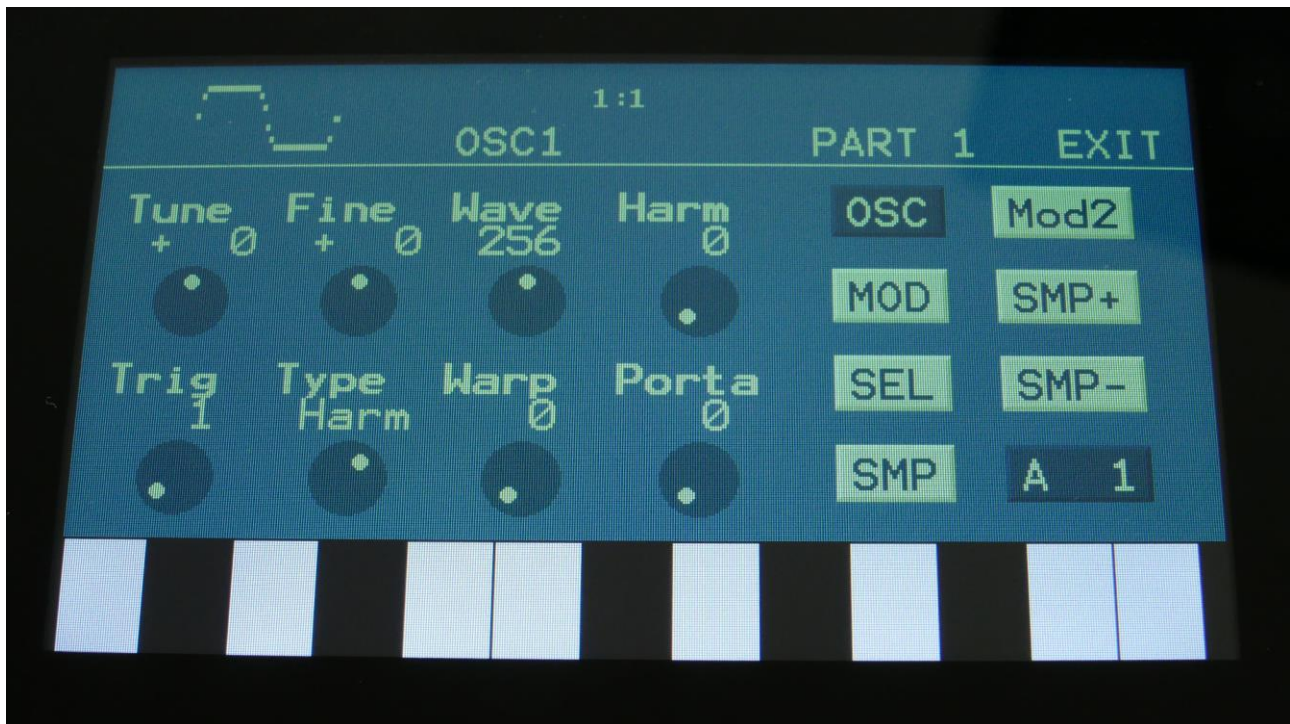

In the upper left corner of the oscillator page, the currently generated waveform is shown.

Touch the buttons named OSC, MOD, SEL, SMP and Mod2, to enter other oscillator pages, like Modulation and oscillator/sampler/noise/Wavetable mode select.

Tune: Adjust the basic pitch in semitones. Range: -64 to + 63.

Fine: Fine tuning of the pitch. Range: -256 to +255.

Wave: This parameter saturates the basic sine wave. When turned fully up, the waveform becomes almost a square wave.

Harm: Generates different harmonic spectras as it is turned, by altering the shape of the basic sine wave.

Trig: Sets the part number, which will send note values to the oscillator. Range: Off, 1-8.

Type: Sets the oscillator type. Choices are:

1: Bright oscillator. This oscillator has a bright tone with a high harmonic content. Great for advanced filtering sounds. The pitch modulation in the upper notes is though not super smooth.

2: Smooth oscillator. This oscillator has a very smooth sound, and the pitch modulation is smooth over the whole note range. Great for lowpass filtered and natural sounding sounds.

Reso: Resonator oscillator. An oscillator that is partly generated by a special Gotharman engineered filter, that has multiple resonances in its feedback path. Great for emulating string instruments, and for new synthetic sounds.

Perc, Prc2, Prc3: Percussion oscillators 1, 2 and 3.

Cymb, Cym2: Cymbal oscillators.

Clap: Hand clap oscillator.

SinF: microGothar Sine Function oscillator.

Harm: Harmonic oscillator.


Draw: Draw Wave oscillator.

FOF: FOF oscillator.

Warp: Will warp the waveform leftwards, which will also generate some interesting harmonics.

Porta: Portamento. The more this is turned up, the slower the oscillator pitch will slide from one note to another. Range: 0 to 511.

The OSC page, when Draw is selected as type

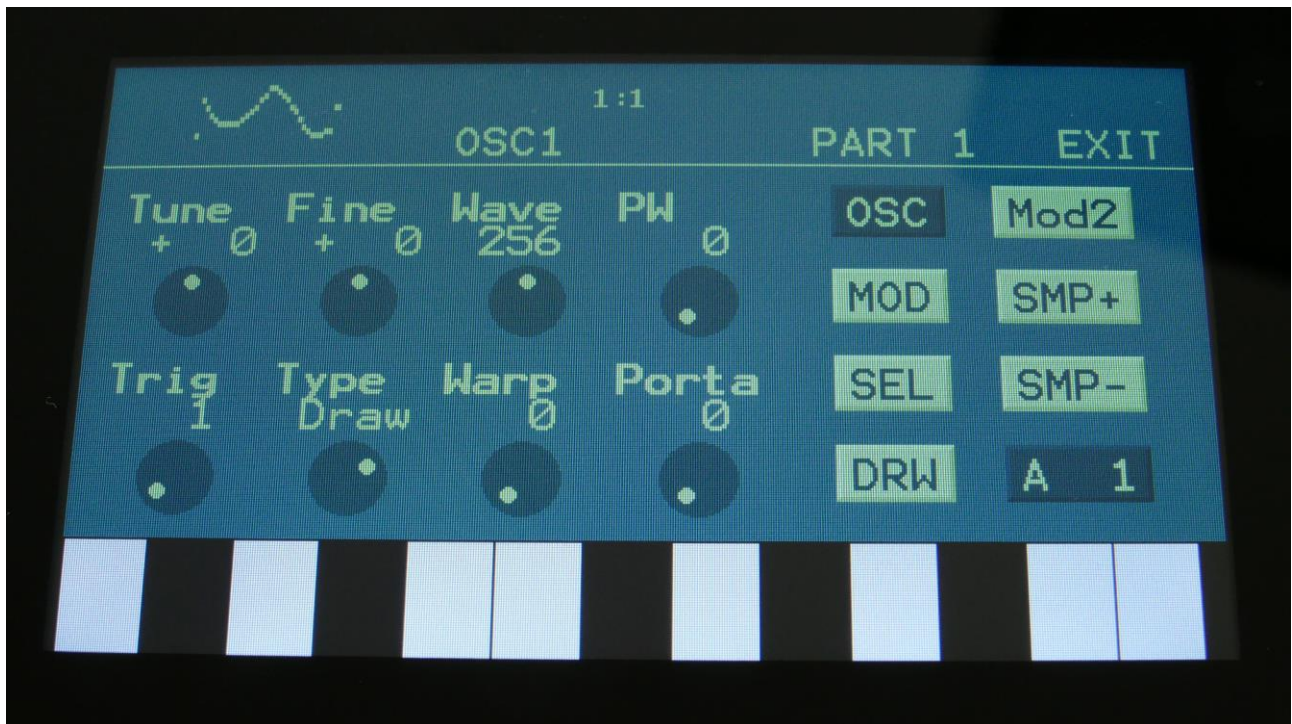

In the upper left corner of the oscillator page, the currently generated waveform is shown.

Touch the buttons named OSC, MOD, SEL, SMP and Mod2, to enter other oscillator pages, like Modulation and oscillator/sampler/noise/Wavetable mode select.

Tune: Adjust the basic pitch in semitones. Range: -64 to + 63.

Fine: Fine tuning of the pitch. Range: -256 to +255.

Wave: This parameter morphs between the 2 selected draw waves. These waves can be selected on the Mod2 page.

PW: Will wavefold the positive cycle of the draw wave.

Trig: Sets the part number, which will send note values to the oscillator. Range: Off, 1-8.

Type: Sets the oscillator type. Choices are:

1: Bright oscillator. This oscillator has a bright tone with a high harmonic content. Great for advanced filtering sounds. The pitch modulation in the upper notes is though not super smooth.

2: Smooth oscillator. This oscillator has a very smooth sound, and the pitch modulation is smooth over the whole note range. Great for lowpass filtered and natural sounding sounds.

Reso: Resonator oscillator. An oscillator that is partly generated by a special Gotharman engineered filter, that has multiple resonances in its feedback path. Great for emulating string instruments, and for new synthetic sounds.

Perc, Prc2, Prc3: Percussion oscillators 1, 2 and 3.

Cymb, Cym2: Cymbal oscillators.

Clap: Hand clap oscillator.

SinF: microGothar Sine Function oscillator.

Harm: Harmonic oscillator.

Draw: Draw Wave oscillator.

FOF: FOF oscillator.


Warp: Will warp the waveform leftwards.

Porta: Portamento. The more this is turned up, the slower the oscillator pitch will slide from one note to another. Range: 0 to 511.

Draw Wave Edit:

When Draw wave is selected as the oscillator type, the SMP touch button is changed to DRW. Touching this button will make Urano jump to the LFO draw wave edit page. This page is explained in the LFO section of this manual.

The OSC page, when FOF is selected as type

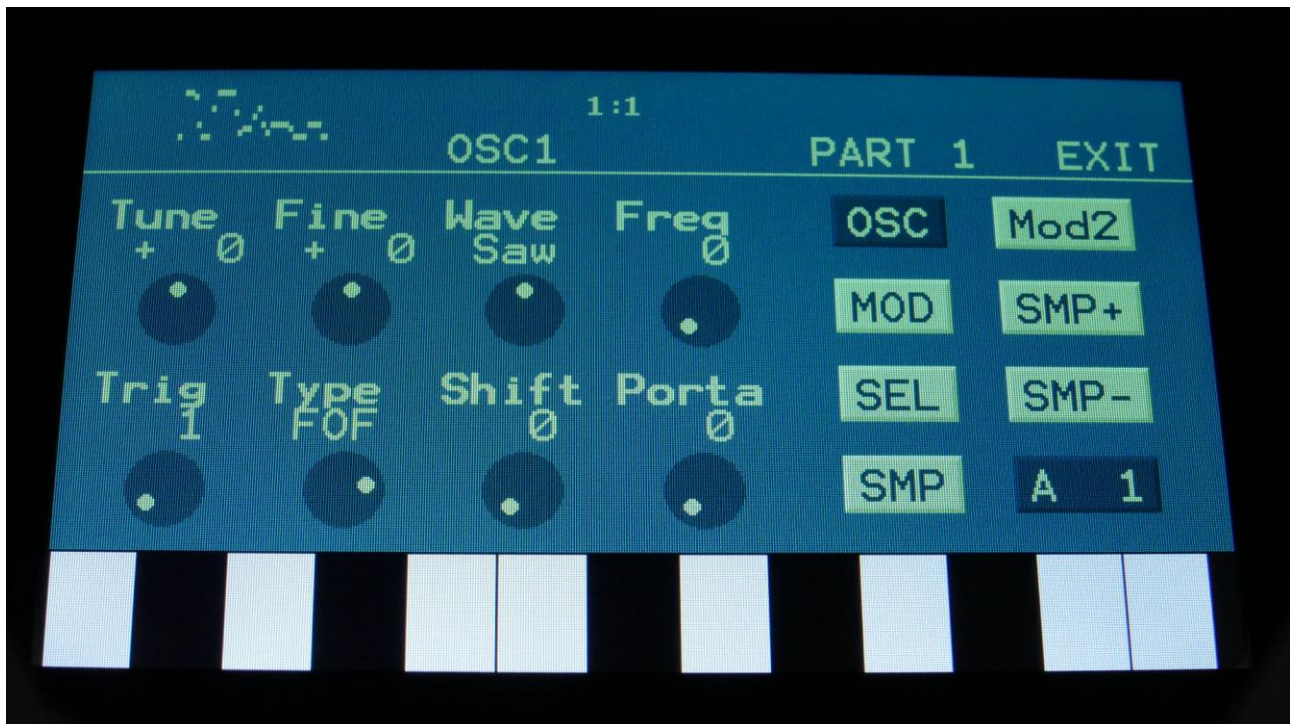

In the upper left corner of the oscillator page, the currently generated waveform is shown.

Touch the buttons named OSC, MOD, SEL, SMP and Mod2, to enter other oscillator pages, like Modulation and oscillator/sampler/noise/Wavetable mode select.

Tune: Adjust the basic pitch in semitones. Range: -64 to + 63.

Fine: Fine tuning of the pitch. Range: -256 to +255.

Wave: This parameter morphs the basic tone between sine wave and triangle wave.

Freq: Sets the frequency of the peak wave.

Trig: Sets the part number, which will send note values to the oscillator. Range: Off, 1-8.

Type: Sets the oscillator type. Choices are:

1: Bright oscillator. This oscillator has a bright tone with a high harmonic content. Great for advanced filtering sounds. The pitch modulation in the upper notes is though not super smooth.

2: Smooth oscillator. This oscillator has a very smooth sound, and the pitch modulation is smooth over the whole note range. Great for lowpass filtered and natural sounding sounds.

Reso: Resonator oscillator. An oscillator that is partly generated by a special Gotharman engineered filter, that has multiple resonances in its feedback path. Great for emulating string instruments, and for new synthetic sounds.

Perc, Prc2, Prc3: Percussion oscillators 1, 2 and 3.

Cymb, Cym2: Cymbal oscillators.

Clap: Hand clap oscillator.

SinF: microGothar Sine Function oscillator.

Harm: Harmonic oscillator.

Draw: Draw Wave oscillator.

FOF: FOF oscillator.

Shift: Shifts the peak rate.

Porta: Portamento. The more this is turned up, the slower the oscillator pitch will slide from one note to another. Range: 0 to 511.

The OSC page, when in Sampler and Chopped Keyboard modes



In the bottom of the sampler page, the selected samplings waveform is shown in rough graphics. When the sample, or part of it, is played back, the small black line below the waveform will show the current playback point.

Touch the buttons named OSC, MOD, SEL, SMP and Mod2, to enter other oscillator pages, like Modulation and oscillator/sampler/noise/Wavetable mode select. Touch the SMP+ and SMP- to quick select sample 1/Wavetable. The sample number is shown right below these touch buttons.

Tune: Adjust the basic pitch in semitones. Range: -64 to + 63.

Fine: Fine tuning of the pitch. Range: -256 to +255.

Start: The sample start point. Selects at what point the sample will start to play back, when it is triggered. Range: 0 to 511, stretching over the whole sampling.

Length: Sets how much of the sampling should be played back. Range: 0 to 511, stretching over the whole sampling.

Loop: Sets the sampling loop mode.

Off: The sample will not loop, just play back one time from the adjusted, or chop selected, start to end, and then stop. If the selected sampling has chop points, these will always be used.

On: The sample will play back from the adjusted start point, when triggered. When it reaches the adjusted end point, it will loop back to the start point, and play back the sample over and over again. If the selected sampling has chop points, these will always be used for the loop points.

Sust: When you hit a key, playback of the sampling starts at the sample startpoint.

When the playback reaches the endpoint of the selected chop, it loops back to the chop startpoint, and keeps looping between the chop start and end point, until a key is pressed again.

OfUc: Off, unchopped. The sample will not loop, just play back one time from the adjusted start to end, and then stop. Chop points will be ignored.

OnUc: On, unchopped. The sample will play back from the adjusted start point, when triggered. When it reaches the adjusted end point, it will loop back to the start point, and play back the sample over and over again. Chop points will be ignored.

Free: Free running sampling. Setting the sample oscillator in this mode, will make the sample constantly play back and loop. When the oscillator is triggered, the sample will not be reset and play back from the start, it will just continue playing back. This will make the sampler work as a complex oscillator.

REGARDING THE GOOD “OLD” TOGGLE MODE: On Urano the toggle mode is not only available for sample playback. This mode, where a trigger button can start and stop the playback of a part is available for any oscillator type on Urano ☺ Please see the “Play” parameter in the TRIG section.

Chop: If chop points have been generated for the selected sampling, a chop can be selected by setting this parameter. If the #Smp parameter on the SEL page is set to 2 or 4 samplings, this parameter will also select which of the 2 or 4 samplings, that will play back, and the chop points for sample 2 to 4. Range: 0 to 63 for sample 1, 64 to 128 for sample 2, 129 to 192 for sample 3, 193 to 255 for sample 4.

In chopped keyboard sample mode, this parameter and the chop modulation selects one of the 4 selected samplings, which will have its chops spread over the keyboard range.


0-63: Sample 1, 64-127: Sample 2, 128-191: Sample 3, 192-255: Sample 4.

This parameter can be morphed and modulated in most modes, but not in Xfade mode. In Xfade mode, the #Smp parameter are ignored, and set at the fixed value of 4 samplings.

#Chp: The number of Chops to be played back in a row. Range: 1 to 64.

Trig: Sets the part number, which will send note values to the oscillator. Range: Off, 1-8.

The OSC page, when in Wavetable mode

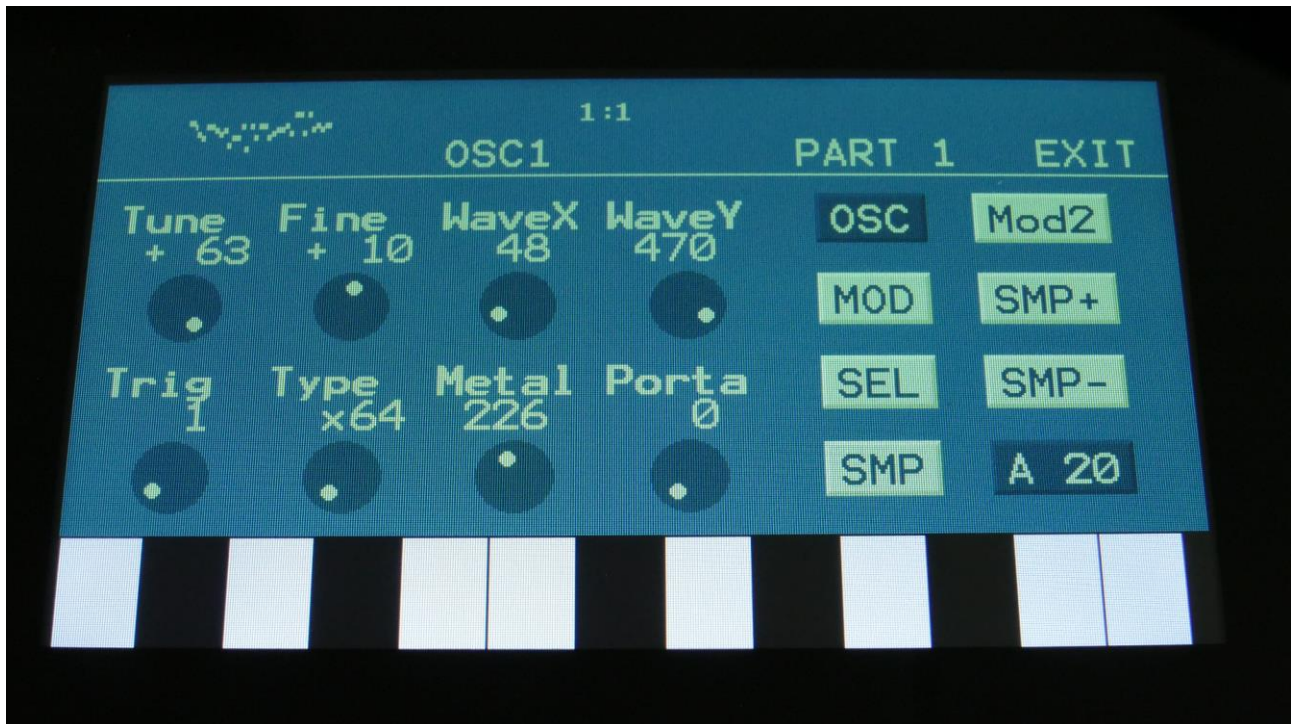

In the upper left corner of the oscillator page, the currently generated waveform is shown.

Touch the buttons named OSC, MOD, SEL, SMP and Mod2, to enter other oscillator pages, like Modulation and oscillator/sampler/noise/Wavetable mode select. Touch the SMP+ and SMP- to quick select sample 1/Wavetable. The sample number is shown right below these touch buttons.

Tune: Adjust the basic pitch in semitones. Range: -64 to + 63.

Fine: Fine tuning of the pitch. Range: -256 to +255.

WaveX: Wave Morph X. When wavetable type is set to x64 (64 waves), this parameter morphs between the 8 waves on the X axis of an 8x8 wave matrix. When wavetable type is set to x8 (8 waves), this parameter morphs between the 8 waves. Range: 0 to 511.

WaveY: Wave Morph Y/Wavefolding. When wavetable type is set to x64 (64 waves), this parameter morphs between the 8 waves on the Y axis of an 8x8 wave matrix. When wavetable type is set to x8 (8 waves), this parameter adds a sort of wavefolding to the waves. Range: 0 to 511.

Trig: Sets the part number, which will send note values to the oscillator. Range: Off, 1-8.


Type: Wavetable type, x64 (64 waves) or x8 (8 waves). Regardless of the selected wavetable or sampling, this can be set to either value. When set to the “wrong” value, the wavetable will sound different, and this might create interesting results.

Metal: Metalizes the wavetable sounds. Range: 0 to 511.

Porta: Portamento. The more this is turned up, the slower the oscillator pitch will slide from one note to another. Range: 0 to 511.

Oscillator modulation

The MOD page, when Type1, Type2, Reso, SinF or Draw is selected as Type

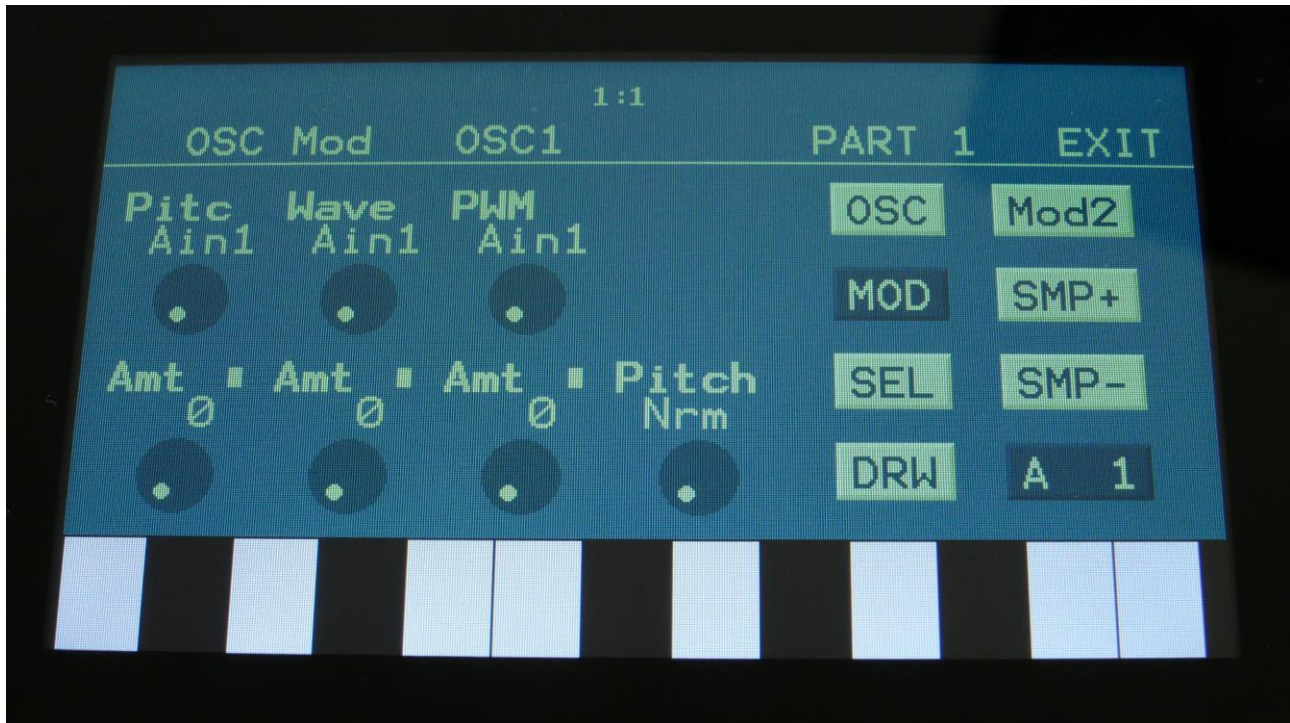

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Pitc: Modulates the oscillator pitch.

Wave: Modulates the wave parameter.

PWM: Modulates the PW parameter.


Pitch: Sets the pitch modulation mode:

Nrm: Cross modulation.

FM: Linear FM.

PM: Phase Modulation. Pitc Mod will be linear FM, Pitc2 Mod will be Phase Modulation, which affect the waveform, without affecting the pitch.

The MOD page, when Perc, Prc2 or Prc3 is selected as Type

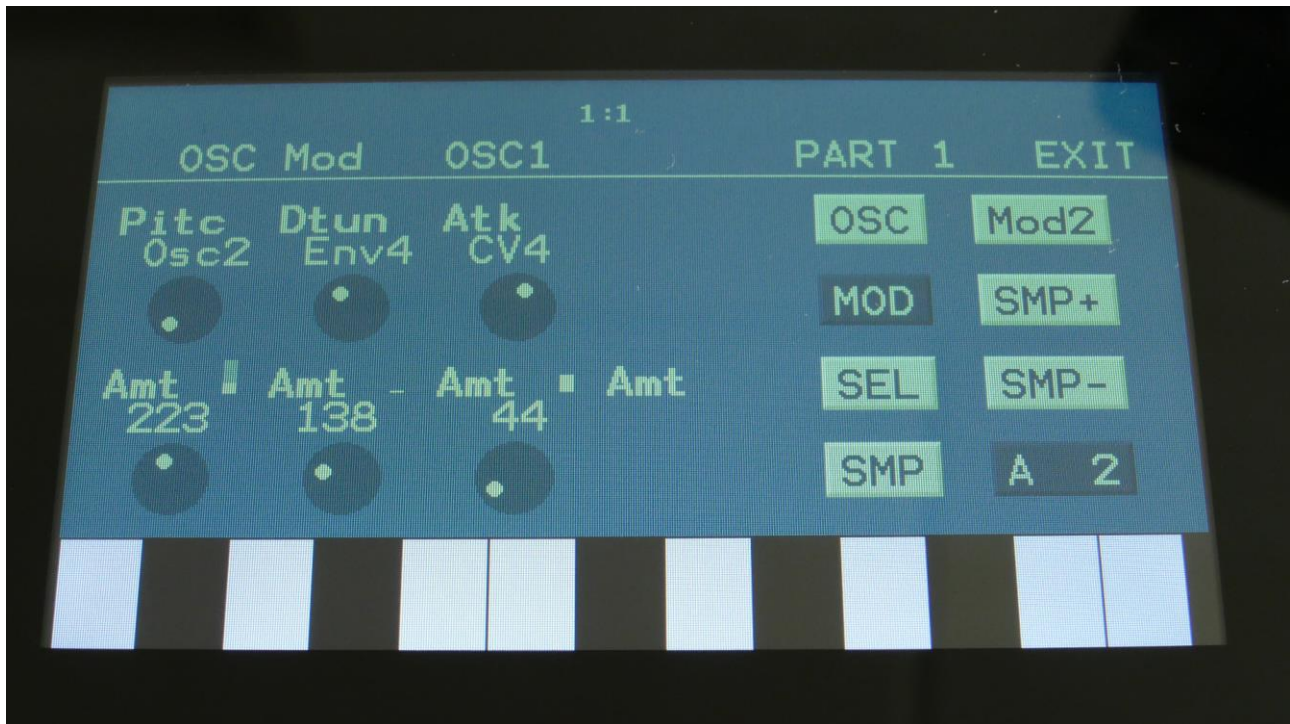

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Pitc: Modulates the oscillator pitch.

Dtun: Modulates the detuning of the 2 percussion waves.

Atk: Modulates the percussion waves morphing between body and attack waves.

The MOD page, when Cymb or Cym2 is selected as Type

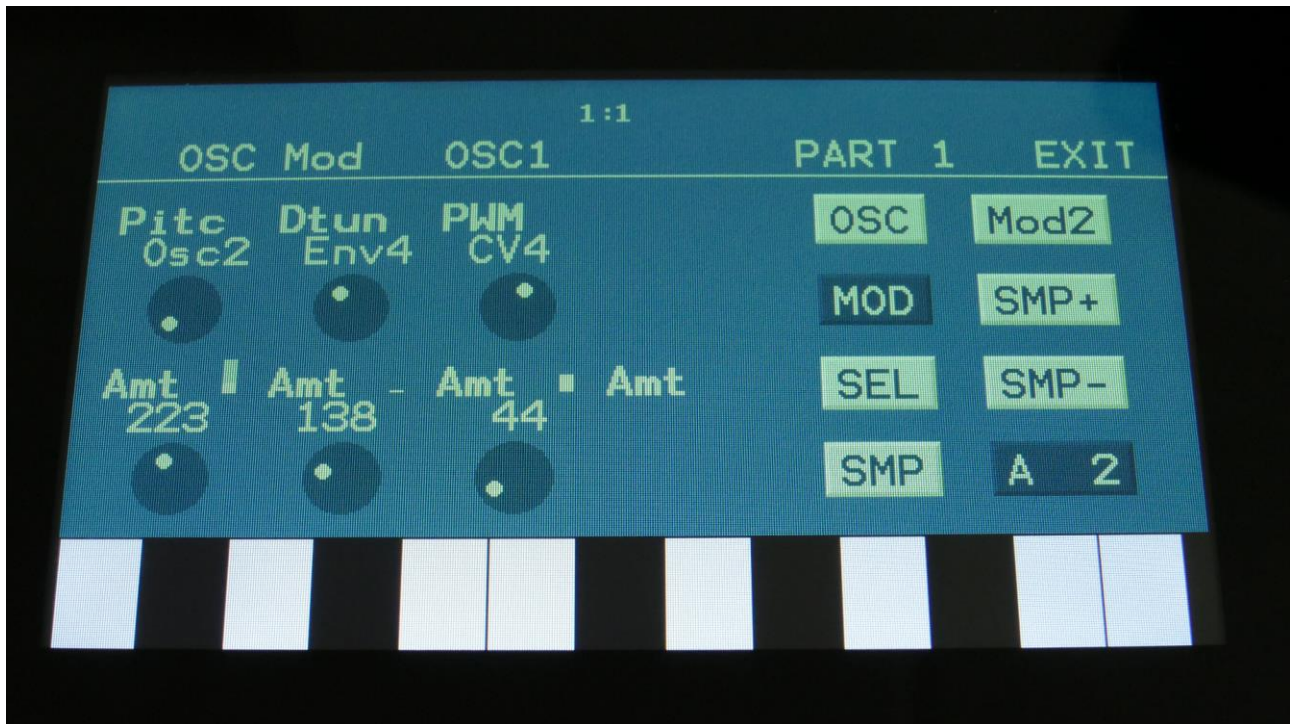

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Pitc: Modulates the oscillator pitch.

Dtun: Modulates the detuning of the square waves.

PWM: Modulates the pulse width of all the square waves.

The MOD page, when Clap is selected as Type

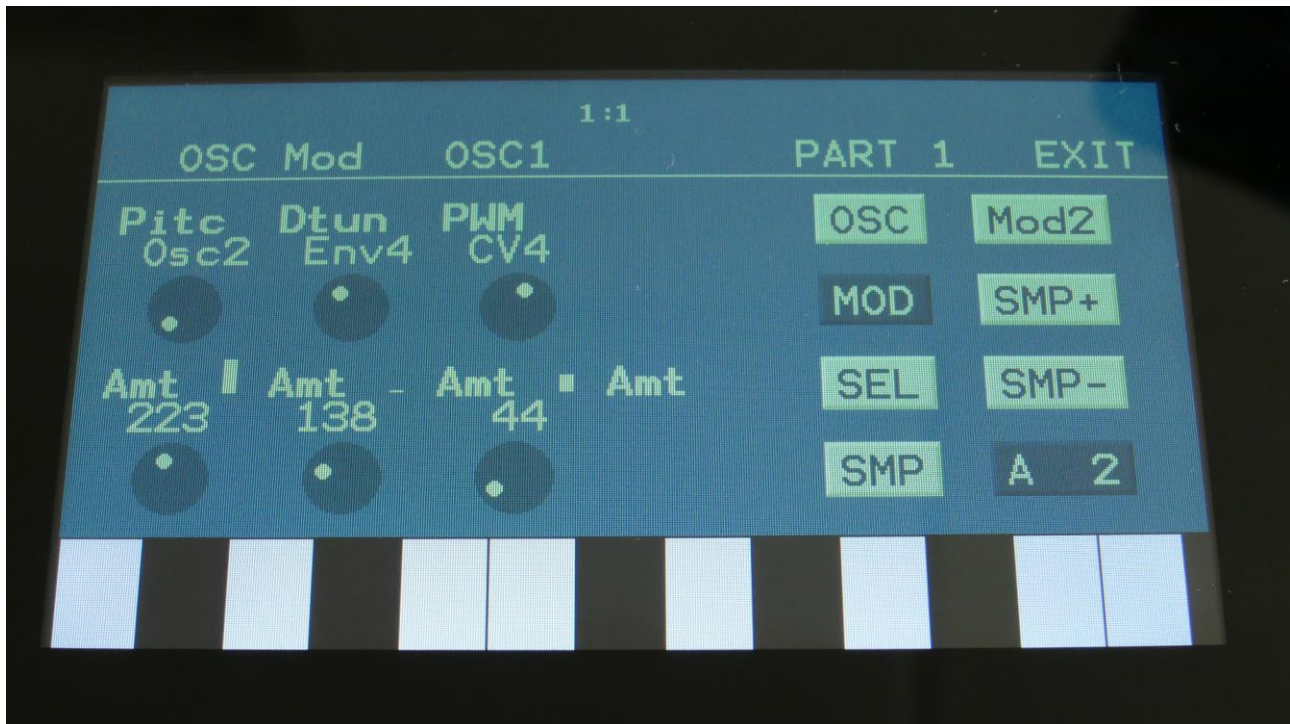

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Pitc: Modulates the clap envelope speed.

Dtun: Modulates the detuning of the noise wave.

PWM: Modulates the pulse width of an added square wave.

The MOD page, when Harm is selected as Type

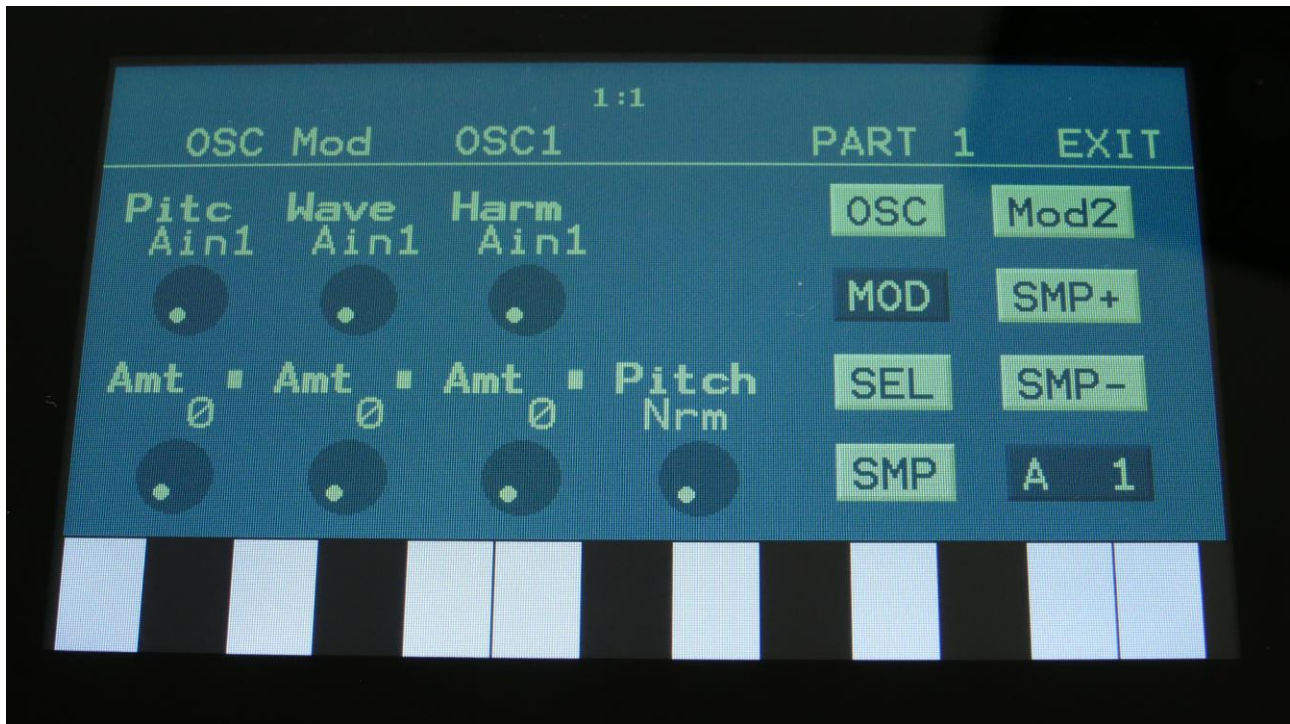

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Pitc: Modulates the oscillator pitch.

Wave: Modulates the wave parameter.

Harm: Modulates the Harm parameter.


Pitch: Sets the pitch modulation mode:

Nrm: Cross modulation.

FM: Linear FM.

PM: Phase Modulation. Pitc Mod will be linear FM, Pitc2 Mod will be Phase Modulation, which affect the waveform, without affecting the pitch.

The MOD page, when FOF is selected as Type

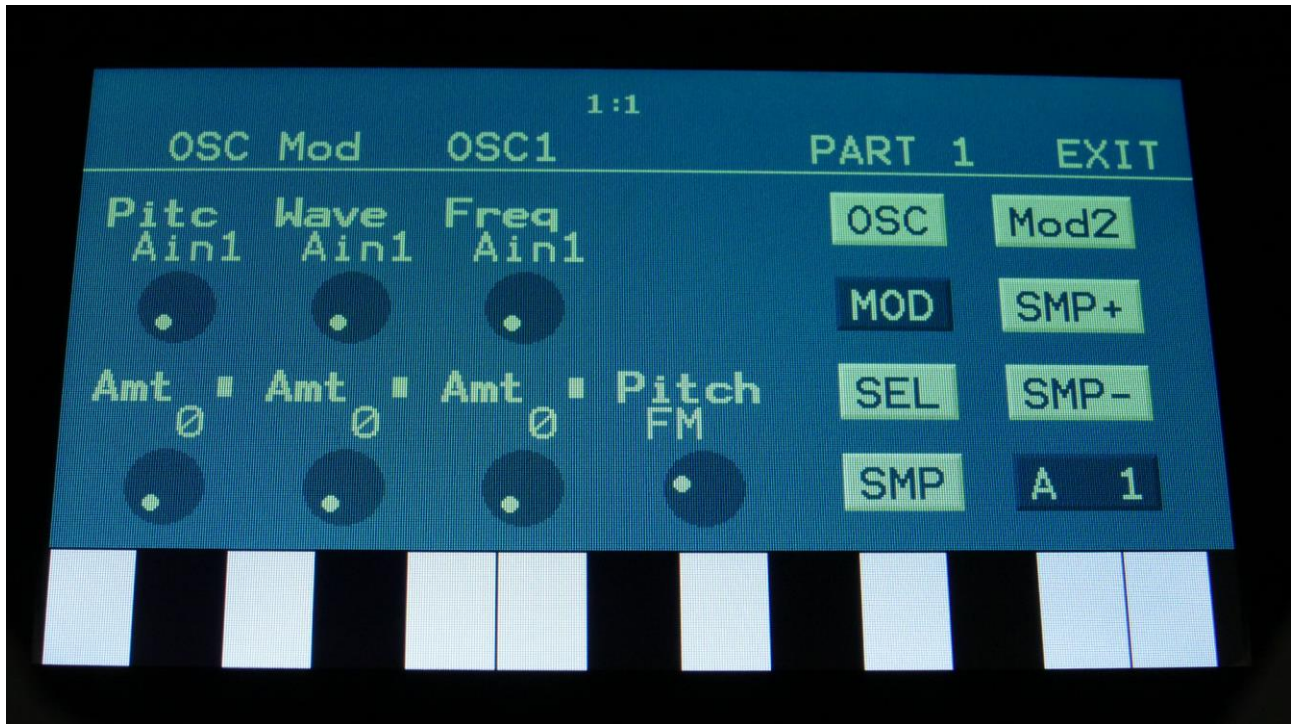

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Pitc: Modulates the oscillator pitch.

Wave: Modulates the sine/triangle wave Morph parameter.

Freq: Modulates the Freq parameter.


Pitch: Sets the pitch modulation mode:

Nrm: Cross modulation.

FM: Linear FM.

PM: Phase Modulation. Pitc Mod will be linear FM, Pitc2 Mod will be Phase Modulation, which affect the waveform, without affecting the pitch.

The MOD page, when in sampler or chopped keyboard mode

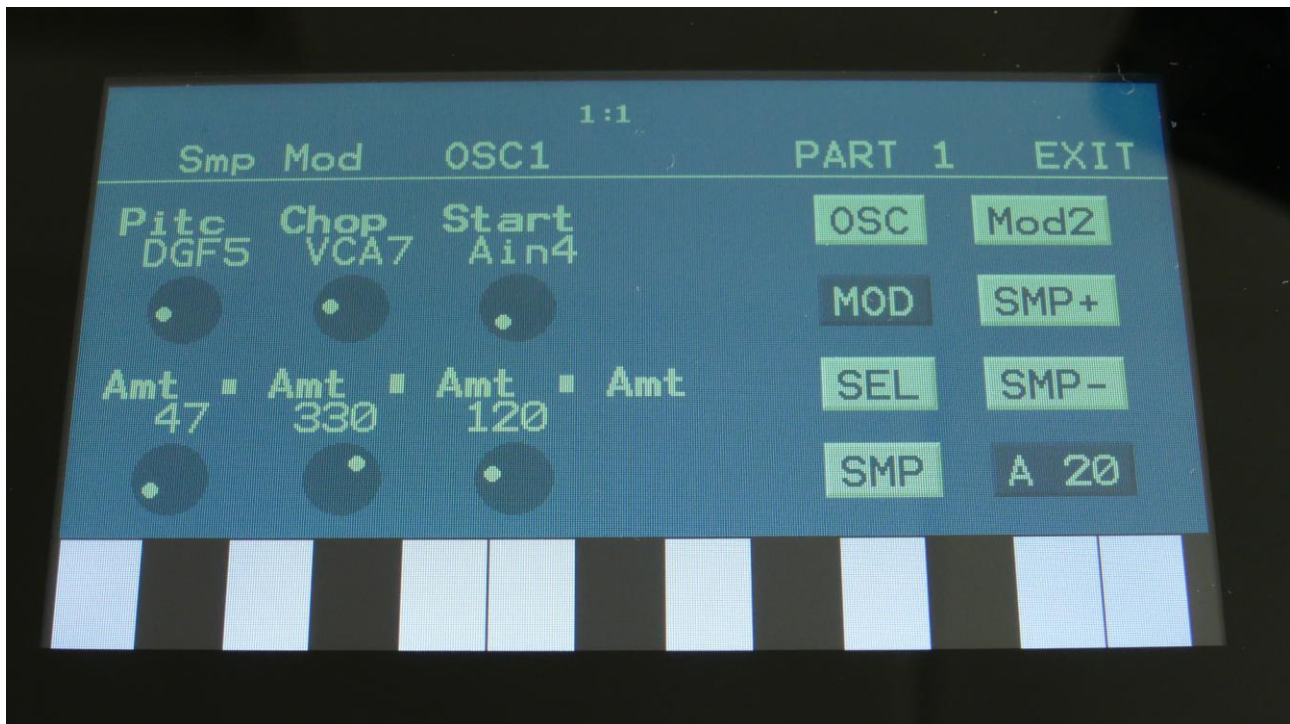

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Pitc: Modulates the sampler pitch.

Chop: Modulates the Chop number select, and sample select if #Smp is set to 2 or 4.

Start: Modulates the sample start point.

The MOD page, when in Wavetable mode

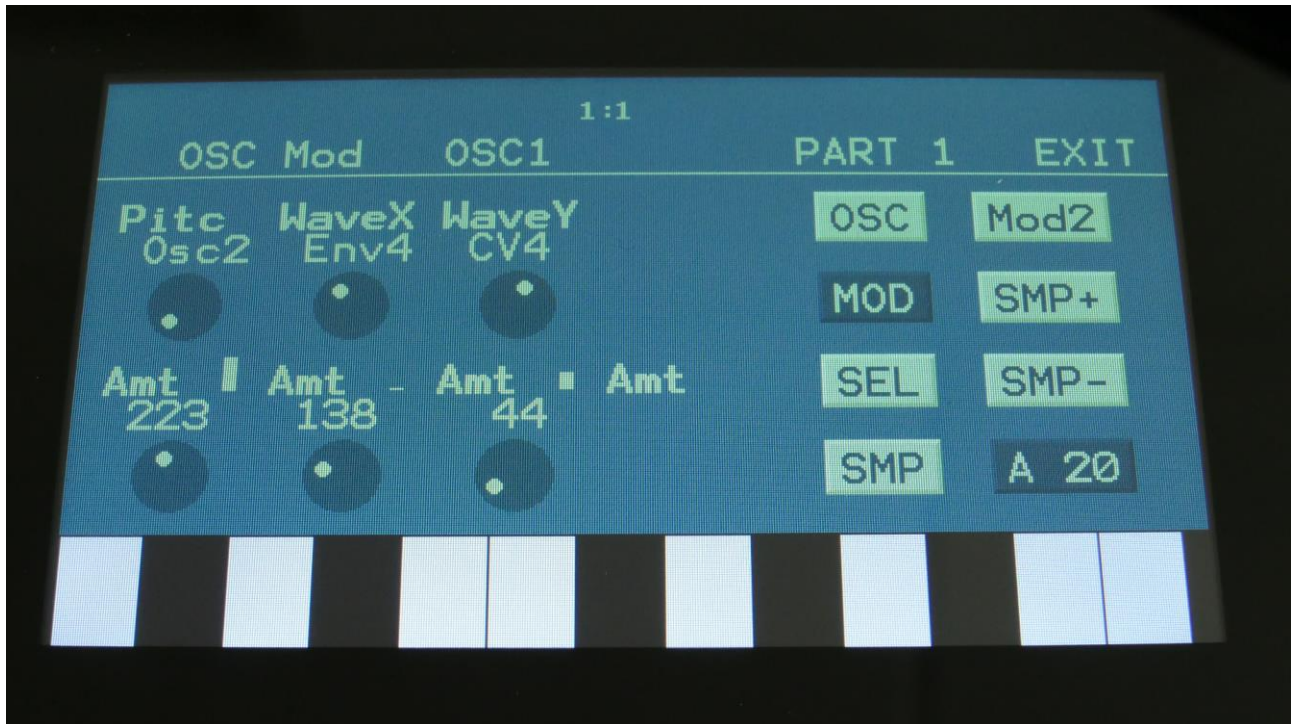

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Pitc: Modulates the oscillator pitch.

WaveX: Modulates the X morph position of the waves.

WaveY: Modulates the Y morph position of the waves in x64 mode, or the wavefolding amount in x8 mode.

Not in the picture:

Pitch: Sets the pitch modulation mode:


Nrm: Cross modulation.

FM: Linear FM.

PM: Phase Modulation. Pitc Mod will be linear FM, Pitc2 Mod will be Phase Modulation, which affect the waveform, without affecting the pitch.

Oscillator/Sampler/Chopped Keyboard/Noise/Wavetable mode select

Touch the SEL button, to enter this page.

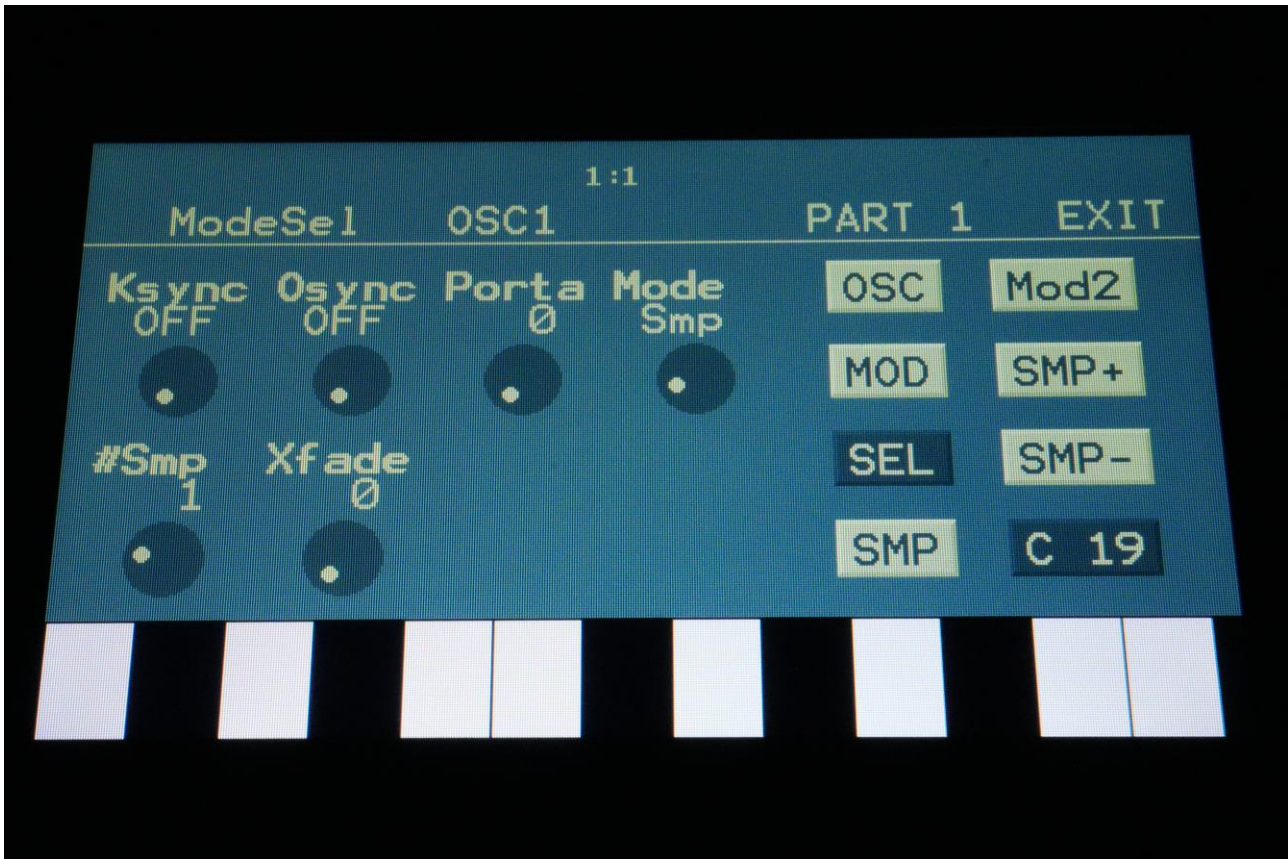

Ksync: Key Sync (Oscillators only). Can be set to off, or to a specific amount between 1 and 511, which indicates the start point of the oscillator waveform, that is the point at where the waveform generation will start, every time the oscillator is triggered from the part trigger.

Osync: Oscillator sync (Oscillators only). This can be set to off (no oscillator sync), or the currently selected oscillator can be set to synchronize to any of the other 7 oscillators, to create the classic oscillator sync effect.

Porta: Sampler Portamento. The more this is turned up, the slower the sampler pitch will slide from one note to another. Range: 0 to 511.

Mode: Selects whether the part oscillator should act as an oscillator (Osc), a sampler (Smp), a chopped keyboard sampler (ChKy), noise generator (Nois), or wavetable mode (Wtbl).

#Smp: Number of samplings. Sets if the part should use 1, 2 or 4 samplings. The 4 samplings are selected on the SMP page, and the samplings can be selected, using the Chop parameter on the sampler OSC page. This only affects the sampler and chopped keyboard modes.

Xfade: If you experience clicks, when playing with monophonic samplings, turning up this parameter will dampen or even remove these clicks.


Part Samples Select

Touch the SMP button, to enter this page.



Here you can select 4 samplings for the part. The number of these samplings, that are used, is set by the #Smp parameter on the SEL page. The 4 samples can be selected to play back, setting the Chop parameter, and by chop select modulation.

To select a sampling for any of the 4 slots, simply touch the sample name. Now this page will pop up:

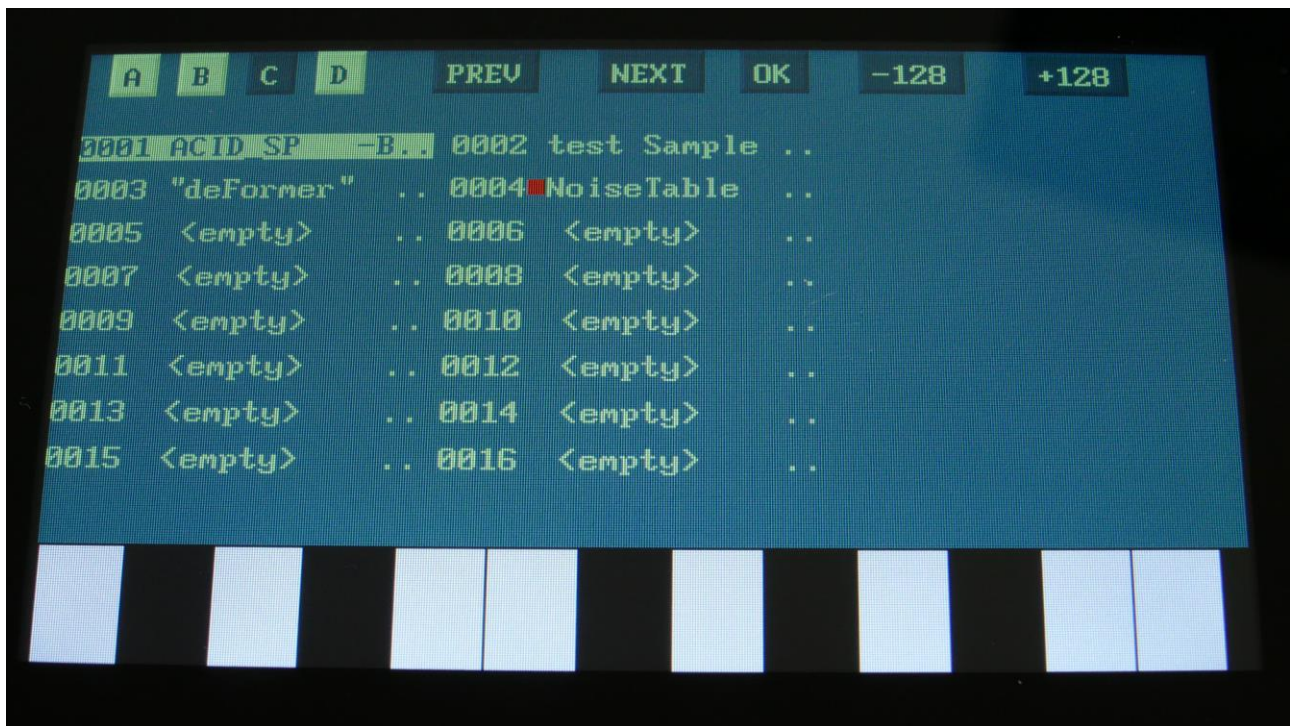

On each page you will view 16 of the samplings, which are held in the Urano FLASH memory, Bank A, B, C or D. Please notice, that the 18 and 43 minutes models only have Sample Bank A.

Touch A, B, C and D to select the sample bank, touch PREV and NEXT to view the previous or next 16 samplings, touch -128 and +128 to skip 8 sampling pages at a time.


To select a sampling, touch the sample name.

A small red square is shown near the sample name of the sampling, that is the last one, that was added to the bank.

When you have found the right sampling, touch OK to return to the Synth Part Sample Select page.

Oscillator Modulation 2

The Mod2 page, when Type1, Type2, Reso, or SinF is selected as Type

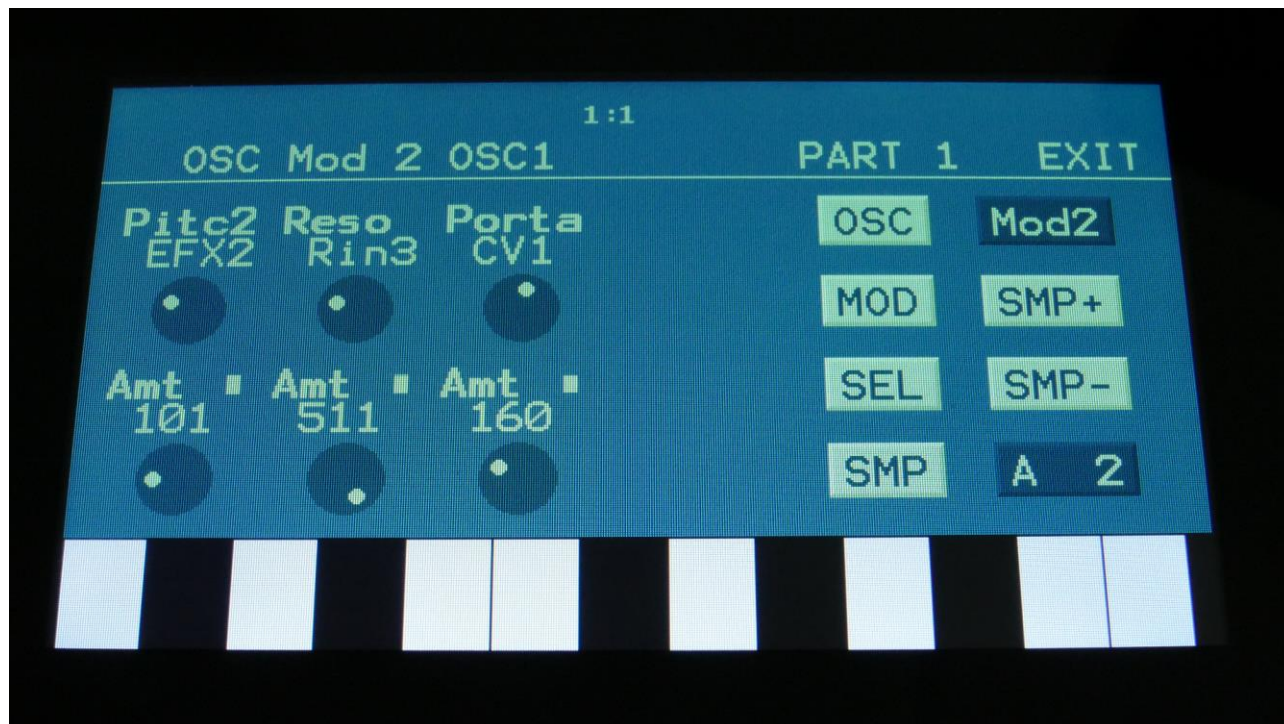

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Pitc2 (Phase in PM pitch mode): An extra pitch modulation destination, so that it is possible to modulate the oscillator pitch with 2 modulation sources at the same time.

Reso: Will modulate the number of resonances fed back, when oscillator type “Reso” is selected.

Porta: Will modulate the amount of portamento.

The Mod2 page, when Perc, Prc2 or Prc3 is selected as Type

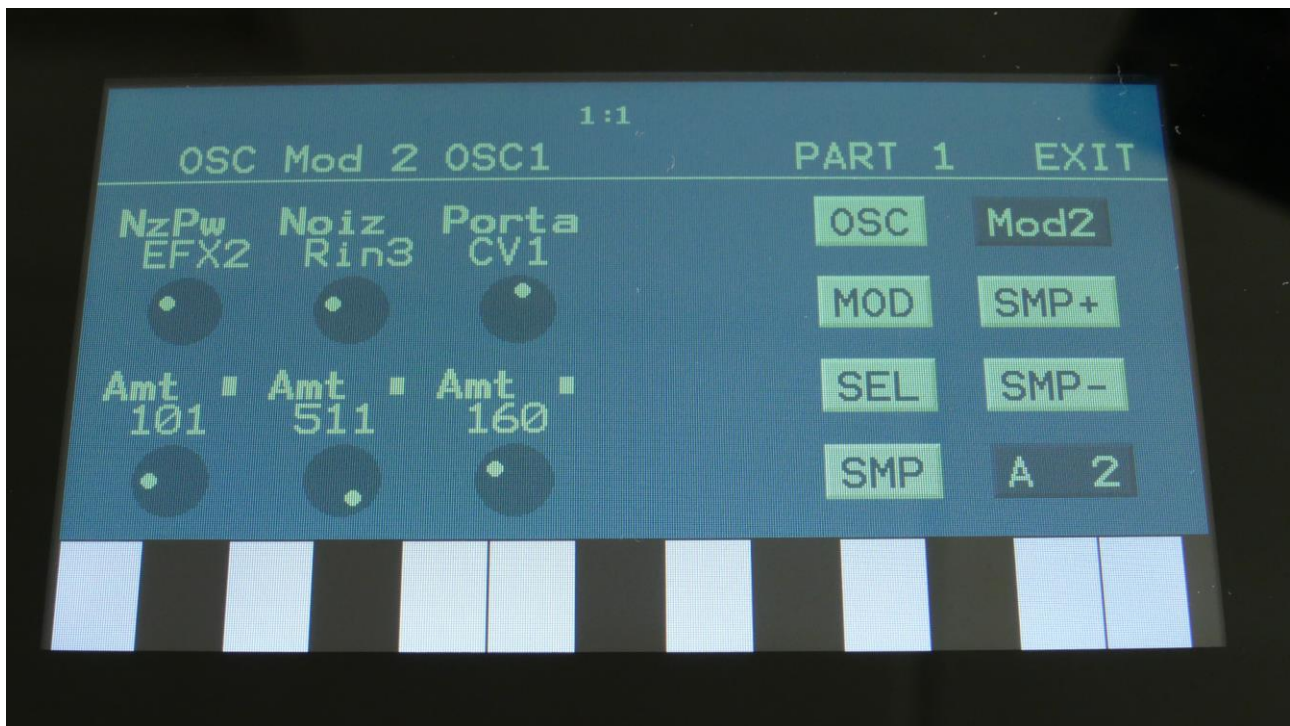

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

NzPw: Will modulate the FM noise PW.

Noiz: Will modulate the amount of noise FM applied to the percussion waves.

Porta: Will modulate the amount of portamento.

The Mod2 page, when Cymb or Cym2 is selected as Type

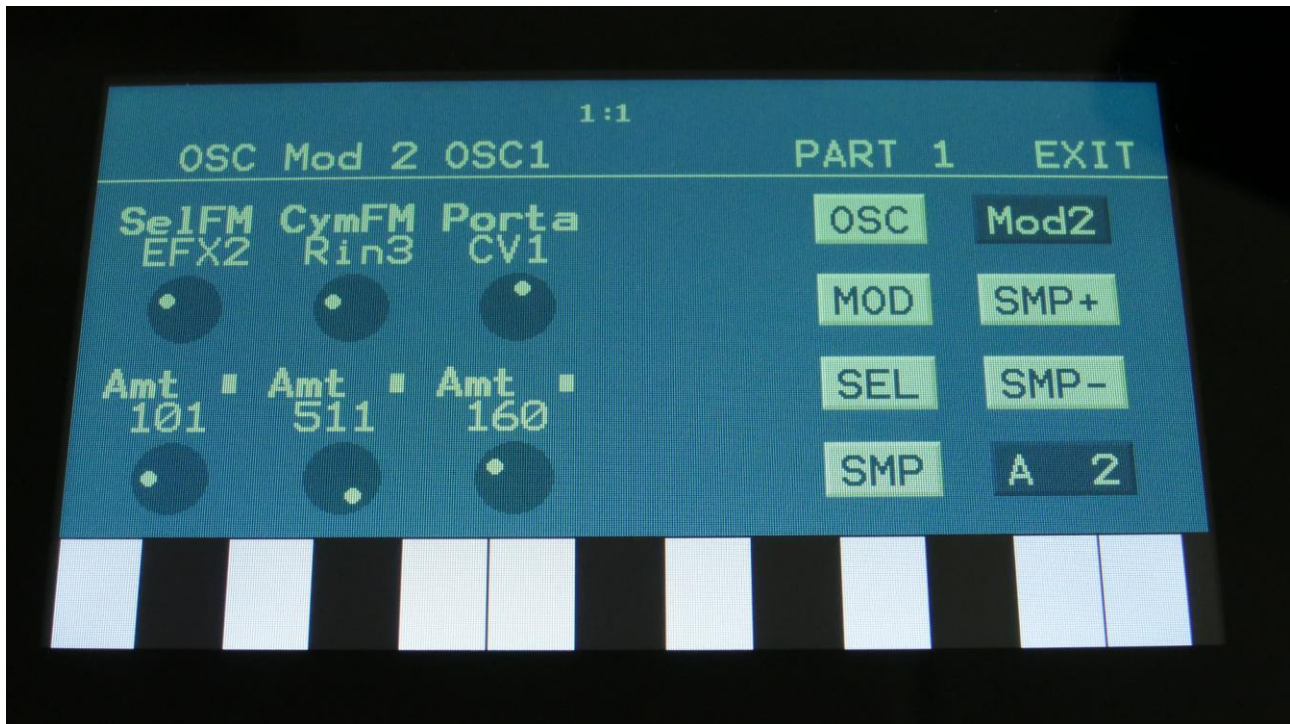

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

SelFm: Will modulate the amount of self-FM applied to the first square wave oscillator.

CymFM: Will modulate the amount of FM applied between the square waves.

Porta: Will modulate the amount of portamento.

The Mod2 page, when Clap is selected as Type

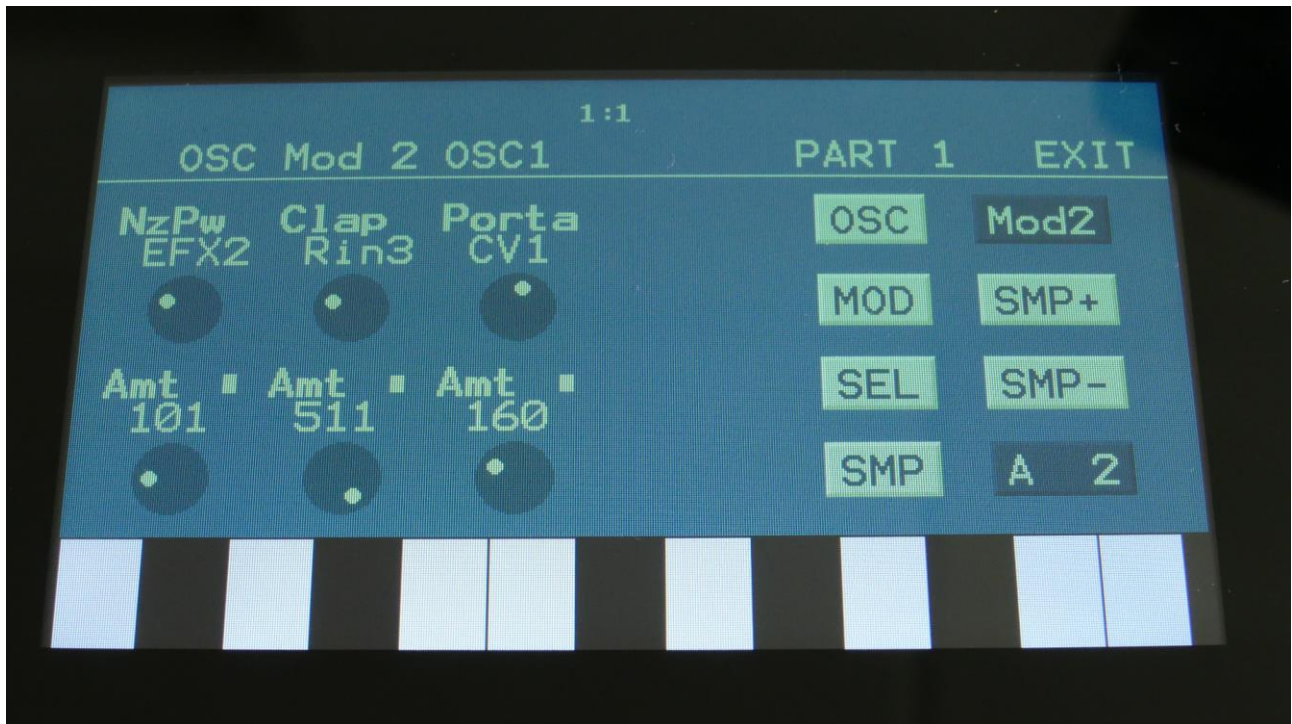

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

NzPw: Will modulate the clap noise PW.

Clap: Will modulate the intensity of the clap envelope.

Porta: Will modulate the amount of portamento.

The Mod2 page, when Harm is selected as Type

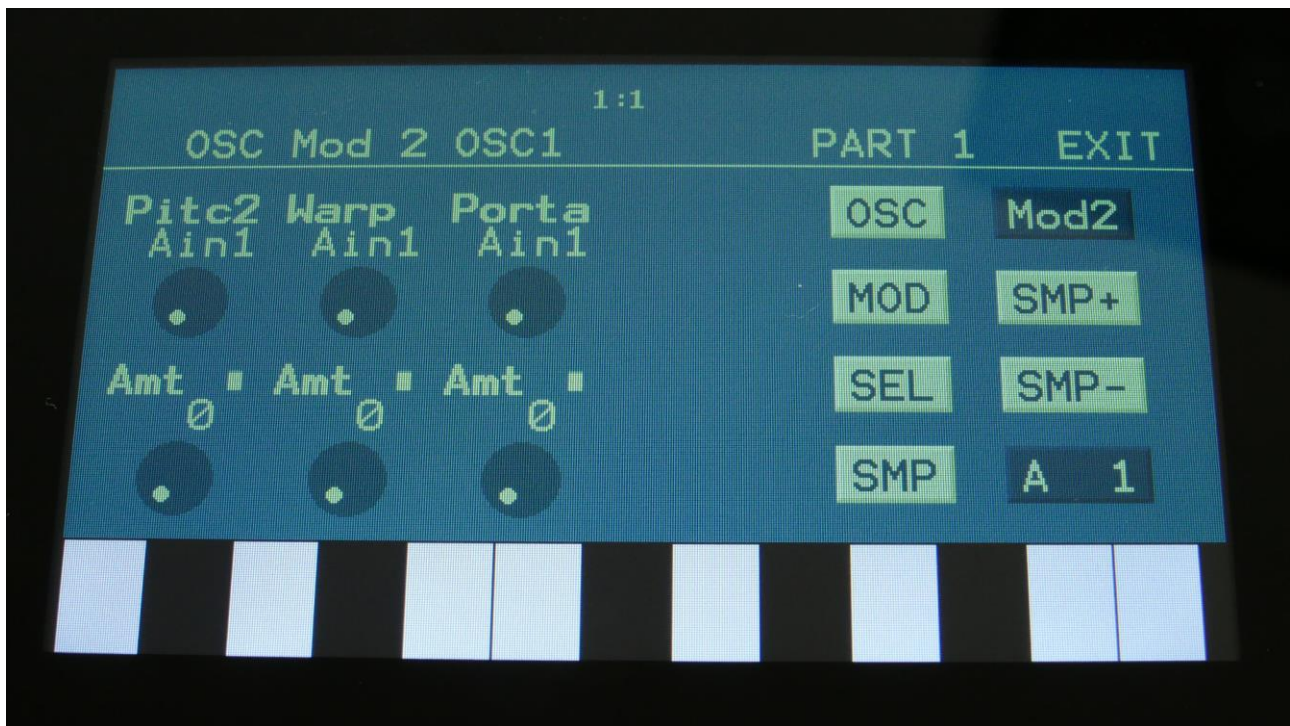

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Pitc2 (Phase in PM pitch mode): An extra pitch modulation destination, so that it is possible to modulate the oscillator pitch with 2 modulation sources at the same time.

Warp: Will modulate the Warp parameter.

Porta: Will modulate the amount of portamento.

The Mod2 page, when Draw is selected as Type

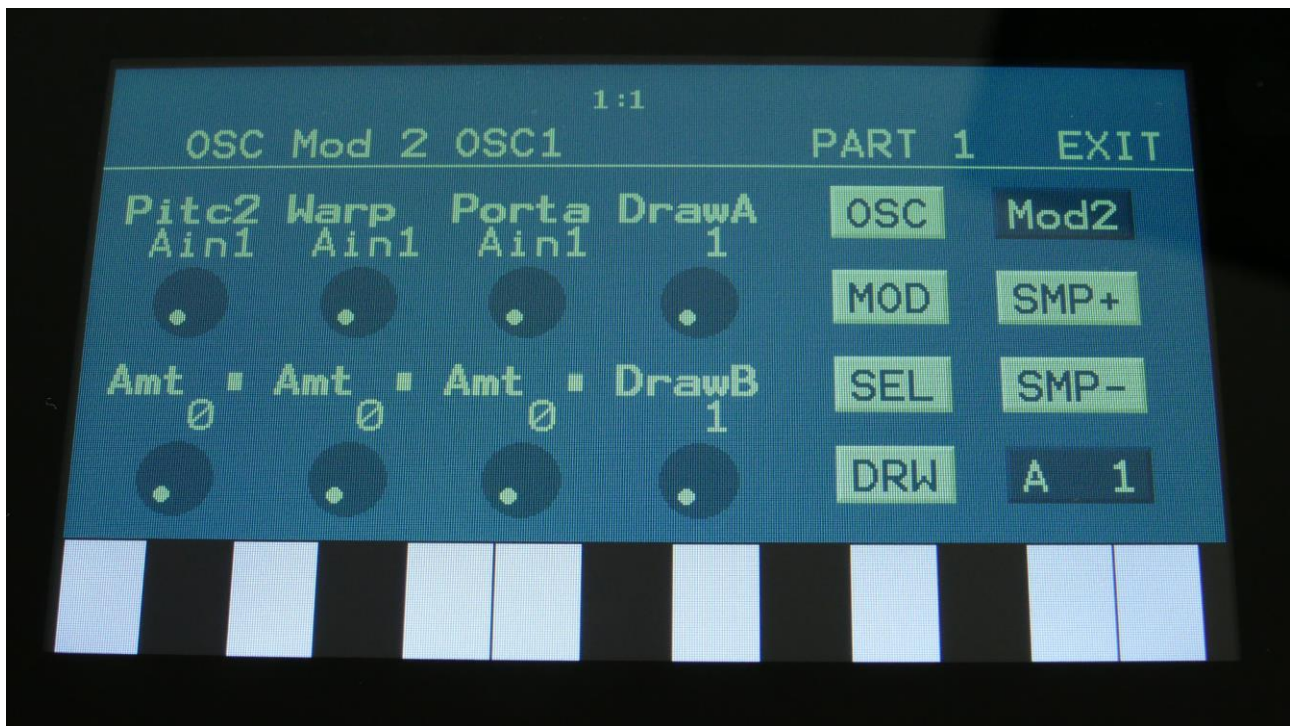

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:


Pitc2 (Phase in PM pitch mode): An extra pitch modulation destination, so that it is possible to modulate the oscillator pitch with 2 modulation sources at the same time.

Warp: Will modulate the Warp parameter.

Porta: Will modulate the amount of portamento.

DrawA and **DrawB:** Selects the Draw waves A and B, which the Wave parameter will morph between.

The Mod2 page, when Draw is selected as Type

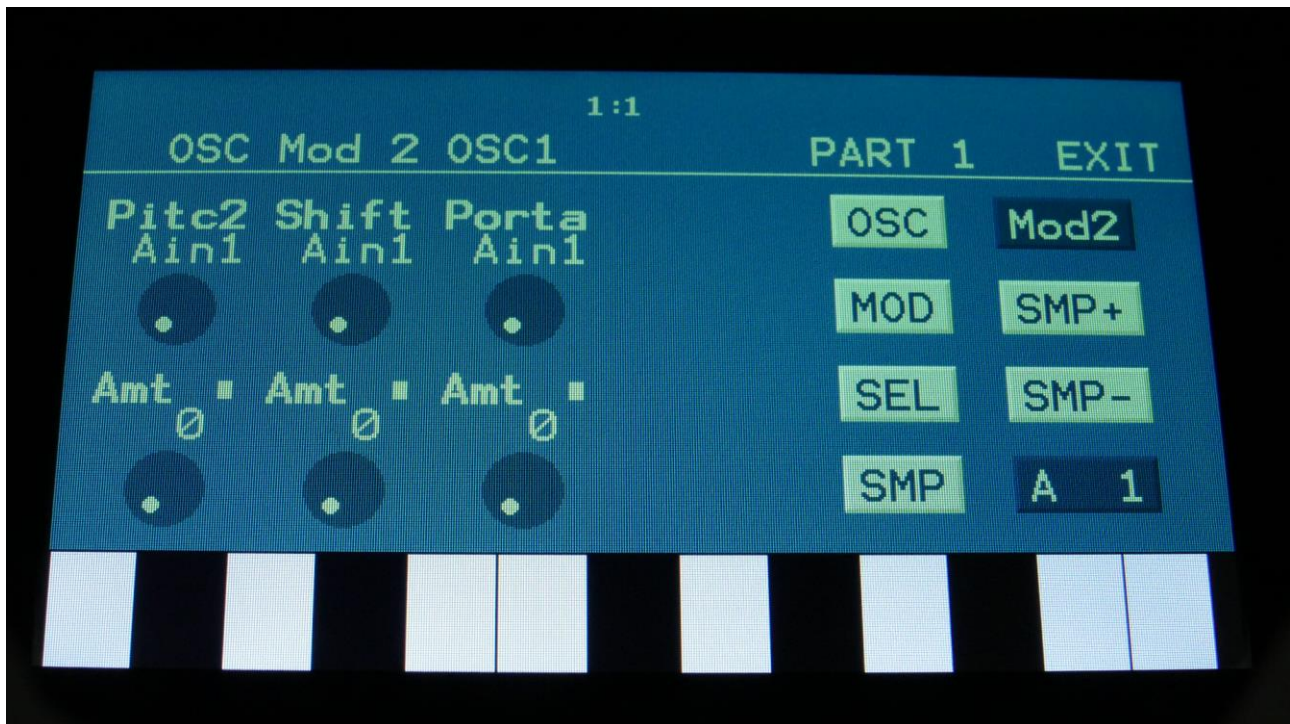

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Pitc2 (Phase in PM pitch mode): An extra pitch modulation destination, so that it is possible to modulate the oscillator pitch with 2 modulation sources at the same time.

Shift: Will modulate the Shift parameter.

Porta: Will modulate the amount of portamento.

The Mod2 page, when in sampler or chopped keyboard mode

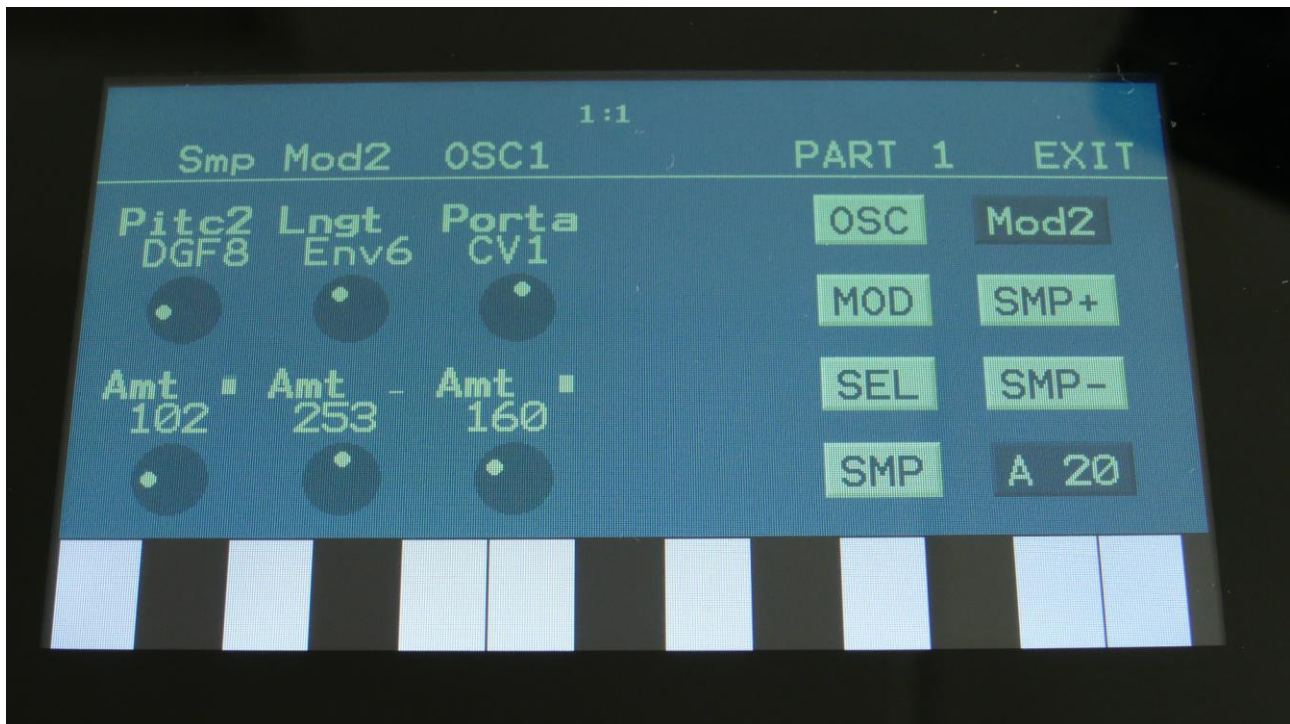

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Pite2: An extra pitch modulation destination, so that it is possible to modulate the sampling pitch with 2 modulation sources at the same time.

Lngt: Will modulate the sample length.

Porta: Will modulate the amount of portamento.

The Mod2 page, when in wavetable mode

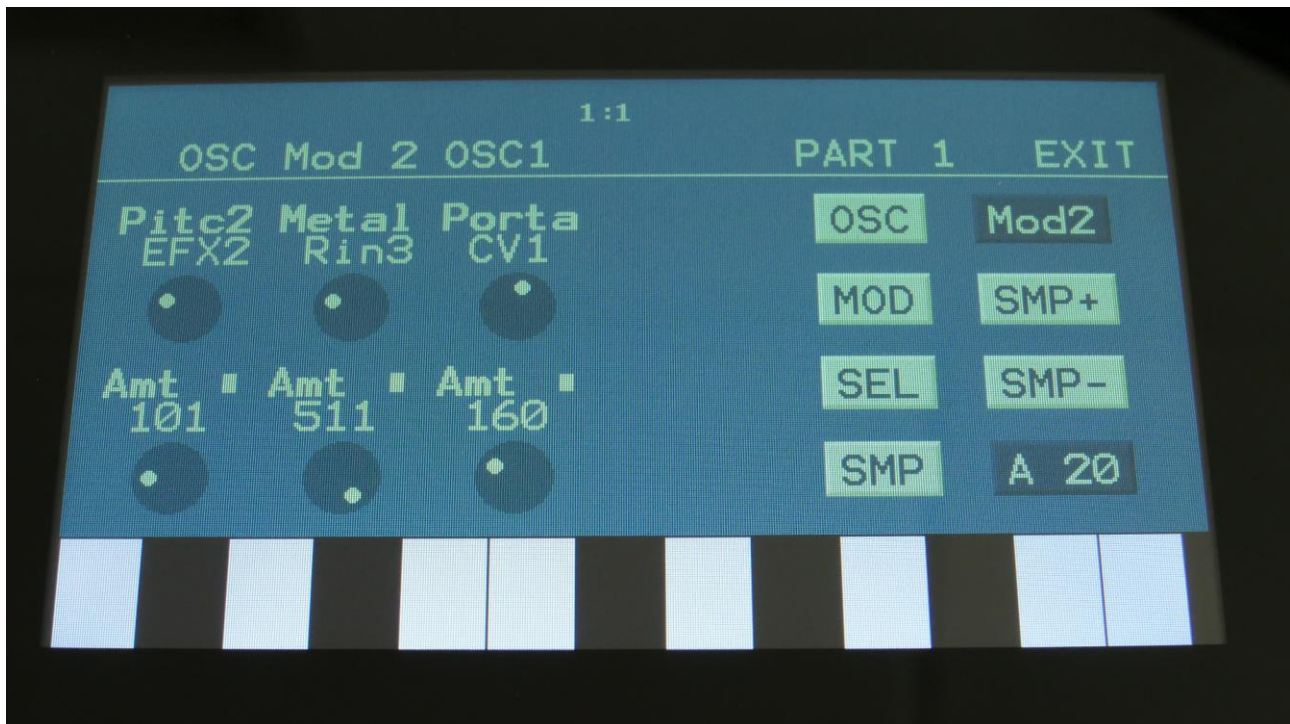

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Pitc2: An extra pitch modulation destination, so that it is possible to modulate the oscillator pitch with 2 modulation sources at the same time.

Metal: Will modulate the amount of Metal, that will be added to the sound.

Porta: Will modulate the amount of portamento.

Percussion Synthesizer

6 of the oscillator types are dedicated to generate percussion sounds. In this chapter, I will go through some of the intended possibilities with these oscillator types.

The 6 Percussion Oscillator types:

Perc: Percussion oscillator 1. This outputs 2 percussion waves, that can be detuned from each other, and noise FM can be applied. Atk will morph between the attack and the body of the percussion sound. To imitate the strike of the drum, modulate Atk with an envelope. Noise PW can also be set, to adjust the intensity of the FM noise. This percussion oscillator is optimized for **kicks, snares and noise sounds**, but can also produce a lot of other sounds. Like the other oscillator types, its parameters can be modulated by any modulation source, and it can be routed through filters and effects, which expands the possibilities.

Prc2: Percussion oscillator 2. This outputs 2 percussion waves, that can be detuned from each other. Squared noise FM can be applied, and noise PW can be adjusted, to set the intensity of the FM noise. Atk will morph between the attack and the body of the percussion sound. To imitate the strike of the drum, modulate Atk with an envelope. This percussion oscillator is optimized for **analog style hi hats and cymbals**, but can also produce a lot of other sounds. Like the other oscillator types, its parameters can be modulated by any modulation source, and it can be routed through filters and effects, which expands the possibilities.

Prc3: Percussion oscillator 3. This outputs 2 percussion waves, that ring modulates each other, and that can be detuned from each other. Noise FM can be applied. Atk will morph between the attack and the body of the percussion sound. To imitate the strike of the drum, modulate Atk with an envelope. Noise PW can also be set, to adjust the intensity of the FM noise. This percussion oscillator is optimized for **hi hats, toms and bell type sounds**, but can also produce a lot of other sounds. Making kick and snare drums with this, results in very special sounds. Like the other oscillator types, its parameters can be modulated by any modulation source, and it can be routed through filters and effects, which expands the possibilities.

Cymb: Cymbal oscillator. A cymbal sound is a complex sound, and this is a complex oscillator. It is made up of a small group of squarewave oscillators, that modulates each other (CymFM). The pulse width can be set for the oscillators, they can be detuned from each other, and the amount of CymFM can be set. Self FM can be applied to the first oscillator in the chain, which is only a modulator, so the effect of self FM can only be heard, if CymFM is turned up. This percussion oscillator is optimized for **cymbals and metallic noises**, but can also produce a lot of other sounds. Like the other oscillator types, its parameters can be modulated by any modulation source, and it can be routed through filters and effects, which expands the possibilities.

Cym2: Cymbal2. By combining FM and ring modulation, this can make cymbal sounds that are a bit more aggressive than cymbal 1.

Clap: A handclap oscillator. A noise source is shaped by a “clap envelope”. The speed and the amount of the clap envelope can be adjusted, together with the noise PW.

Sound ideas / Start points

If you would like to start from scratch, designing sounds with the Percussion Synthesizer, or you just want to get an idea of, how specific sounds can be generated, here are some ideas.

The best way to use these examples, is to start with an initialized preset, and then use part 5 to 8 (the parts without analog filters).

Analog style kick drum

Select the Perc oscillator type. Set the Dtun, Atk and Noiz parameters all to zero. Set pitch modulation to an Env and something around 100 for a start. Set Atk modulation to an Env and something around 150. If you are triggering the sound from the trigger buttons, set Tune to -15.

Set VCA envelope to LogSm mode, A to 0, D to 137, S to 0 and R to 130.

Set the Env to Log mode, A to 0, D to 45, S to 0 and R to 0.

Now you should hear an analog style kick drum. Experiment with the settings of pitch and Atk modulation, the envelope decay time, and of course the Tune parameter, to get variations of this.

To make a long kick sound, set pitch modulation to the decay envelope, and set the decay value of this to around 40. Keep the Env controlling Atk (Attack). Adjust the VCA envelope decay and release, and the Env decay and release.

Acoustic style kick drum

The percussion oscillators might not be able to perfectly imitate an acoustic kick drum, but they can get somewhere near.

Use the analog style kick drum, and adjust the Dtun parameter. To get it even more realistic, add a Pitch Shifter effect after it, and detune this too.

Snare drum

Select the Perc oscillator type. Set Noiz to 511, Dtun to 210 (sets the brightness of the snare), Atk to 0 and NzPw to +0. Turning up Atk, will give the snare drum more “bite”. Set Atk modulation to an Env and set this to 270. If you are triggering the sound from the trigger buttons, set Tune to -43.

Experiment, by tweaking the parameters, to get the snare sound, that you want.

Tom

Select the Prc3 oscillator type. Set Dtun, Atk and Noiz all to zero. Set pitch modulation to an Env, to 42, and set Atk modulation to the same Env, to 305. If you are triggering the sound from the trigger buttons, set Tune to -8. Set Env1 A to 0, D to 52, S to 0 and R to 118. Set the VCA Env A to 0, D to 84, S to 408 and R to 66. Now you should be able to hear a basic tom sound.

Make new tom sounds, by tweaking the parameters.

Closed Hi hat

Select the Prc3 oscillator type. Set Dtun to 19, Atk to 0, NzPw to +0, and Noiz to 85. If you are triggering the sound from the trigger buttons, set Tune to +33. Set Atk modulation to an Env, and set this to 226. Set VCA Env A to 0, D to 22, S to 0, R to 20. The Env can be left at the default settings (A=0, D=40, S=0, R=0).

Tweak the parameters, to obtain different hi hat flavors.

Open Hi hat

Use the settings from the closed hi hat. Set the VCA Env A to 0, D to 22, S to 415 and R to 208. Now you got an open version of the closed hi hat!

Analog style closed hi hat

Select the Prc3 oscillator type. Set Dtun to 186, Atk to 0, NzPw to +0 and Noiz to 62. If you are triggering the sound from the trigger buttons, set Tune to +21. Set Atk modulation to an Env, and set this to 80. Set VCA Env A to 0, D to 22, S to 0, R to 20. The Env can be left at the default settings (A=0, D=40, S=0, R=0).

Tweak the parameters, to obtain different hi hat flavors.

Analog style open Hi hat

Use the settings from the analog style closed hi hat. Set the VCA Env A to 0, D to 22, S to 415 and R to 208. Now you got an open version of the closed hi hat!

Cymbal

Select the Cymb oscillator type. Set SelfFM to +255, Dtun to 127, PW to 120 and CymFM to 511. Set VCA Env A to 0, D to 39, S to 446, R to 434.

This will create a different cymbal sound on almost any key, so by adjusting the Tune parameter, you will obtain different sounds

Tweak the parameters, to obtain different cymbal flavors. Run it through filters, to make it less wild.

To make it a bit more metallic, try to run it through a Bit Crusher effect. Add a distortion effect, to give it more edge.

Crash Cymbal

Select the Cym2 oscillator type. Set Tune to -22, SelfFM to +88, Dtun to 254, PW to 272, and CymFM to 511.

Set VCA envelope to LogSm mode, A to 0, D to 20, S to 511 and R to 390.

Hand Clap

Select the Clap oscillator type. Set Tune to -23, NzPw to +107, Dtun to 0, PW to 272, and Clap to 511.

Set VCA envelope to LogSm mode, A to 0, D to 20, S to 511 and R to 96.

Bell sound

Select the Perc oscillator type. Set Dtun to 169, Atk to 120 and Noiz to 0. If you are triggering the sound from the trigger buttons, set Tune to +0. Set Atk modulation to an Env, and set this to 254. Set VCA Env A to 0, D to 22, S to 511, R to 191. The Env can be left at the default settings (A=0, D=40, S=0, R=0).

Tweak the parameters, to obtain different bell sound flavors.

Quadrature Oscillators

Oscillator 1 and 2 each has an additional quadrature output. These are sine waves, that is shifted 45 degrees from the original waveform. Can be used to create some special effects, like a frequency shifter.

These does not have any additional parameters. They just outputs to the audio/modulation bus.

Noise Generator

Urano has an extra noise generator, that does not have any parameters. It just outputs a white noise signal to the audio/modulation bus.

VCF - Analog Filters

Urano has 2 analog filter board slots. These are compatible with the whole line of Gotharman filter boards, and also with some new dual line filter boards, made especially for Urano. Urano comes with 2 dual line analog filter boards installed, to give it a total of 4 analog filters. VCF1 and 3 are a new very resonant feedforward filter design. VCF2 are a multi mode filter with 8 different modes, based on the VCF10 filter board with SSI2140. VCF4 are a SSI2140 lowpass filter. And of course Gotharman's G-Ray, intermodulation feedback, are available for every analog filter. Most parameters can be modulated.


To make sure that the parameters on the VCF pages fits the installed filterboards, the filters needs to be configured. This is done in the "MOR" section. When your Urano arrives from Gotharman's, the VCF's are already configured, and you do not need to worry about this. It will only be necessary to change the configuration, if you replace any of the filter boards. How to replace filter boards is explained later in this manual.

Analog Filter boards Parameters

From the Synth Modules page, touch the VCFs block, to enter the analog filter pages. First the pre-installed filter board parameters are explained, then the alternative ones.

VCF51-Dual Channel 12dB parameters

When this filter board are installed, it will show as 2 analog filters (1 and 3 or 2 and 4), each with their own set of parameters.

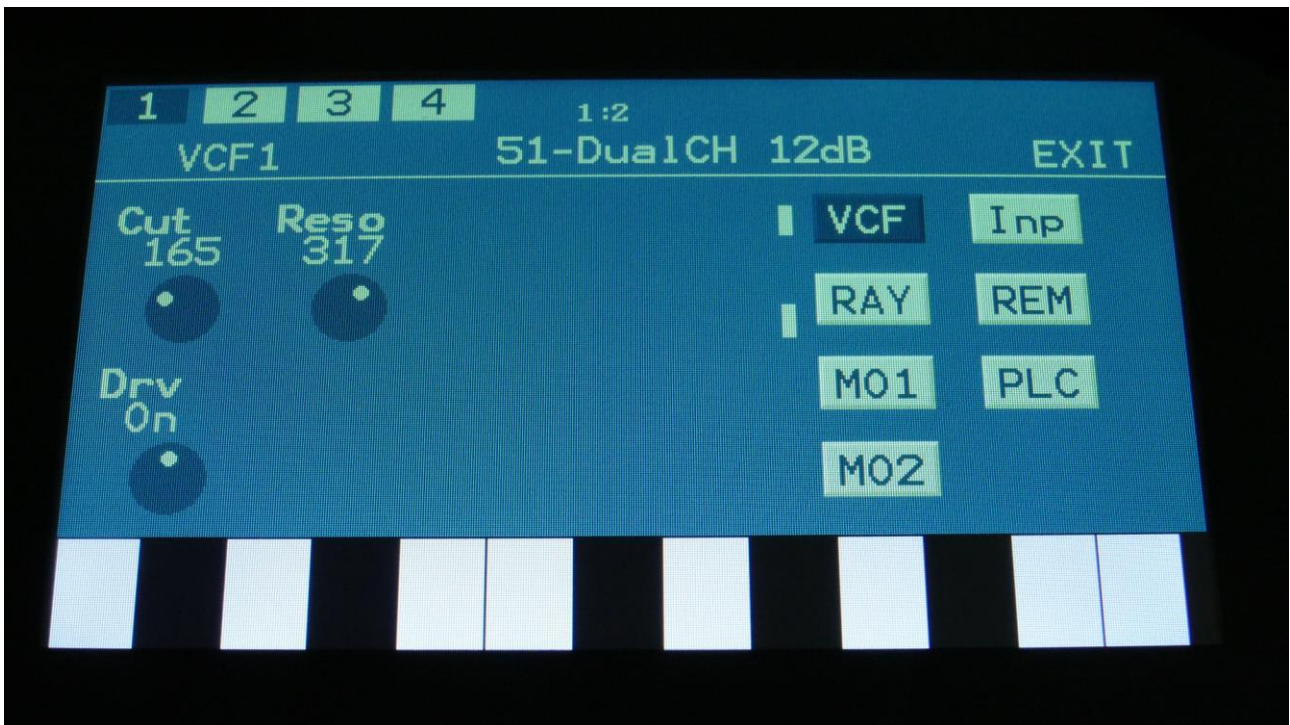

Filter board 1, 2, 3 and 4 are selected by touching the square fields in the upper left corner of the screen, marked 1, 2, 3 and 4, NOT by the part select buttons.


Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Cut: 0 to 511. Adjusts the filter cutoff frequency.

Reso: 0 to 511. Adjusts the resonance of the filter.

Drv: Switches the filter drive on or off.

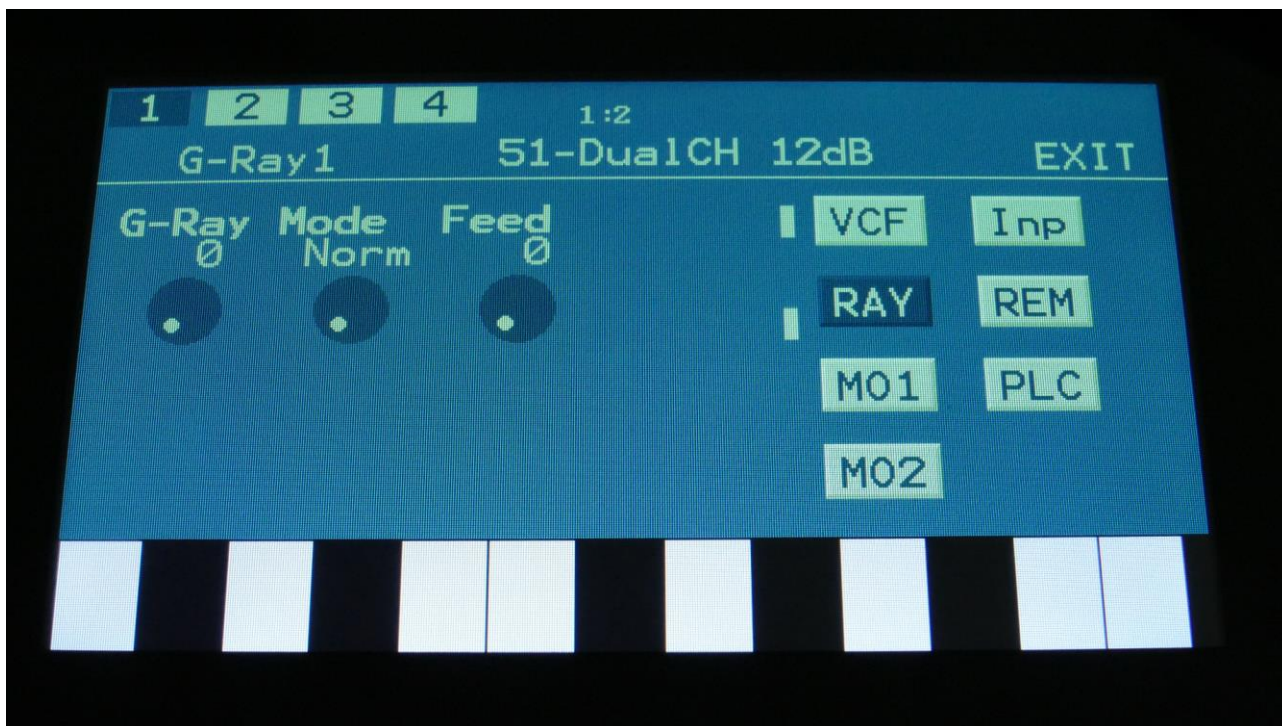

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.


-**Norm:** Normal 1:1 feedback.

-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

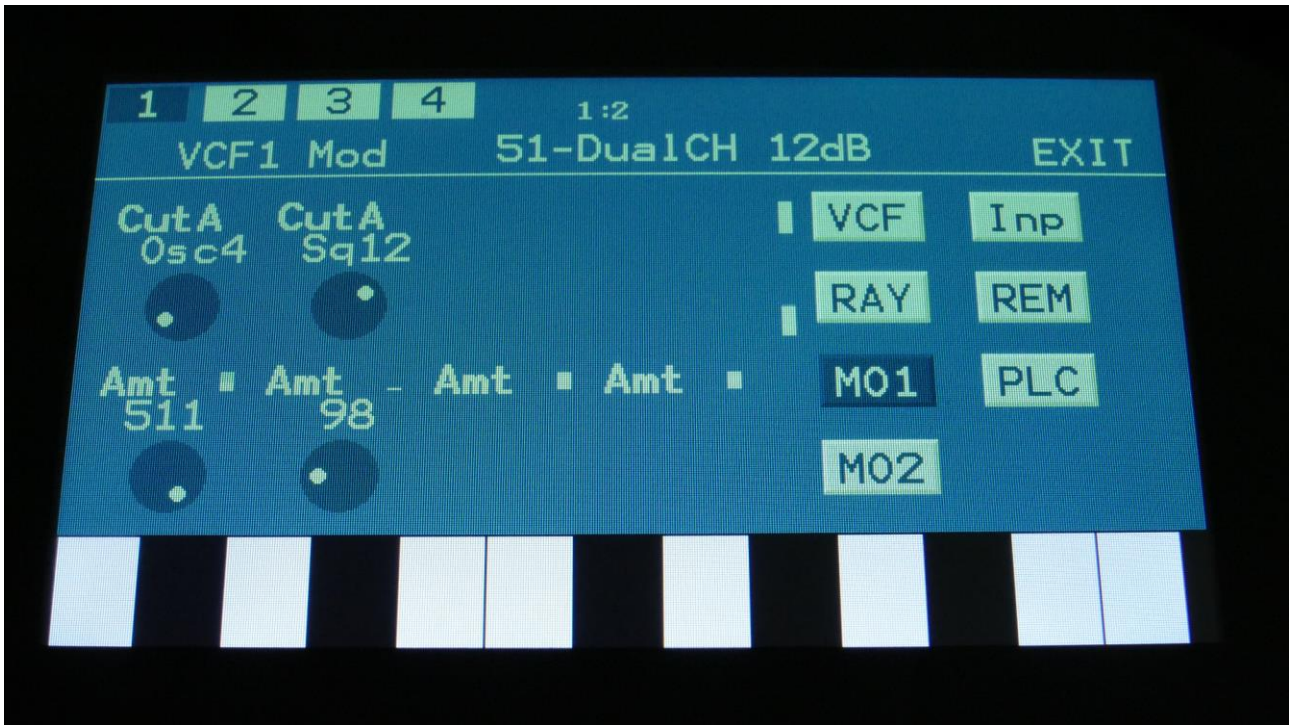

Touch the MO1 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Cut1, Cut2: Will modulate the Cutoff Frequency.



Touch the MO2 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the amount of resonance applied to the filter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

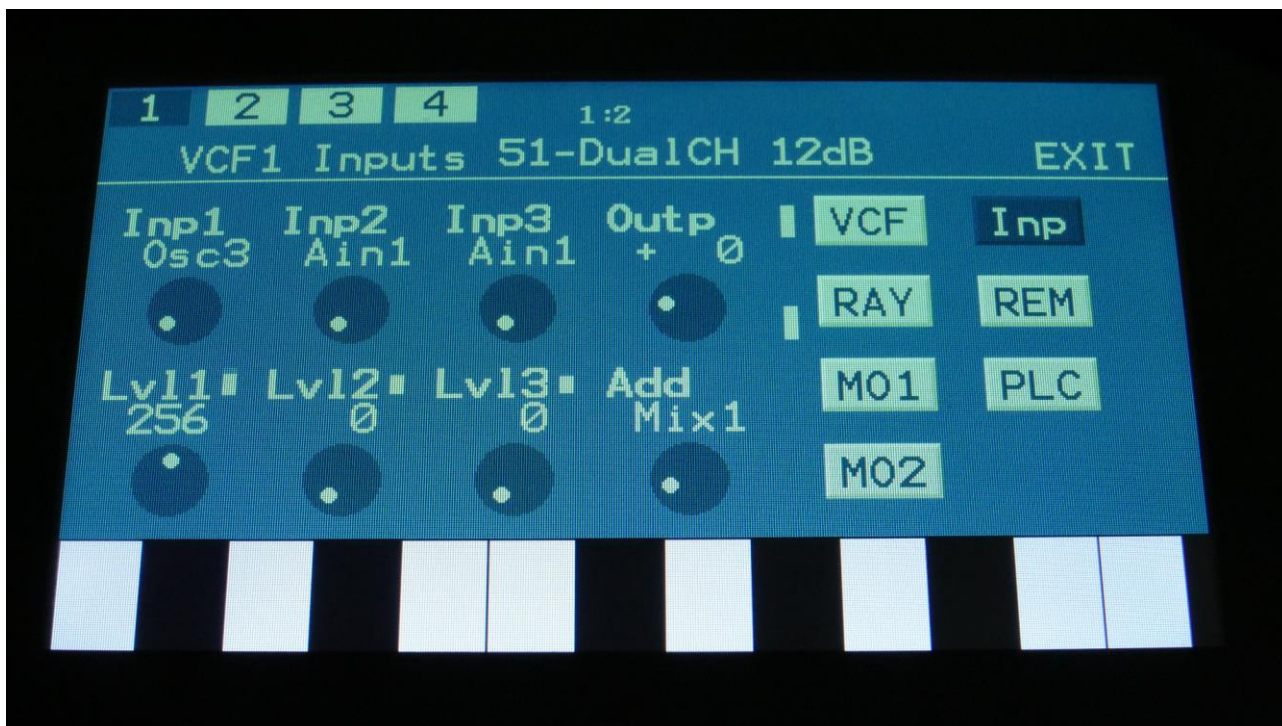

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.


Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF52-Dual Channel Multi parameters

When this filter board are installed, it will show as 2 analog filters (1 and 3 or 2 and 4), each with their own set of parameters.

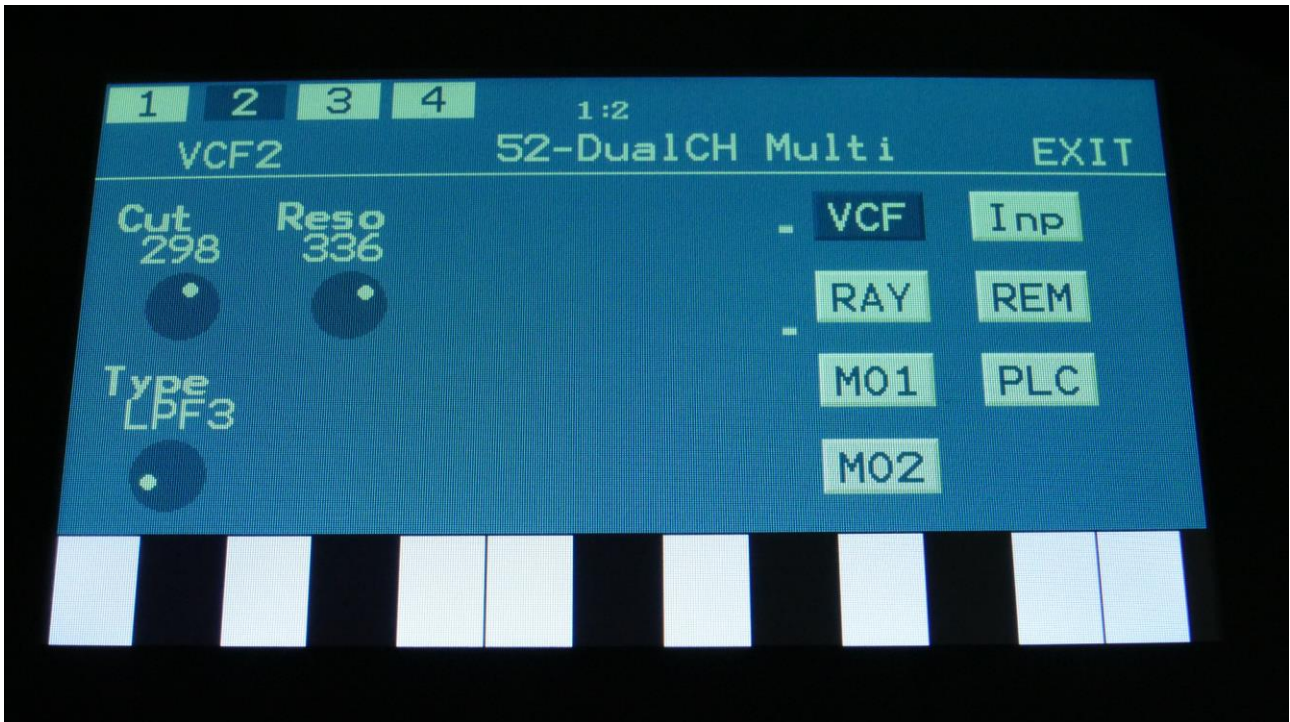

Filter board 1, 2, 3 and 4 are selected by touching the square fields in the upper left corner of the screen, marked 1, 2, 3 and 4, NOT by the part select buttons.


Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Cut: 0 to 511. Adjusts the filter cutoff frequency.

Reso: 0 to 511. Adjusts the resonance of the filter.

Type: Sets the filter type. Please notice that this is only possible on the lowest numbered filter of the two. The second one is always in LPF4 mode. Types: LPF4 (24dB lowpass), LPF3 (18dB lowpass), LPF2 (12dB lowpass), LPF1 (6dB lowpass), BPF (12dB bandpass), Notc (12dB Notch), HPF (12dB highpass), Allp (12dB allpass).

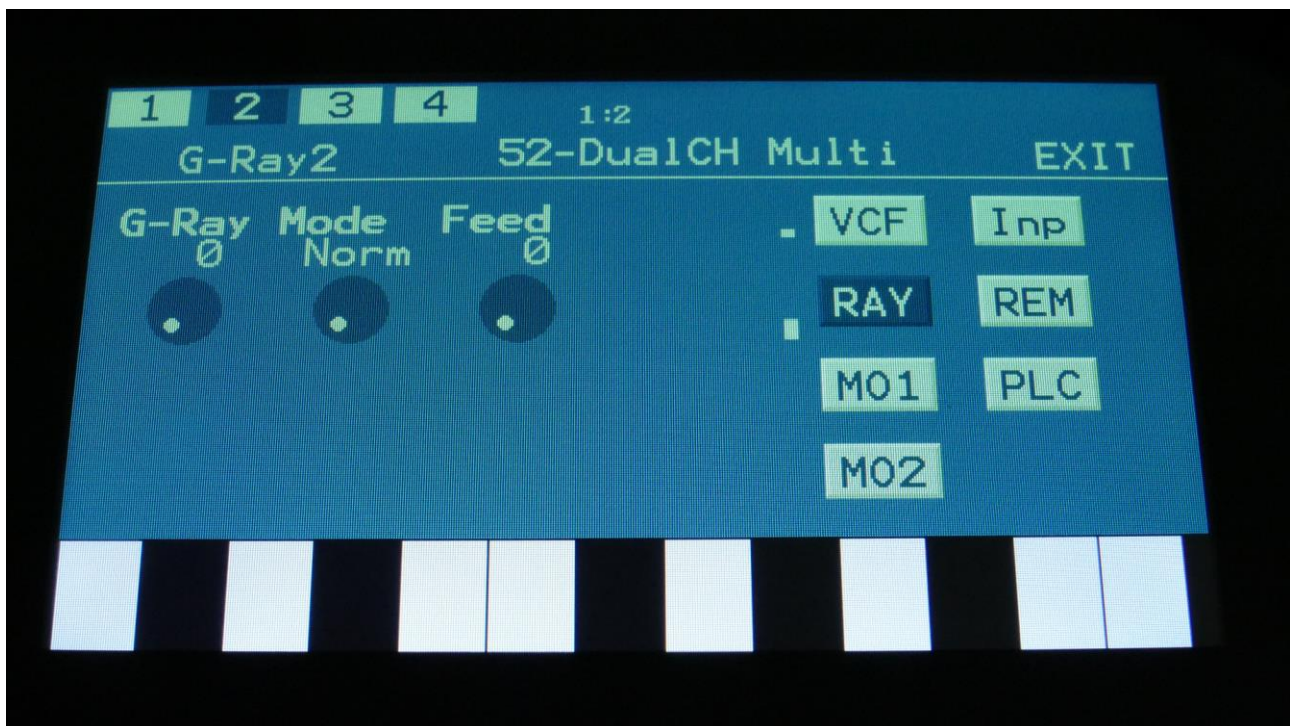

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.


-**Norm:** Normal 1:1 feedback.

-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

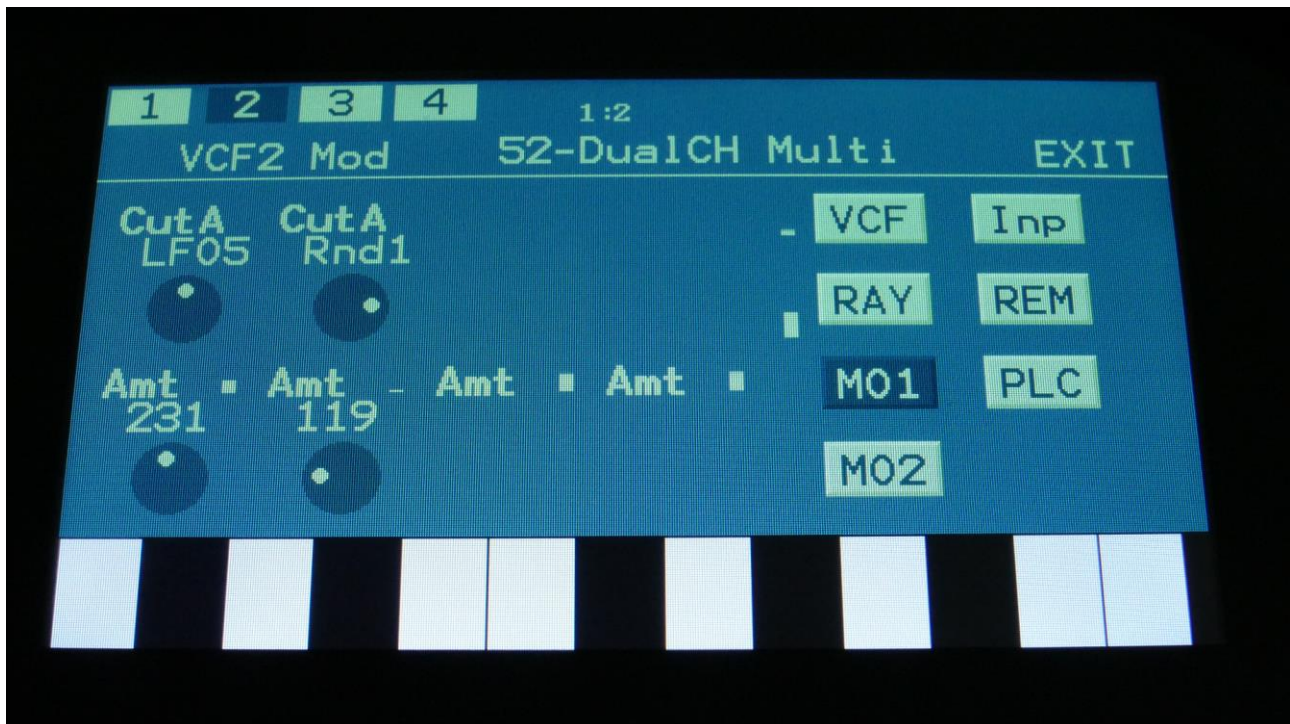


Touch the MO1 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Cut1, Cut2: Will modulate the Cutoff Frequency.

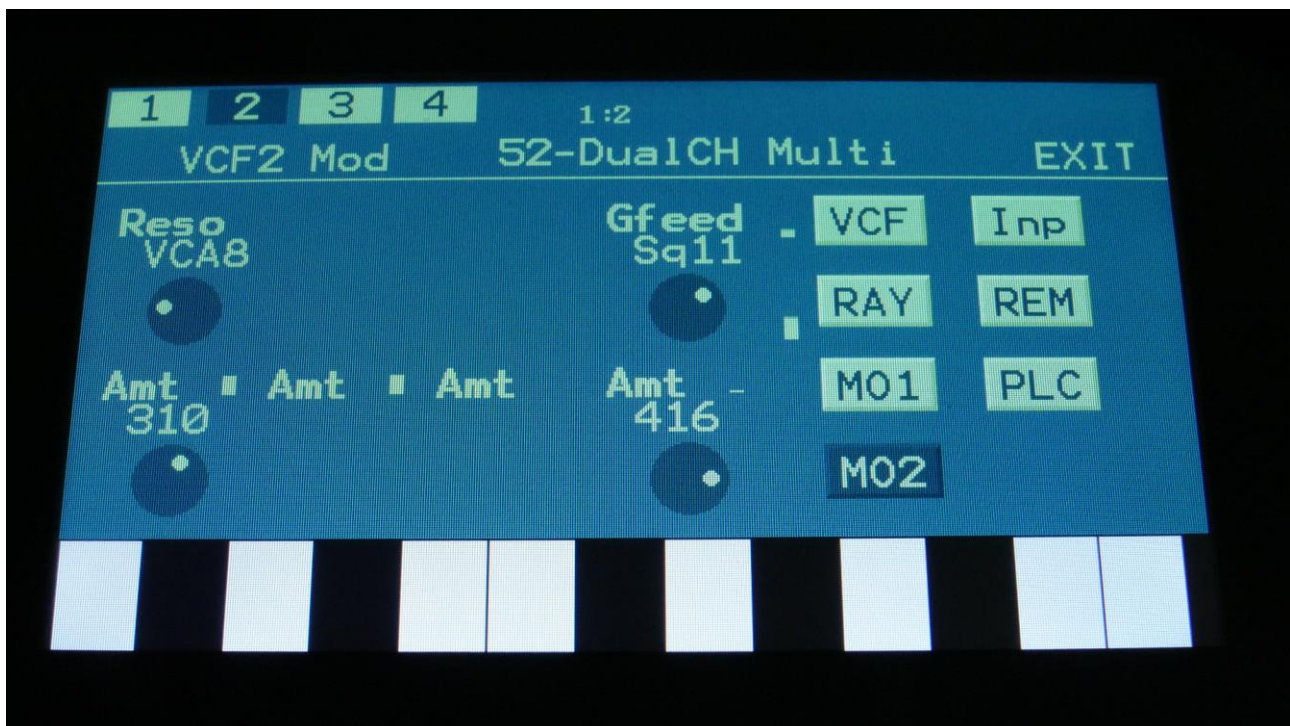

Touch the MO2 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the amount of resonance applied to the filter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

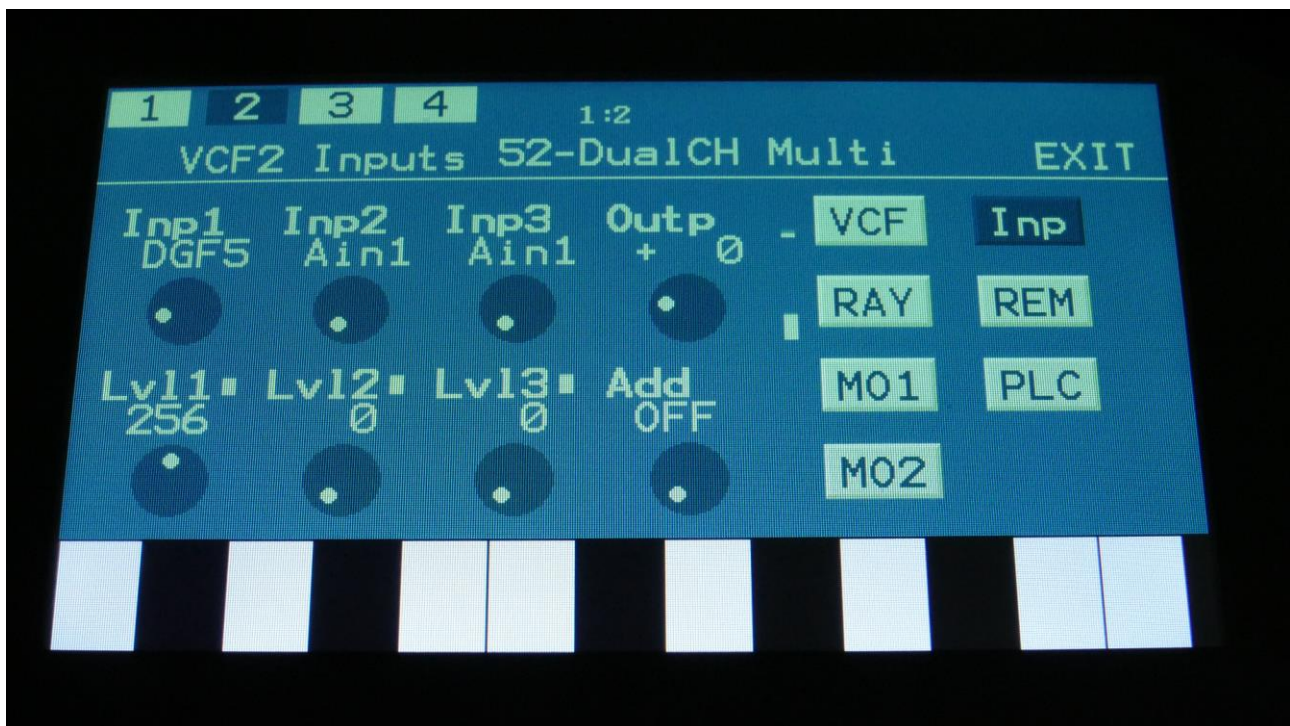

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF1- Single Filter parameters

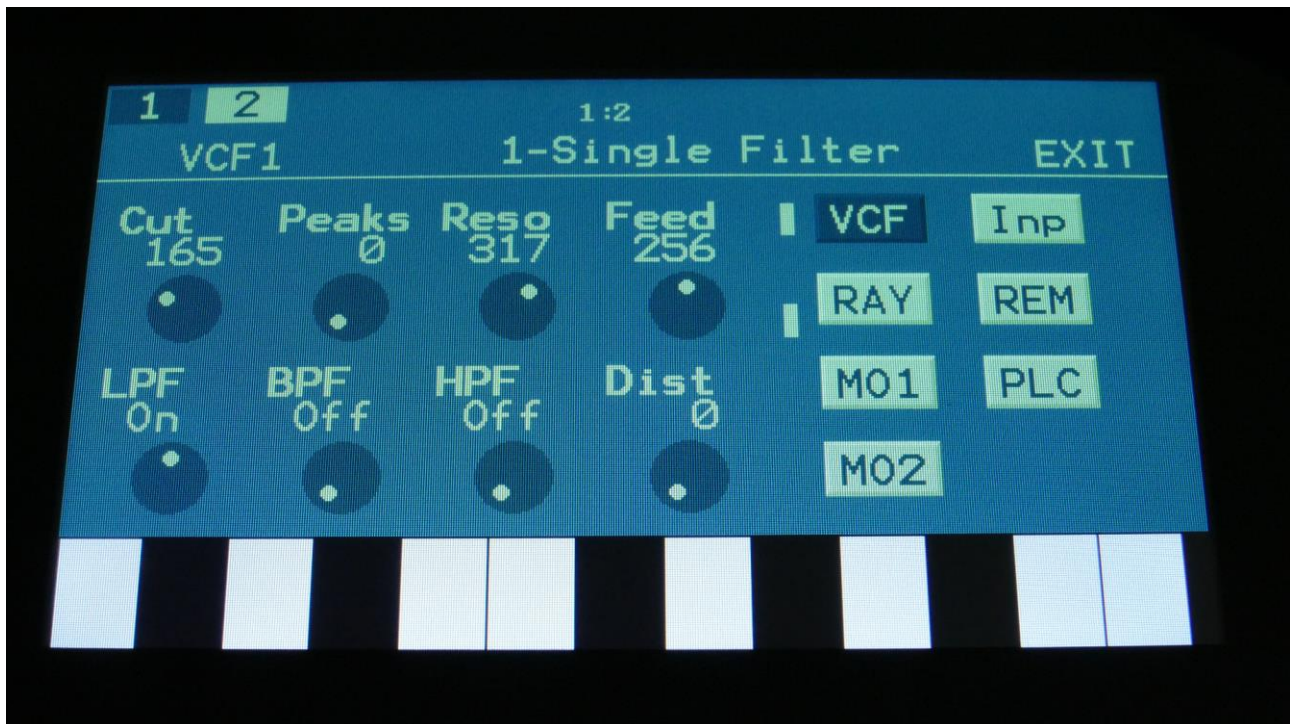

Filterboard 1 and 2 are selected by touching the square fields in the upper left corner of the screen, marked 1 and 2, NOT by the part select buttons.

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Cut: 0 to 511. Adjusts the filter cutoff frequency.


Peaks: 0 to 511. Adjusts the filter cutoff for the second filter block.

Reso: Adjusts the resonance of the filter.

Feed: Adjusts the feedback of the filter. Below 256 means negative feedback, above 256 means positive feedback, 256 means no feedback.

LPF, BPF, HPF: Switches on and off the low pass, band pass and high pass outputs on the filter. At least one of these must be on, to get a sound out of the filter.

Dist: Mix between the clean filter sound, and the filter sound with added analog distortion.

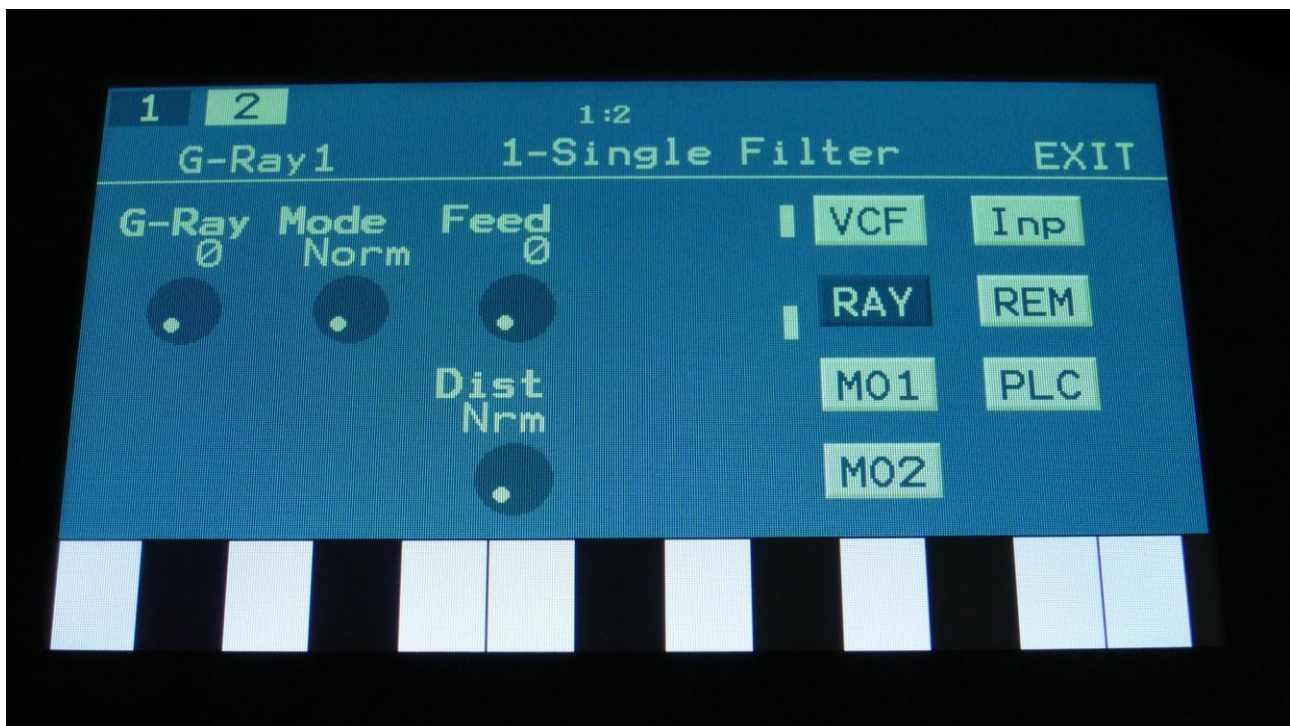

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.

-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)


-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

FmBus: 1 to 8. The audio bus, that will apply the audio signal for FM.

Dist: Selects whether output 2 (Dist) of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes it can get some great effects, when inverting output 2 of the filter, and adjust the Out1/2 mix.

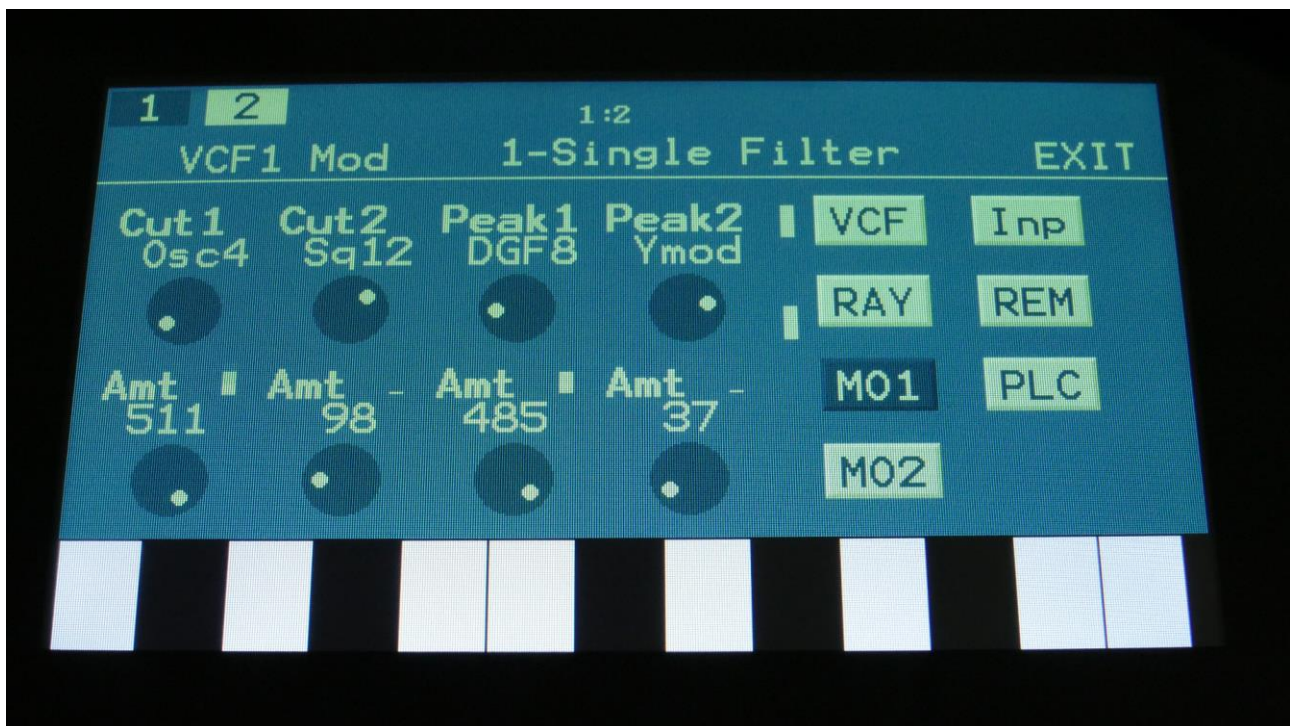

Touch the MO1 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Cut1, Cut2: Will modulate the Cutoff Frequency.

Peak1, Peak2: Will modulate the Peaks parameter.

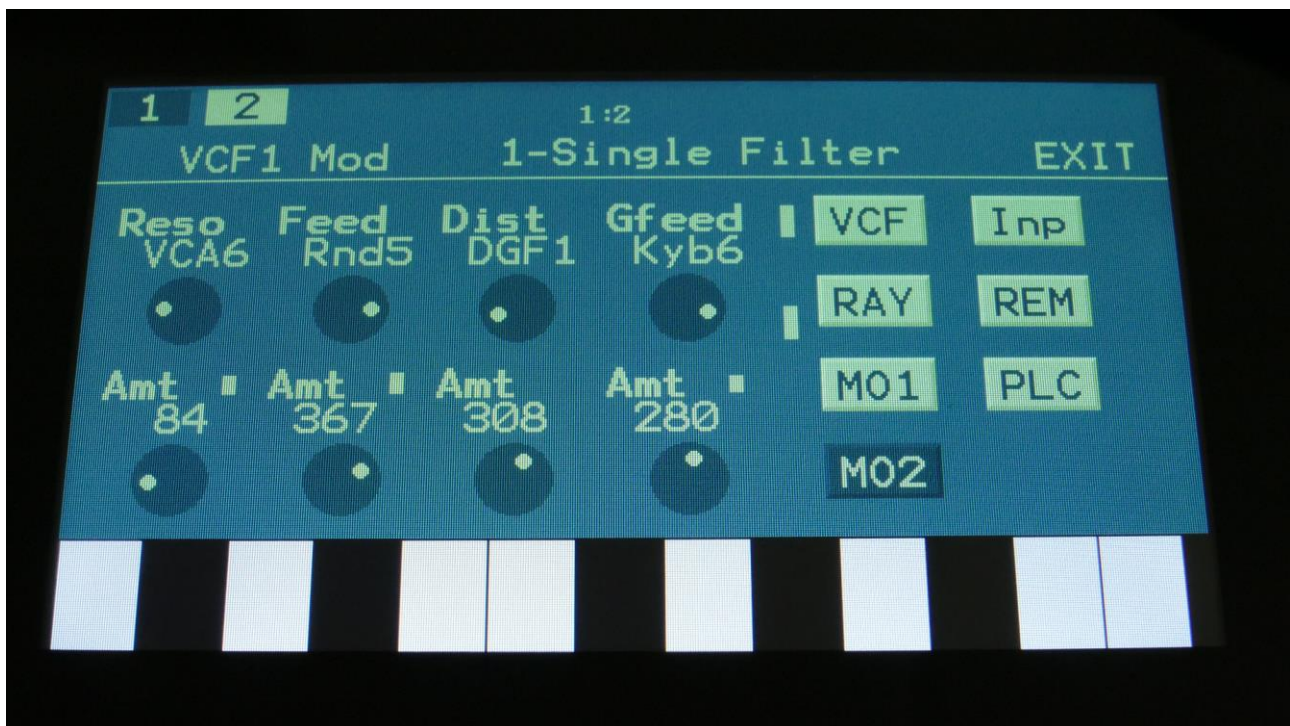

Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the amount of resonance applied to all filters.

Feed: Will modulate the analog filter feedback.

Dist: Will modulate the Dist mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

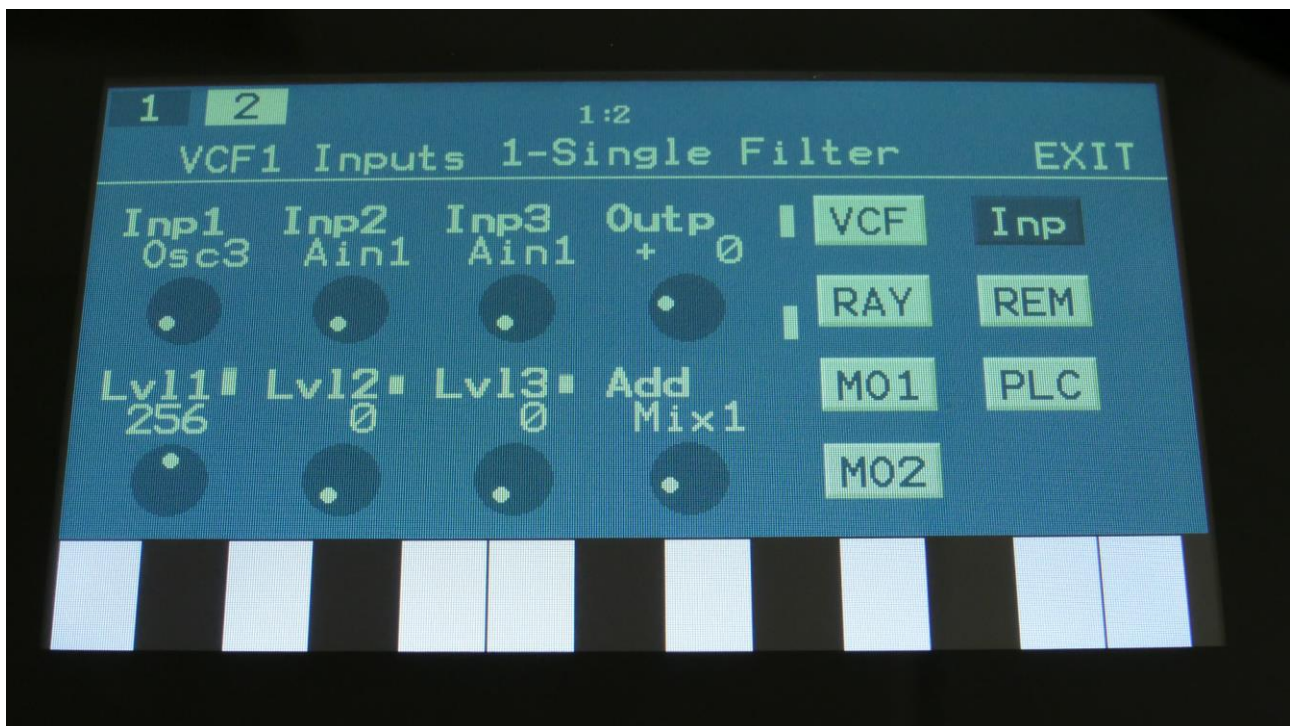

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF2- Dual Filter parameters

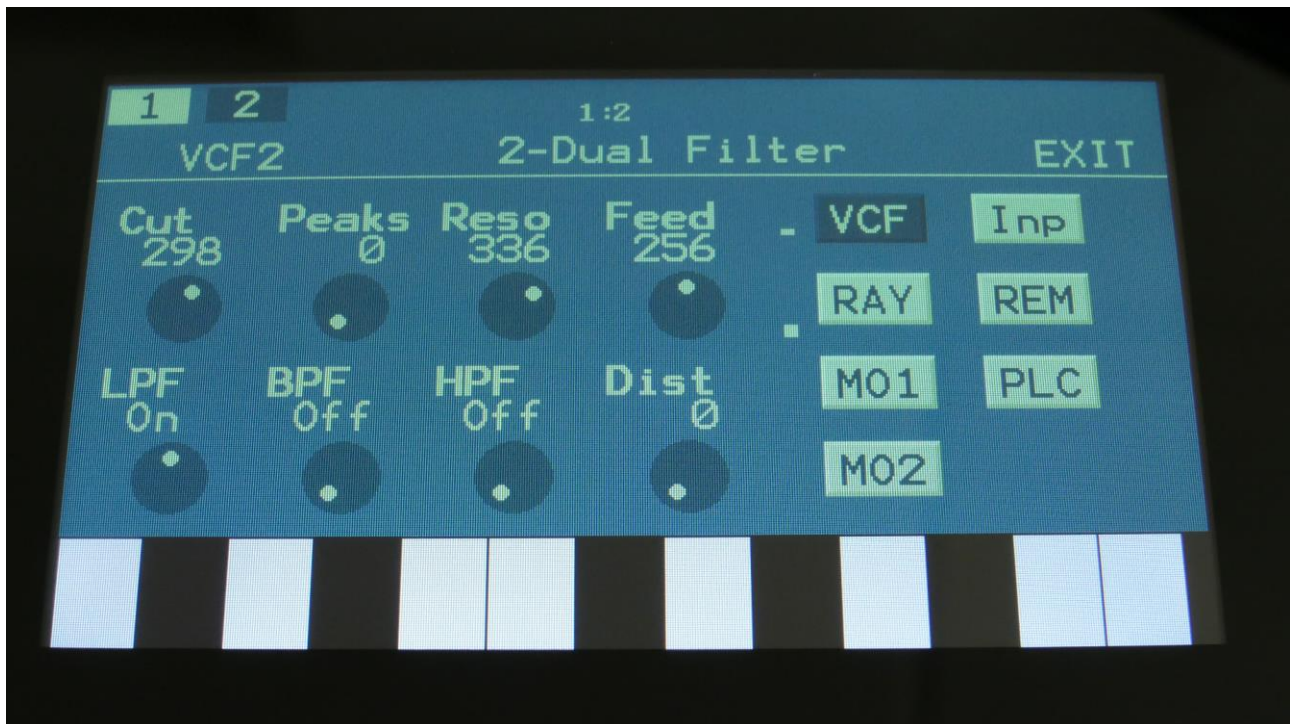

Filterboard 1 and 2 are selected by touching the square fields in the upper left corner of the screen, marked 1 and 2, NOT by the part select buttons.

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Cut: 0 to 511. Adjusts the filter cutoff frequency for filter one, a bandpass filter.


Peaks: 0 to 511. Adjusts the filter cutoff for filter 2.

Reso: Adjusts the resonance of both the filters.

Feed: Adjusts the negative feedback of the filter. 0 to 511.

LPF, BPF, HPF: Switches on and off the low pass, band pass and high pass outputs of filter 2. Filter 1, which is a band pass filter, is always on.

Dist: Mix between the clean filter sound, and the filter sound with added analog distortion.

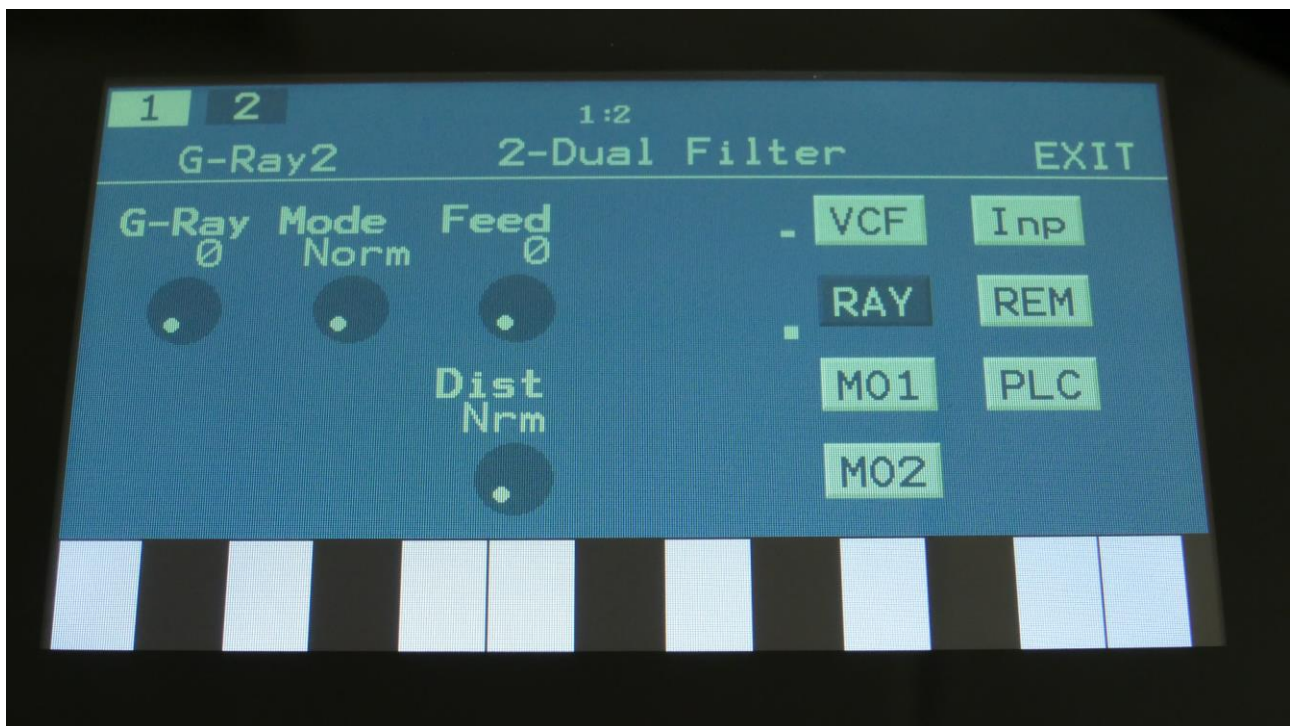

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.


-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

Dist: Selects whether output 2 (Dist) of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes it can get some great effects, when inverting output 2 of the filter, and adjust the Out1/2 mix.

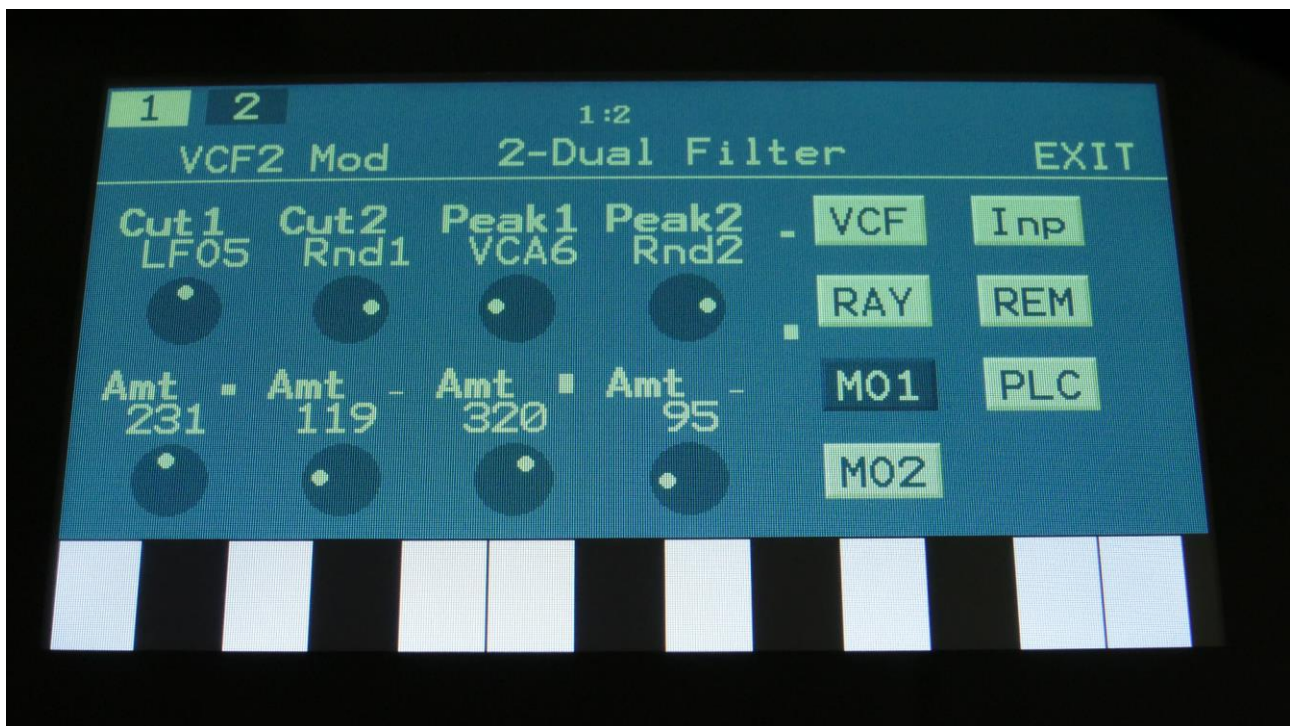

Touch the MO1 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Cut1, Cut2: Will modulate the Cutoff Frequency.

Peak1, Peak2: Will modulate the Peaks parameter.

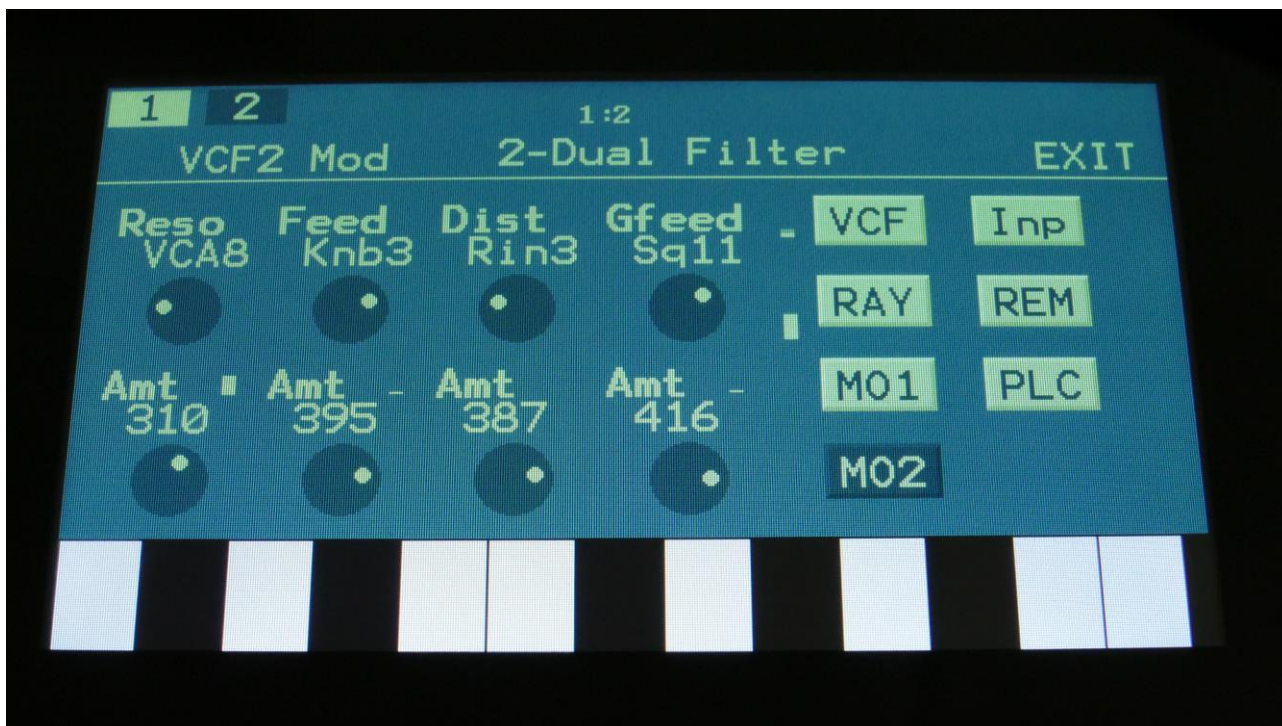

Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the amount of resonance applied to all filters.

Feed: Will modulate the analog filter feedback.

Dist: Will modulate the Dist mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

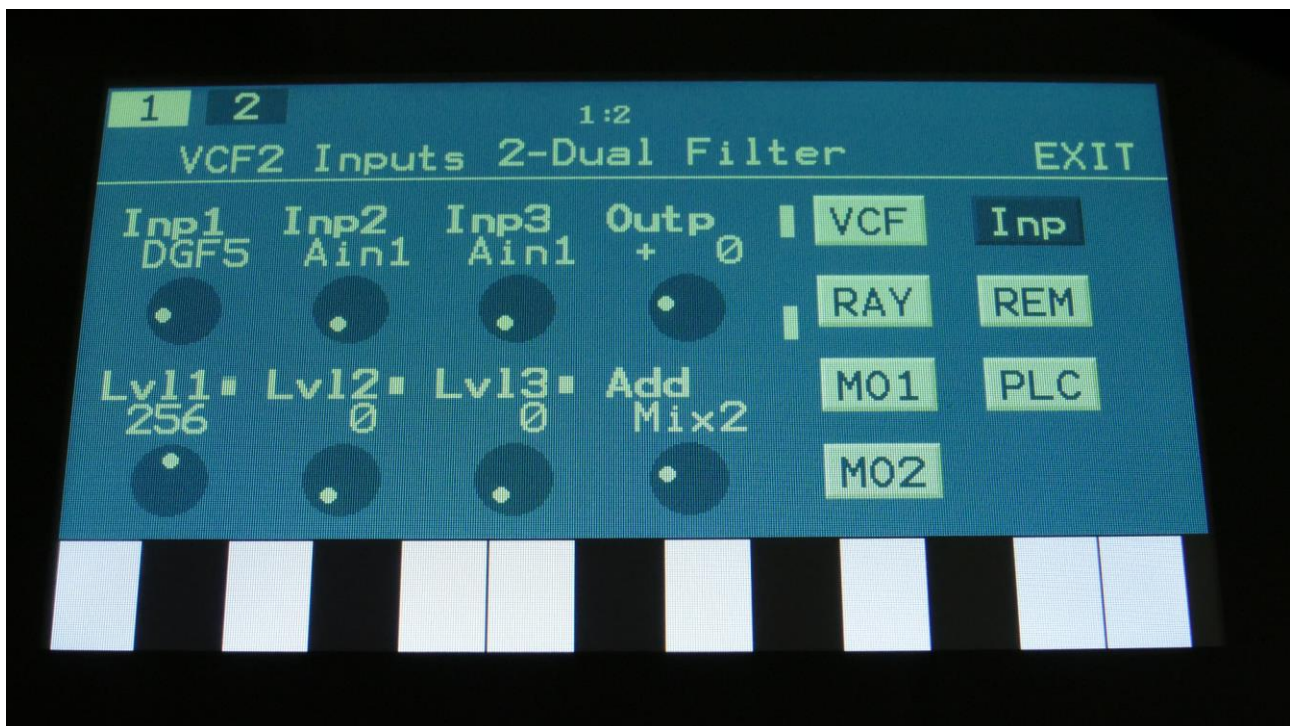

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF3- Trippple Filter parameters

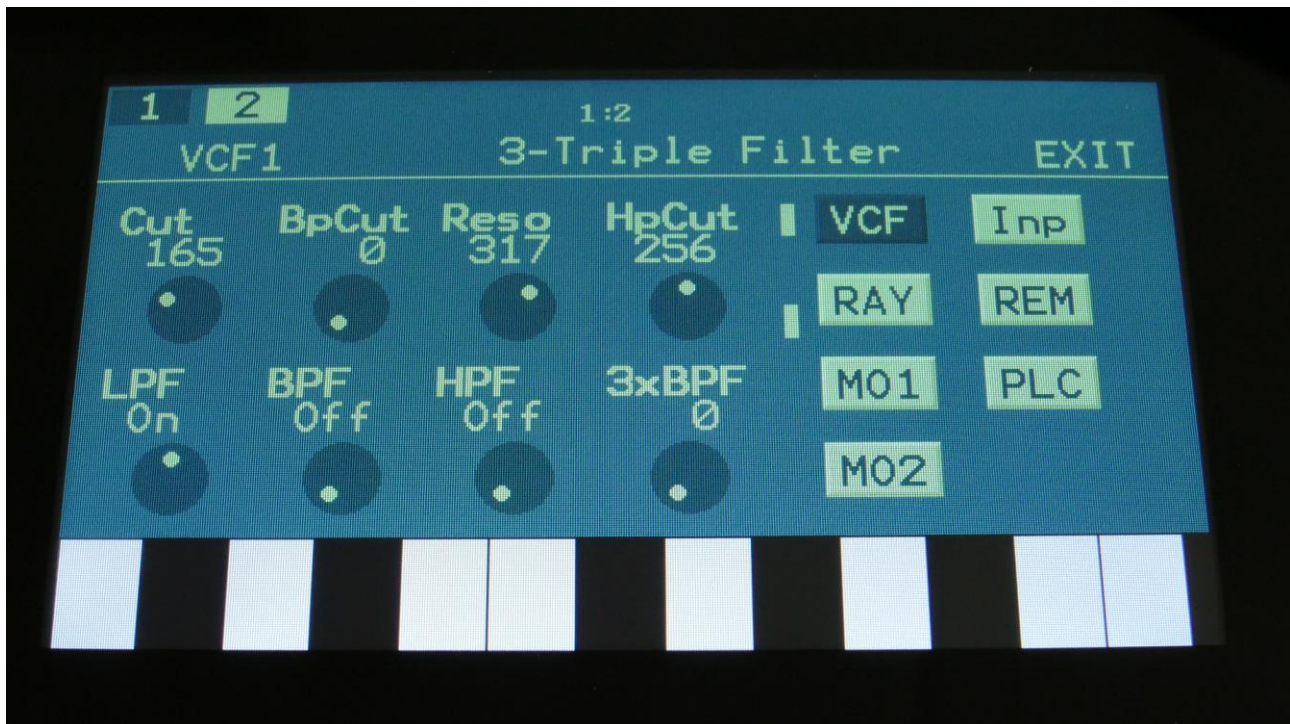

Filterboard 1 and 2 are selected by touching the square fields in the upper left corner of the screen, marked 1 and 2, NOT by the part select buttons.

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Cut: 0 to 511. Adjusts the filter cutoff frequency for filter1, the LPF.


BpCut: 0 to 511. Adjusts the filter cutoff for filter 2, the BPF.

Reso: Adjusts the resonance of all the filters.

HpCut: Adjusts the filter cutoff for filter 3, the HPF.

LPF, BPF, HPF: Switches on and off the low pass, band pass and high pass outputs of filter 1, 2 and 3. The trippple filter has 3 separate filters, to generate each of these outputs, and their cutoff frequency can be separately adjusted.

3xBPF: Mix between LPF + BPF + HPF and 3x BPF.

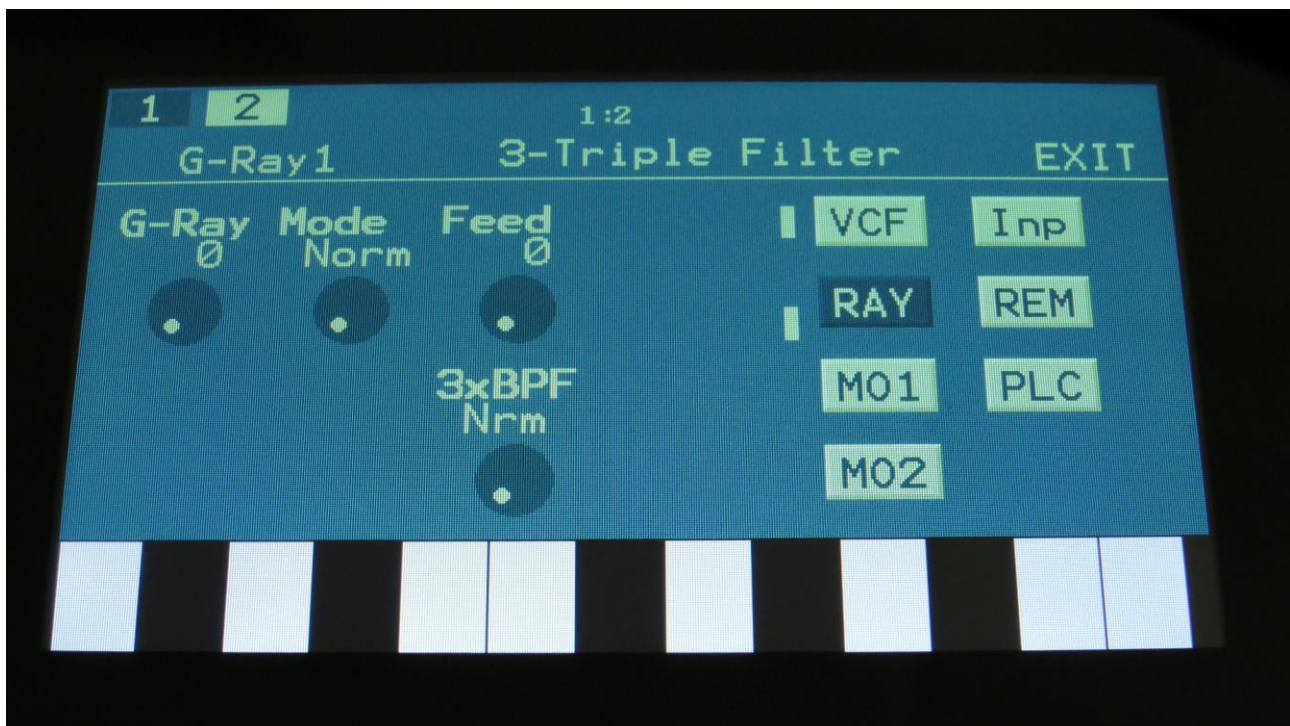

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.


-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

3xBPF: Selects whether output 2 (3xBPF) of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes it can get some great effects, when inverting output 2 of the filter, and adjust the Out1/2 mix.

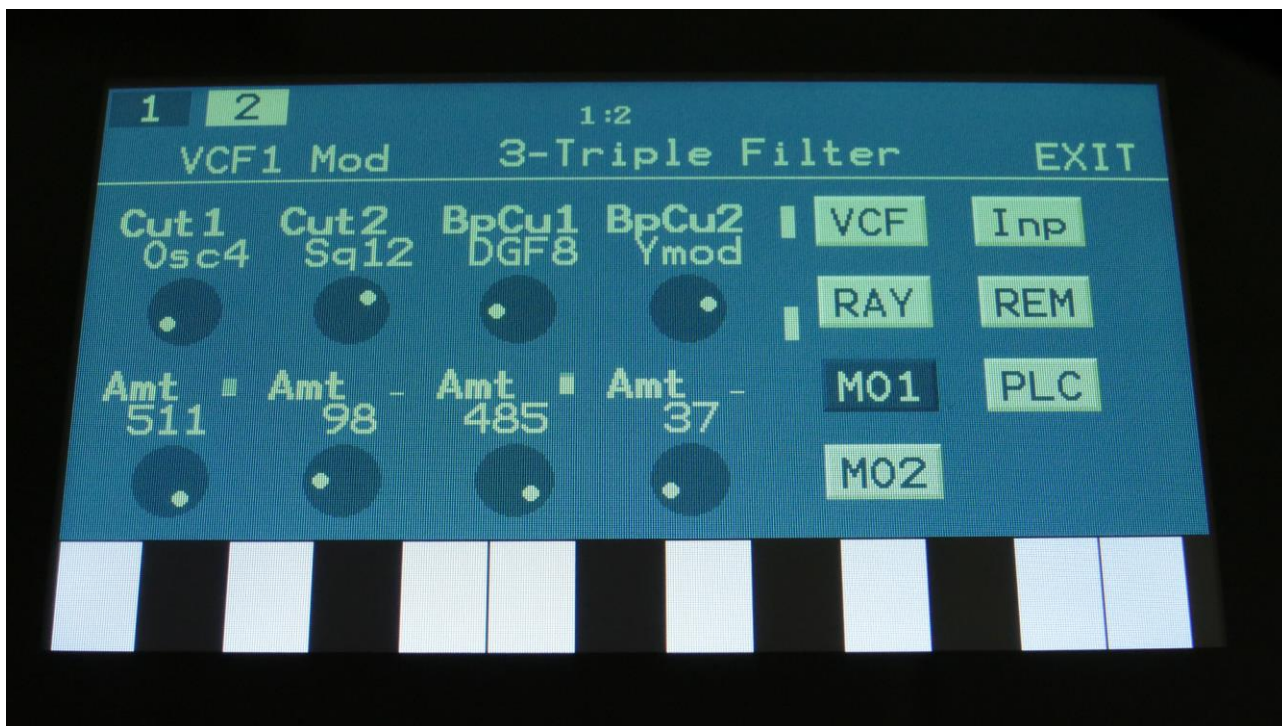

Touch the MO1 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Cut1, Cut2: Will modulate the Cutoff Frequency of the LPF.

BpCu1, BpCu2: Will modulate the Cutoff Frequency of the BPF.

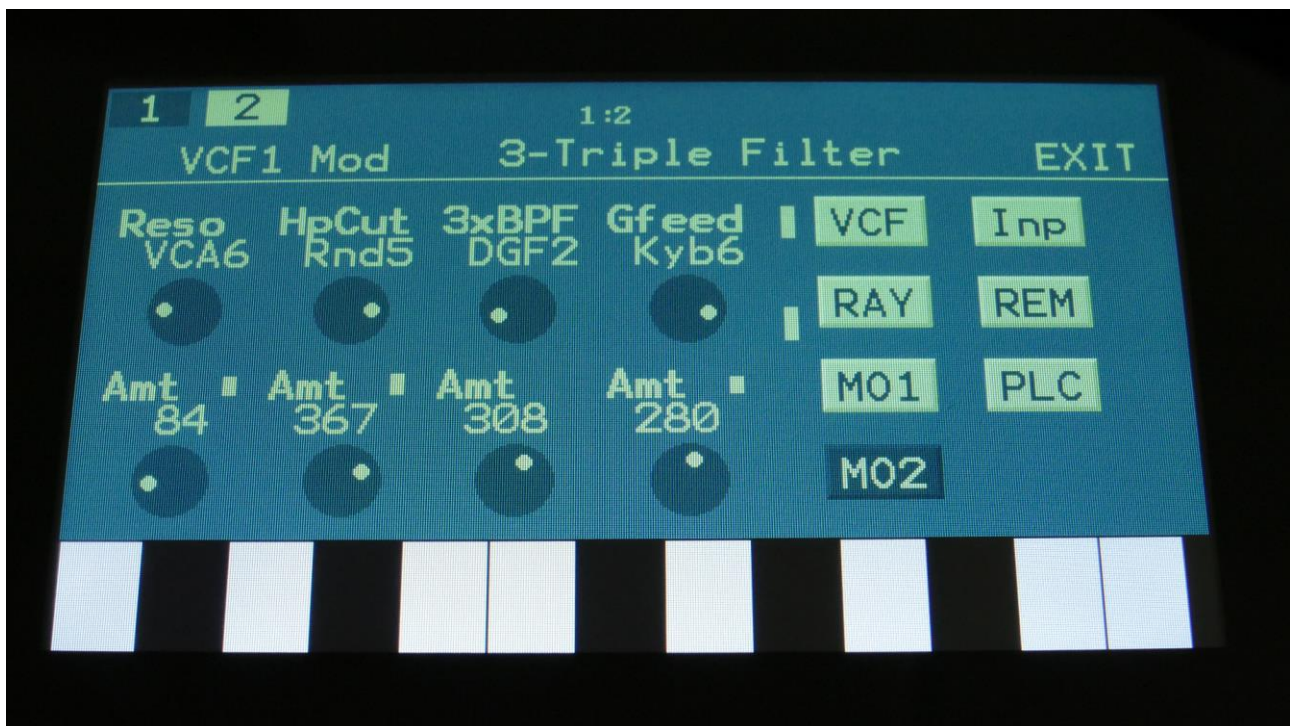

Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the amount of resonance applied to all filters.

HpCut: Will modulate the Cutoff Frequency of the HPF.

3xBPF: Will modulate the 3xBPF mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

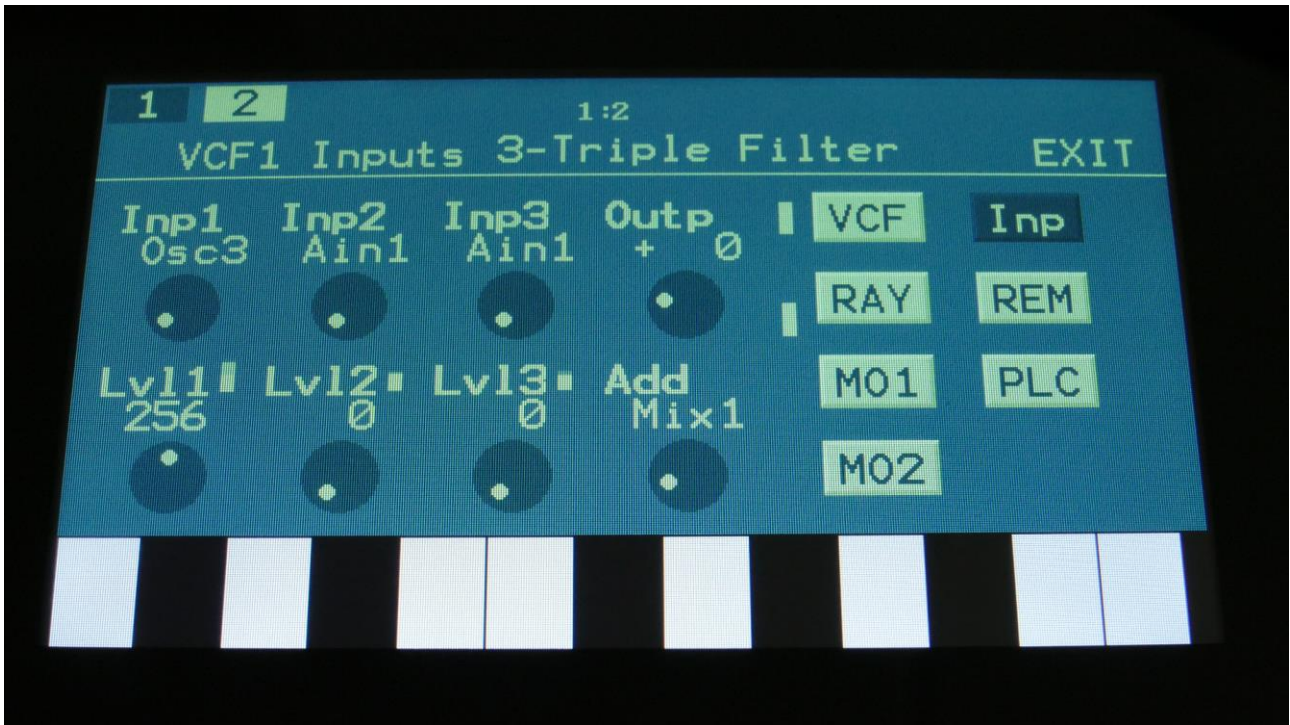

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF4- Gman's First Filter parameters

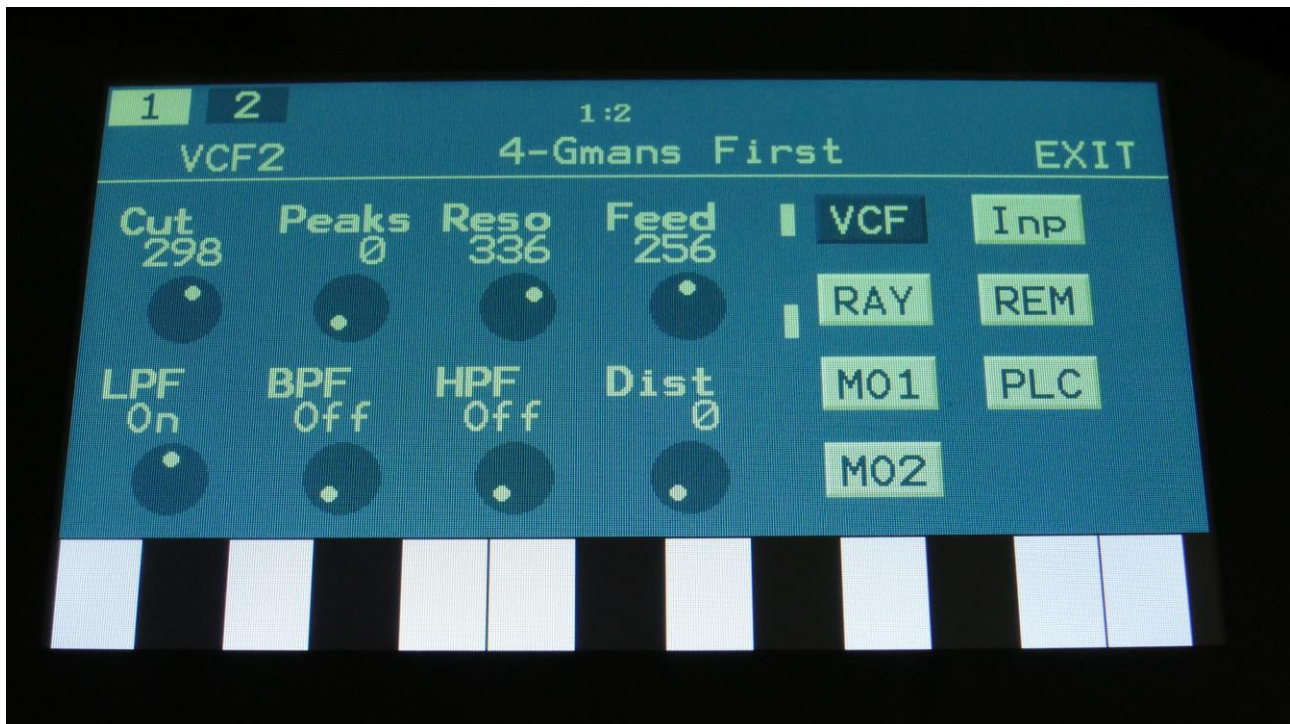

Filterboard 1 and 2 are selected by touching the square fields in the upper left corner of the screen, marked 1 and 2, NOT by the part select buttons.

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Cut: 0 to 511. Adjusts the filter cutoff frequency.


Peaks: 0 to 511. Adjusts the filter cutoff for the second filter block.

Reso: Adjusts the resonance of the filter.

Feed: Adjusts the feedback of the filter. Below 256 means negative feedback, above 256 means positive feedback, 256 means no feedback.

LPF, BPF, HPF: Switches on and off the low pass, band pass and high pass outputs on the filter. At least one of these must be on, to get a sound out of the filter.

Dist: Mix between the clean filter sound, and the filter sound with added analog distortion.

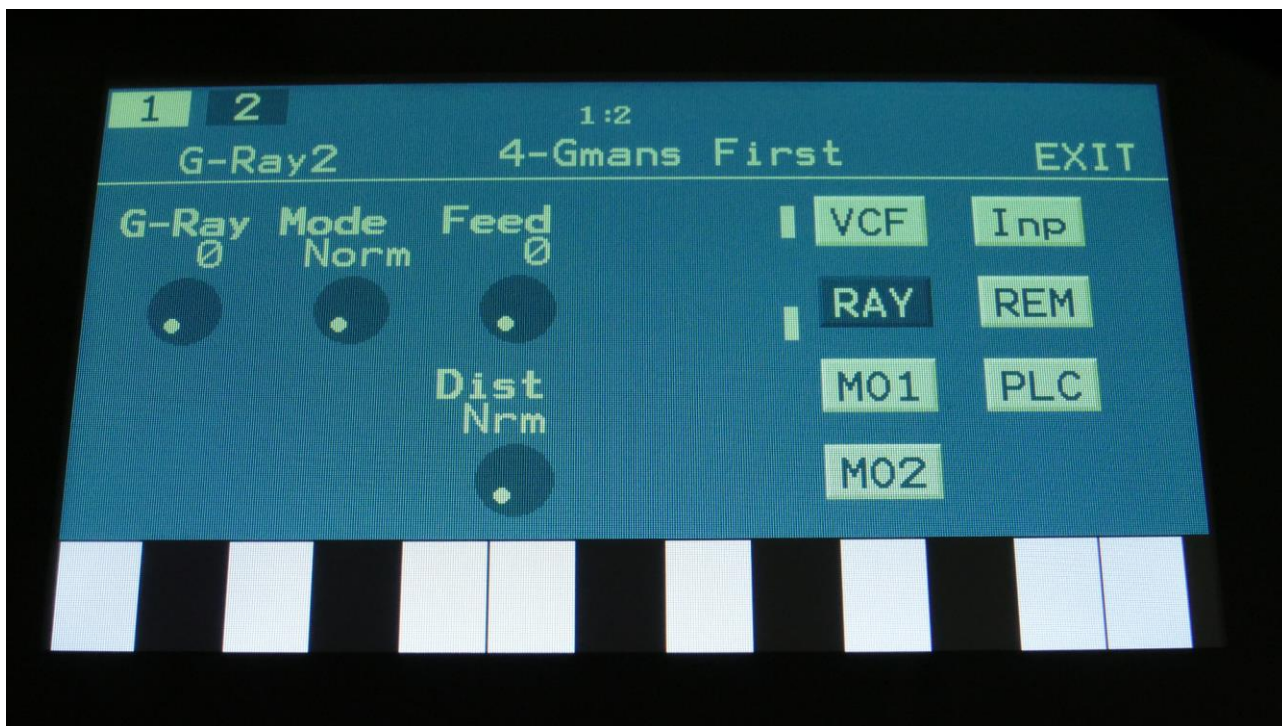

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.


-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

Dist: Selects whether output 2 (Dist) of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes it can get some great effects, when inverting output 2 of the filter, and adjust the Out1/2 mix.

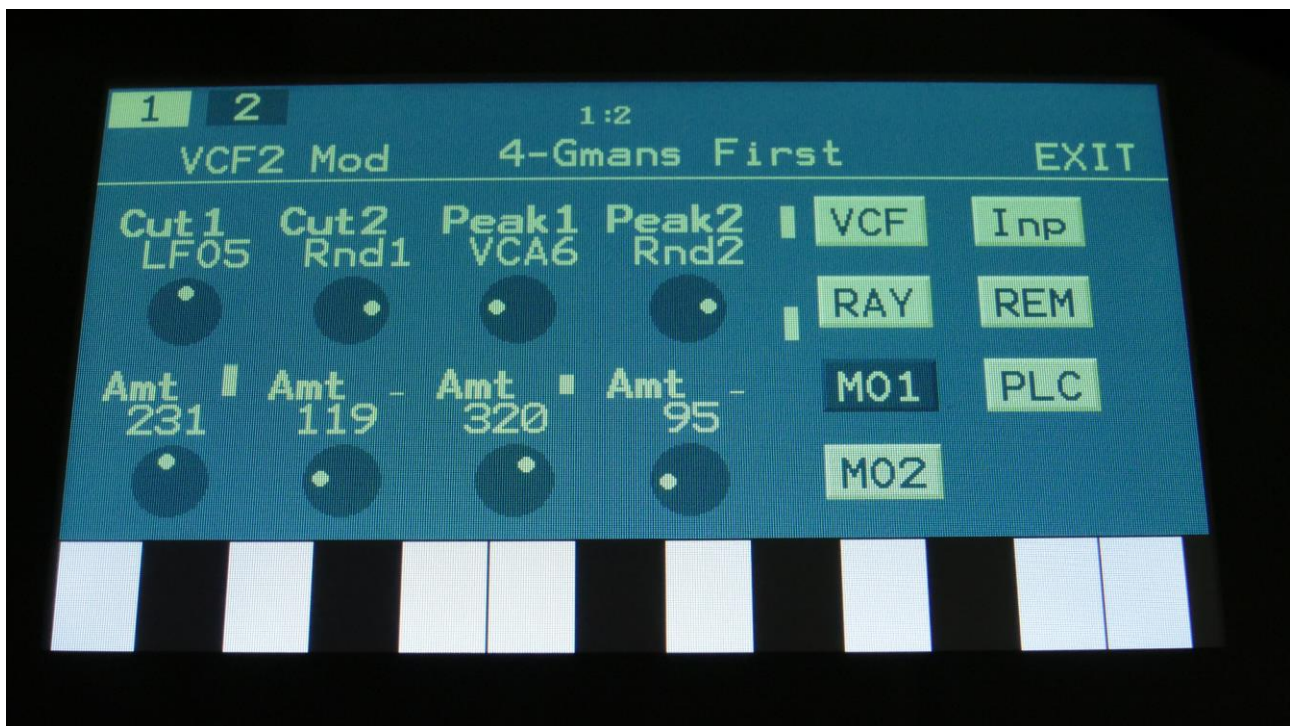

Touch the MO1 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Cut1, Cut2: Will modulate the Cutoff Frequency.

Peak1, Peak2: Will modulate the Peaks parameter.

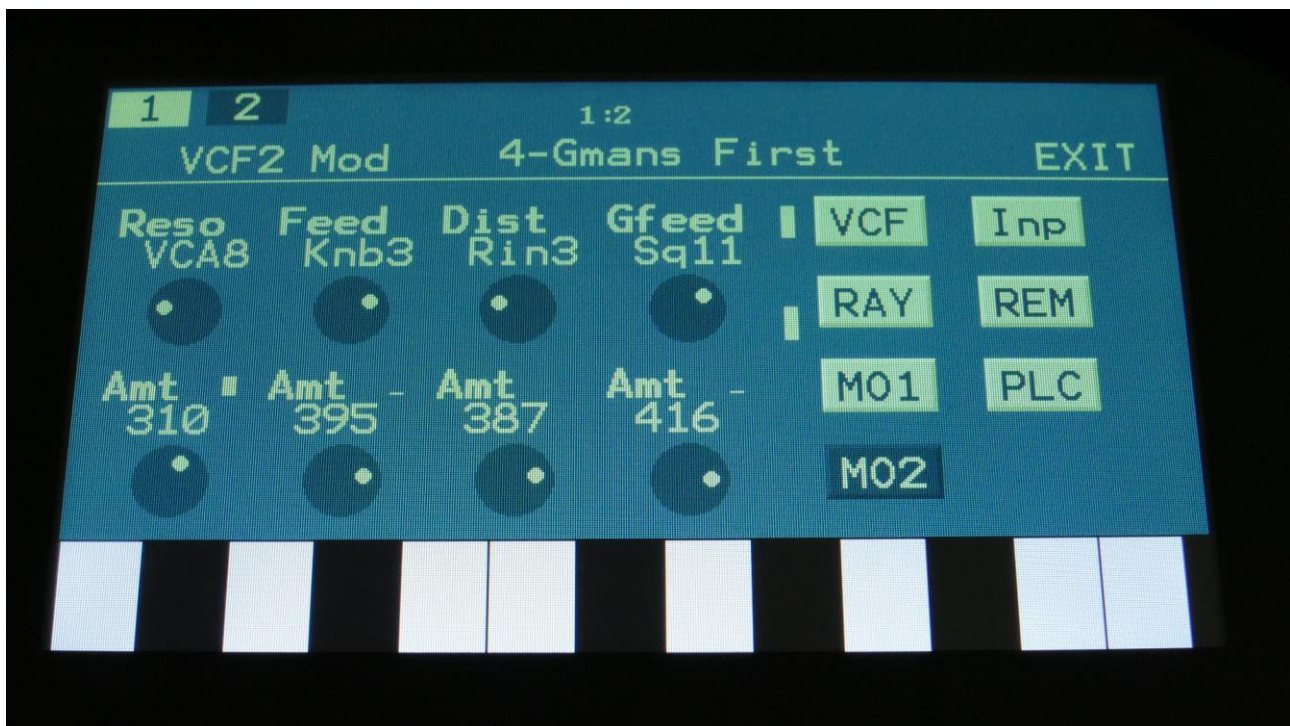

Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the amount of resonance applied to all filters.

Feed: Will modulate the analog filter feedback.

Dist: Will modulate the Dist mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

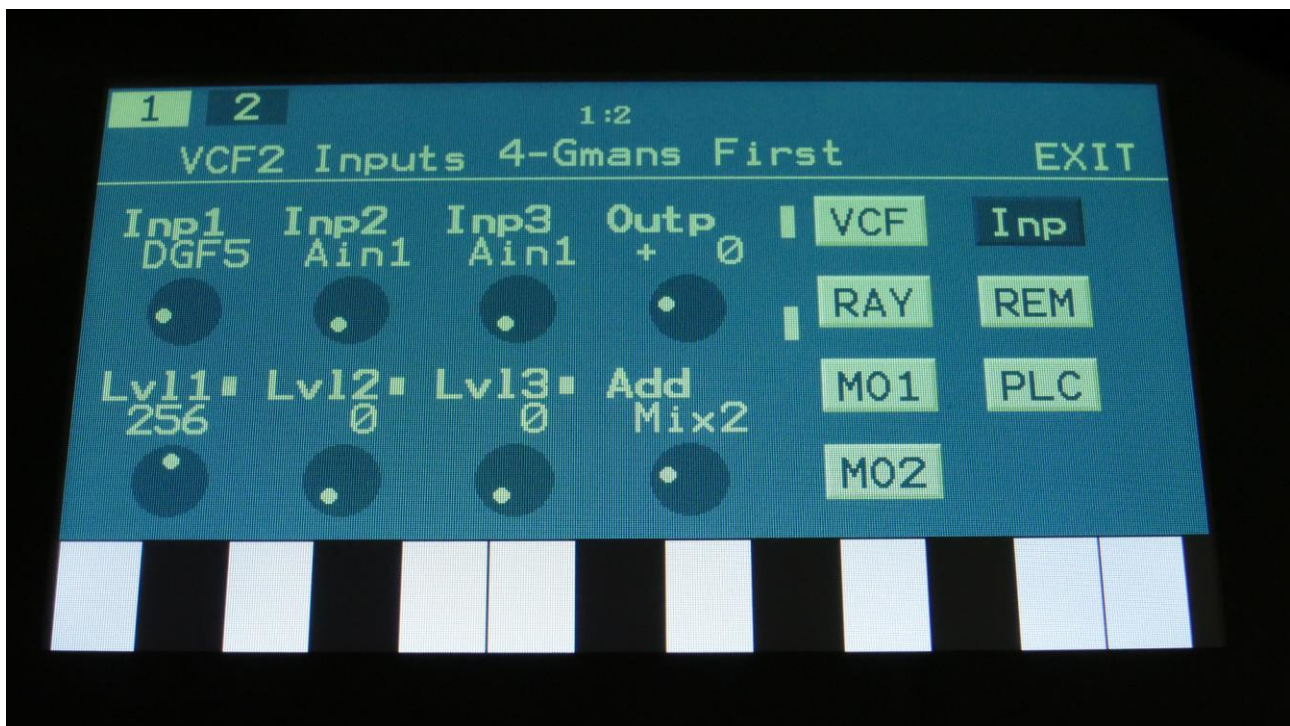

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF5- MiniProphet Filter parameters

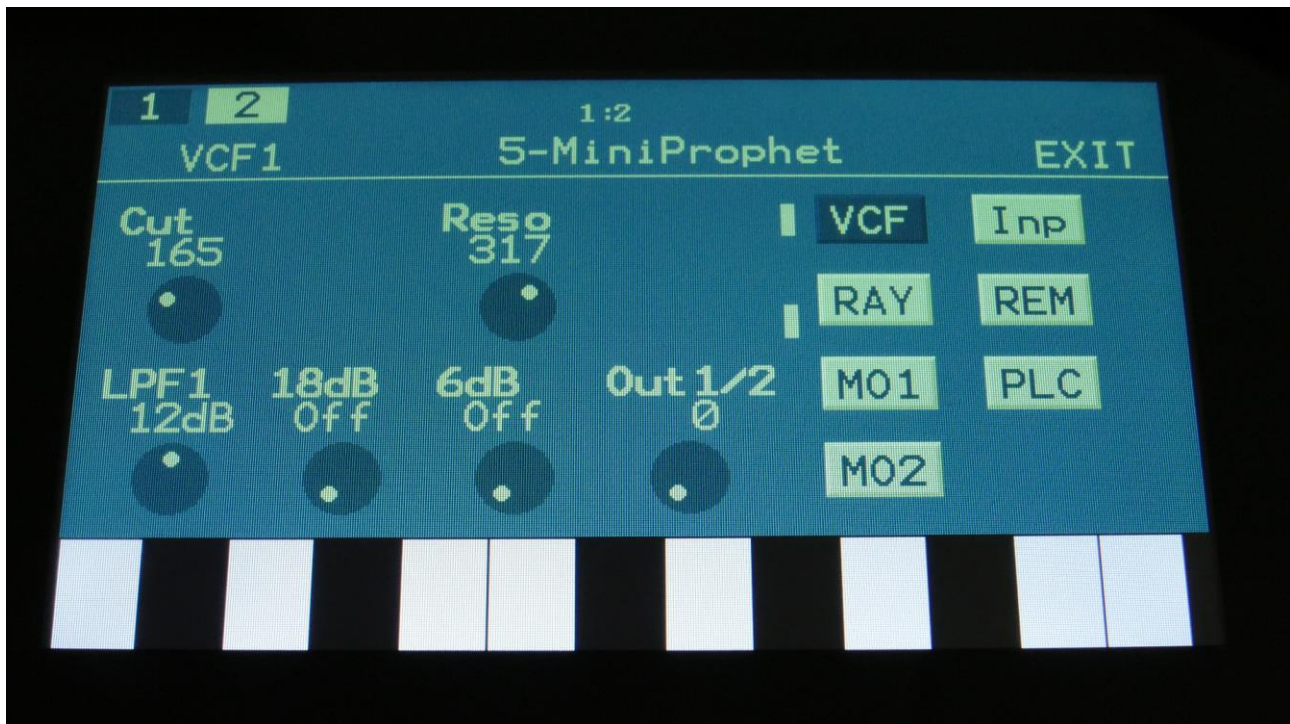

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Cut: 0 to 511. Adjust the filter cutoff frequency.


Reso: 0 to 511. Adjusts the resonance of the filter.

LPF1: Switches filter output 1 between 24dB and 12dB steepness.

18dB: Switches the 18dB lowpass block on filter output 2 on or off. The phase of this is inverted compared to the phase of the 12 and 24 dB outputs on output 1, so when mixing with these, different filter modes can be obtained.

6dB: Switches the 6dB lowpass block on filter output 2 on or off. The phase of this is inverted compared to the phase of the 12 and 24 dB outputs on output 1, so when mixing with these, different filter modes can be obtained.

Out1/2: Mixes between the filter outputs 1 (12dB/24dB) and 2 (Inversed 6dB/18dB).

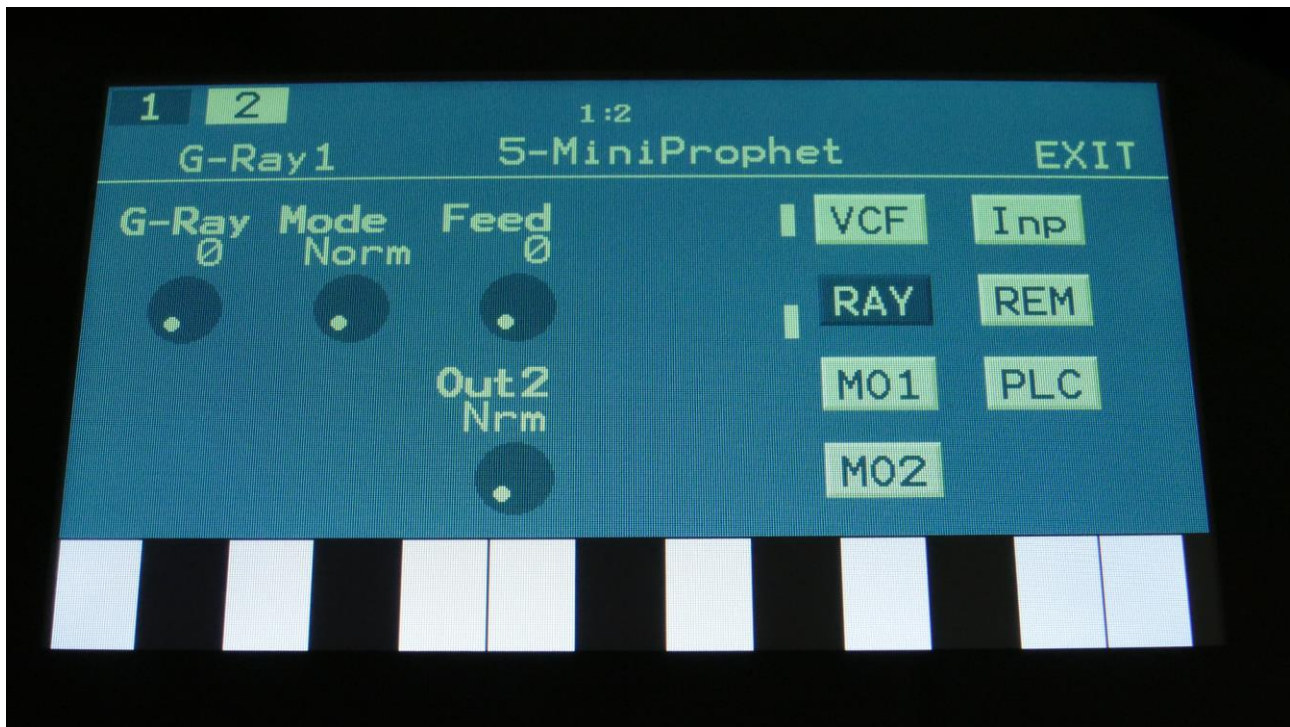

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.


-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

Out2: Selects whether output 2 of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes it can get some great effects, when inverting output 2 of the filter, and adjust the Out1/2 mix.

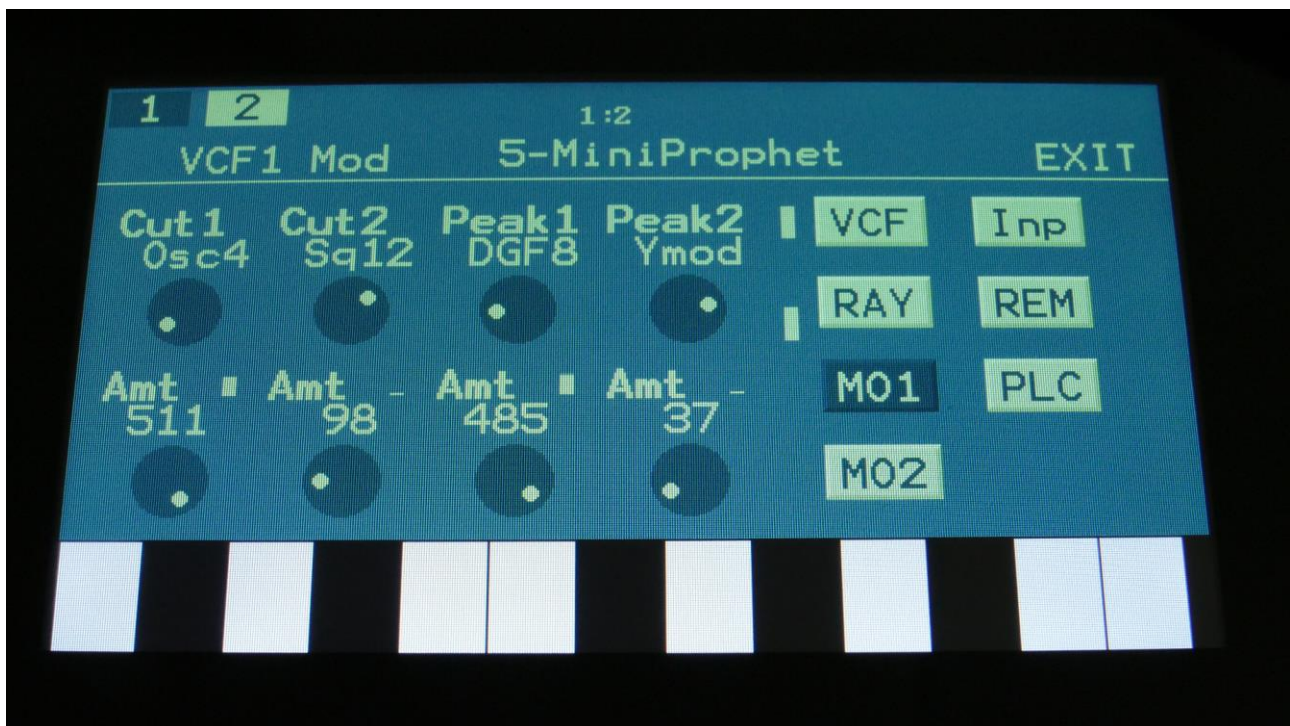

Touch the MO1 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Cut1, Cut2: Will modulate the Cutoff Frequency.

Peak1, Peak2: Has no function on this filter board.

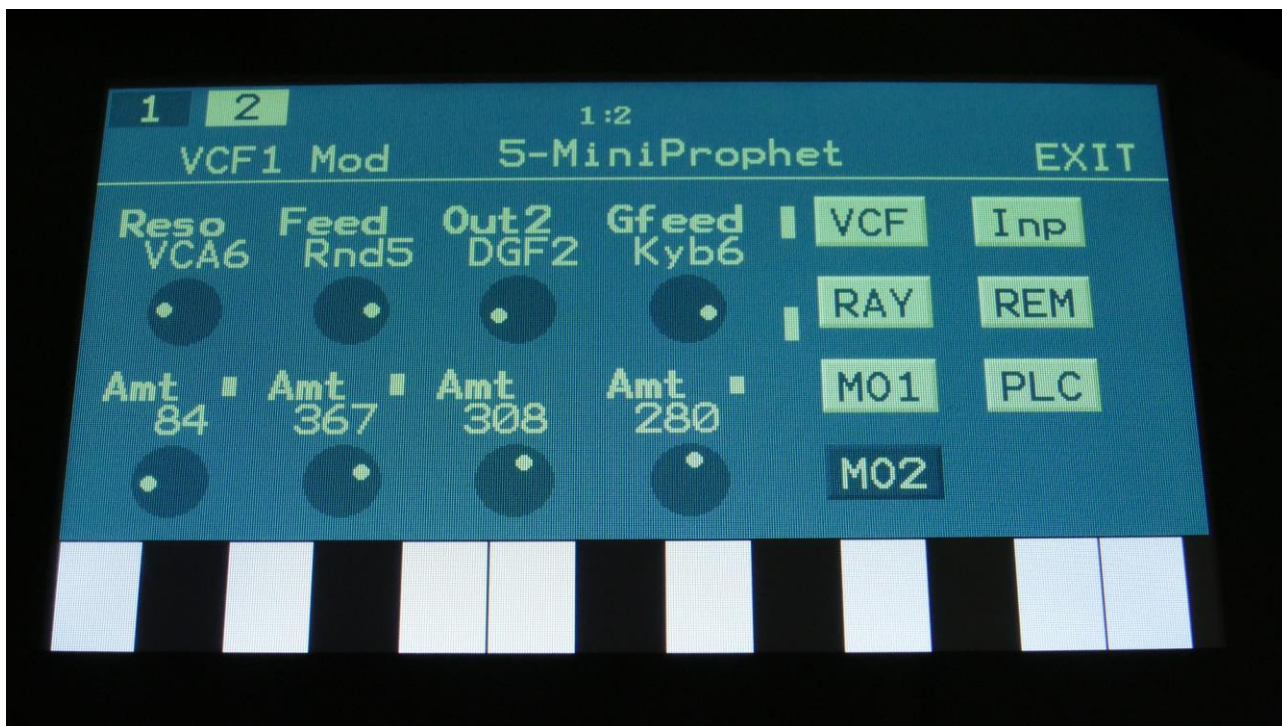

Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the amount of resonance applied to all filters.

Feed: Has no function on this filter board.

Dist: Will modulate the Dist mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

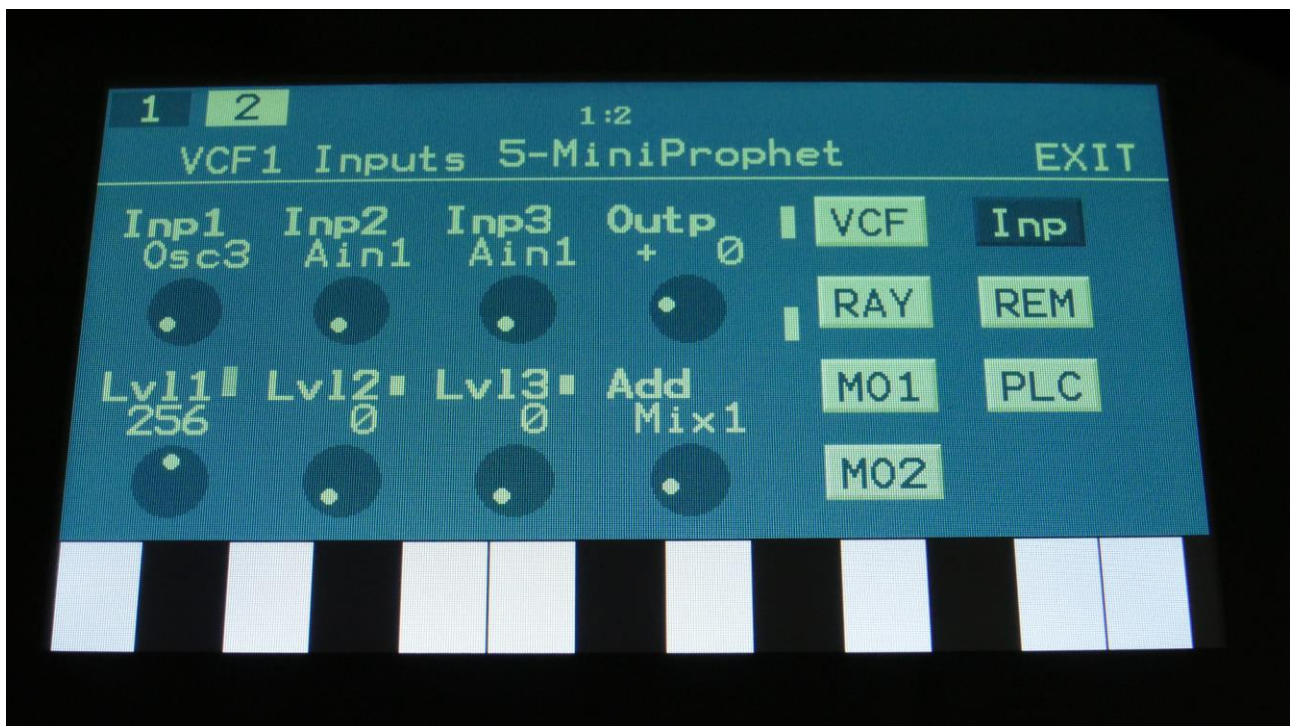

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF6- SP Filter parameters

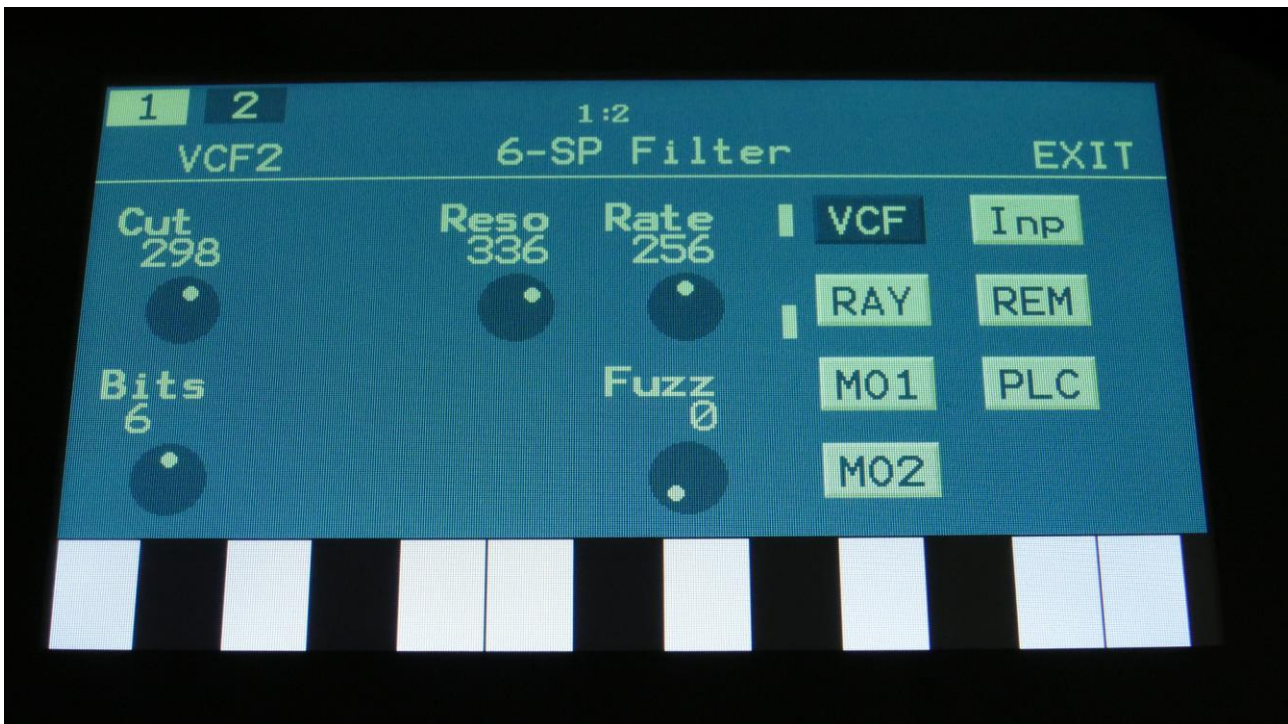

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Cut: 0 to 511. Adjust the filter cutoff frequency.

Reso: 0 to 511. Adjusts the resonance of the filter.

Rate: Sample Rate. 0 to 60 KHz.

Bits: Bit depth. 12 or 6 bit.

Fuzz: Adds an analog Fuzz effect, when turned up.

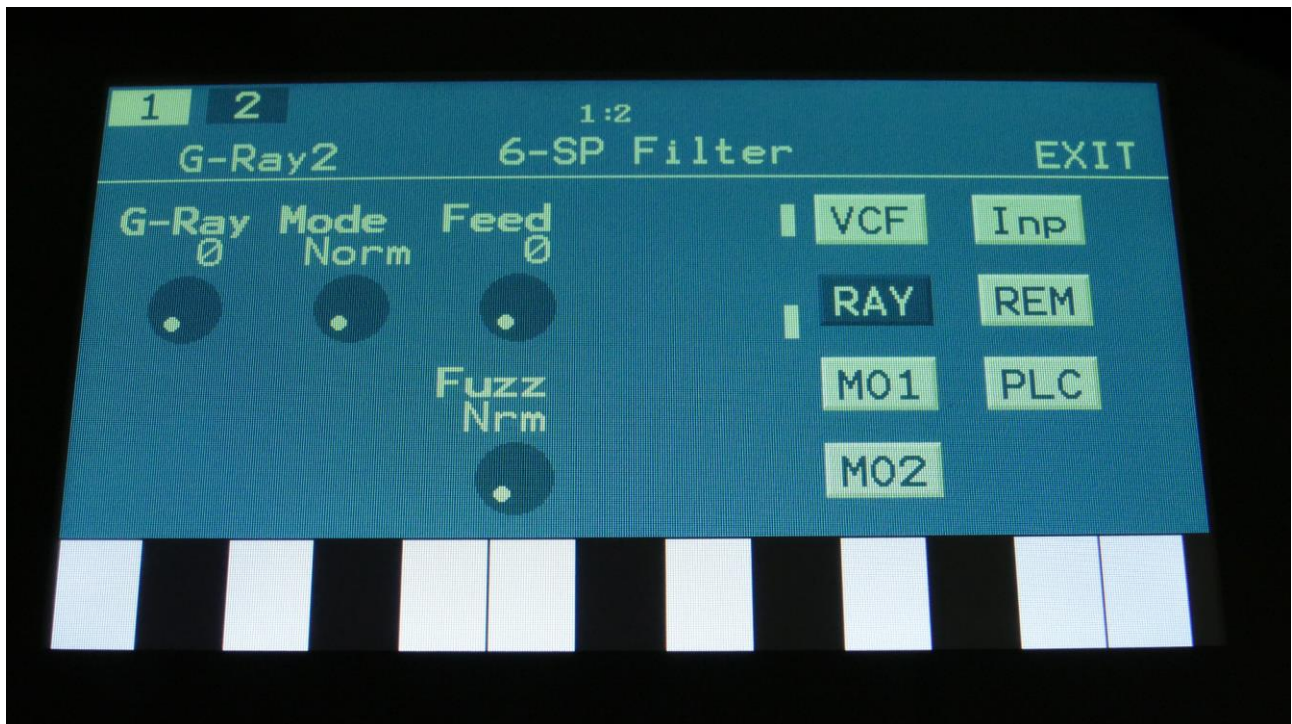

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.


-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

Fuzz: Selects whether output 2 (Fuzz) of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes it can get some great effects, when inverting output 2 of the filter, and adjust the Out1/2 mix.

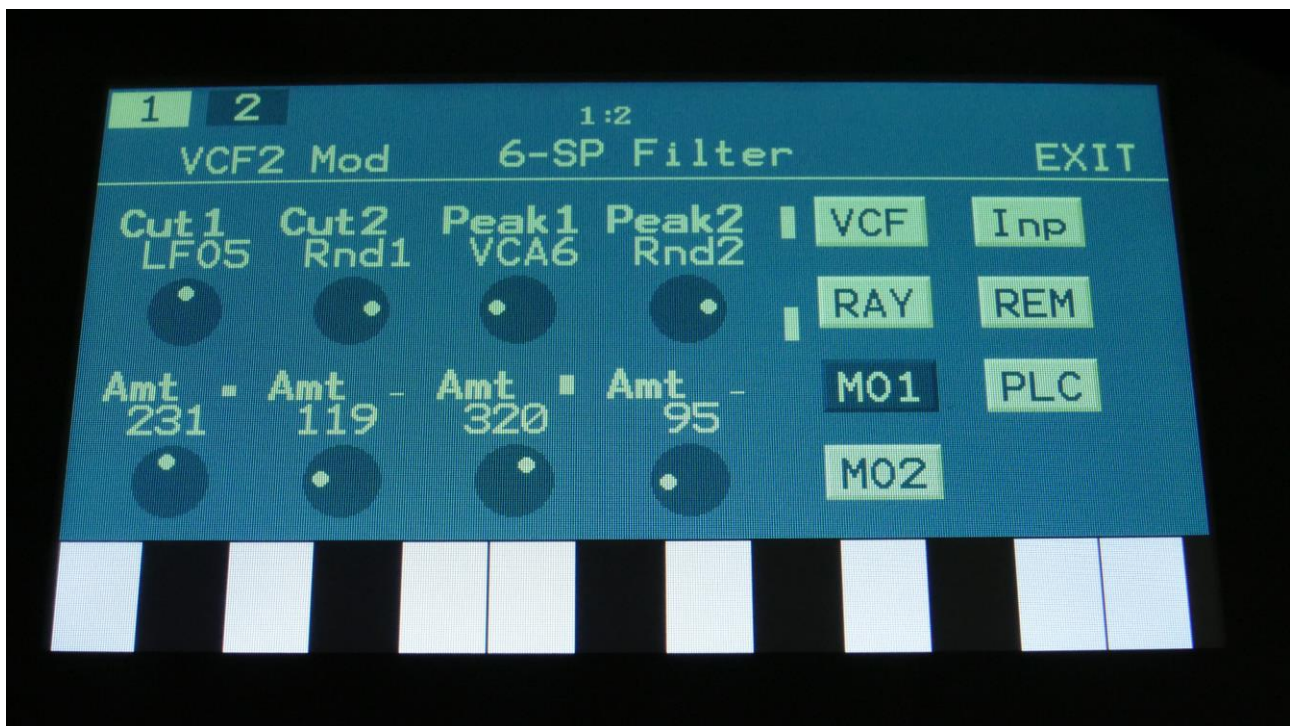

Touch the MO1 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Cut1, Cut2: Will modulate the Cutoff Frequency.

Peak1, Peak2: Has no function on this filter board.

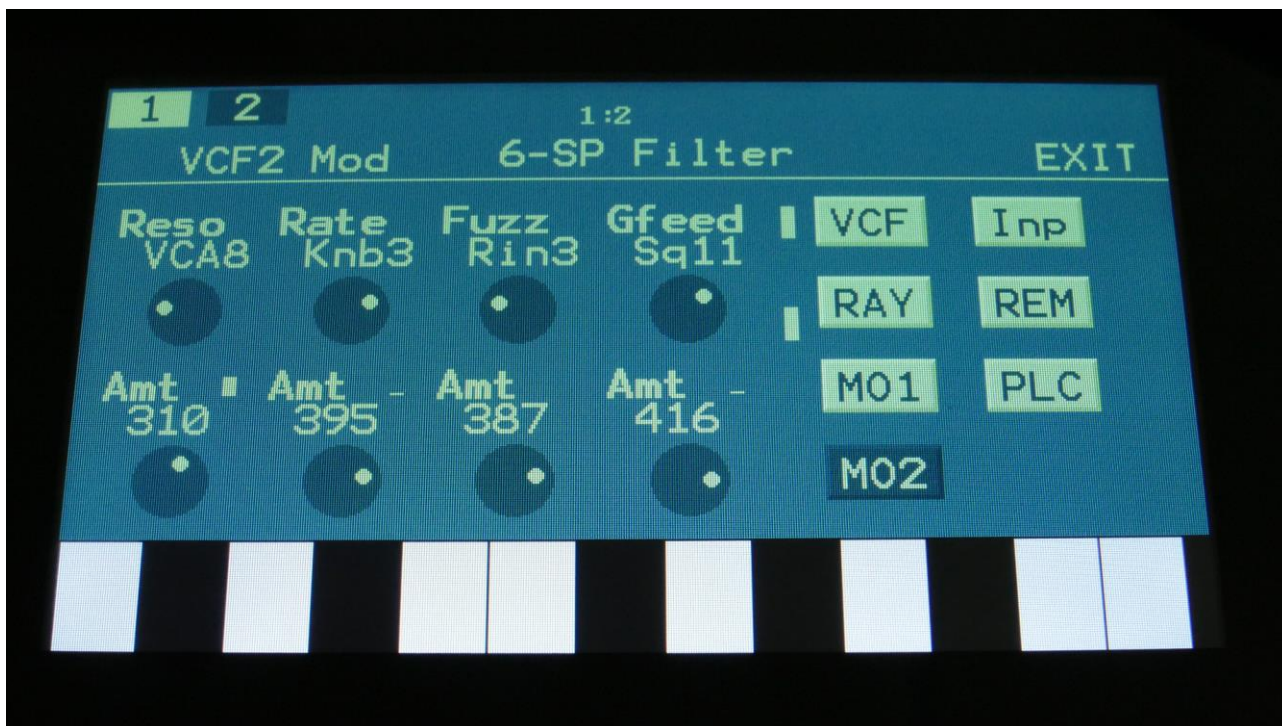

Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the amount of resonance applied to all filters.

Rate: Will modulate the sample Rate.

Fuzz: Will modulate the Fuzz mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

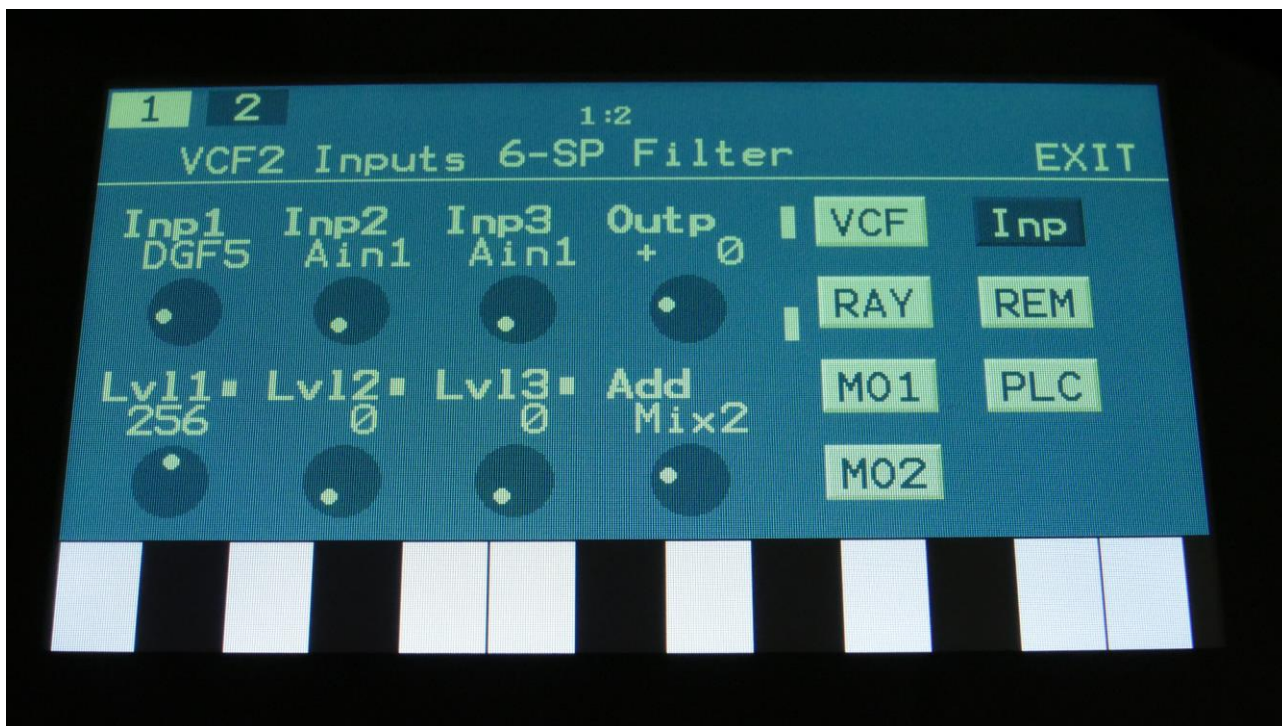

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF7- Tubaz Filter parameters

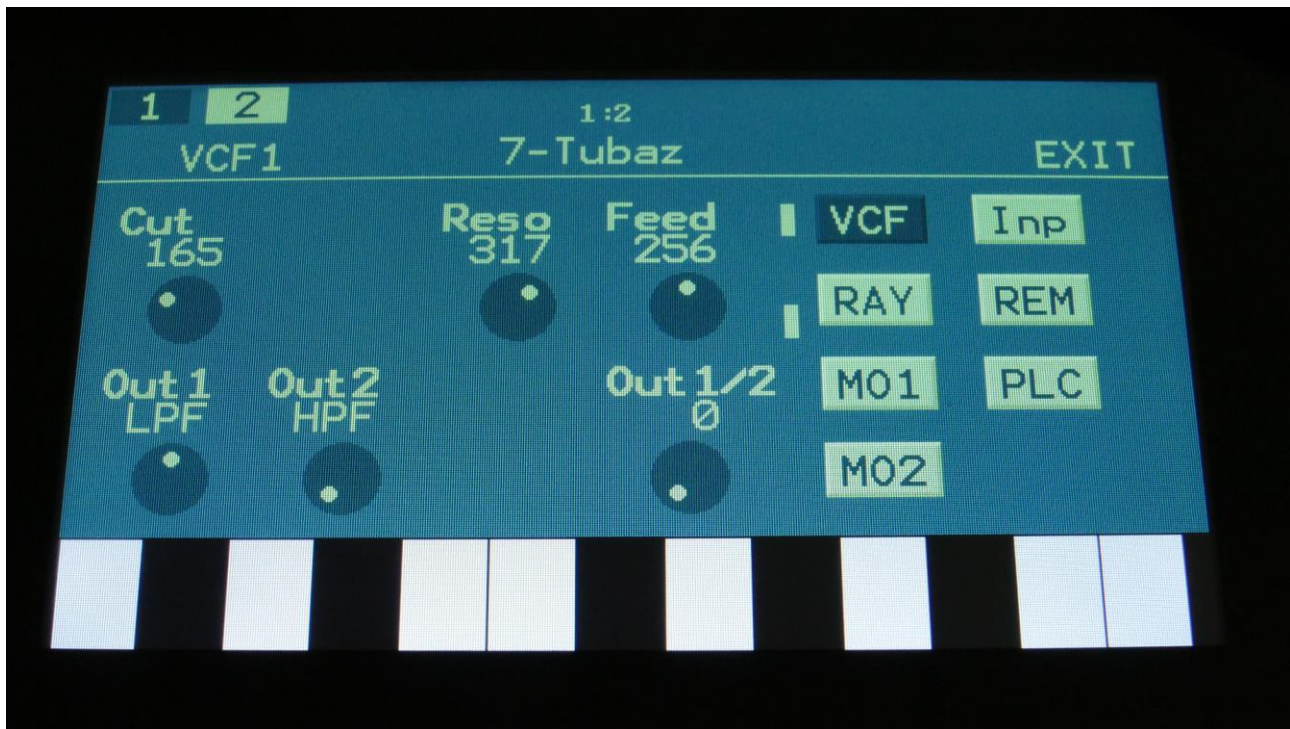

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Cut: 0 to 511. Adjust the filter cutoff frequency.


Reso: 0 to 511. Adjusts the resonance of the filter.

Feed: 0 to 511. Negative feedback.

Out1: BPF or LPF select.

Out2: Always HPF.

Out1/2: Mix between filter output 1 (BPF/LPF) and filter output 2 (HPF).

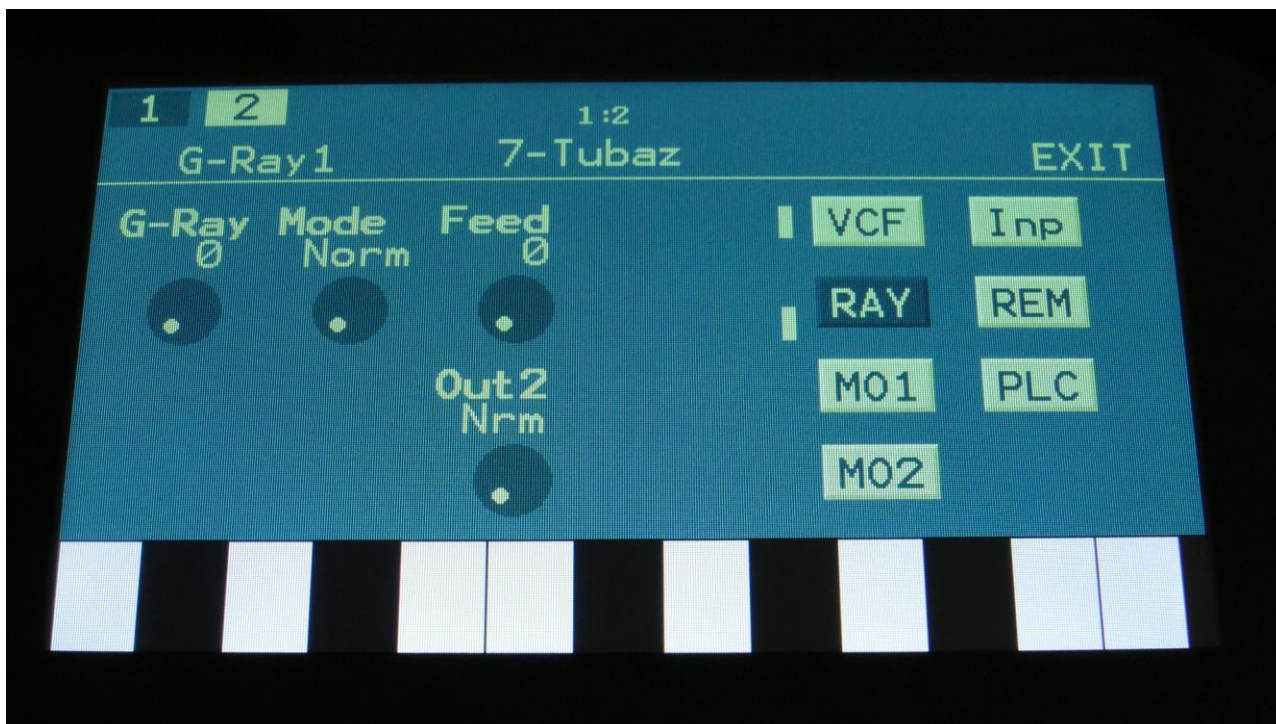

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.


-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

Out2: Selects whether output 2 of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes it can get some great effects, when inverting output 2 of the filter, and adjust the Out1/2 mix.

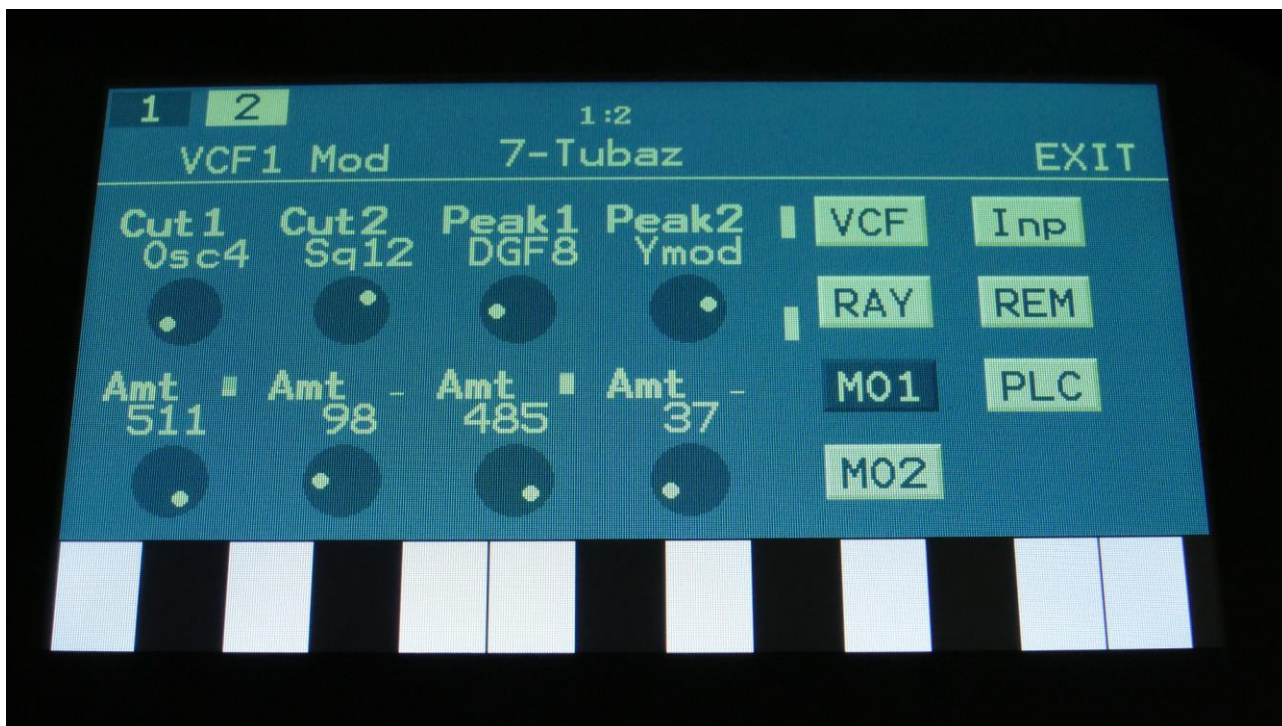

Touch the MO1 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Cut1, Cut2: Will modulate the Cutoff Frequency.

Peak1, Peak2: Has no function on this filter board.

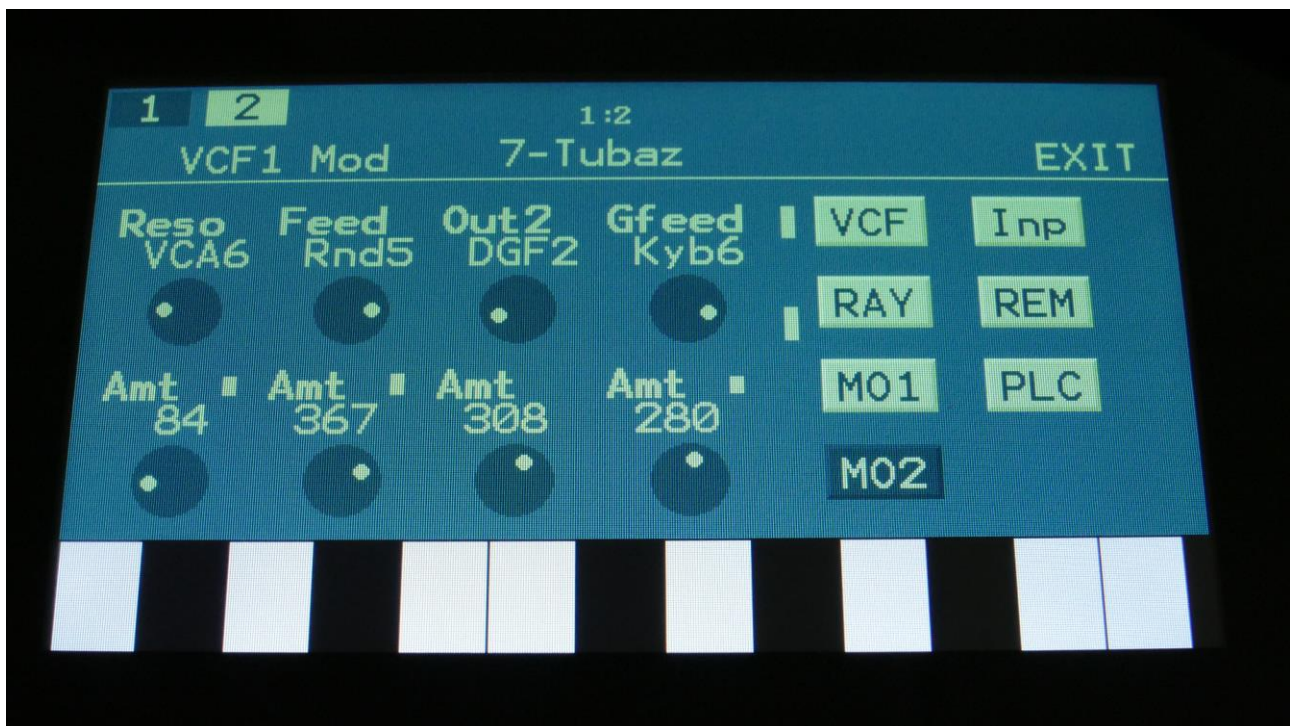

Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the amount of resonance applied to all filters.

Feed: Will modulate the analog filter feedback.

Out2: Will modulate the Out1/2 mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

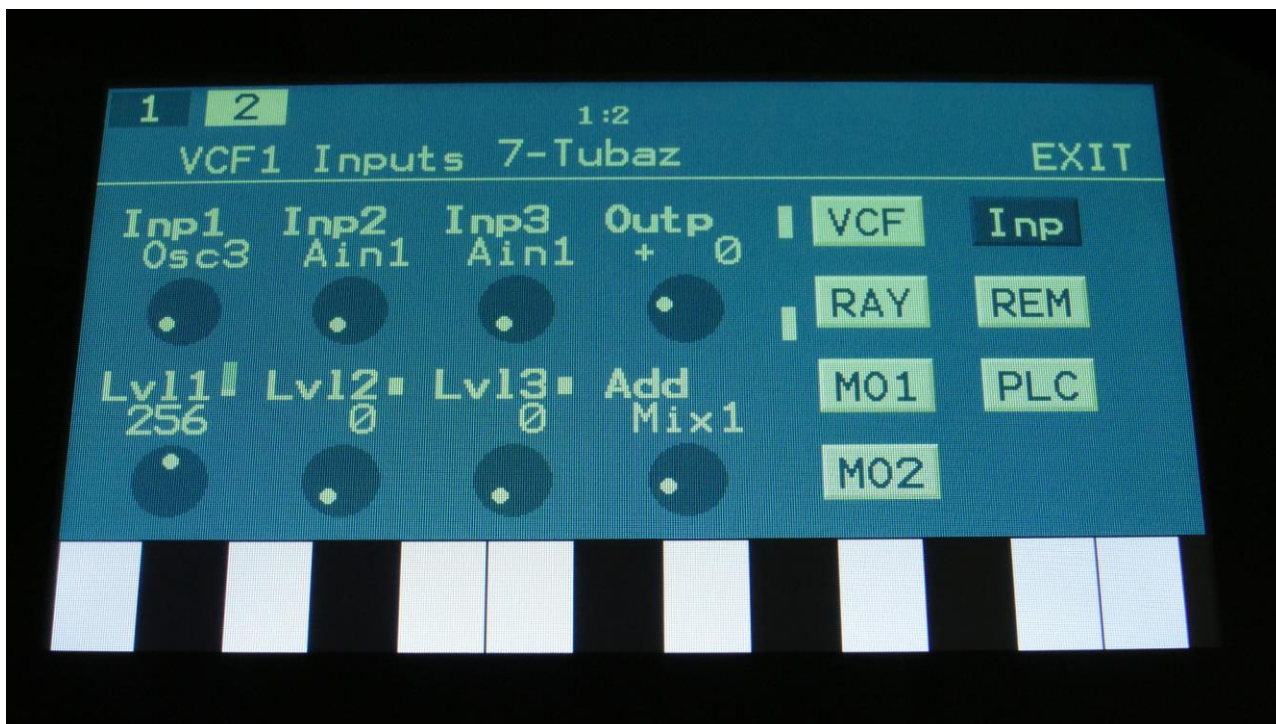

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF8- Dual Band SSI Filter parameters

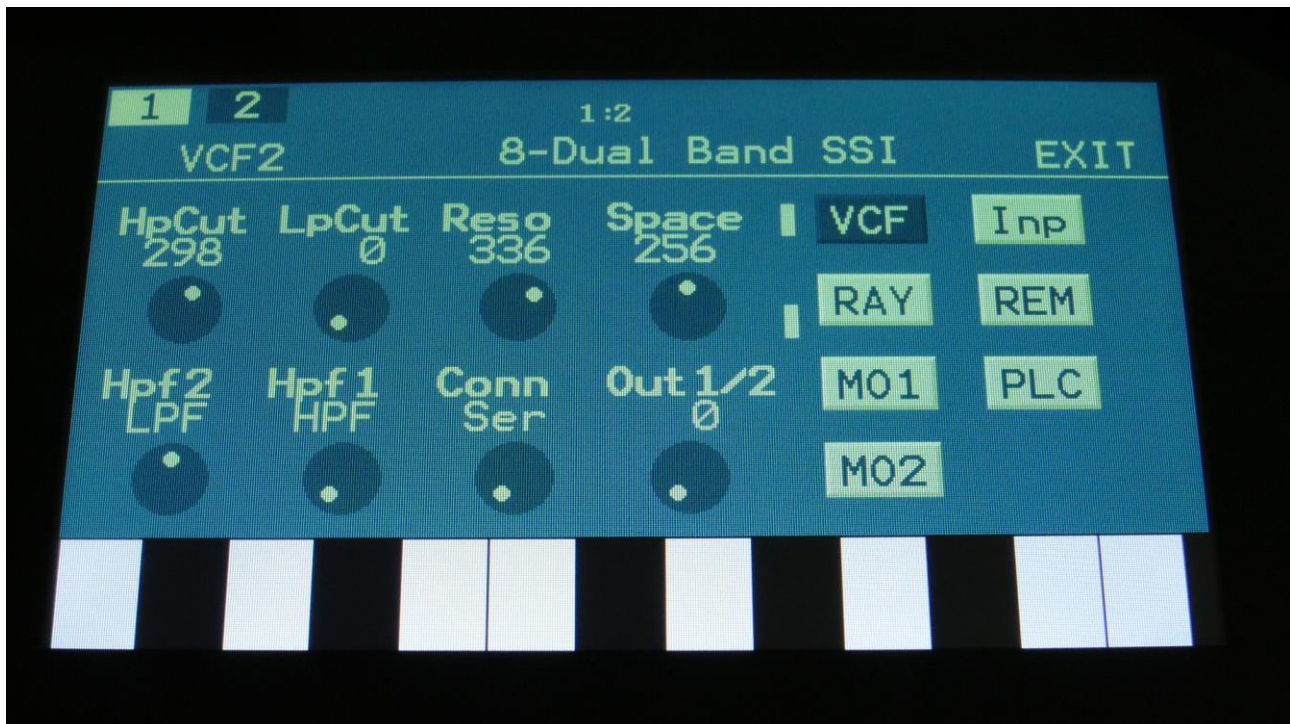

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

HpCut: HPF/LPF 1 and 2 filter cutoff frequency. Space between the 2 filters can be adjusted with Space.

LpCut: LPF 1 and 2 filter cutoff frequency. Space between the 2 filters can be adjusted with Space.

Reso: Filter resonance of all 4 filters.


Space: Space between the cutoff frequencies of the two filter chains.

HPF2: HPF2 filter mode HPF or LPF.

HPF1: HPF1 filter mode HPF or LPF.

Conn: Connection of the 2 filter chains. Ser (serial) or Par (parallel).

Out1/2: Mix between filter output 1 (HPF/LPF + LPF chain 1) and filter output 2 (HPF/LPF + LPF chain 2).

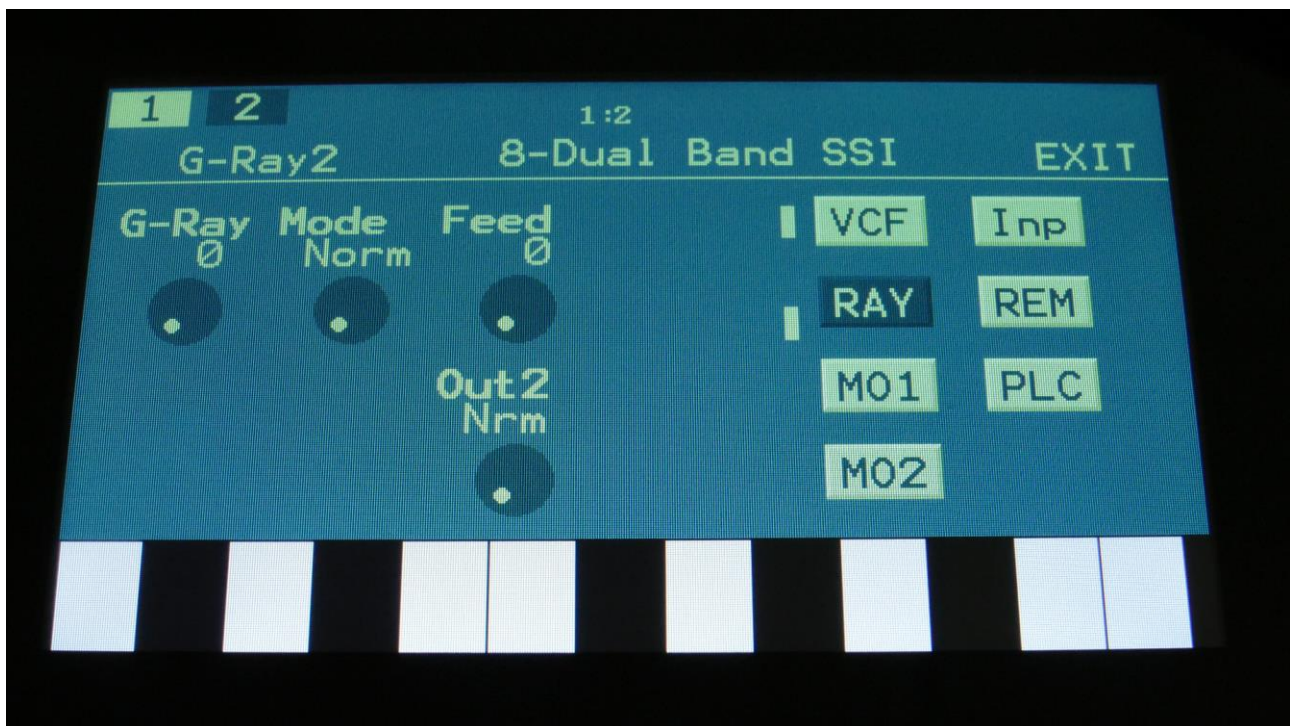

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.


-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

Out2: Selects whether output 2 of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes it can get some great effects, when inverting output 2 of the filter, and adjust the Out1/2 mix.

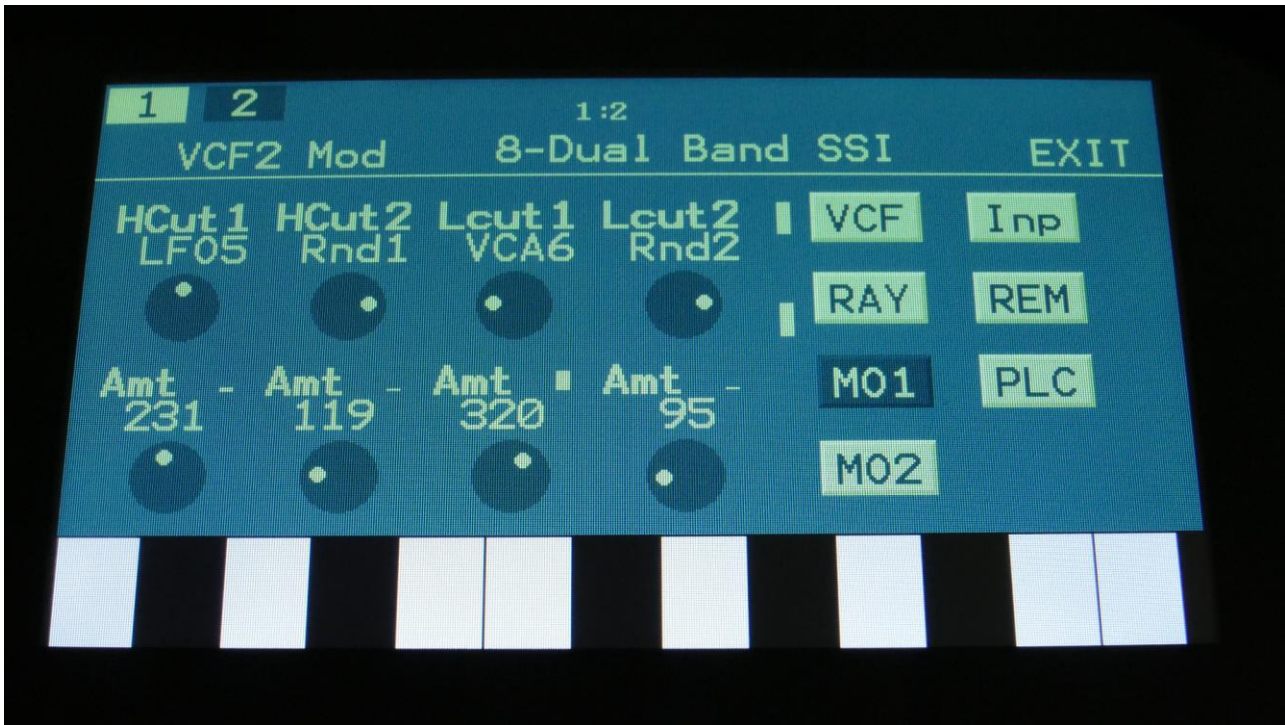

Touch the MO1 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

HCut1, HCut2: Will modulate the HPF Cutoff Frequency.

Lcut1, Lcut2: Will modulate the LPF Cutoff Frequency.

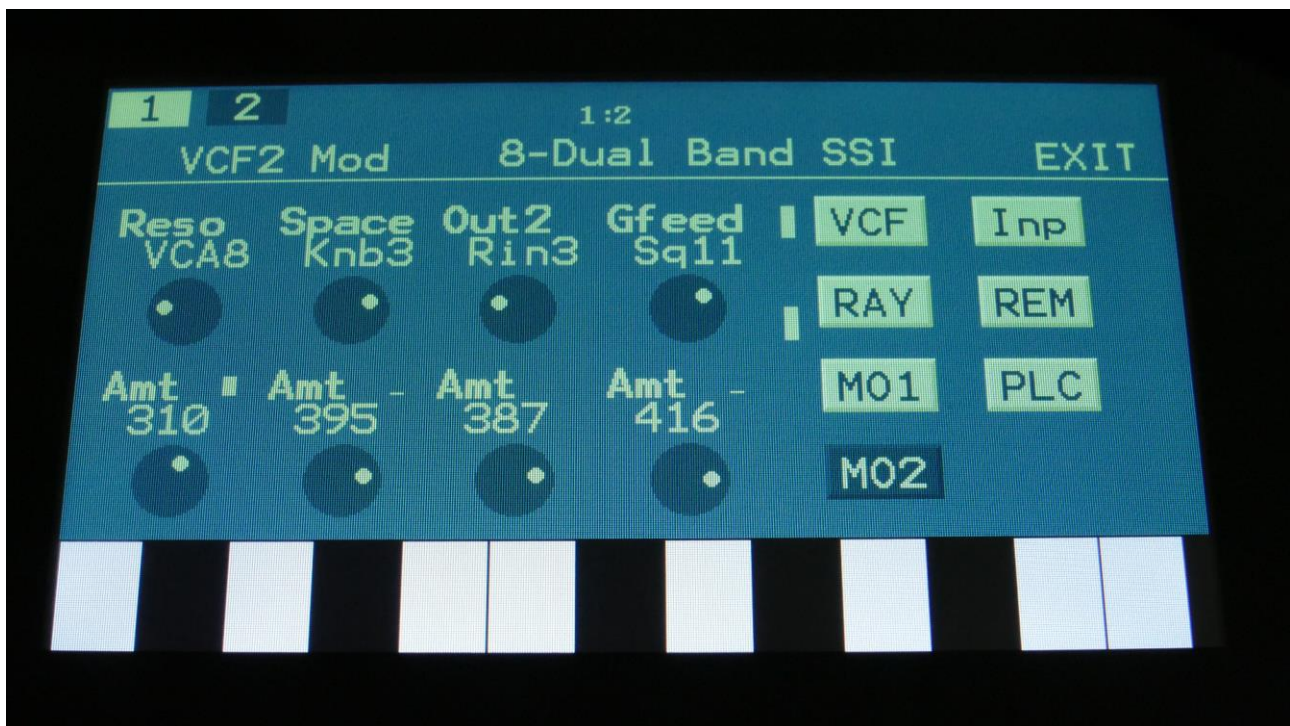

Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the amount of resonance applied to all filters.

Space: Will modulate the spacing between the 2 filter sets.

Out2: Will modulate the Out2 filter set mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

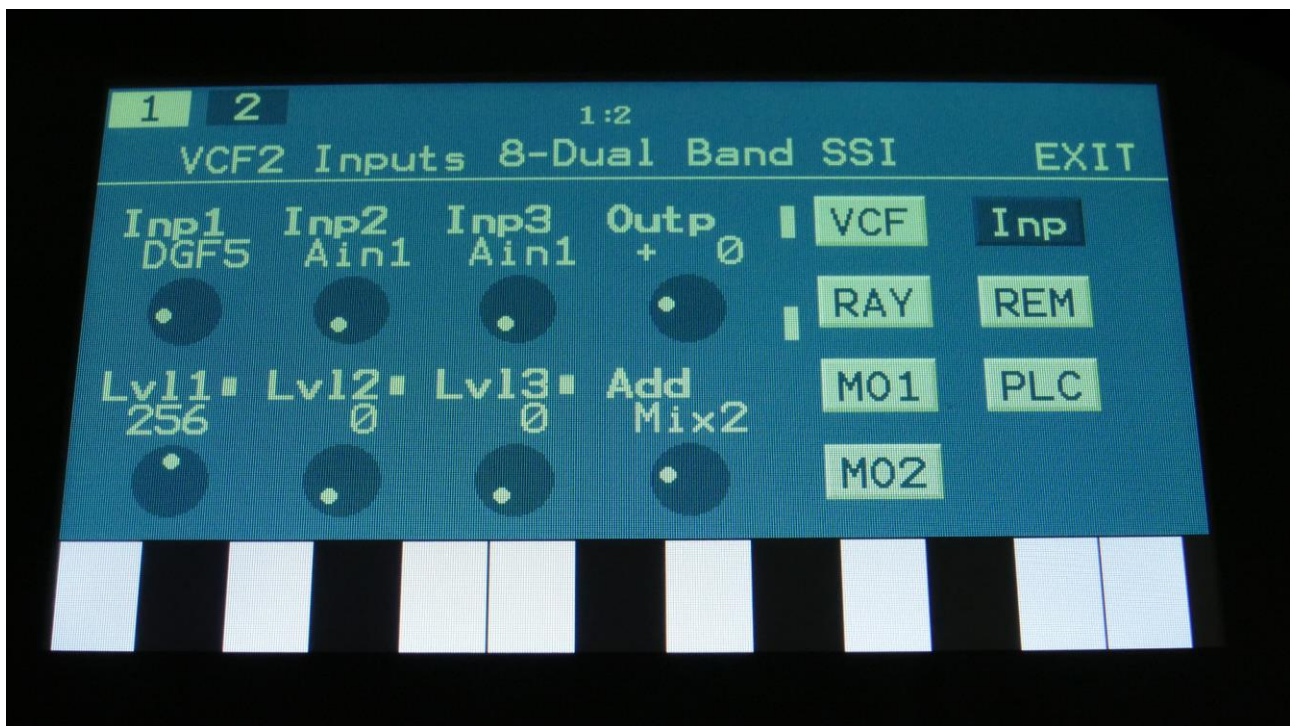

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF9- Xtra Distort Filter parameters

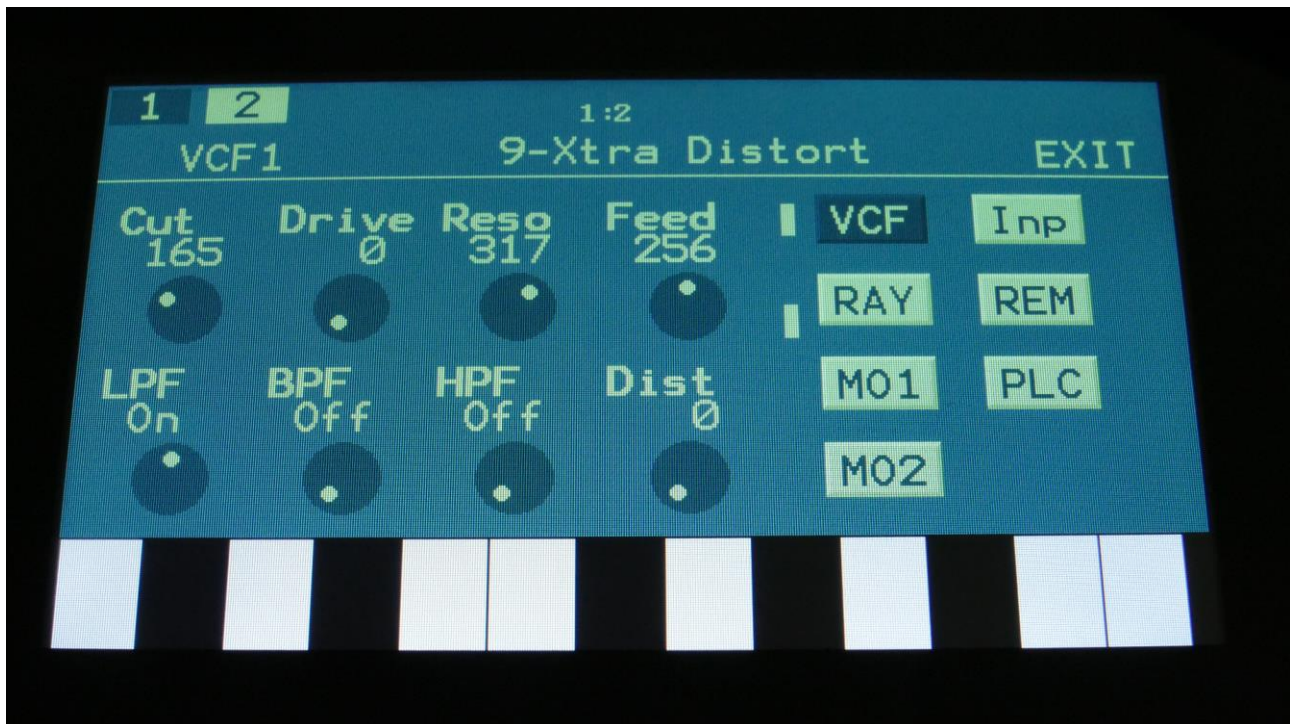

Filterboard 1 and 2 are selected by touching the square fields in the upper left corner of the screen, marked 1 and 2, NOT by the part select buttons.

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Cut: 0 to 511. Adjusts the filter cutoff frequency.


Drive: 0 to 511. Adjusts the analog Distortion Drive.

Reso: Adjusts the resonance of the filter.

Feed: Adjusts the feedback of the filter. Below 256 means negative feedback, above 256 means positive feedback, 256 means no feedback.

LPF, BPF, HPF: Switches on and off the low pass, band pass and high pass outputs on the filter. At least one of these must be on, to get a sound out of the filter.

Dist: Mix between the clean filter sound, and the filter sound with added analog distortion.

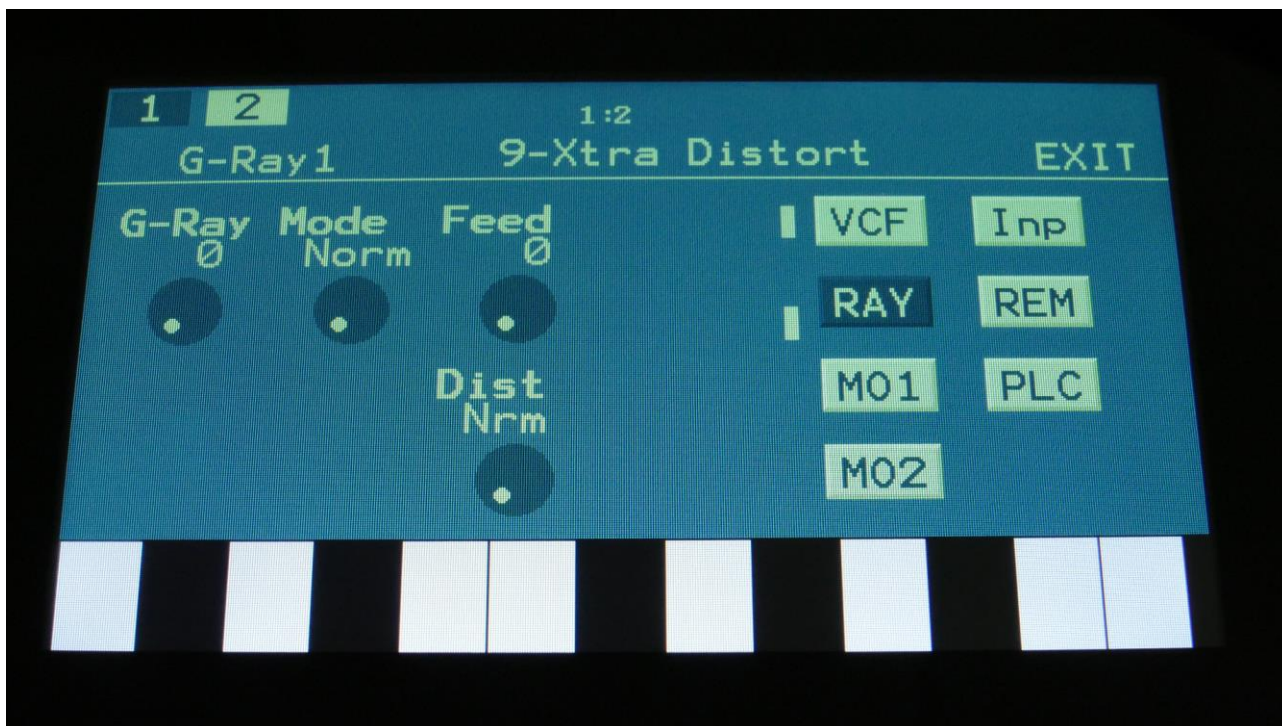

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.


-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

Dist: Selects whether output 2 (Dist) of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes it can get some great effects, when inverting output 2 of the filter, and adjust the Out1/2 mix.

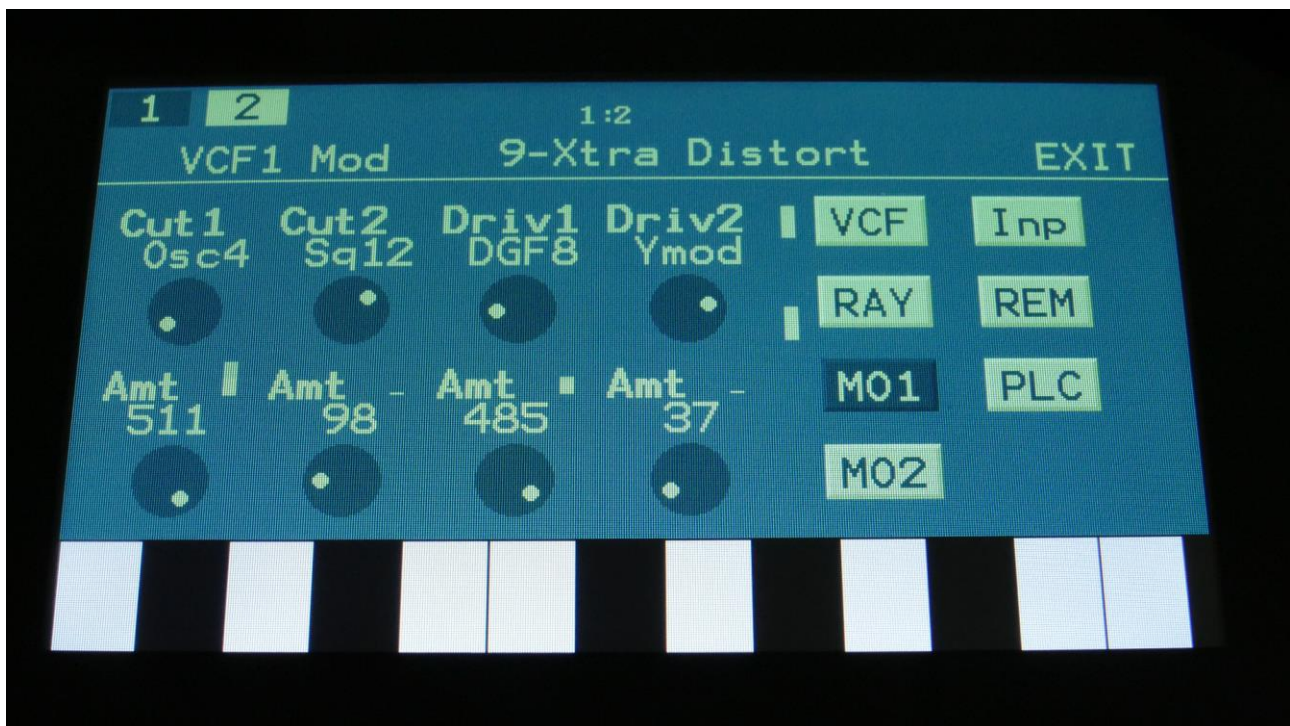

Touch the MO1 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Cut1, Cut2: Will modulate the Cutoff Frequency.

Driv1, Driv2: Will modulate the Drive parameter.

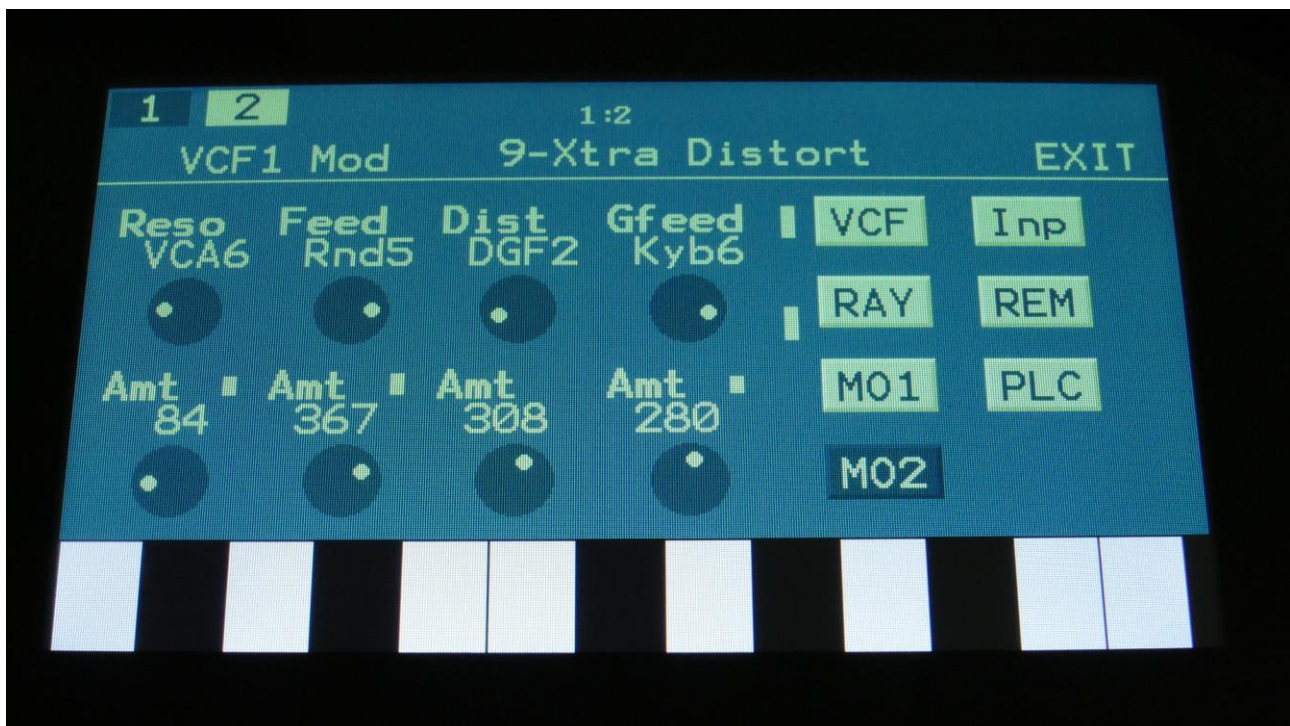

Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the amount of resonance applied to all filters.

Feed: Will modulate the analog filter feedback.

Dist: Will modulate the Dist mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

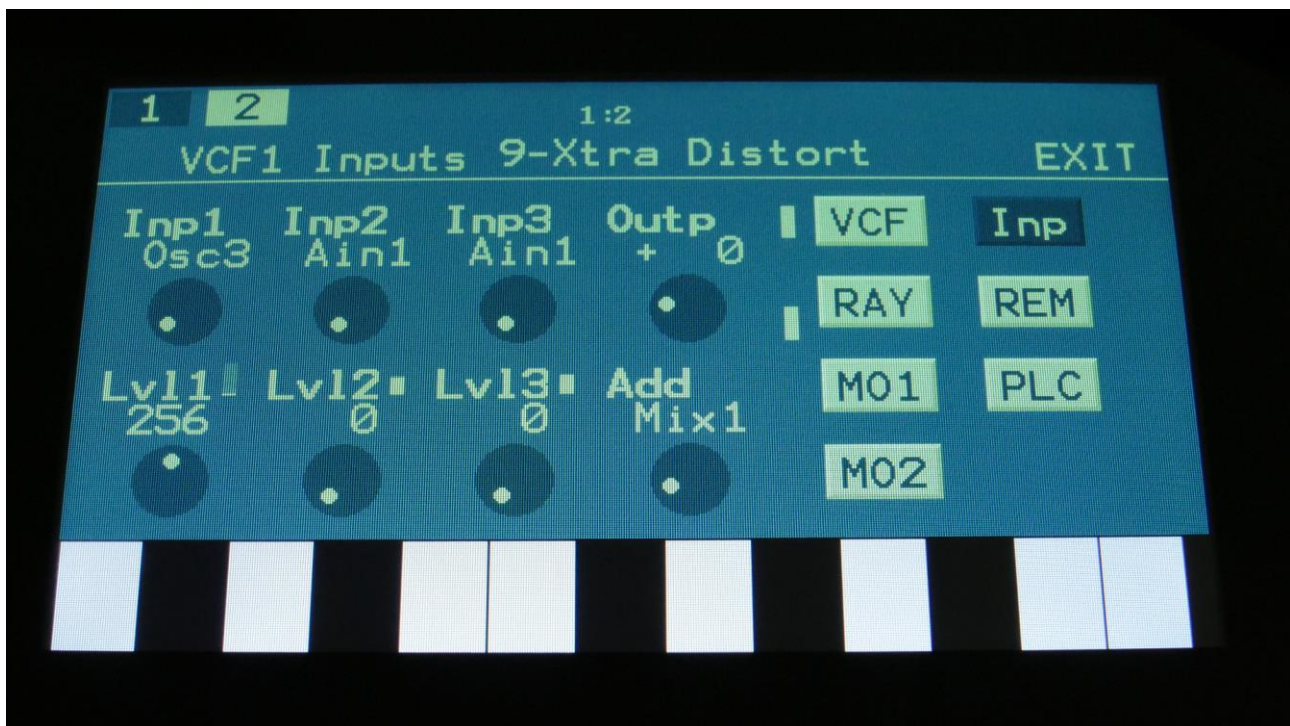

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF10- SSI2140 Filter parameters

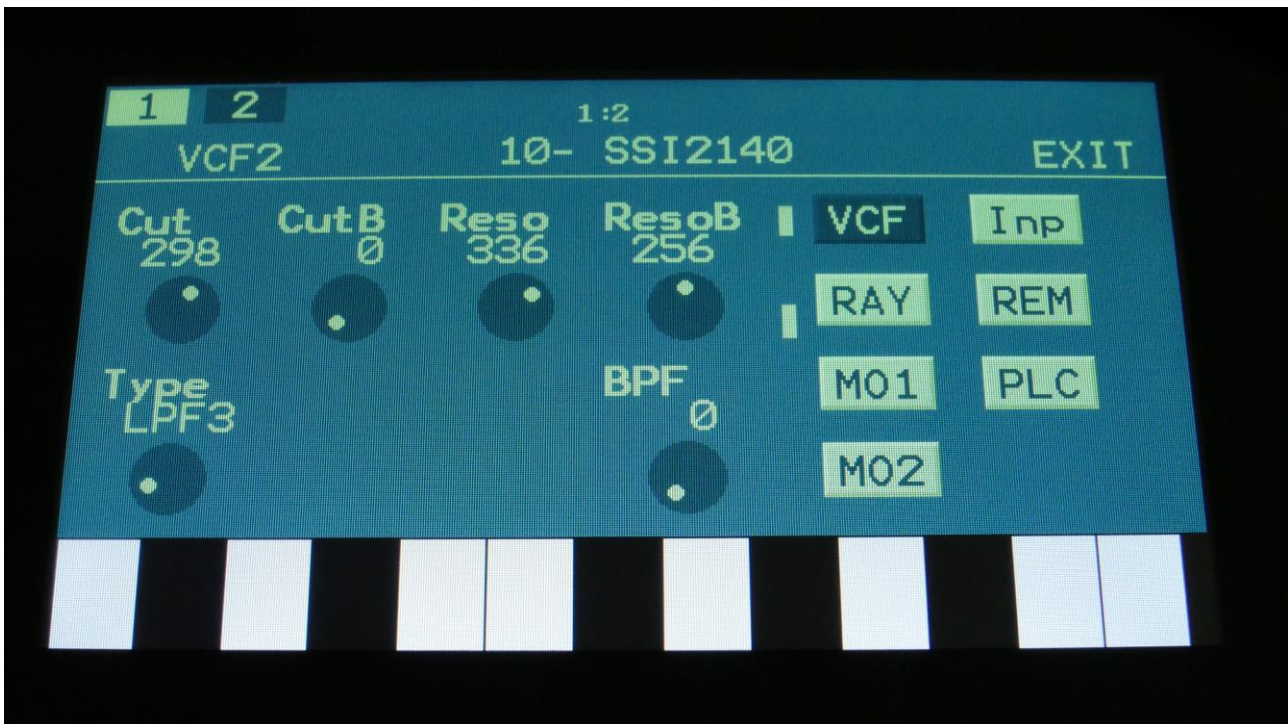

Filterboard 1 and 2 are selected by touching the square fields in the upper left corner of the screen, marked 1 and 2, NOT by the part select buttons.

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Cut: 0 to 511. Adjusts the filter cutoff frequency of the multimode filter A.

CutB: 0 to 511. Adjusts the filter cutoff frequency of the band pass filter B.


Reso: Adjusts the resonance of the multimode filter A.

ResoB: Adjusts the resonance of the band pass filter B.

Type: Sets the filter type for the multimode filter A. Choices are:

- LPF4 (24dB)
- LPF3 (18dB)
- LPF2 (12dB)
- LPF1 (6dB)
- BPF
- Notch
- HPF
- AllPass

BPF: Mix between the multimode filter A and the band pass filter B.

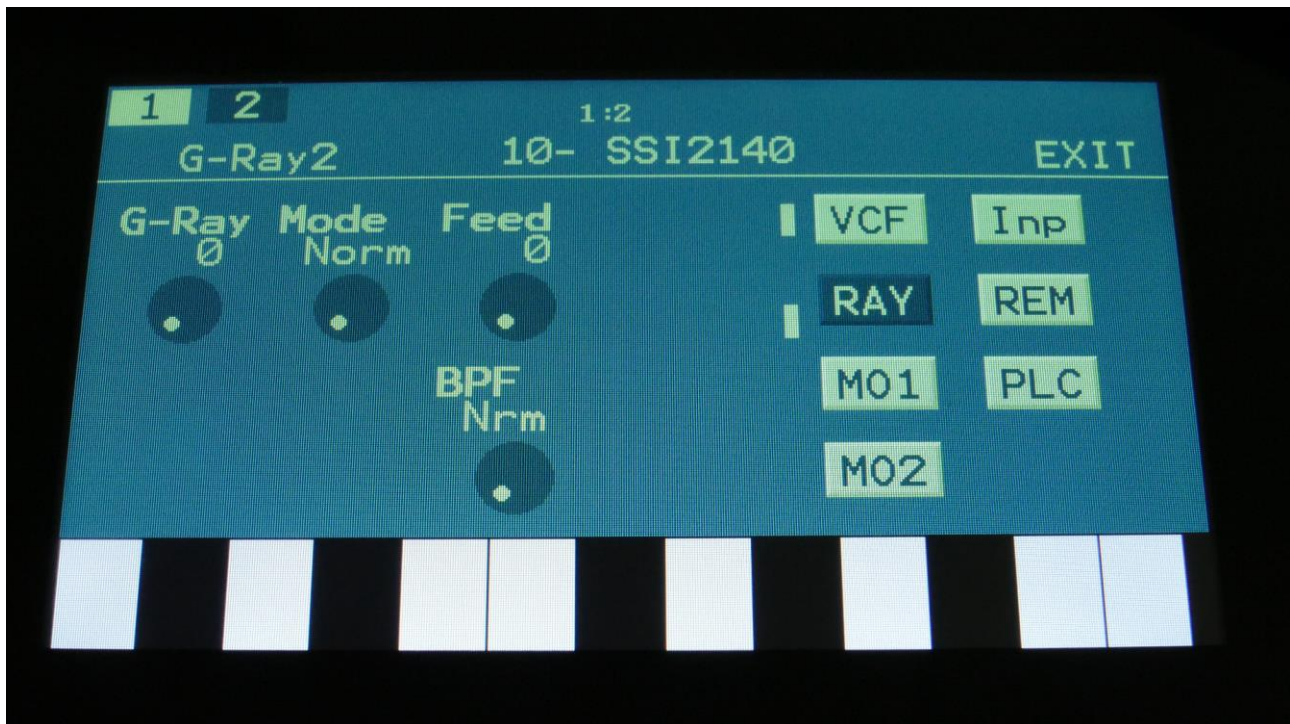

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.


-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

BPF: Selects whether output 2 (BPF) of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes it can get some great effects, when inverting output 2 of the filter, and adjust the Out1/2 mix.

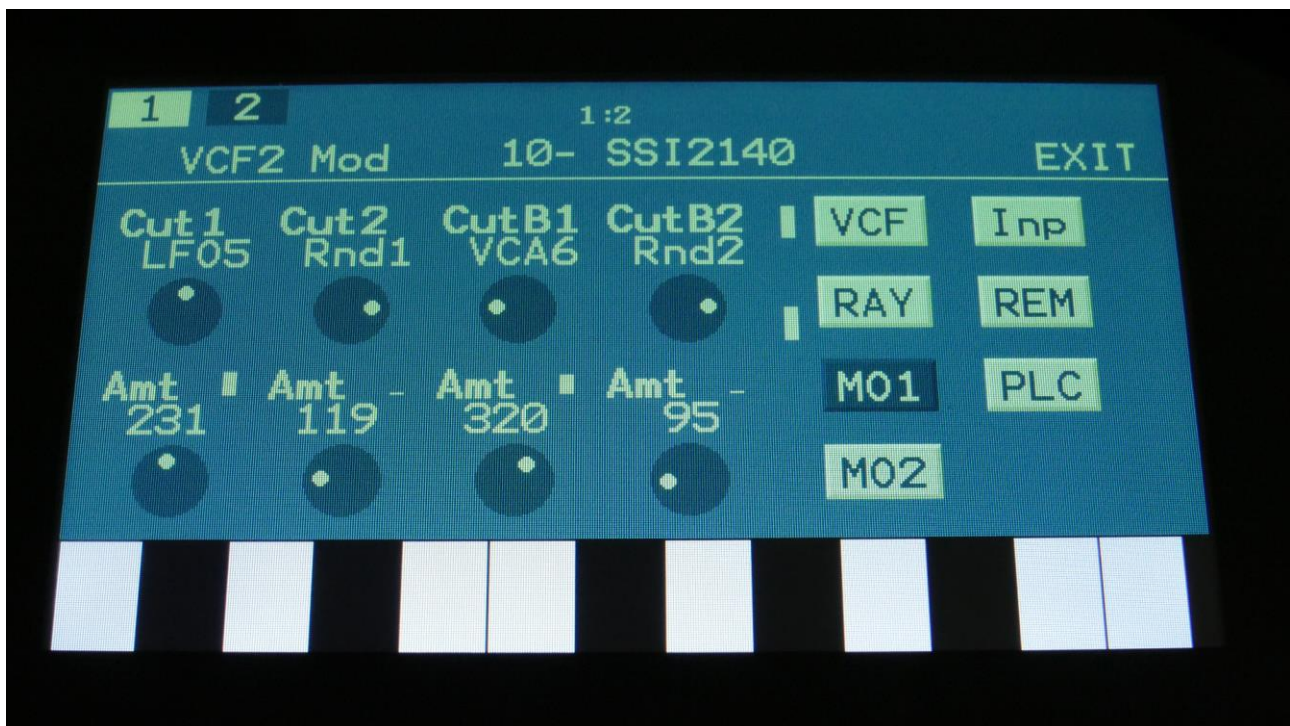

Touch the MO1 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Cut1, Cut2: Will modulate the Cutoff Frequency.

CutB1, CutB2: Will modulate the CutB parameter.

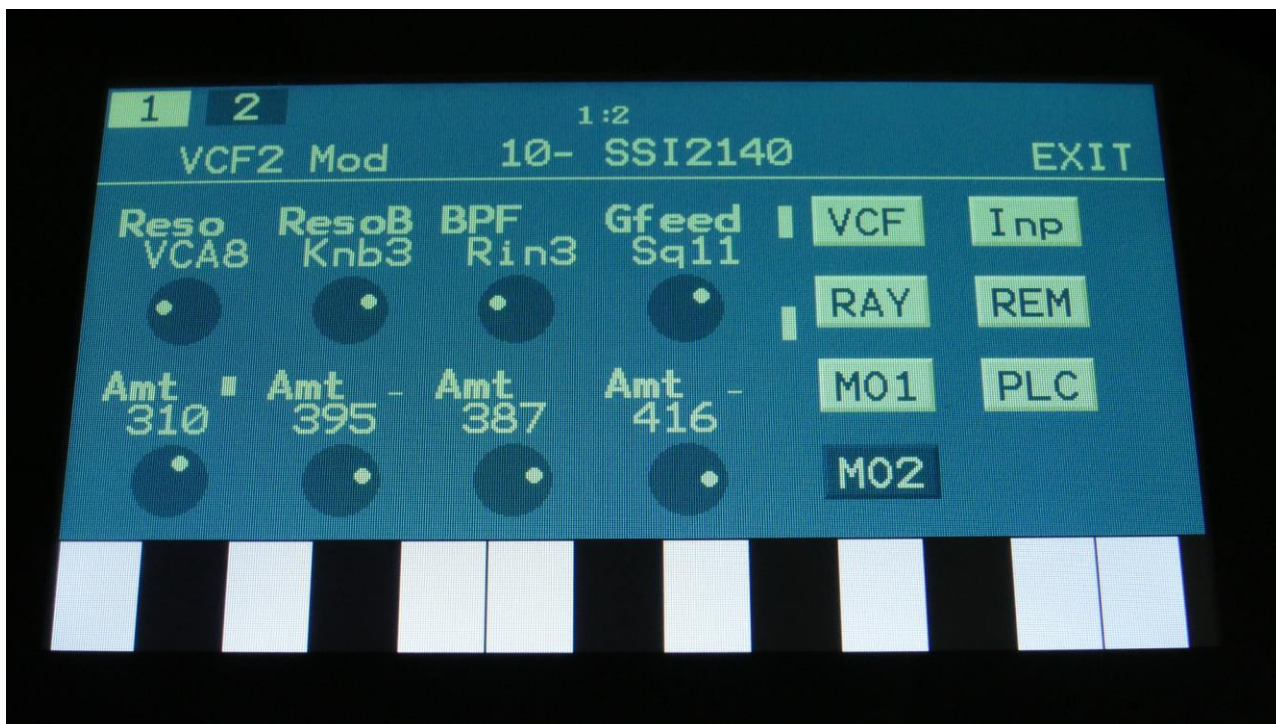

Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the amount of resonance applied to filter A.

ResoB: Will modulate the amount of resonance applied to filter B.

Dist: Will modulate the BPF mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

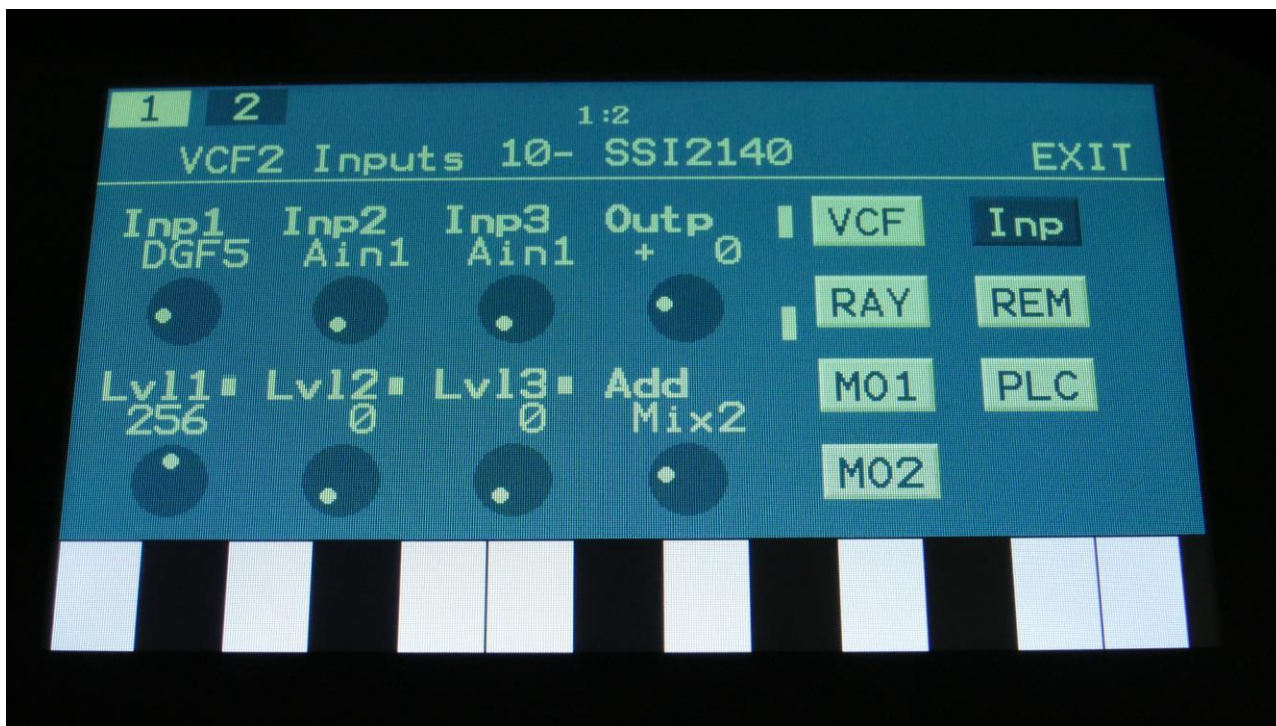

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF11- Zaturn Filter parameters

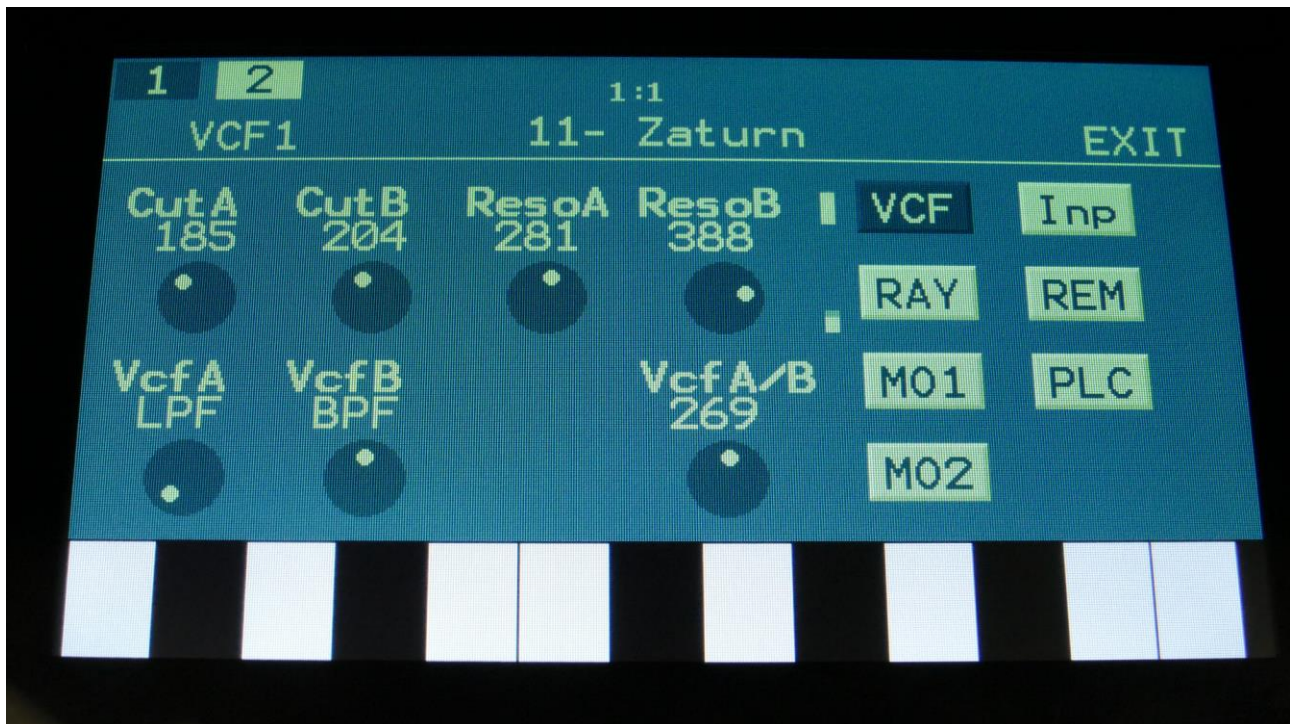

Filterboard 1 and 2 are selected by touching the square fields in the upper left corner of the screen, marked 1 and 2, NOT by the part select buttons.

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

CutA: 0 to 511. Adjusts the filter A cutoff frequency.

CutB: 0 to 511. Adjusts the filter B cutoff frequency.


ResoA: Adjusts the resonance of filter A.

ResoB: Adjusts the resonance of filter B.

VcfA: Switches VCF A between LPF and BPF filter modes.

VcfB: Switches VCF B between LPF and BPF filter modes.

VcfA/B: Mix between filter A and Filter B.

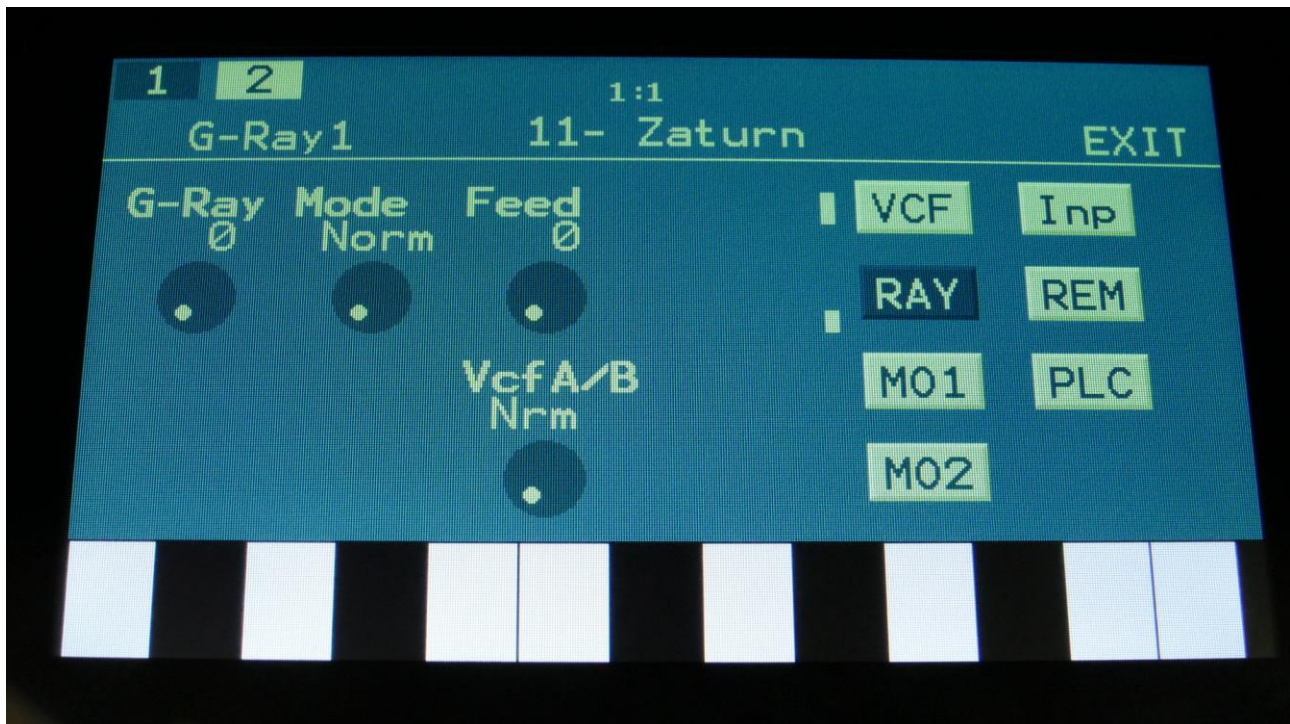

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.


-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

VcfAB: Selects whether output 2 (VcfB) of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes it can get some great effects, when inverting output 2 of the filter, and adjust the VcfA/B mix.

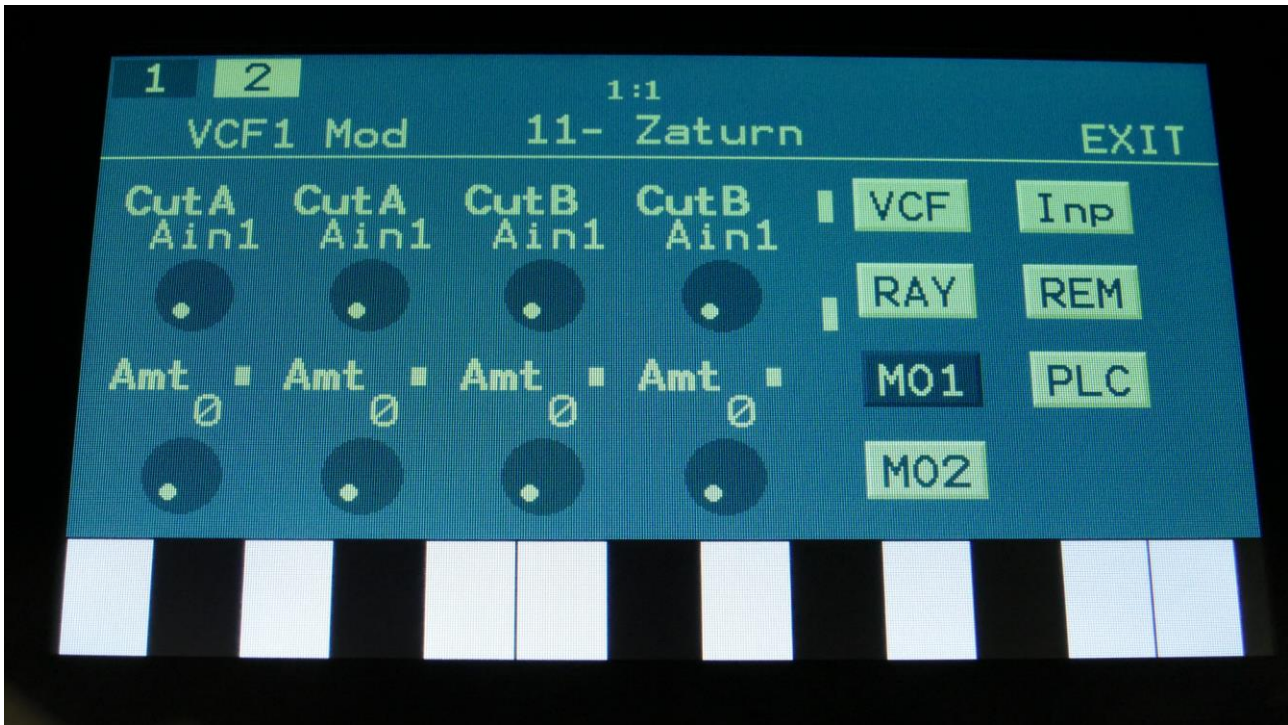

Touch the MO1 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

CutA: Will modulate the CutA Frequency.

CutB: Will modulate the CutB parameter.



Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

ResoA: Will modulate the amount of resonance applied to filter A.

ResoB: Will modulate the amount of resonance applied to filter B.

VcfAB: Will modulate the VcfA/B mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

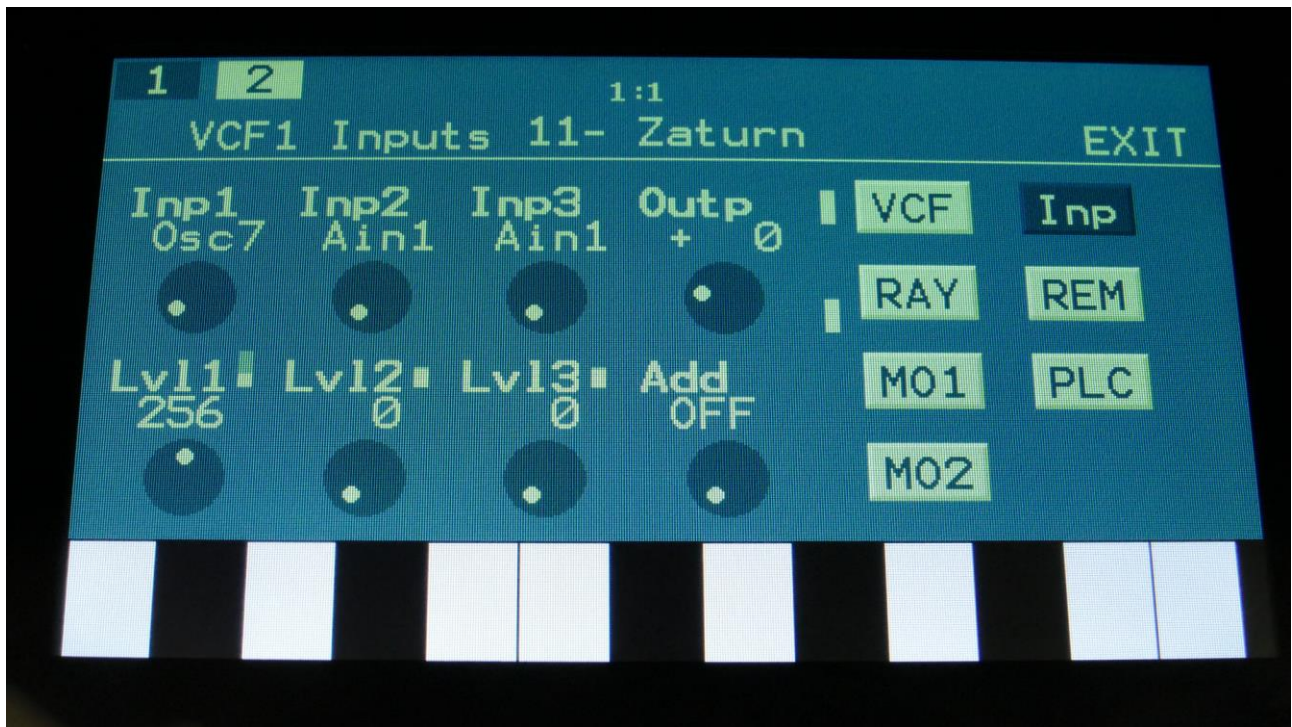

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF12- FilterBank parameters

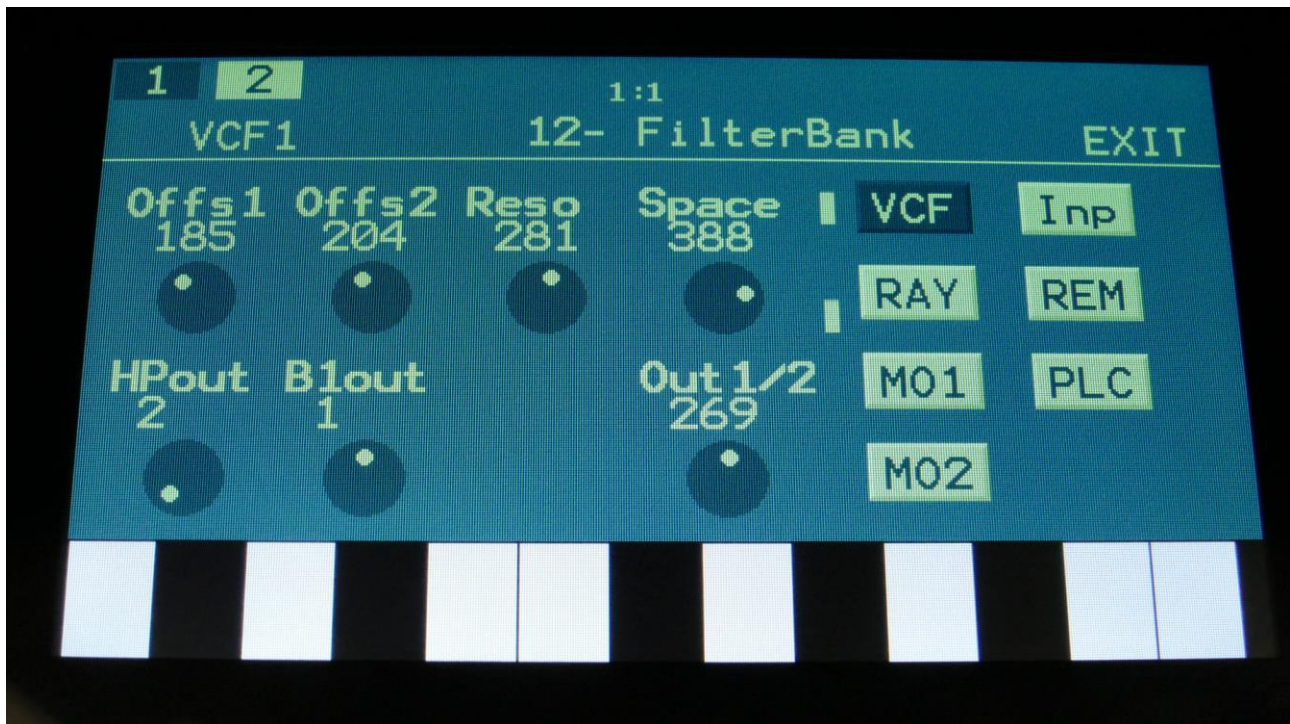

Filterboard 1 and 2 are selected by touching the square fields in the upper left corner of the screen, marked 1 and 2, NOT by the part select buttons.

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Offs1: 0 to 511. Sets the Cutoff frequency offset for LPF, BPF2 (the middle BPF) and the HPF.

Offs2: 0 to 511. Sets the Cutoff frequency offset for BPF1 and BPF3.


Reso: Sets the resonance for all of the five filters.

Space: Sets the spacing between the five filter cutoff frequencies, with LPF having the lowest frequency, BPF1 having the next lowest frequency, the BPF2, BPF3 and the HPF having the highest cutoff frequency.

HPout: Set the HPF to output to Out 1 of Out 2.

B1out: Set the BPF1 to output to Out 1 of Out 2.

Out1/2: Mix between output 1 and output 2.

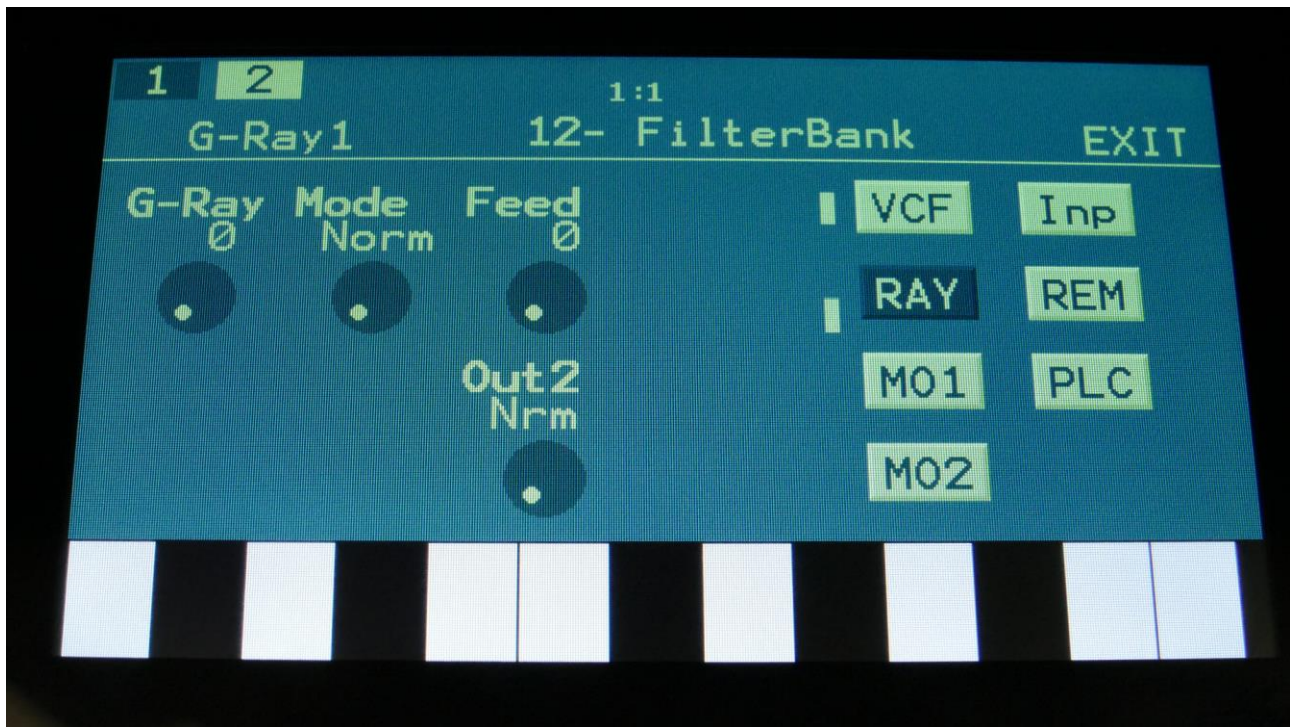

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.


-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

Out2: Selects whether output 2 of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes it can get some great effects, when inverting output 2 of the filter, and adjust the Out1/2 mix.

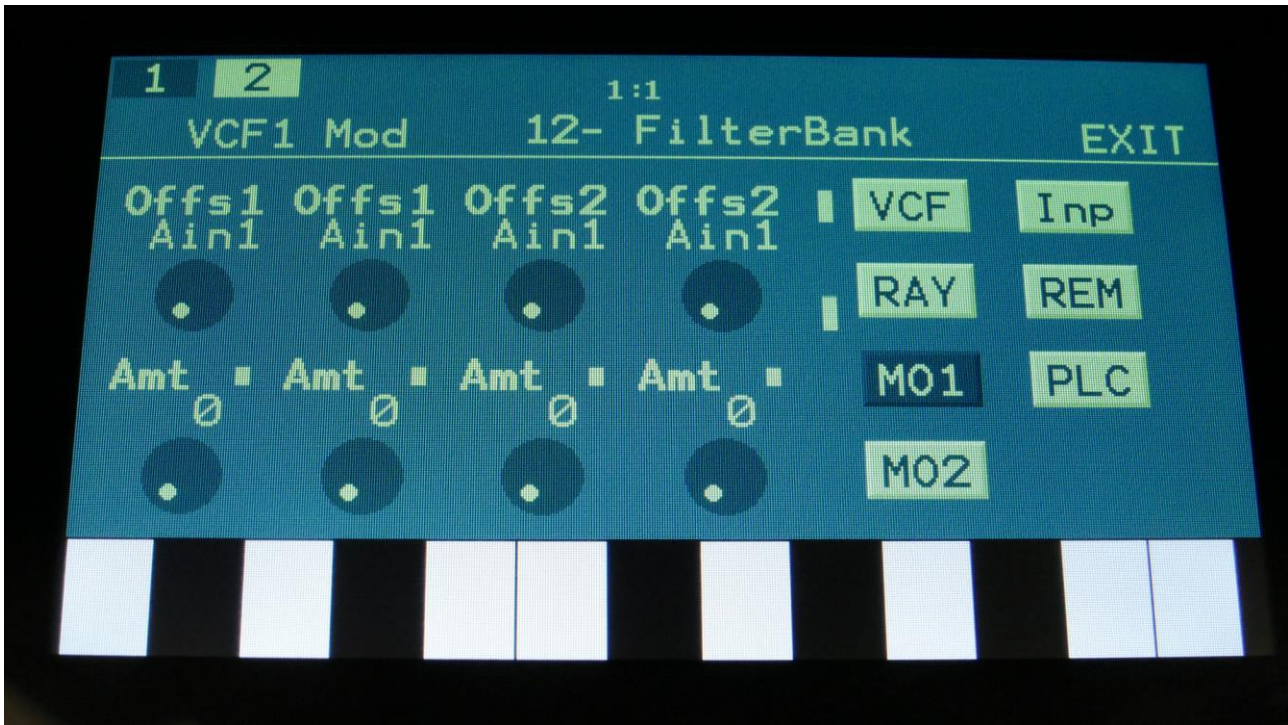

Touch the MO1 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Offs1: Will modulate the LPF, BPF2 and HPF cutoff frequencies.

Offs2: Will modulate the BPF1 and BPF3 frequencies.

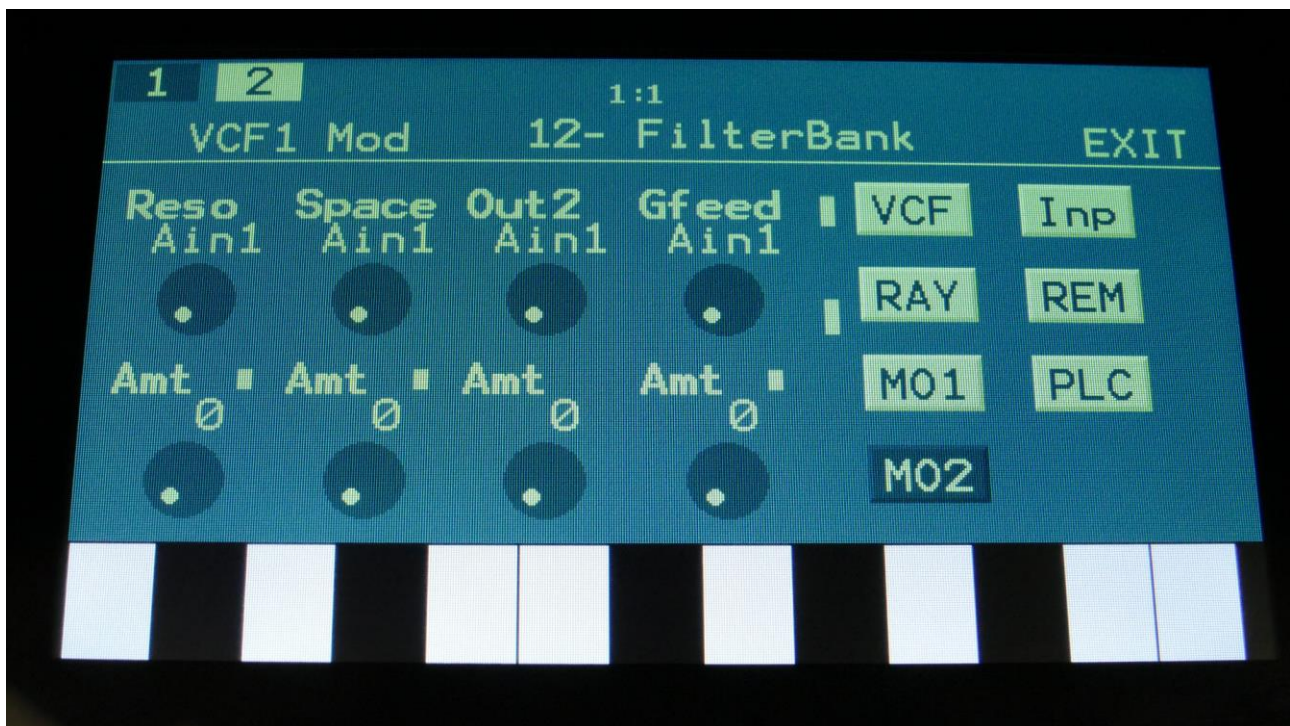

Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the Resonance of all five filters.

Spaze: Will modulate the cutoff spacing of the filters.

Out2: Will modulate the Out1/2 mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

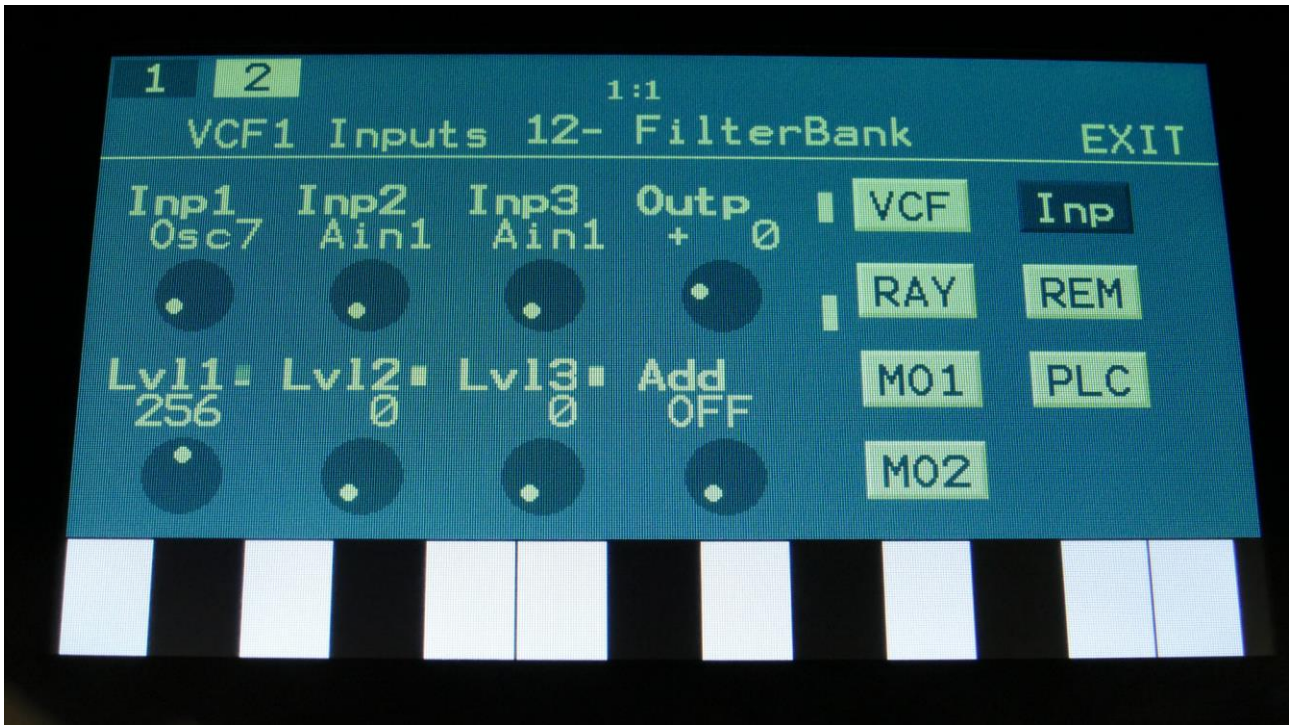

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

1 2

1:1

VCF2 13- Diode Drive EXIT

CutA 256 CutB 256 ResoA 0 ResoB 0 VCF Inp

RAY REM

VcfA LPF12 VcfB HPF Diode Off VcfA/B 0 M01 PLC

M02 M03

Filterboard 1 and 2 are selected by touching the square fields in the upper left corner of the screen, marked 1 and 2, NOT by the part select buttons.

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

CutA: 0 to 511. Adjusts the filter A cutoff frequency.

CutB: 0 to 511. Adjusts the filter B cutoff frequency.


ResoA: Adjusts the resonance of filter A.

ResoB: Adjusts the resonance of filter B.

VcfA: Switches VCF A between LPF 12 db and LPF 24 db filter modes.

VcfB: Switches VCF B between BPF and HPF filter modes.

VcfA/B: Mix between filter A and Filter B.

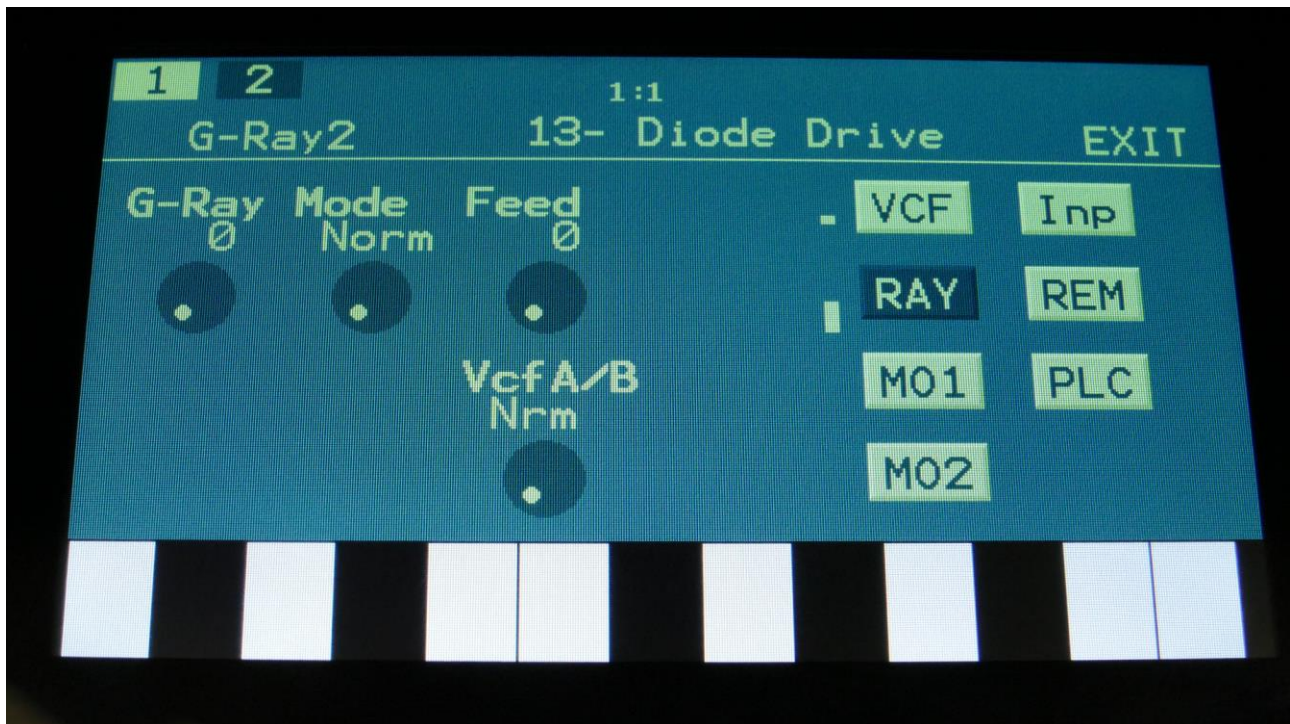

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.


-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

VcfAB: Selects whether output 2 (VcfB) of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes it can get some great effects, when inverting output 2 of the filter, and adjust the VcfA/B mix.

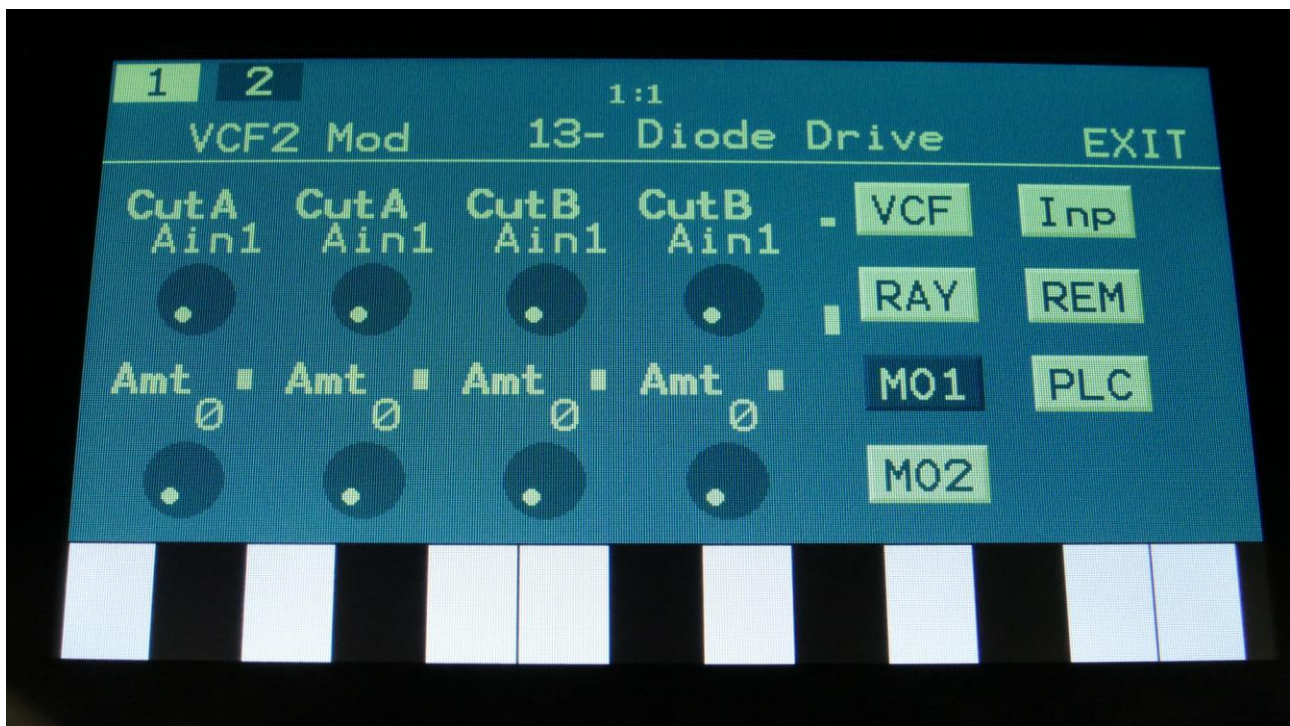

Touch the MO1 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

CutA: Will modulate the CutA Frequency.

CutB: Will modulate the CutB parameter.

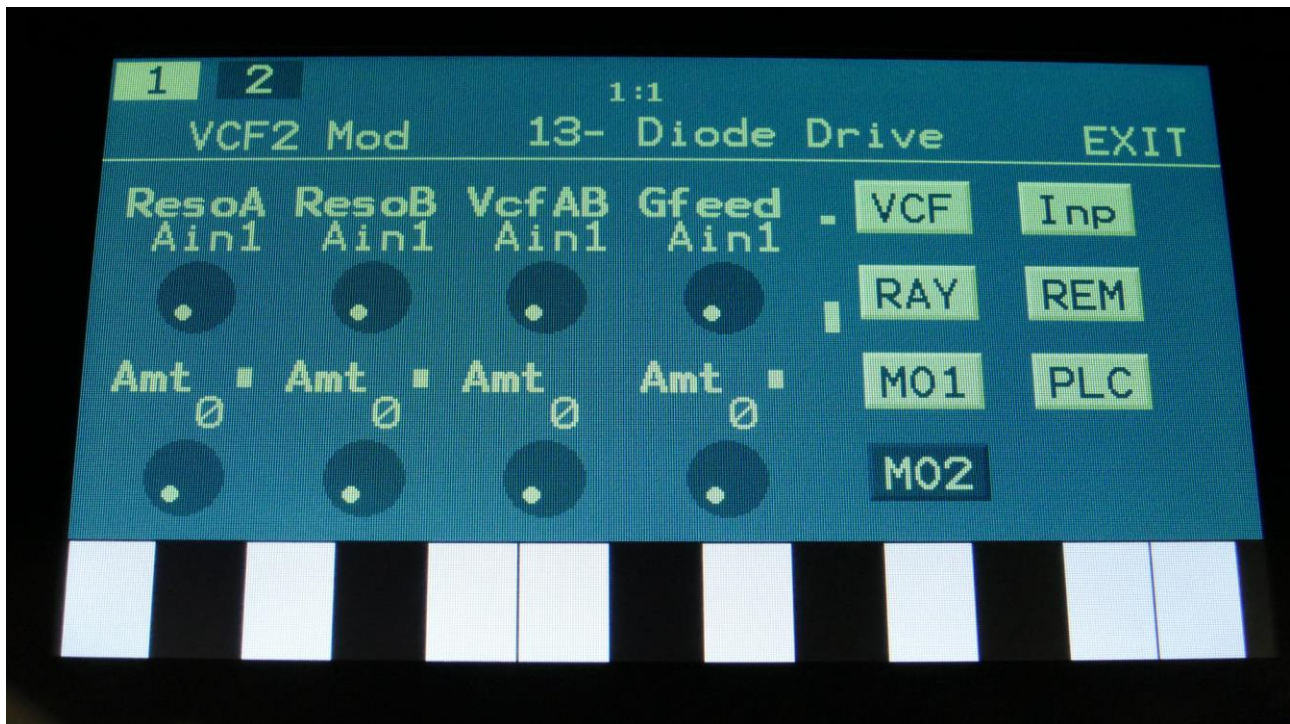

Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

ResoA: Will modulate the amount of resonance applied to filter A.

ResoB: Will modulate the amount of resonance applied to filter B.

VcfAB: Will modulate the VcfA/B mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

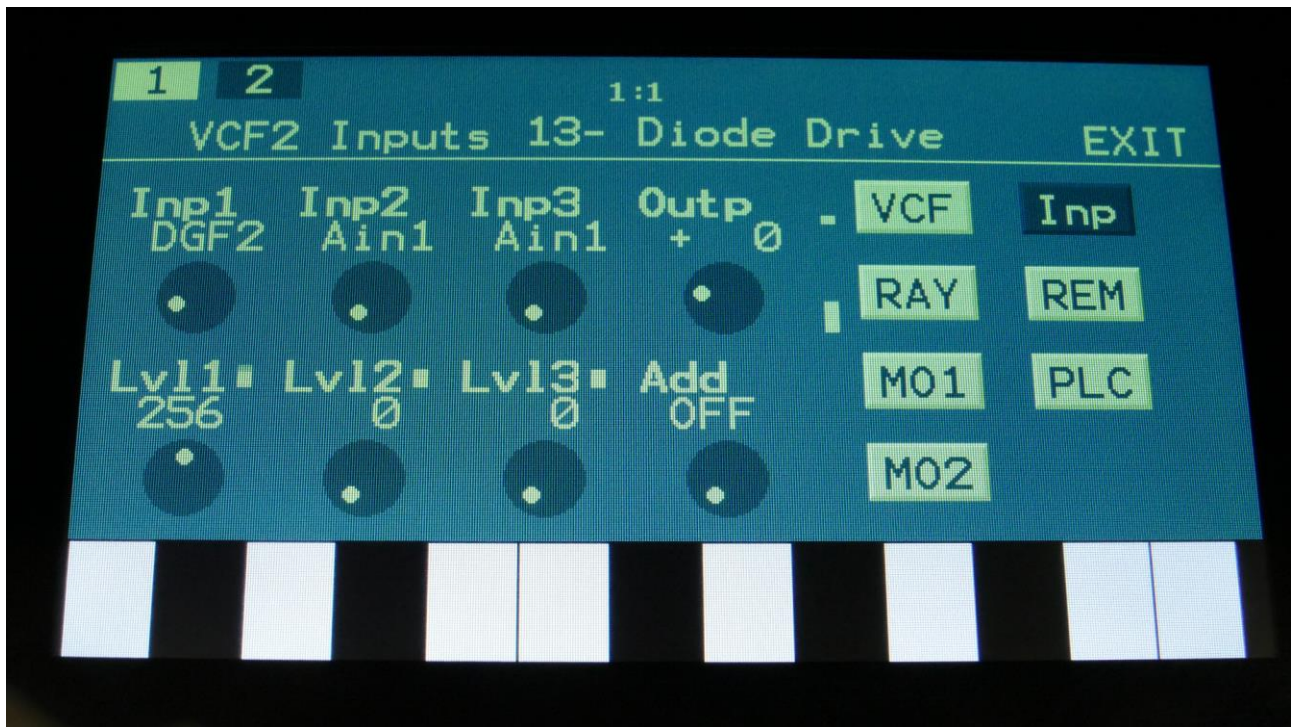

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.

VCF14- Transistor Ladder Filter parameters

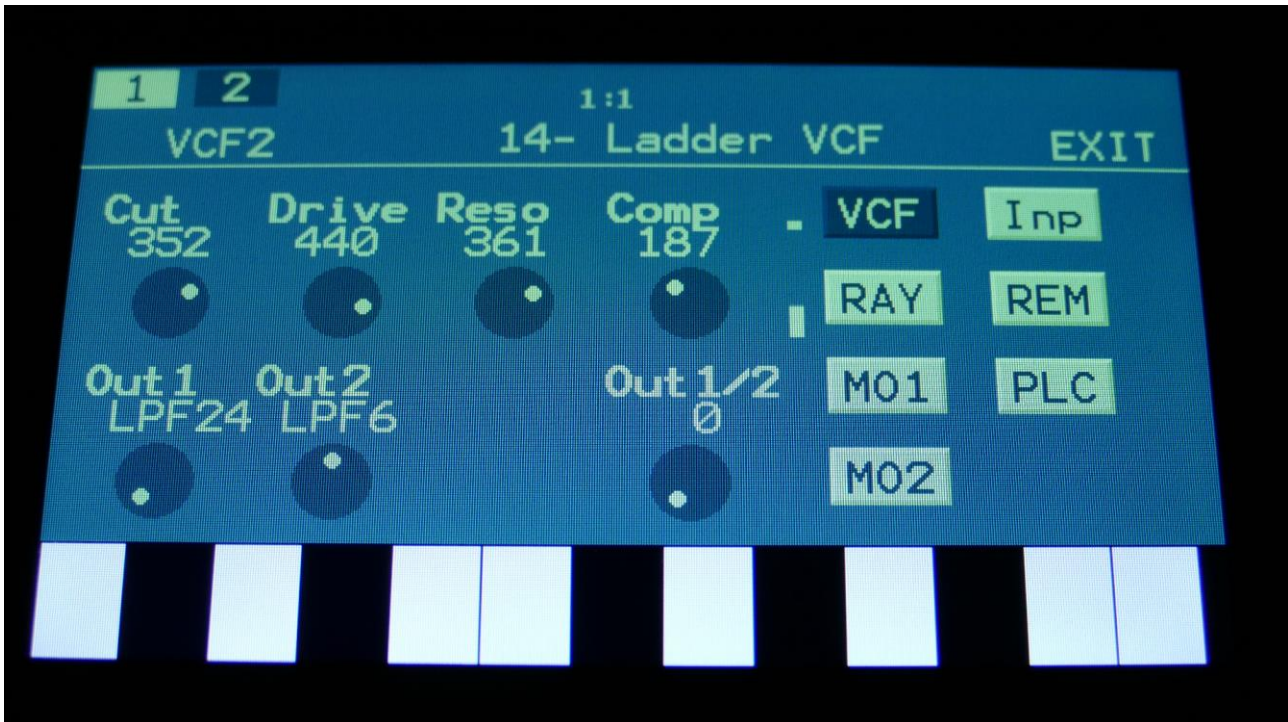

Filter board 1 and 2 are selected by touching the square fields in the upper left corner of the screen, marked 1 and 2, NOT by the part select buttons.

Touch the VCF touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Cut: 0 to 511. Adjusts the filter cutoff frequency.

Drive: 0 to 511. Adjusts the drive. At higher settings this turns into distortion and the resonance will be damped.


Reso: Adjusts the resonance of the filter.

Comp: Adjusts the low frequency gain compensation. When resonance is turned up, some low frequency content might be lost. This parameter gets the low frequency content back, at higher resonance settings.

Out1: Switches filter output 1 between LPF 24 db and LPF 12 db modes.

Out2: Switches filter output 2 between LPF 18 db and LPF 6 db modes.

Out1/2: Mix/crossfade between filter outputs 1 and 2.

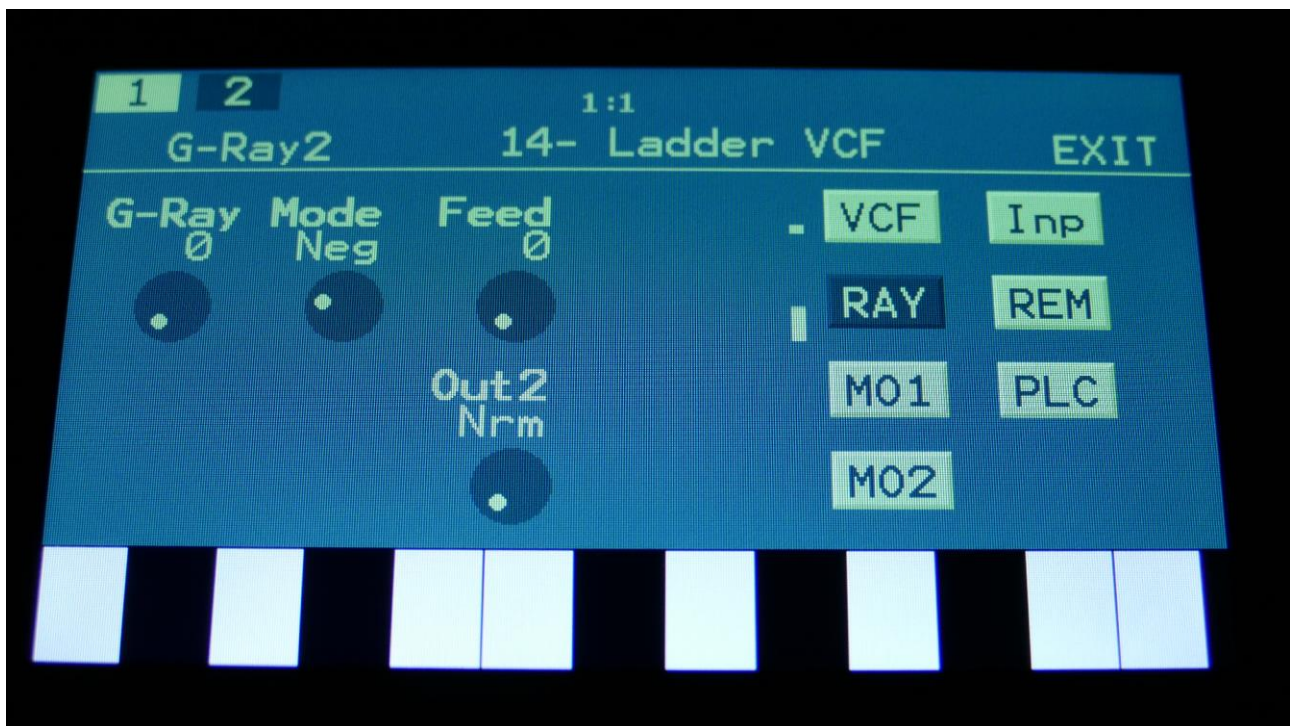

Touch the RAY touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

G-Ray: Adjusts the amount of g-RAY intermodulation. 0: no g-RAY, 3: max g-RAY. Range: 0 to 3.

Mode: G-Ray mode.

-**Norm:** Normal 1:1 feedback.


-**Neg:** 1:1 feedback with the signal inverted (a 180 degree phase shift)

-**Ultr:** Boosted feedback.

-**Uneg:** Boosted feedback with the signal inverted (a 180 degree phase shift)

Feed: 0 to 511. G-Ray feedback level.

Out2: Selects whether output 2 of the analog filter should be normal (**Nrm**) or inverted (**Inv**). Sometimes new filter modes will show, when inverting output 2 of the filter, and adjust the Out1/2 mix.

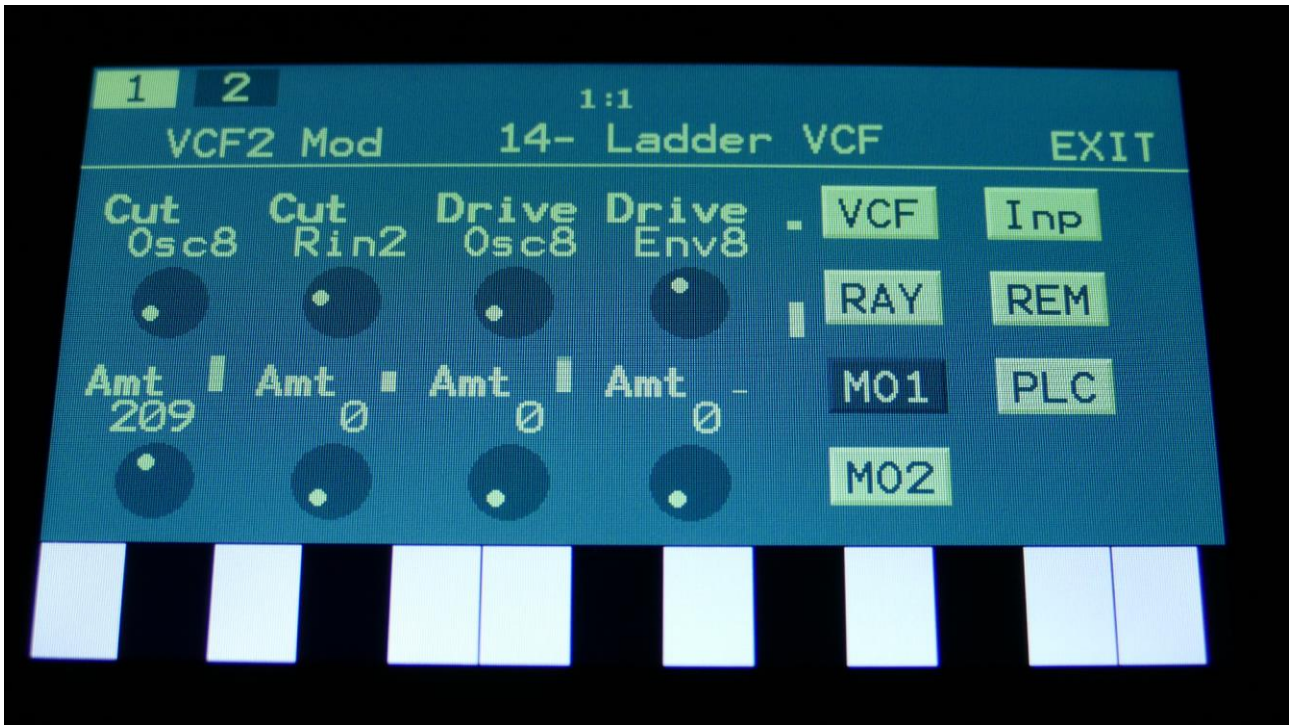

Touch the MO1 touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Cut: Will modulate the Cutoff Frequency.

Drive: Will modulate the Drive parameter.

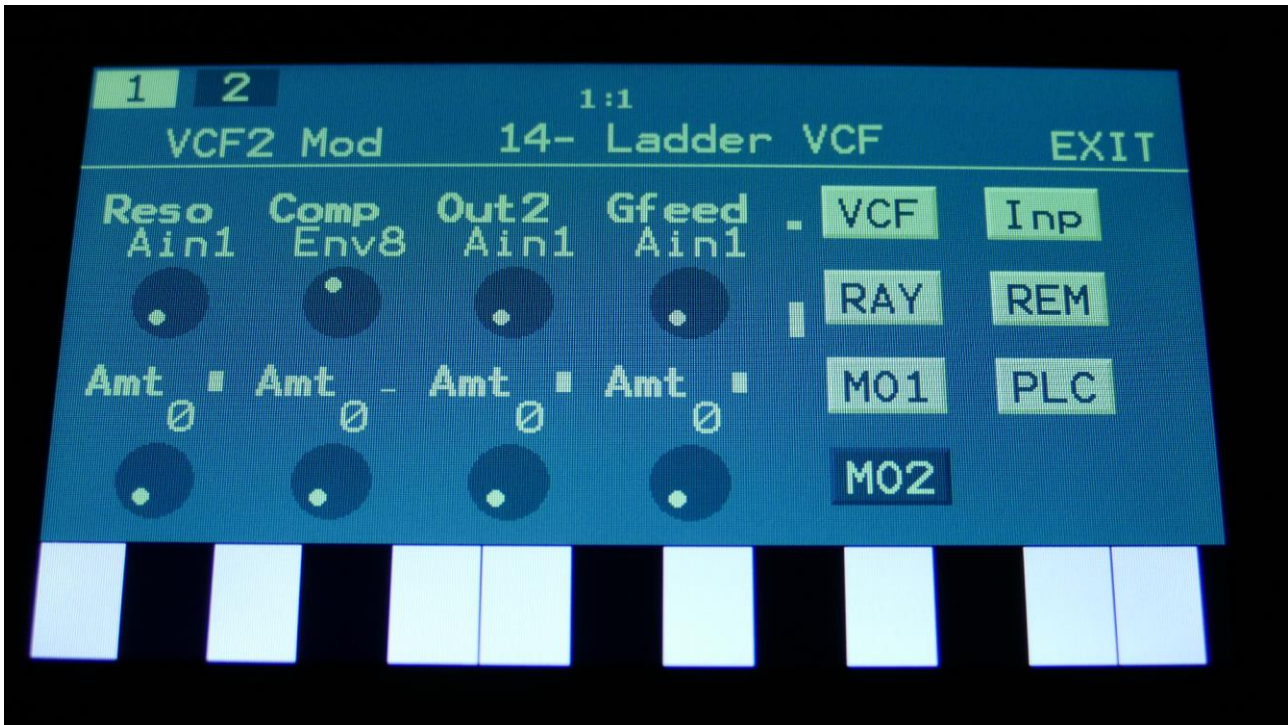

Touch the MO2 touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **The lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Reso: Will modulate the amount of resonance applied to the filter.

Comp: Will modulate the low frequency compensation parameter.

Out2: Will modulate the Out1/2 mix parameter.

Gfeed: Will modulate the amount of G-Ray feedback applied.

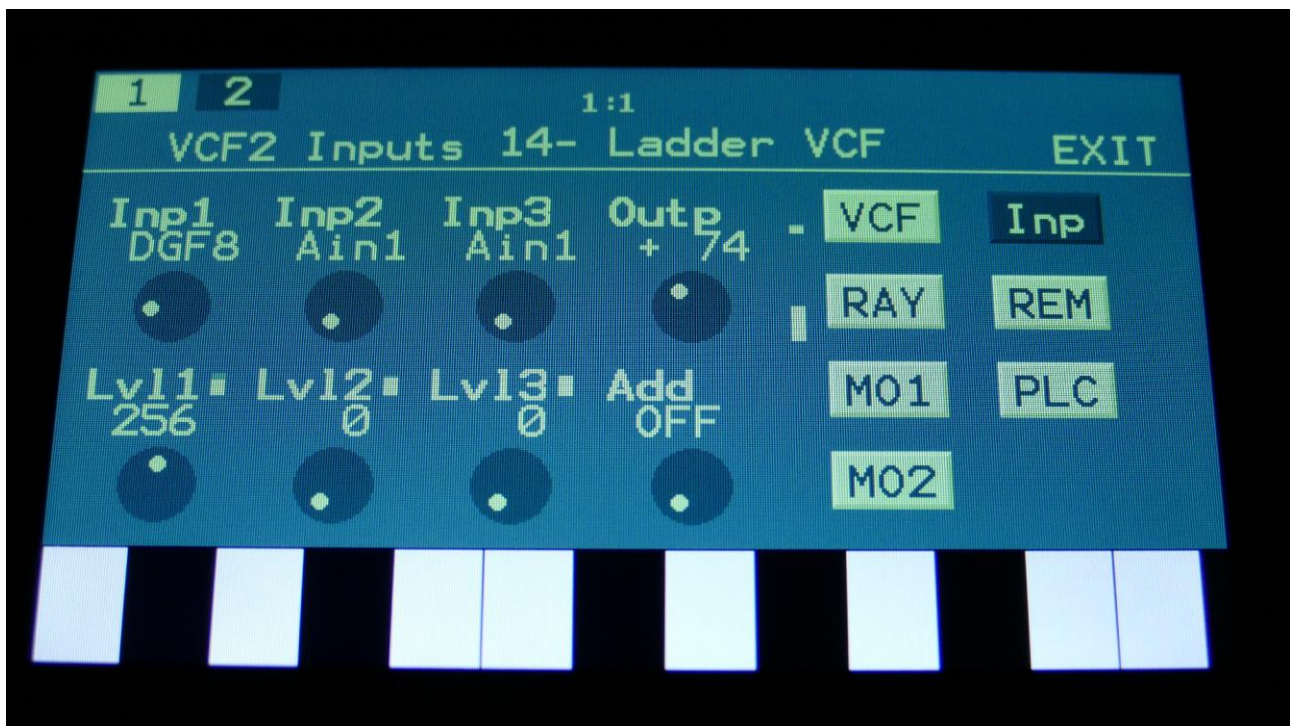

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Outp: Filter Output Level. Negative values are attenuating the output level, positive values are gaining. -128 to +383.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.


VCF49- User Filter Parameters DUAL

This section of the manual describes the user filter parameters, when the filter board is set up as two single filters.


The User filter parameters can be defined by yourself, or a third party filter board maker. The parameters of this will therefore vary, and it is not possible to give an exact explanation of each here. Please refer to the third party documentation.

Please refer to the MOR>VCF TYPES section, on how to define, import and export the User filter.

Please see the separate document “Filterboard Specs”, which can be downloaded from www.gotharman.dk, for how to connect a User filter board.

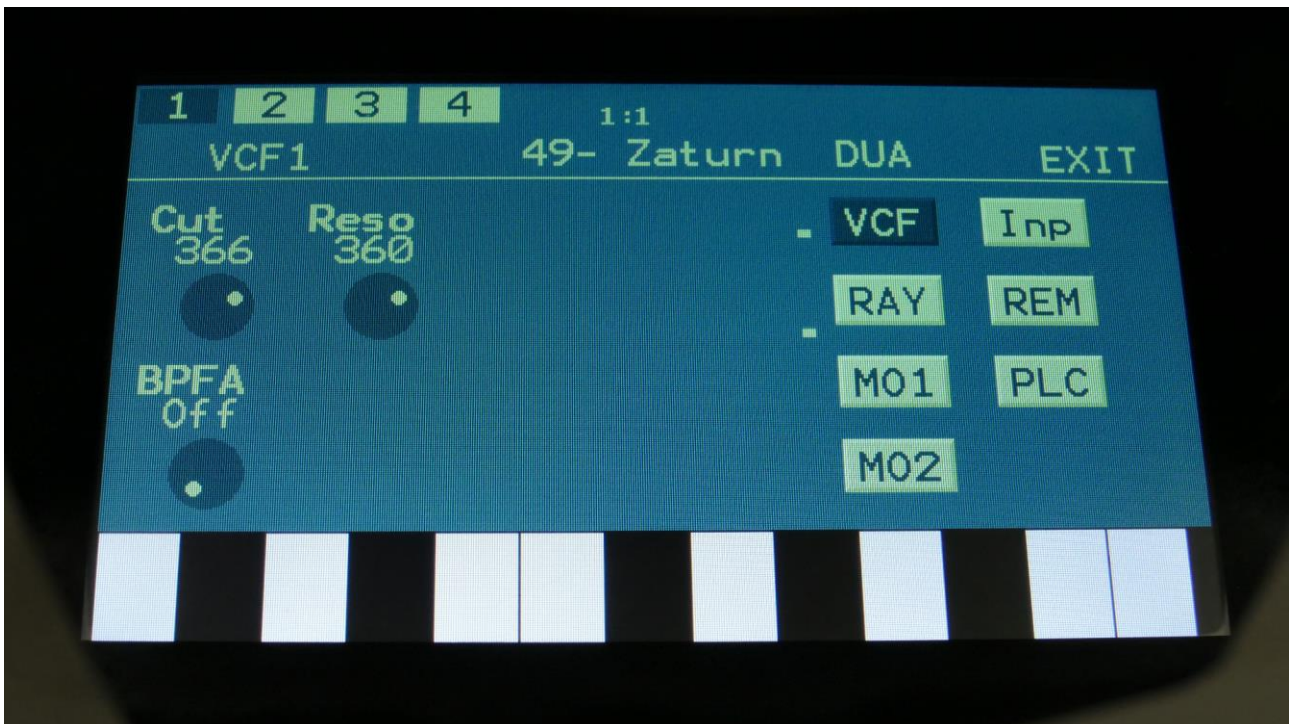


On this first page, the main VCF parameters from the User filter setup page are shown, and can be edited.

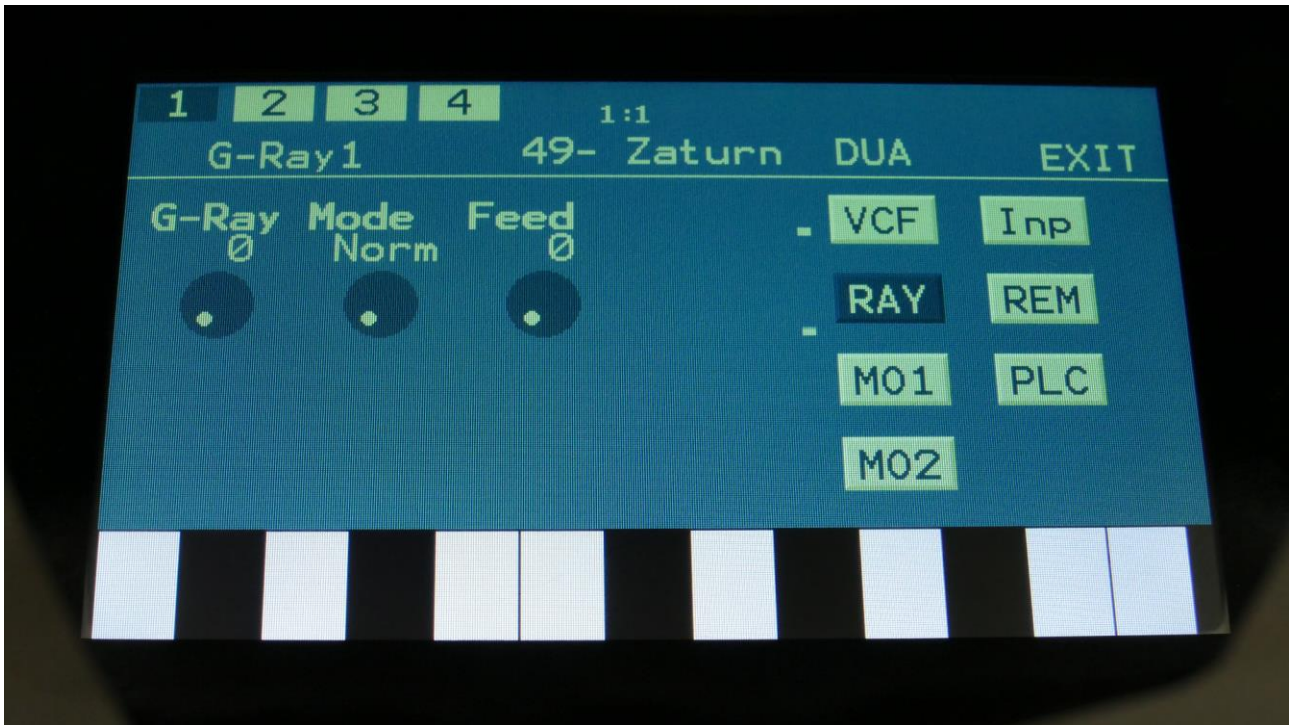


On the second VCF edit page (RAY), you will find the G-Ray parameters as usual.


The G-Ray circuit will, of course, also work with your own filters.

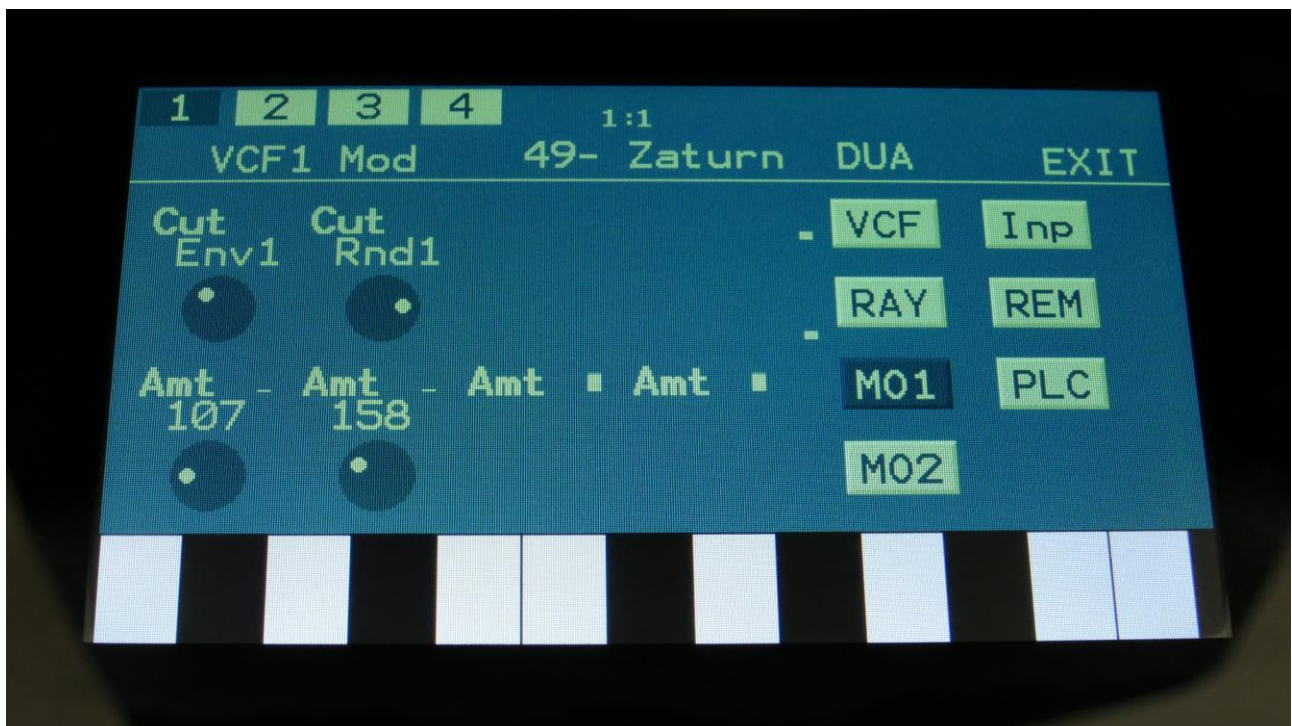

On the third VCF page (M01), you can modulate parameter 1, and the name of this is shown.

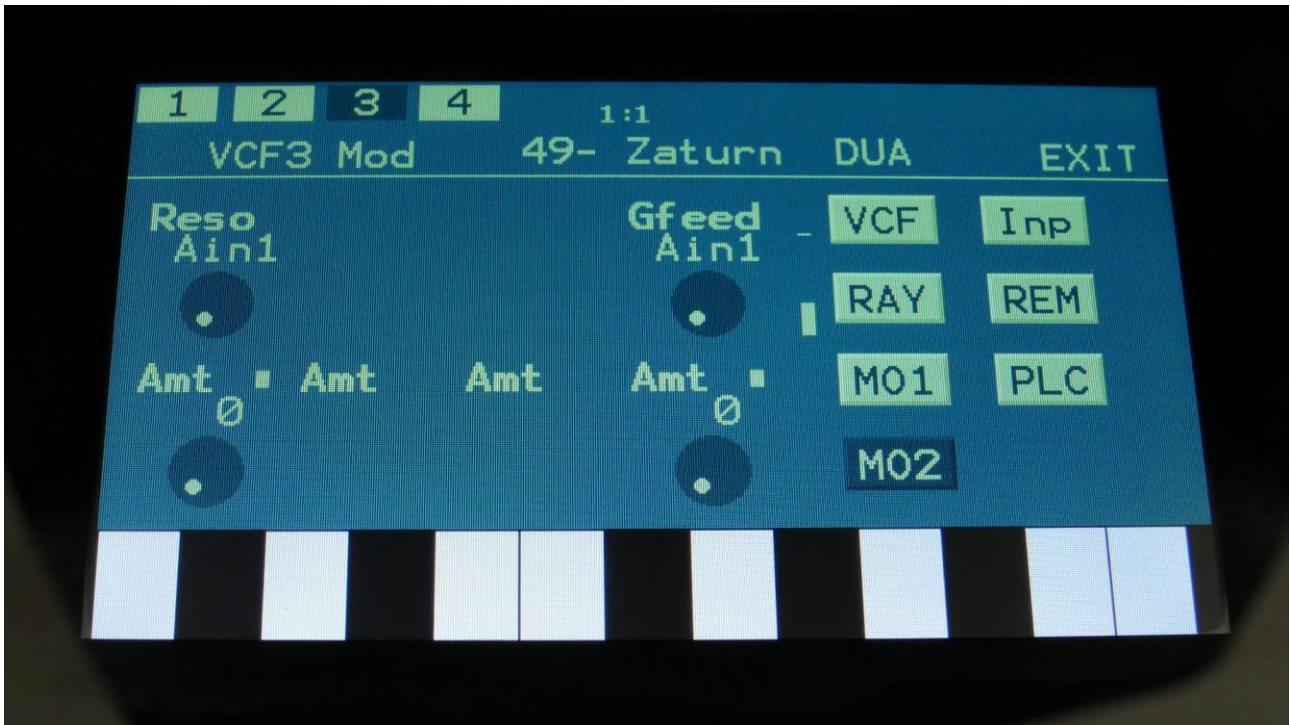

On the fourth VCF page (M02), you can modulate parameter 2 and the G-Ray feedback parameter.

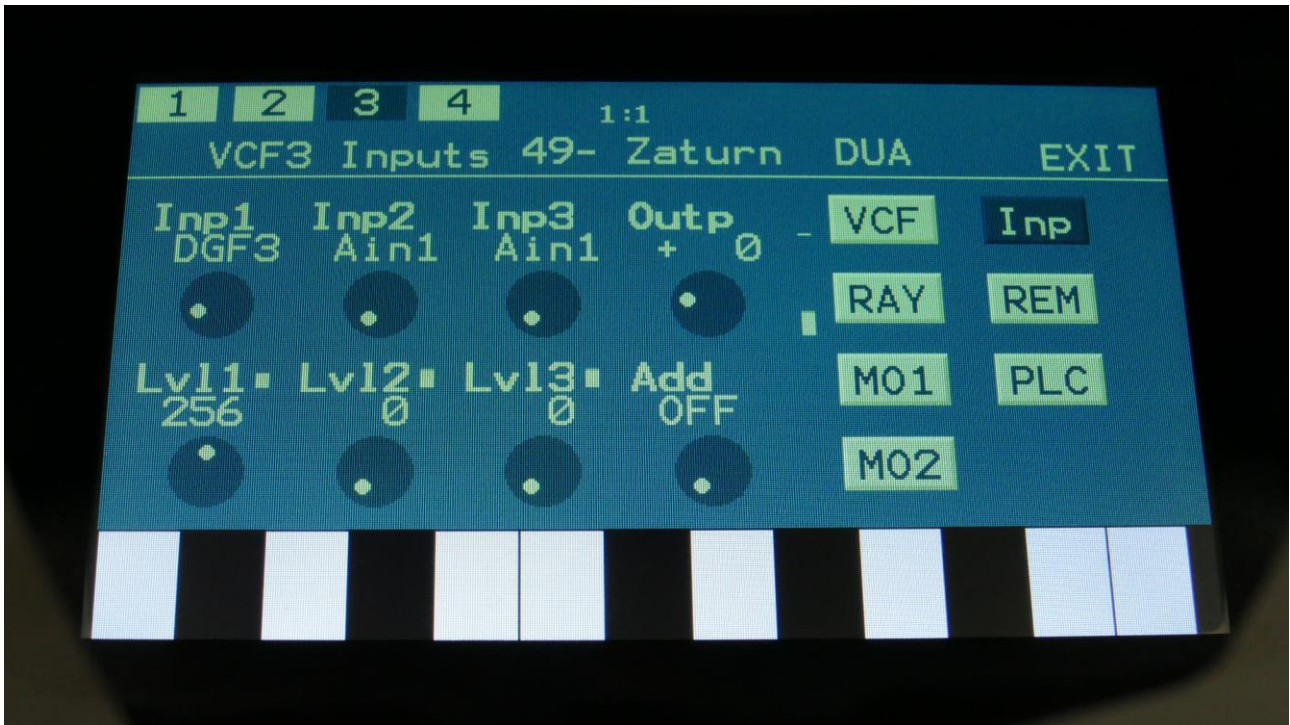

The fifth VCF page (Inp), is exactly the same as for any other filter board.


VCF50- User Filter Parameters SINGLE

This section of the manual describes the user filter parameters, when the filter board is set up as one dual filter.


The User filter parameters can be defined by yourself, or a third party filter board maker. The parameters of this will therefore vary, and it is not possible to give an exact explanation of each here. Please refer to the third party documentation.

Please refer to the MOR>VCF TYPES section, on how to define, import and export the User filter.

Please see the separate document “Filterboard Specs”, which can be downloaded from www.gotharman.dk, for how to connect a User filter board.

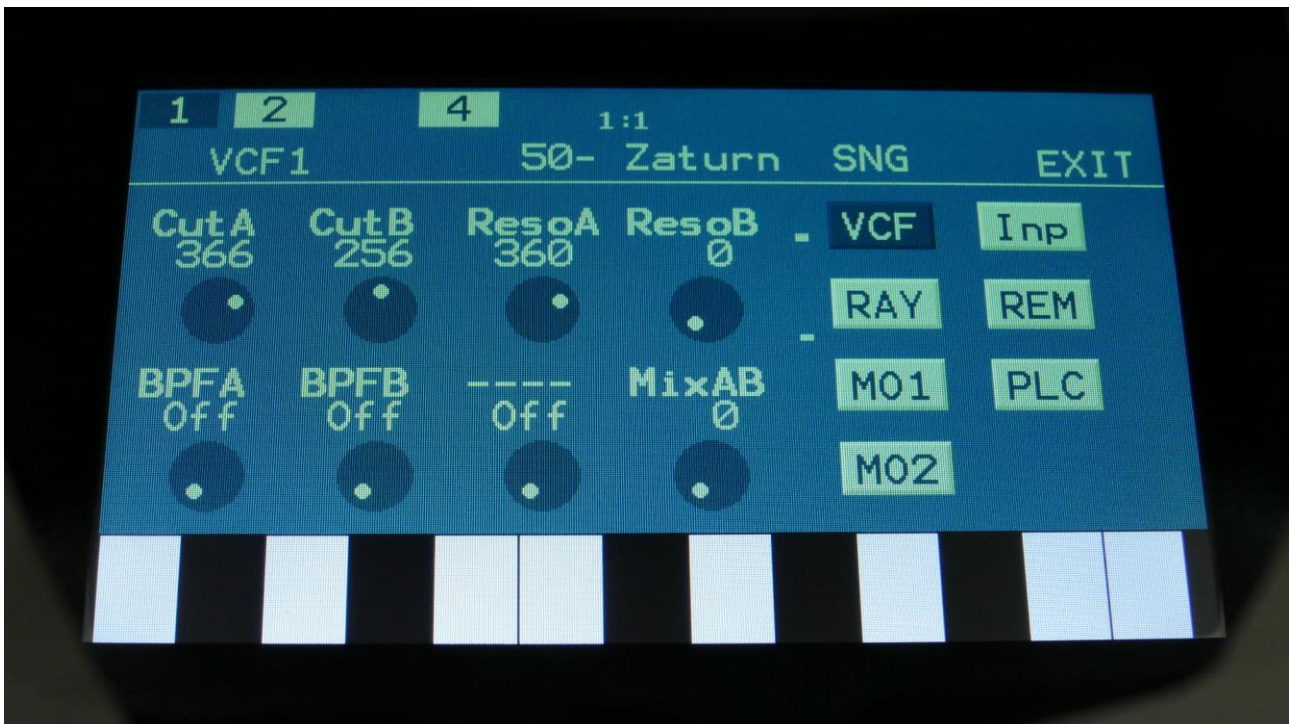


On this first page, the 8 main VCF parameters from the User filter setup page are shown, and can be edited.

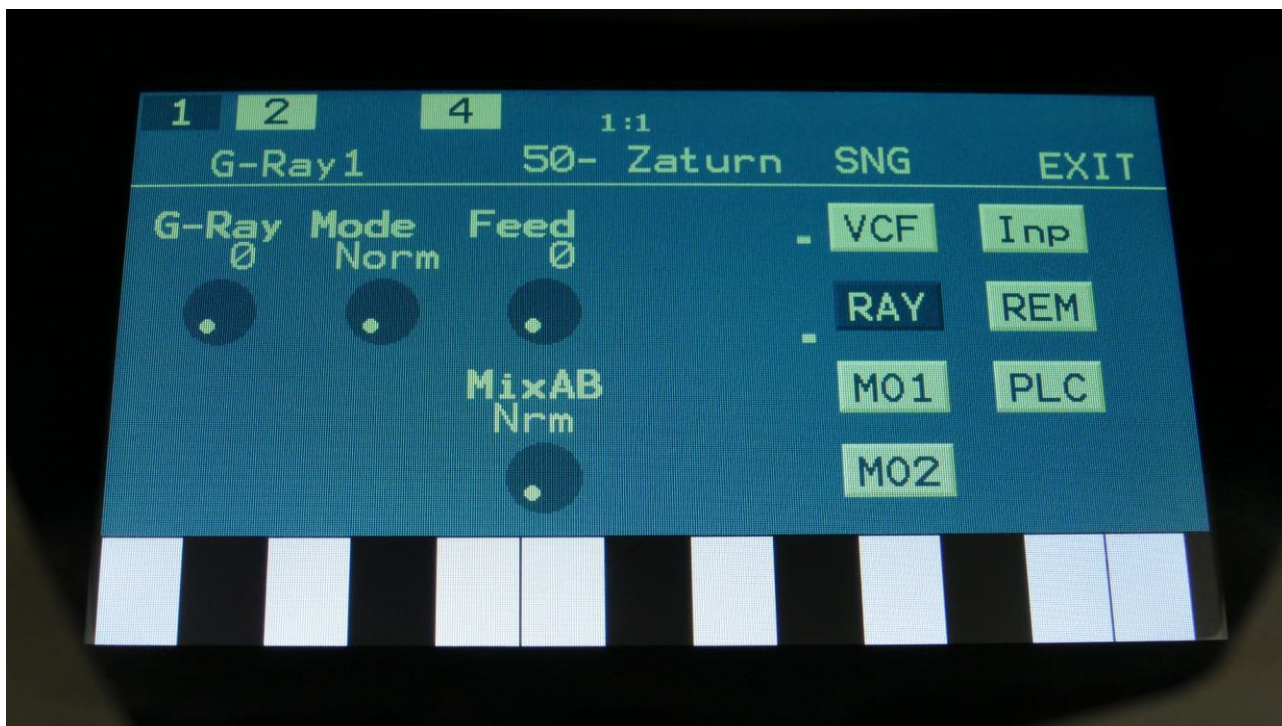


On the second VCF edit page (RAY), you will find the G-Ray parameters as usual, plus you will be able to select, if audio output 2 of the filter, should be normal or inverted (the MixAB parameter in this example).


The G-Ray circuit will, of course, also work with your own filters.

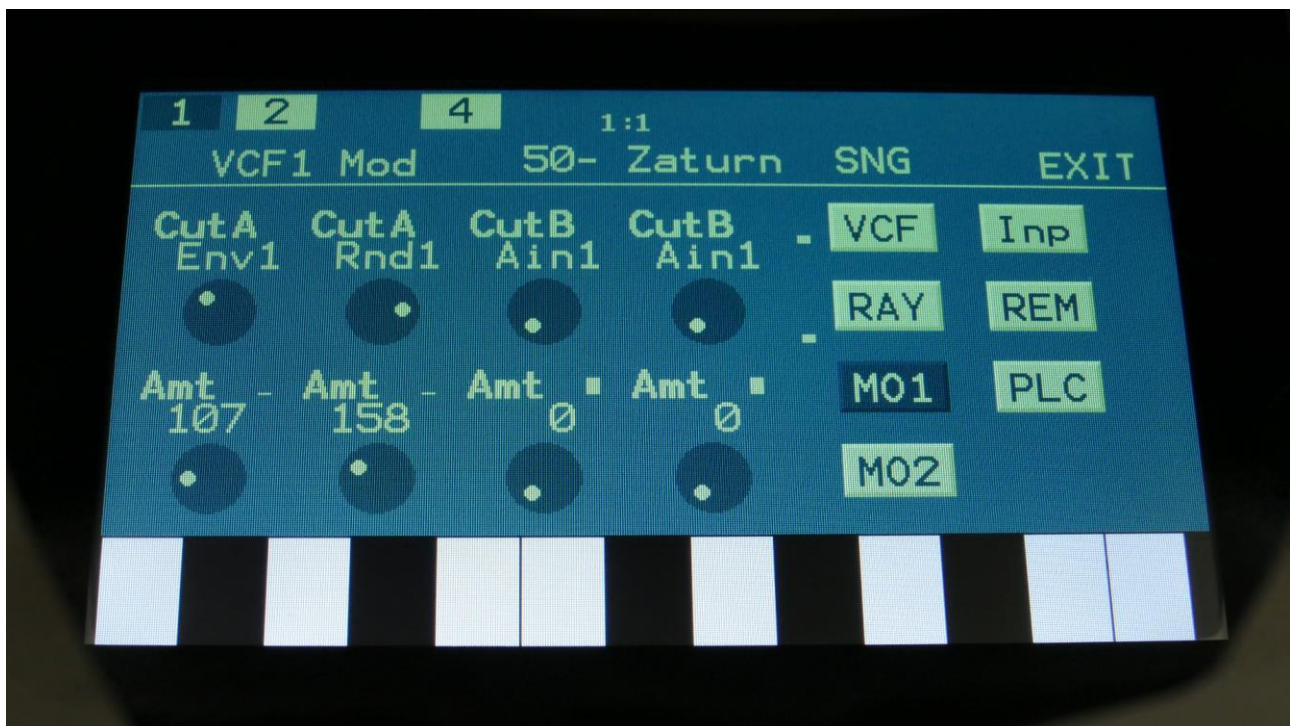

On the third VCF page (MO1), you can modulate parameter 1 and 2, and the names of these are shown.

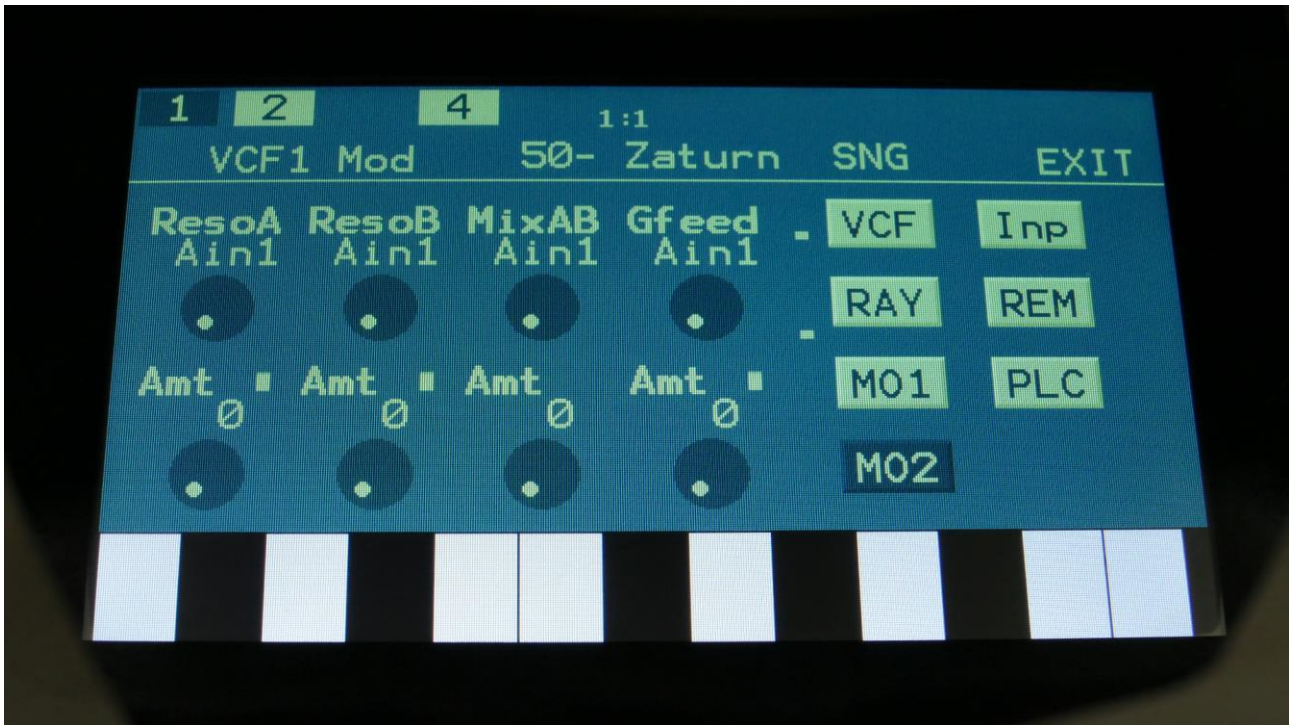


On the fourth VCF page (MO2), you can modulate parameter 3, 4, 8 and the G-Ray feedback parameter.

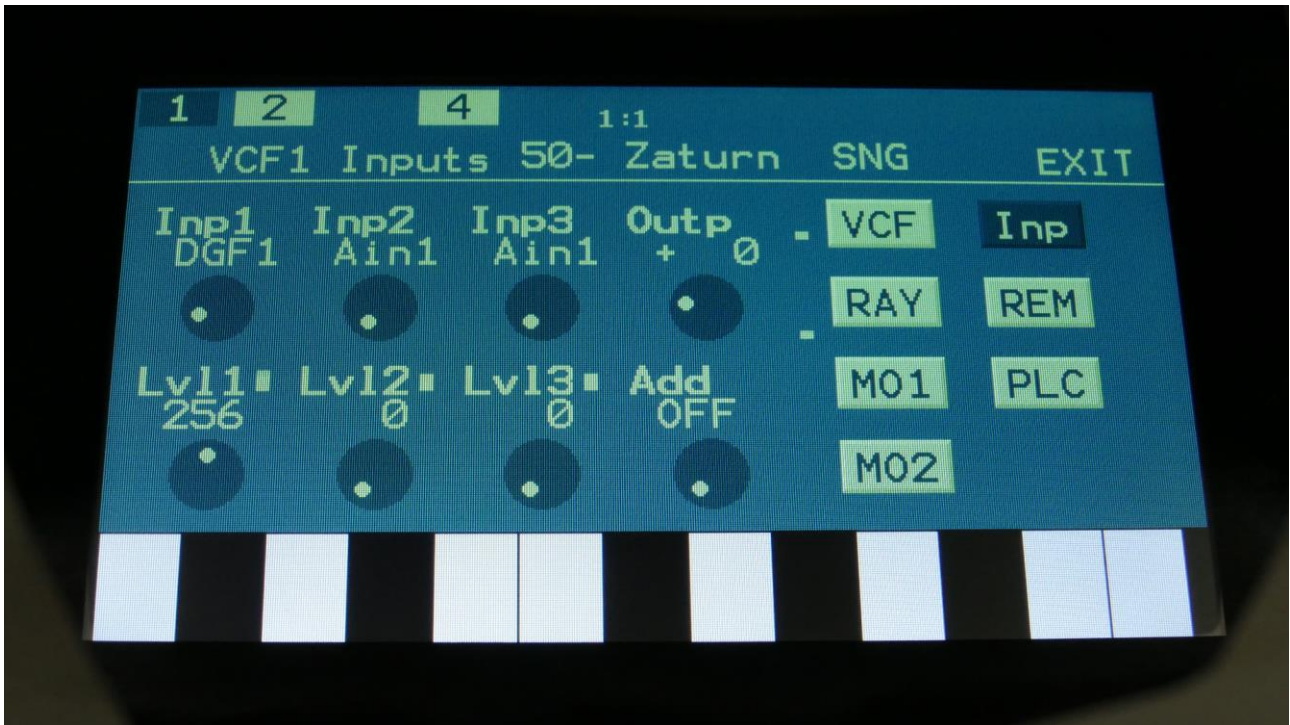

The fifth VCF page (Inp), is exactly the same as for any other filter board.

DGF - Digital Gotharman Filters

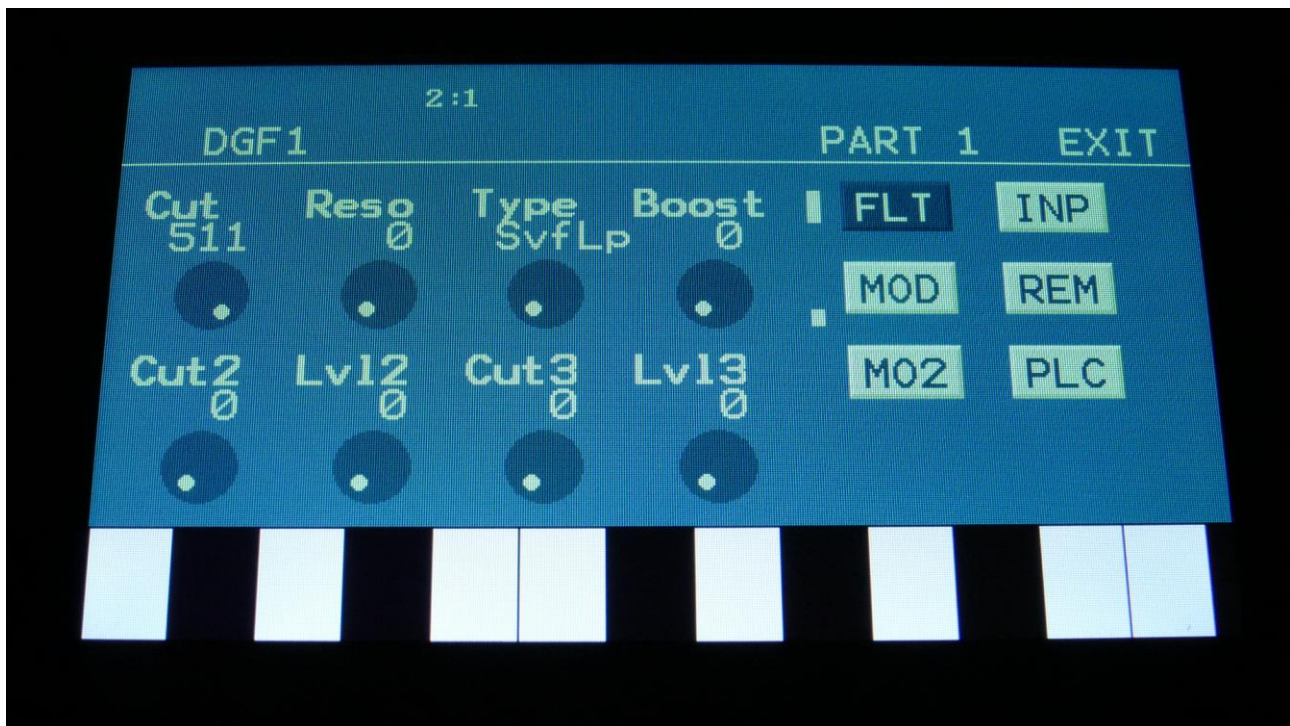

The 8 digital filters on Urano have 27 different filter types to choose from. Cutoff frequencies, resonance and triple filter levels can be adjusted and modulated.

Filter Types:

- SvflP** : 12 dB very smooth lowpass filter.
- SvflBp** : 6 dB very smooth bandpass filter.
- SvflHp** : 12 dB very smooth highpass filter.
- SvflNt** : 6 dB very smooth band eliminate filter.
- ShpLp** : 12 dB lowpass filter with a sharp response.
- ShpHp** : 12 dB highpass filter with a sharp response.
- 3peak** : 3 bandpass filters with a smooth response.
- 3shp** : Sharp triple filters with narrow frequency bands.
- LPF1** : Lowpass filter with emphasis on the bass response. Has a weak high frequency response.
- LPF2** : Lowpass filter with a strong bass response, and better high frequency response than LPF1.
- LPF3** : Lowpass filter that has a bit less character than LPF 1 and 2, but has a sharper resonance.
- LPF4** : Lowpass filter with a bit more emphasis in the bass area.
- LPF5** : Lowpass filter with a more soft character.
- LPF6** : Lowpass filter with soft character, that has a more sharp resonance.
- LPF7** : Thin and sharp lowpass filter.

- BPF1** : Pretty basic bandpass filter.
- BPF2** : Bandpass filter with improved bass response and a strong, almost distorted character.
- BPF3** : Sharp bandpass filter.
- BPF4** : Bandpass filter that is even sharper than BPF3.
- BPF5** : Bandpass filter that is even more sharp than BPF4.
- BPF6** : Thin and sharp bandpass filter.
- BPF7** : Thin bandpass filter, that is a bit sharper than BPF6.
- TUB1, TUB2, TUB3, TUB4, TUB5** : Tube emulation filters with a very nonlinear and distorting response.

Digital Filters Parameters

From the synth Modules page, touch DGF to enter the digital filters.



Touch the FLT touch button, to enter this page.

The VU-meters at the right of the screen, shows the filter input and output activity.

Cut: 0 to 511. Sets the cutoff frequency of the filter.

Reso: 0 to 511. Sets the amount of resonance applied to the filter. When the 3peak or 3shp filter types are selected, this sets the resonance for all 3 bandpass filters.

Type: Sets the filter type. See the list of filter types in the beginning of this chapter.

Boost: 0 to 511. Gains the filter output level.


Cut2: Sets the cutoff frequency for the second bandpass filter, when the 3peak or 3shp filter types are selected.

Lvl2: Sets the output level of the second bandpass filter, when the 3peak or 3shp filter types are selected.

Cut3: Sets the cutoff frequency for the third bandpass filter, when the 3peak or 3shp filter types are selected.

Lvl3: Sets the output level of the third bandpass filter, when the 3peak or 3shp filter types are selected.

Filter Modulation 1

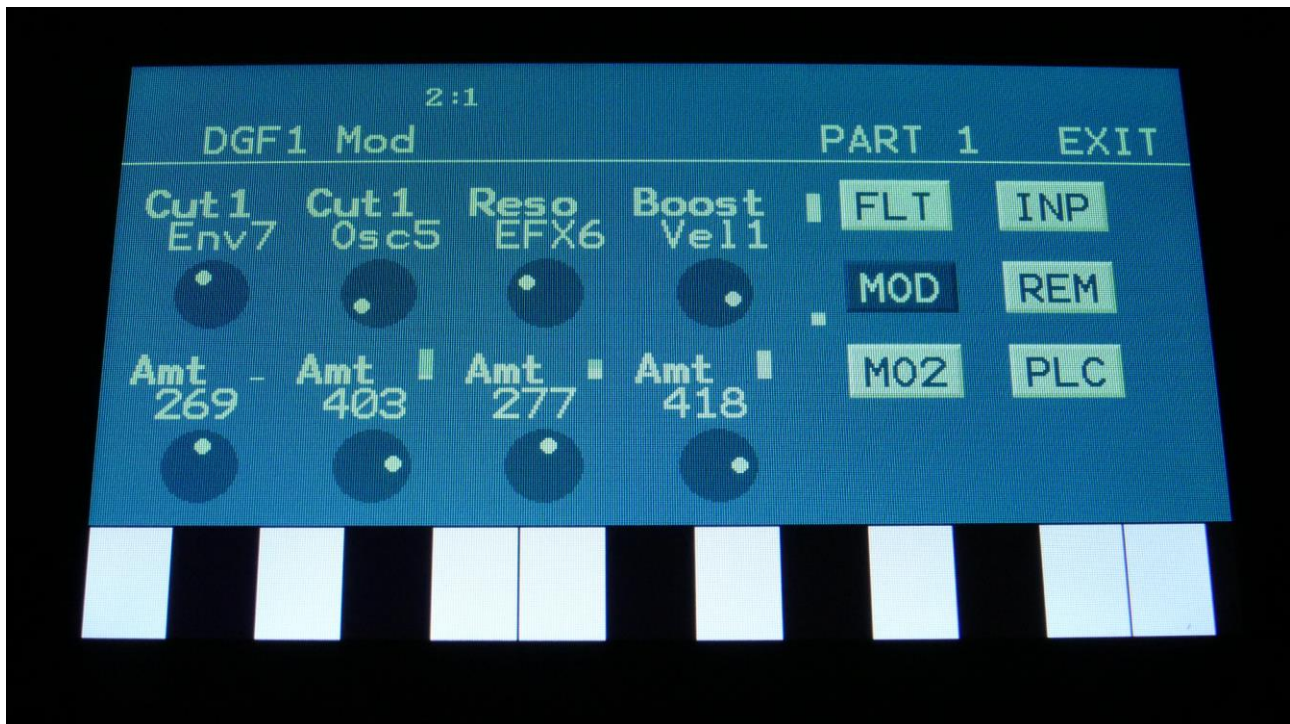

Touch the MOD touch button, to enter the Filter Modulation 1 page.

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.


For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

Cut1, Cut1: Will modulate the filter cutoff frequency.

Reso: Will modulate the amount of resonance applied to the filter.

Boost: Will modulate the filter output Boost.

Filter Modulation 2

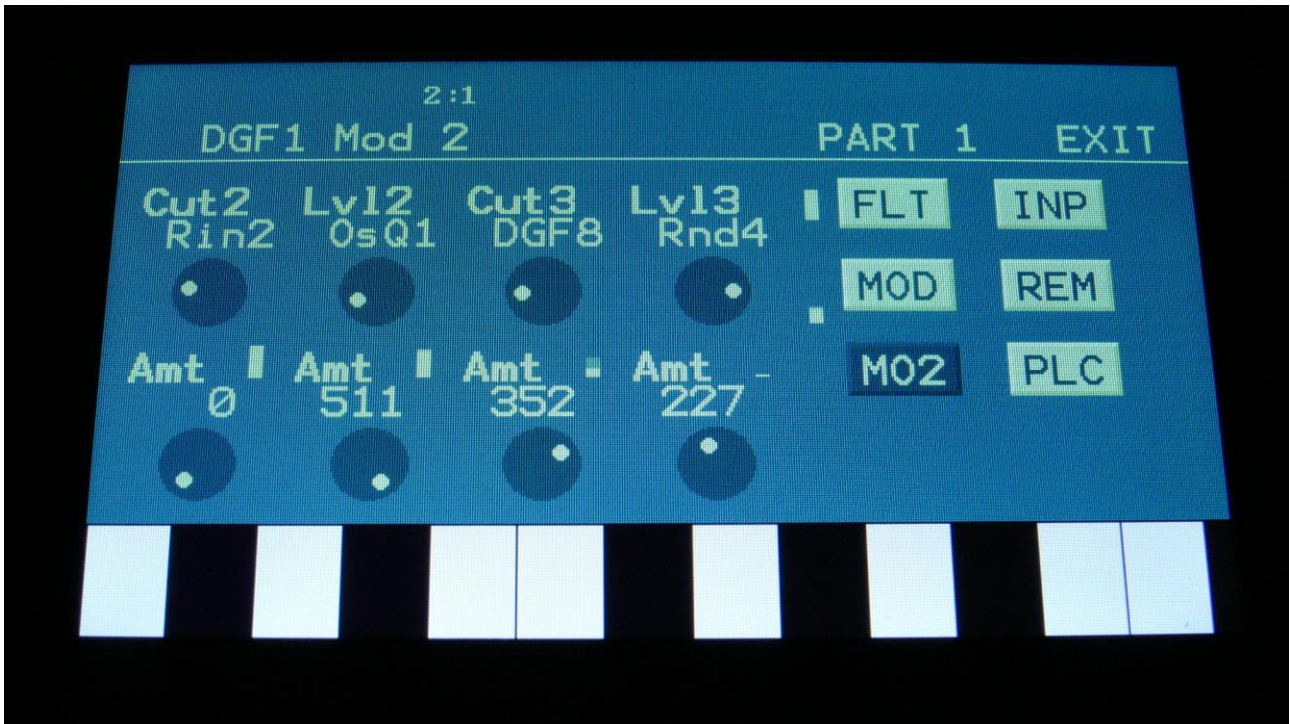

Touch the MO2 touch button, to enter the Filter Modulation 2 page.

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


Cut2: Will modulate the filter cutoff frequency of the second bandpass filter, when the 3peak or 3shp filter types are selected.

Lvl2: Will modulate the output level of the second bandpass filter, when the 3peak or 3shp filter types are selected.

Cut3: Will modulate the filter cutoff frequency of the third bandpass filter, when the 3peak or 3shp filter types are selected.

Lvl3: Will modulate the output level of the third bandpass filter, when the 3peak or 3shp filter types are selected.

Filter Inputs

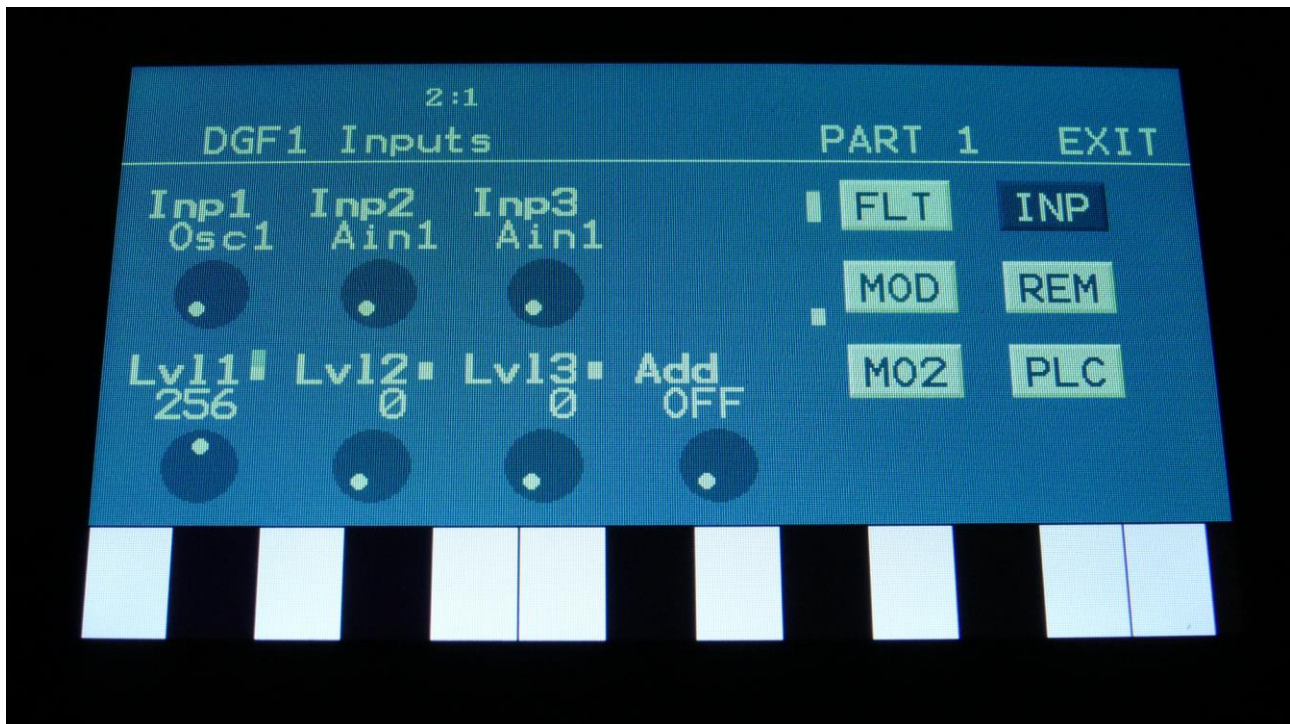

Touch the Inp touch button, to enter this page.


The VU-meters at the right of the screen, shows the filter input and output activity.

Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the filter. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Filter input levels. Sets the levels for each of the 3 sources, connected to the filter inputs. 0 to 511.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the filter inputs, so that the filter will have 7 audio inputs in total. Off, 1, 2.


VCA

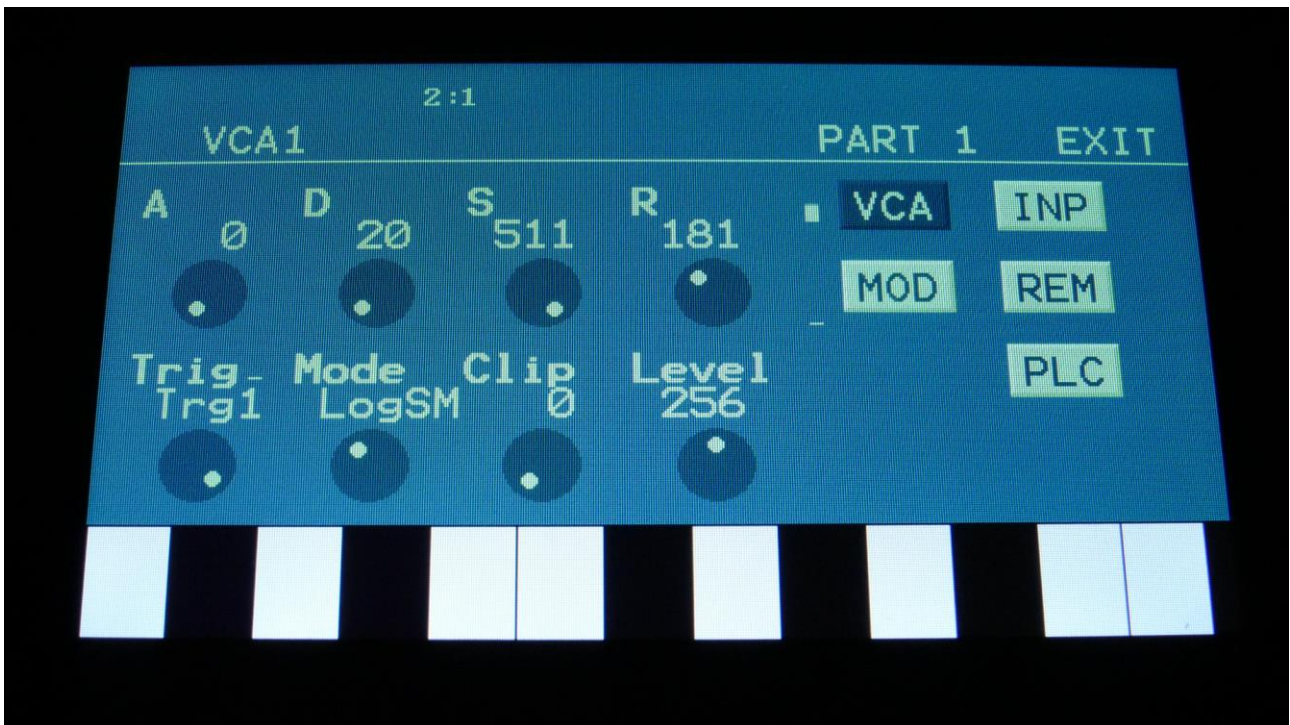

Urano has 8 VCA's with built-in ADSR Envelopes and an envelope Clip parameter, that adds more punch to the VCA. The VCA's can run in various linear and logarithmic modes, and the envelope time can be timed by 4, for long envelope times. The VCA envelopes can be triggered by any sources. The A, D, R and output level parameters can be modulated.

VCA Parameters

From the synth modules page, touch VCA to enter the VCA pages.

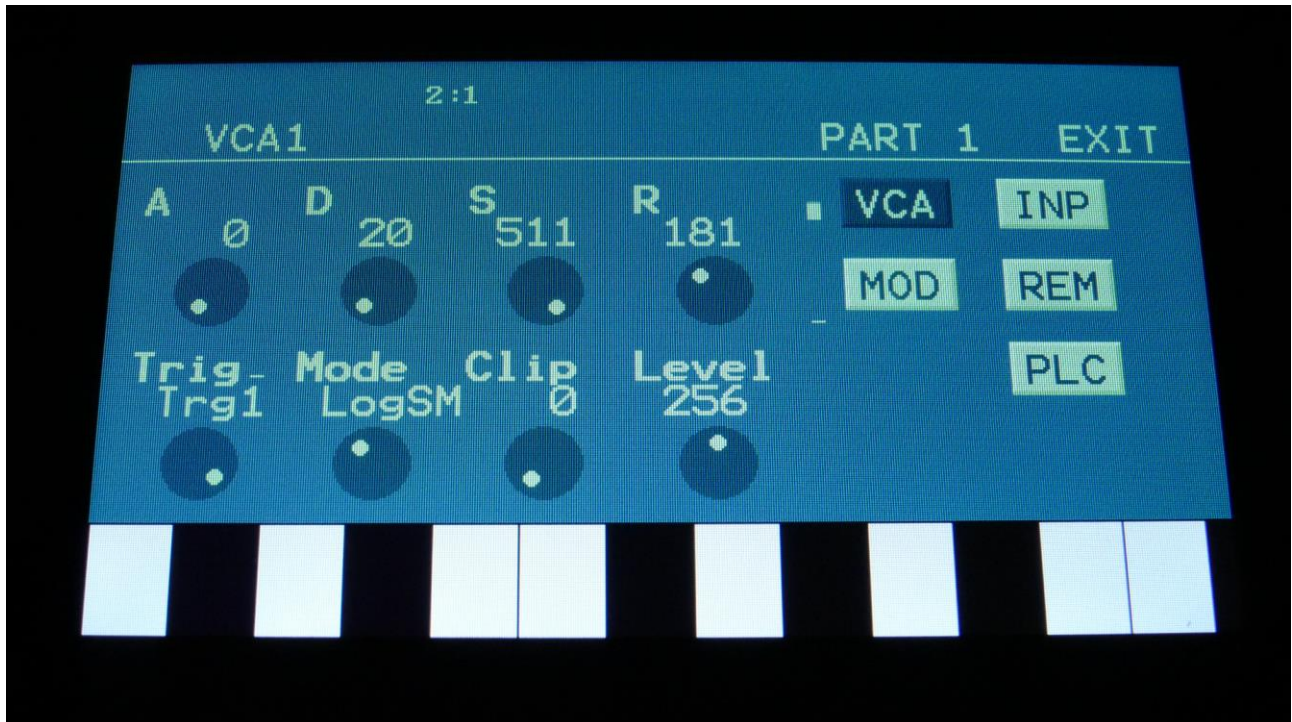

Touch the VCA touch button, to enter the VCA parameters page.

The VU-meters at the right of the screen, shows the VCA input and output activity.

A: 0 to 511. VCA envelope attack time. The time it will take the VCA envelope to rise from zero to its maximum value, when a note event is received and held down.

D: 0 to 511. VCA envelope decay time. When the VCA envelope has reached its maximum value, in the time set by the attack parameter, it will decay, until it reaches the sustain level, and stay there, as long as the note that triggered it is held.

S: 0 to 511. VCA envelope sustain level. Explained under the "D" parameter.

R: 0 to 511. VCA envelope release time. The time it will take the VCA envelope to decay from the value it is at, when a note off event are received, to zero.


Trig: VCA Envelope trigger. Any modulation/audio source can trigger the VCA. For a complete list of modulation sources, see the “Connecting Modules” chapter, later in this manual. For “normal” use, you would set this between “Trg1” and “Trg8”, which is the part triggers.

Mode: Selects if the VCA behavior should be linear (**Lin**), logarithmic (**Log**), smooth linear (**LinSM**) or smooth logarithmic (**LogSM**). The logarithmic curve gives the sound a softer and less “clicky” attack. The smooth modes produces no clicking at all. The **Lin4**, **Log4**, **LinS4** and **LogS4** modes sets the behaviors as mentioned above, but with envelope times, that are 4 times longer.

Clip: 0 to 511. VCA envelope clip. When this is turned up, the top of the VCA envelope curve will be more and more flattened out. This will give more punch to the sound. The effect of this is most significant with lower sustain values and shorter decay times.

Level: The VCA output level.

VCA Modulation

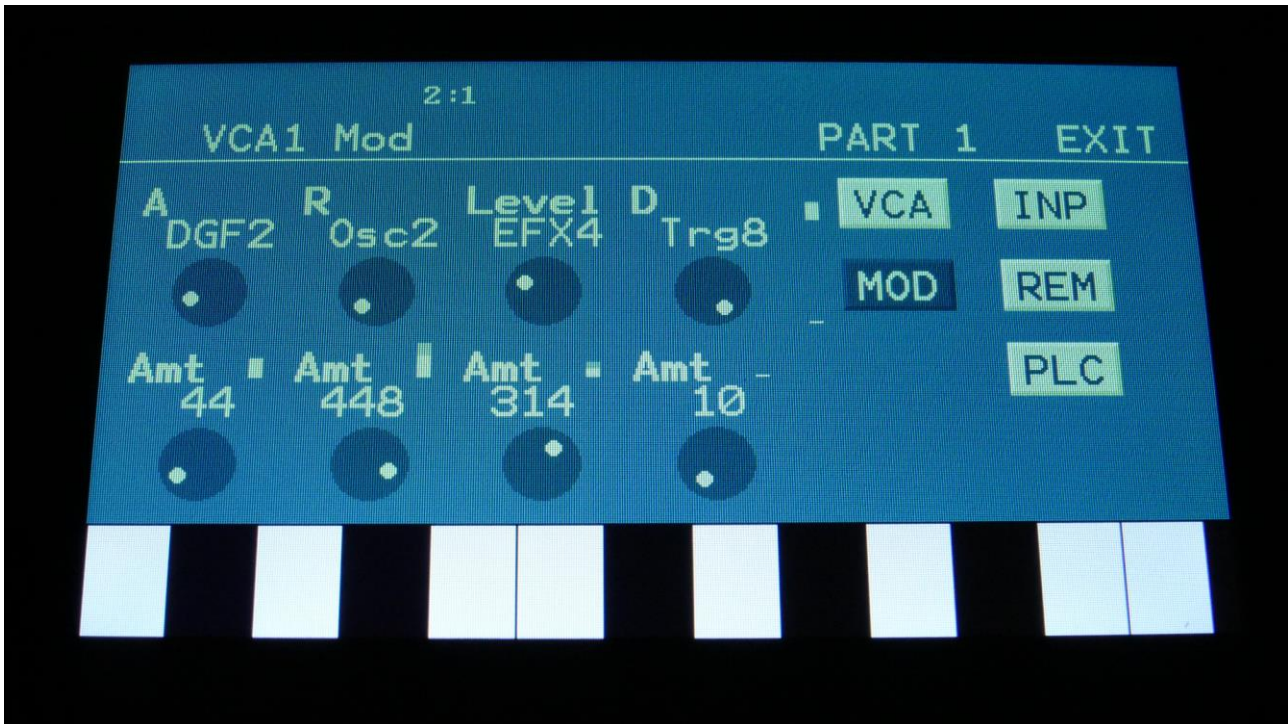

Touch the MOD touch button, to enter the VCA modulation page.

The VU-meters at the right of the screen, shows the VCA input and output activity.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


A: Modulates the VCA Envelope attack time.

R: Modulates the VCA Envelope release time.

Level: Modulates the output level of the VCA.

D: Modulates the VCA Envelope decay time.

VCA Inputs

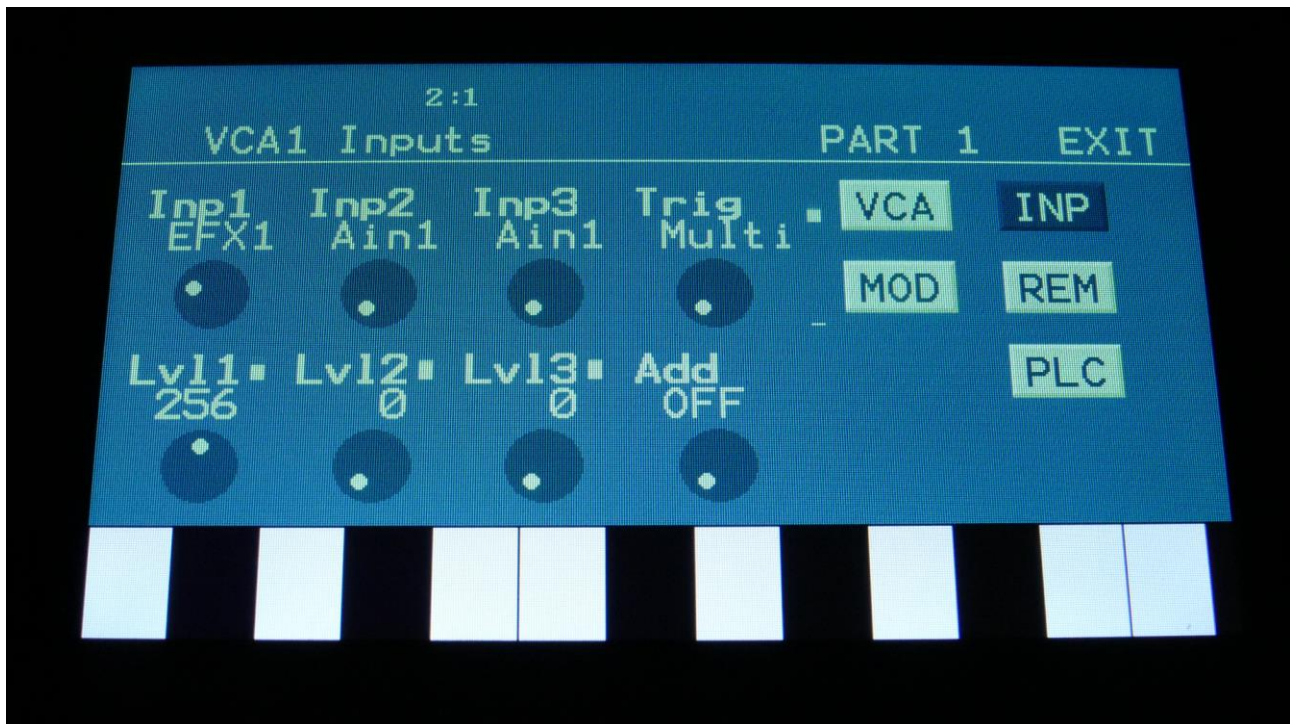

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the VCA input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the VCA. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: VCA input levels. Sets the levels for each of the 3 sources, connected to the VCA inputs. 0 to 511.


Trig: Sets the VCA Envelope to be multi or single triggered. In multi triggered mode, when the VCA envelope is triggered from any internal note sources (touch screen keyboard, trigger buttons, internal sequencer), the envelope will be re-triggered every time it gets a trigger on, regardless of if the previous trigger was released. In single trigger mode, the previous trigger has to be completely released, before a new trigger can trig the envelope. The multi trigger is an internal system, and it only works with internal note sources. When triggered from external sources, via the trigger inputs, or an internal non-note source (LFO's etc.) the envelope will always be in single trigger mode.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the VCA inputs, so that the VCA will have 7 audio inputs in total. Off, 1, 2.


MIX – Add Mixers

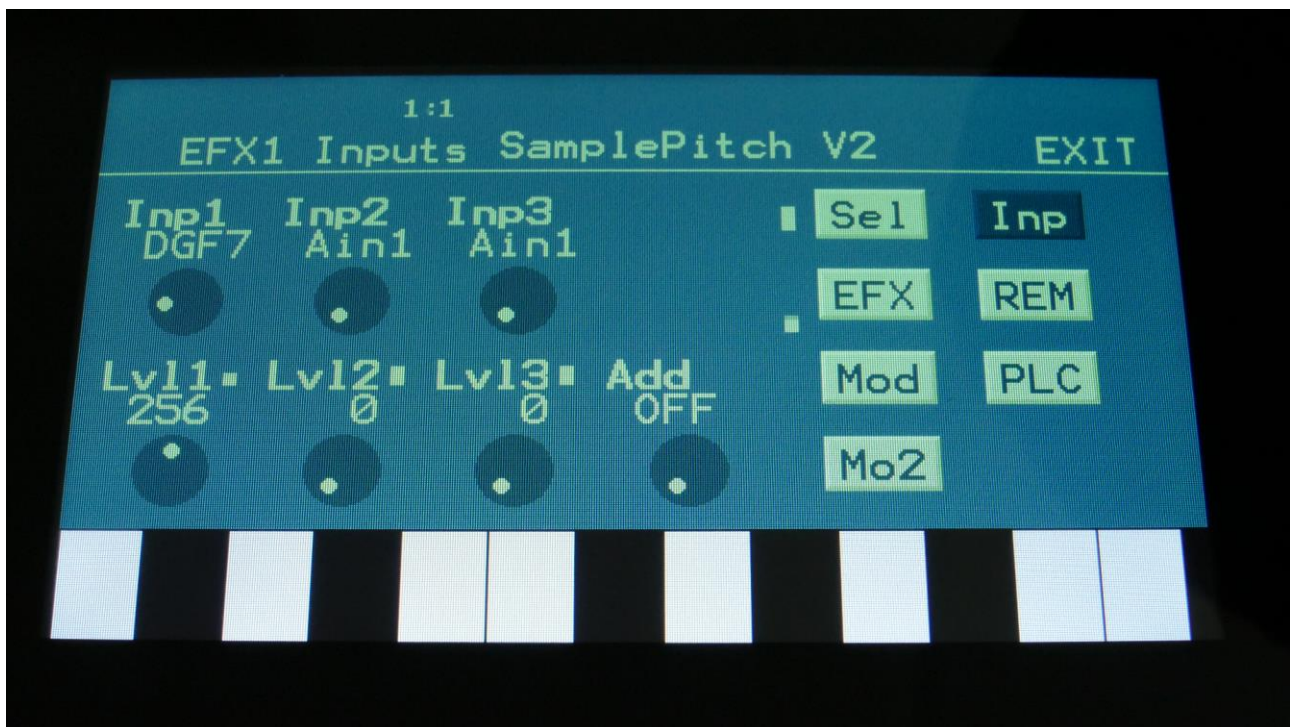

Every modules that has audio inputs, has 3 of these - DGF, VCF, VCA, EFX. If more audio inputs are needed, one of two extra "add mixers" can be added, by using the "Add" parameter. Adding an Add Mixer to a module, will add 4 extra audio inputs - 7 inputs in total. The same Add Mixer can be used in multiple modules, if you would like to add the same signals to each of these.

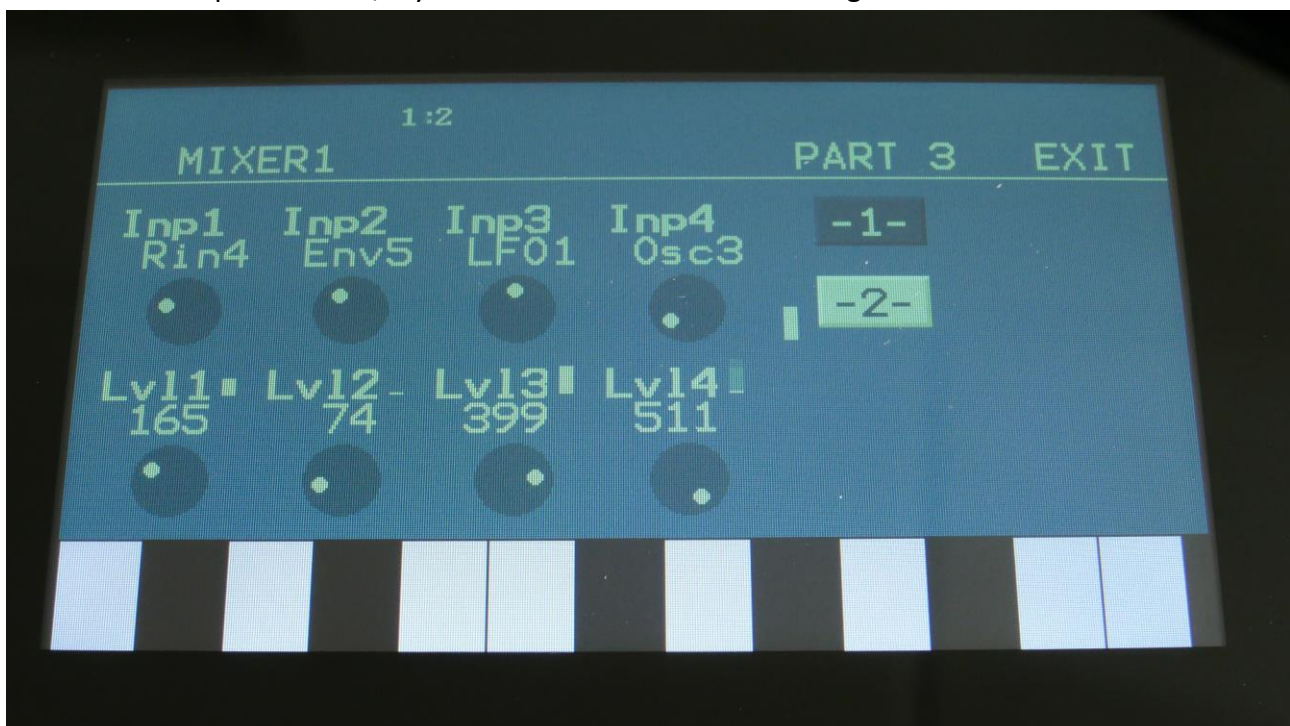

Add Mixer Parameters

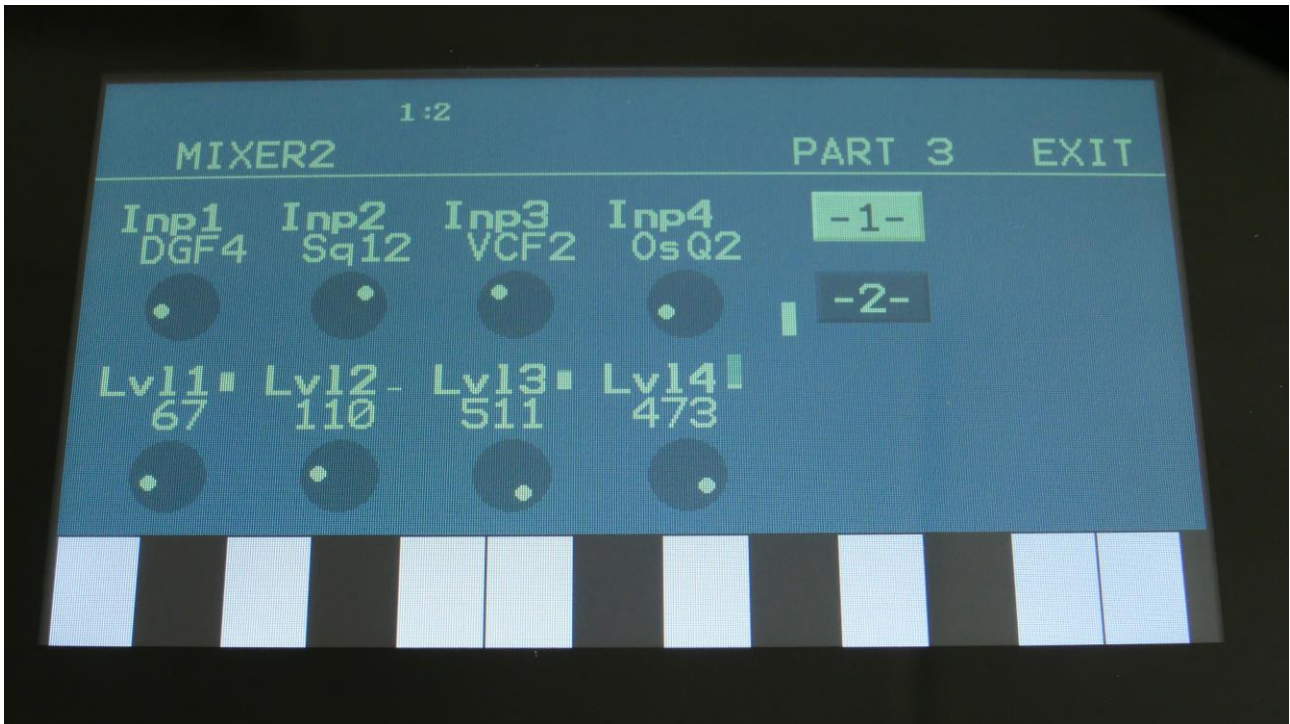


The VU-meter at the right of the screen, shows the Mixer output activity.

Inp1, Inp2, Inp3, Inp4: Select any 4 module outputs, to connect to the 4 audio inputs of the mixer. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.


Lvl1, Lvl2, Lvl3, Lvl4: Mixer input levels. Sets the levels for each of the 4 sources, connected to the mixer inputs. 0 to 511.

RING VCA

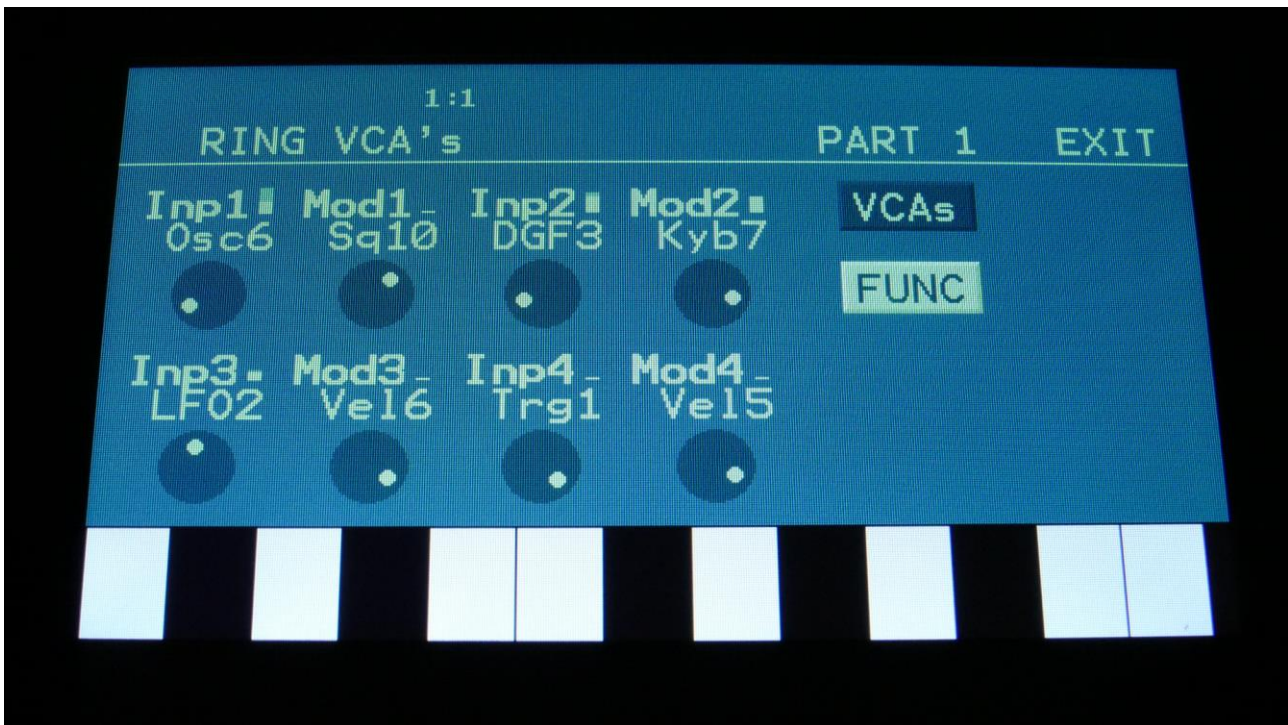

Urano has 4 Ring VCA's, which can be used as both VCA's, Ring Modulators, as logic modules and as mixers.

Ring VCA Parameters

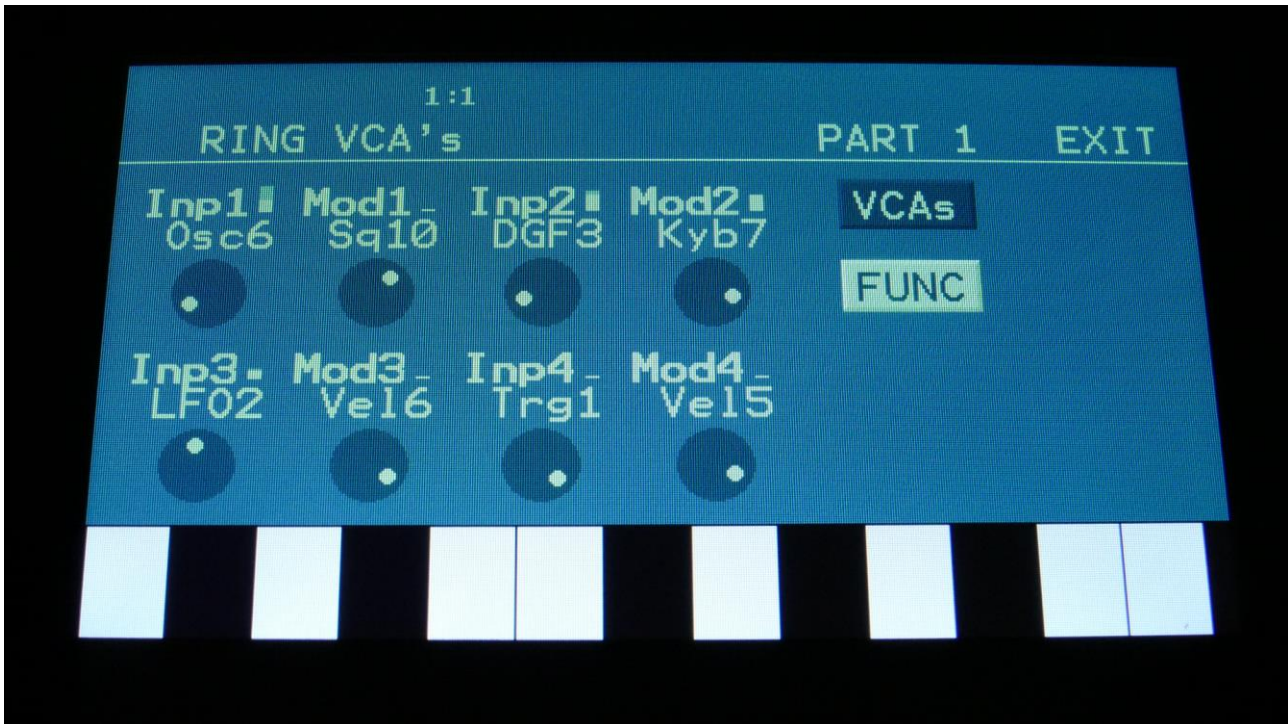

Touch the VCAs button to enter this page.

Inp1, Inp2, Inp3, Inp4: Source inputs. Connects any audio/modulation source to the input of the Ring VCA. This is the input, that gets modulated. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.


Mod1, Mod2, Mod3, Mod4: Modulation inputs. Connects any audio/modulation source to the modulation input of the ring VCA. This is the input, that modulates the other input. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Setup examples:

Ring Modulator: Connect audio range modulators (like oscillators or samples) to both inputs.

Modulation VCA: Connect the source that you would like to be level modulated to “Inp”, and connect the desired level modulator to “Mod”.

Logic module and Mixer: Please see the next page, describing the Ring VCA’s FUNC page.

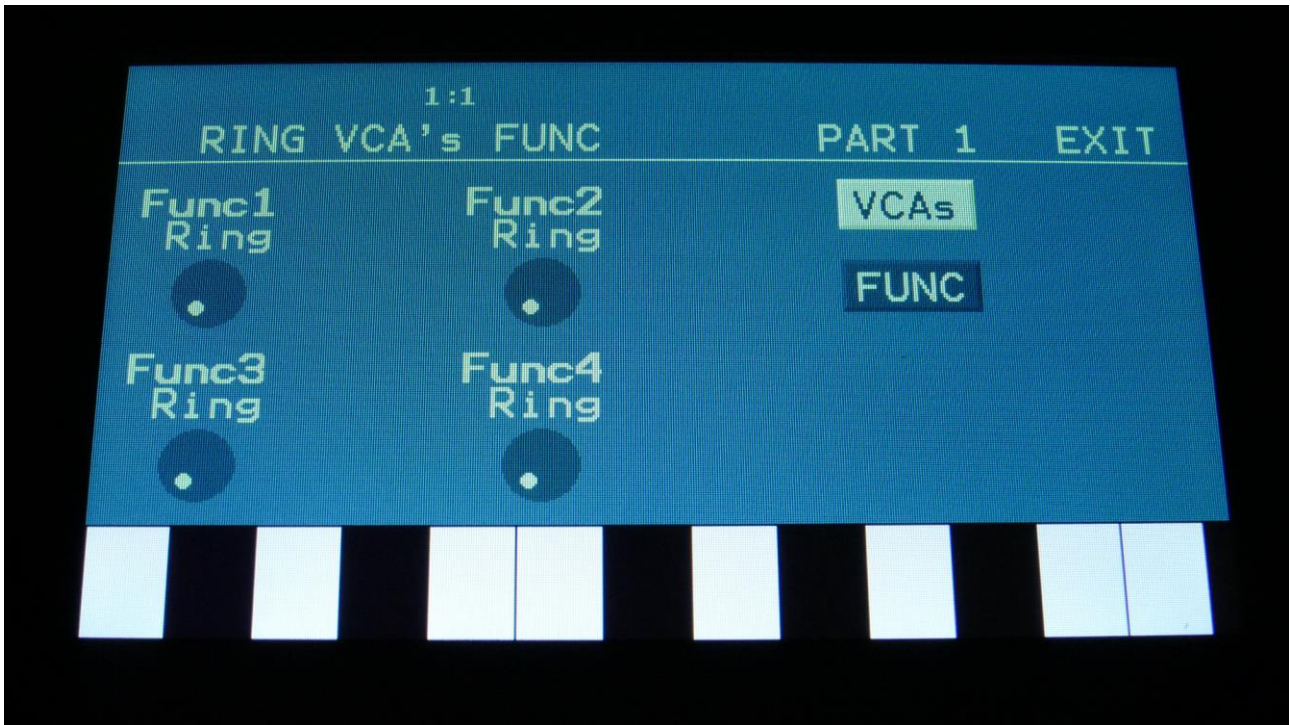


Touch the FUNC button to enter this page.

On this page, you can set the function for each Ring VCA, by setting the parameters **Func1, 2, 3 and 4**.

The functions that can be selected:

- Ring**: The standard Ring VCA functionality.
- XOR1**: Will quantize the 2 input signals to low/high square waves, and perform an exclusive or function on these.
- XOR2**: Will look at the input signals as 16 bit waveforms, and perform an exclusive or function on each of these bits separately.
- AND1**: Will quantize the 2 input signals to low/high square waves, and perform an AND function on these.
- AND2**: Will look at the input signals as 16 bit waveforms, and perform an AND function on each of these bits separately.
- OR1**: Will quantize the 2 input signals to low/high square waves, and perform an OR function on these.
- OR2**: Will look at the input signals as 16 bit waveforms, and perform an OR function on each of these bits separately.
- Mix**: Will mix the 2 input signals together.

EFX - Effect Processors

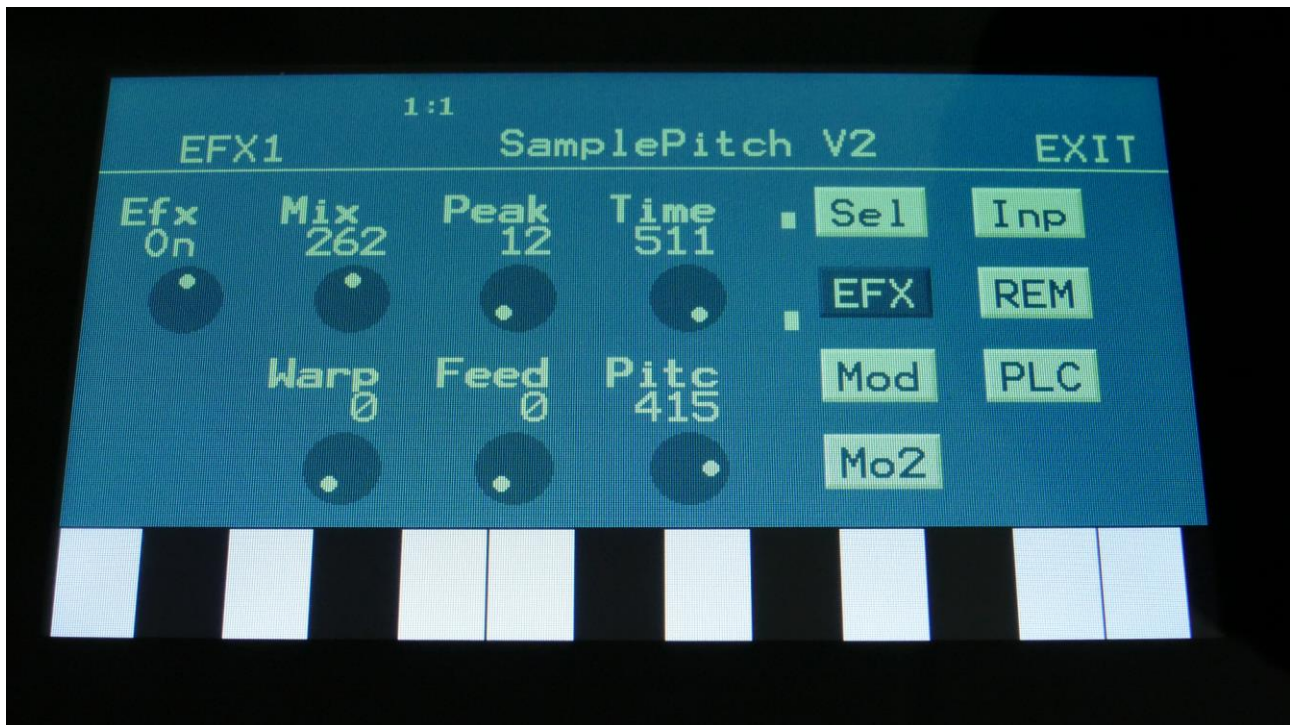

Urano has 8 effect processors. Effect 1 to 6 has more effect types to choose from, than effect 7 and 8, but effect 7 and 8 has a larger RAM buffer, so these are better suited for reverbs and delays. Most parameters can be modulated. Urano has many of the classic deFormer effect, but also some new ones, like a wavefolder, a new reverb, and some new pitch effects.

Effect 1 to 6 types

-**Chorus** : Gotharman's special chorus with an added Deep parameter, that adds space to the chorus.

-**Resonator** : Simulates the resonances that comes, if a sound goes through a small box. Urano's resonators are synthetic, with more focus on making sounds, than on simulating actual boxes.

-**Distortion** : 5 types: Valve, Sine, Fuzz, Xdis, Asym.

-**Bit Crush** : Lowers the sample rate and the bit resolution of the sound, to obtain lo-fi effects.

-**PitchShift** : Shift the pitch of the sound up to 4 octaves up or down, without changing the time resolution or "tempo" of the sound. Adjustable sense.

-**Stretcher**: Tries to time stretch the input signal, while at the same time keeping up with it. Impossible? Yes, indeed :-)

-**FM** : Adds self-FM to the input signal in +/- 1 octave, +/- 2 octaves or +/- 4 octaves ranges.

-**Sample Pitch** : Changes the pitch of a sampling, without changing the length, using granular technology. It is possible to set the size of each pitch grain, to generate great granular effects. This effect has to be triggered from any of the parts, in order to function properly. It will work on external signals, but it still needs to be triggered by a part.

-**SamplePitch V2**: **NEW!** A pitchshifter that is degrading the sound. A Peak parameter are available, that alters the formants, and a Warp parameter will warp the signal into another dimension.

-**Roto Pitch**: **NEW!** Rotating pitch shifter. This is not as smooth as the same effect in processors 7 and 8, but still usable for some weird pitch effects.

-**Variator** : Creates new variations of the input signal. Both pitch and rhythmic variations.

-**PitchShaper** : 1 input version of Gotharman's special Pitch Shaper, that forces an audio signal to play back at a specific pitch, determined by an adjustable frequency.

-PitchShaper2 : This is a dual input PitchShaper. The pitch of the signal applied to input 1, is pitch matched to the signal applied to input 2. When changing the pitch of the pitch matched signal, the waveform on the effect output will change, still matched to the pitch of input 2. It is also possible for the signal applied to input 1, to affect the output pitch, by turning the Vari parameter up.

-Time Stretch : This effect is able to change the length of the input signal, almost without changing the pitch. Old fashioned time stretch done in realtime, that can be applied even to live input signals! It is also possible to change the pitch if desired, and it is possible to trigger this effect, for bigger precision.

-Filter : The original digital Gotharman filters from the deFormer series. 16 filter types.

-Triple BPF: **NEW!** This is the same triple filter as found in the DGF section, but with an added "Gates" parameter, that "digitalizes" the filter for some special effects.

-WaveFolder: **NEW!** A dual Wavefolder.

-FAT : Adds up to 3 layers of the sound to itself, and it is possible to adjust the phase of these, and to select whether the effect sound should be boosted or just layered.

-EQ : A parametric EQ with different characteristics.

-EQ2 : A parametric EQ with different characteristics than EQ1.

-OverShifter : A kind of frequency shifter, that can shift the frequency bands of the input signal up, and add feedback and ring effects.

-Bass Enhancer : Enhances the bass area of the sounds, that goes through it, and adds some boom to these.

- Compressor : Damps audio signals that are above a settable level, in order to make the signal less dynamic, and easier to record.

-Expander : Gains audio signals that are above a settable level, in order to add more kick to sounds.

-Delay1 : Delay with time and feedback controls, plus Gotharman's Deep and Xfade controls. Deep adds space to the delay. The Xfade control on this delay, creates valleys between the delay taps. The more it is turned up, the more time the valleys takes up.

- **Roto Delay** : This is a 2 tap delay, that is constantly crossfading between the 2 taps. When the Xfade control is turned down, the crossfading is rough, the more it is turned up, the more smooth the crossfading gets. Other controls are the same as the first delay.

-**Bright Delay** : First delay, but with a brighter sound, created by a resonator.

-**Br Roto Delay** : Roto delay, but with a brighter sound, created by a resonator.

-**Reso EQ : NEW!** A parametric EQ where frequency, cut/boost, frequency span and resonance (Q) can be set. Since the frequency span and Q can be set as 2 different parameters, this EQ has 2 peaks or dips at higher Q settings.

-**Mod Delay : NEW!** A dual tap modulation delay effect. When you change or modulate the delay times on this, the transition is smooth, and it does not generate any clicks.

It is also possible to set different delay times on the 2 taps, and mix between them, manually or via modulation.

-**Comb Filter : NEW!** A traditional comb filter with frequency and feedback settings, plus an Edge setting, which will add some character and crunchy distortion.

-**Compressor 2 with Side Chain : NEW!** This compressor is easier to use than the first one, and it can be side chained to any audio/modulation source.

Effect 7 and 8 types

-Delay1 : Delay with time and feedback controls, plus Gotharman's Deep, Size, Beam and Xfade controls. Deep adds space to the delay, Size makes the playback range more narrow than the input recording range, and beam beams the delay to previously unknown places. The Xfade control on this delay, creates valleys between the delay taps. The more it is turned up, the more time the valleys takes up.

-Roto Delay : This is a 2 tap delay, that is constantly crossfading between the 2 taps. When the Xfade control is turned down, the crossfading is rough, the more it is turned up, the more smooth the crossfading gets. Other controls are the same as the first delay.

-Bright Delay : First delay, but with a brighter sound, created by a resonator.

-Br Roto Delay : Roto delay, but with a brighter sound, created by a resonator.

-Granulator SQ : Cuts the input signal up in grains, that can be re-arranged. This granulator is synced to the sequencer.

-Variator : Creates new variations of the input signal. Both pitch and rhythmic variations.

-Reverb: **NEW!** A newly designed reverb effect, that is more smooth, and has simplified parameters, for easier programming.

-Granulator : Cuts the input signal up in grains, that can be re-arranged, using the step values of a selectable controller sequencer track. This is the granulator that was named "AnaGran" in earlier Gotharman instruments. Unlike the Granulator SQ, this is not synced to the sequencer. It plays back one grain, and then it immediately advances to the next grain.

-Xfade Granulator : Cuts the input signal up in grains, that can be re-arranged, using the step values of a selectable controller sequencer track. This granulator plays back one grain, and then it crossfades to the next grain. It is also possible to adjust and modulate the pitch of the granular sequence, using any modulation source.

-Abstract0 : This effect constantly records the audio applied to its input, in a time interval determined by a "Rec" parameter. It uses 2 "playback heads" to play back the recorded audio. Each of these playback heads can be switched on and off, and the playback length can be adjusted for each of them. Every time a head has played back the adjusted amount of time, it jumps to a new random location of the recorded piece, and starts play back again. The playback pitch of head 2 can be adjusted.

-Time Stretch : This effect is able to change the length of the input signal, almost without changing the pitch. Old fashioned time stretch done in realtime, that can be applied even to live input signals! It is also possible to change the pitch if desired, and it is possible to trigger this effect, for bigger precision.

-Roto Pitch: **NEW!** Rotating pitch shifter, that can create smooth echoing pitch shifts.



-SamplePitch V2: **NEW!** A pitchshifter that is degrading the sound. A Peak parameter are available, that alters the formants, and a Warp parameter will warp the signal into another dimension.

Mod Delay : NEW! A dual tap modulation delay effect. When you change or modulate the delay times on this, the transition is smooth, and it does not generate any clicks. It is also possible to set different delay times on the 2 taps, and mix between them, manually or via modulation.

Effects Select page

From the synth modules page, touch EFX to enter the effect pages.

To select Effect 1 to 8, while on the effects pages, push and hold the Steps/Part button, while pushing step button 1 to 8.

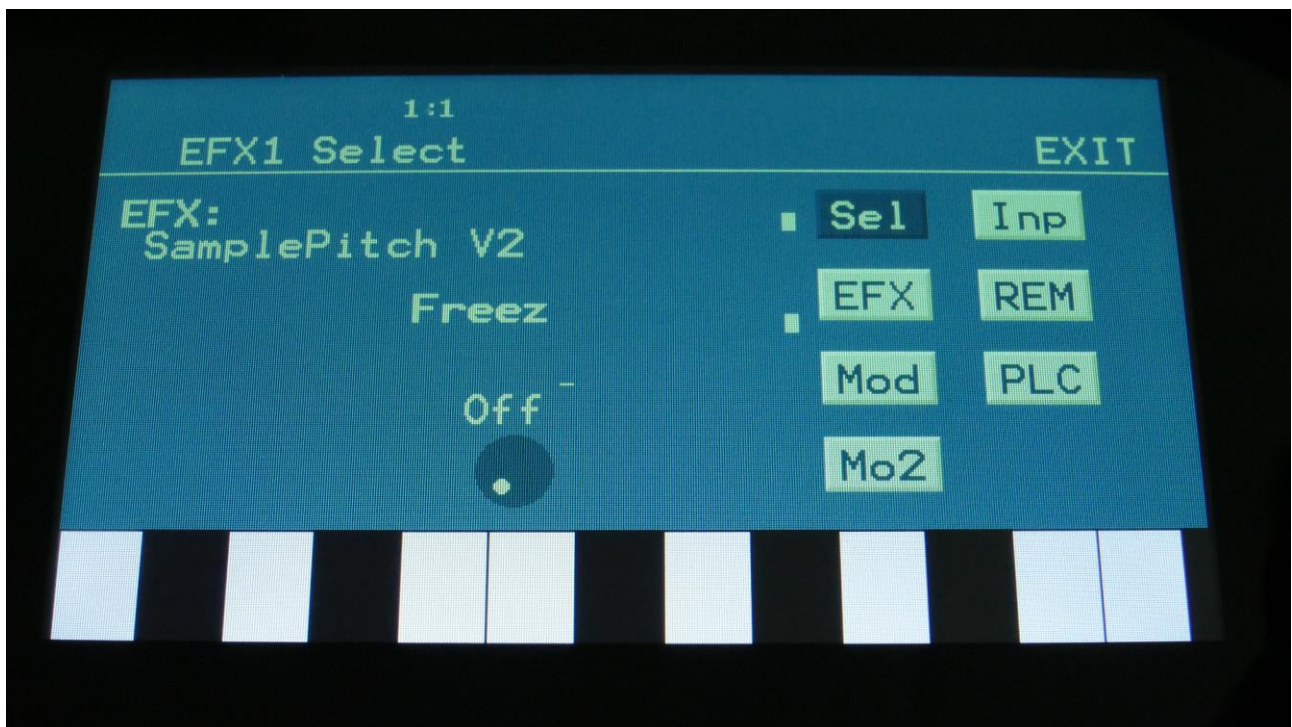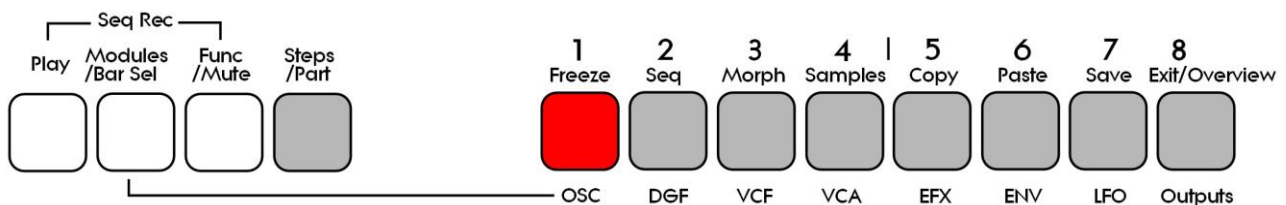

Touch the SEL touch button, to enter the effect select page.


The 2 VU-meters at the right of the screen, shows the Effect input and output activity.

EFX: Selects the effect. Please see the List Of Effects in the beginning of this section.

Freez: Freeze modulation. Can be set to off, Freeze button (Buton) or to any audio/modulation source. When set to any other value than off, the effect will freeze, when the modulation source

are in its upper range. When an effect freezes, it no longer samples its audio input signal, but only outputs whatever it already holds in its audio buffer.

Mix Modulation and Backwards Delay

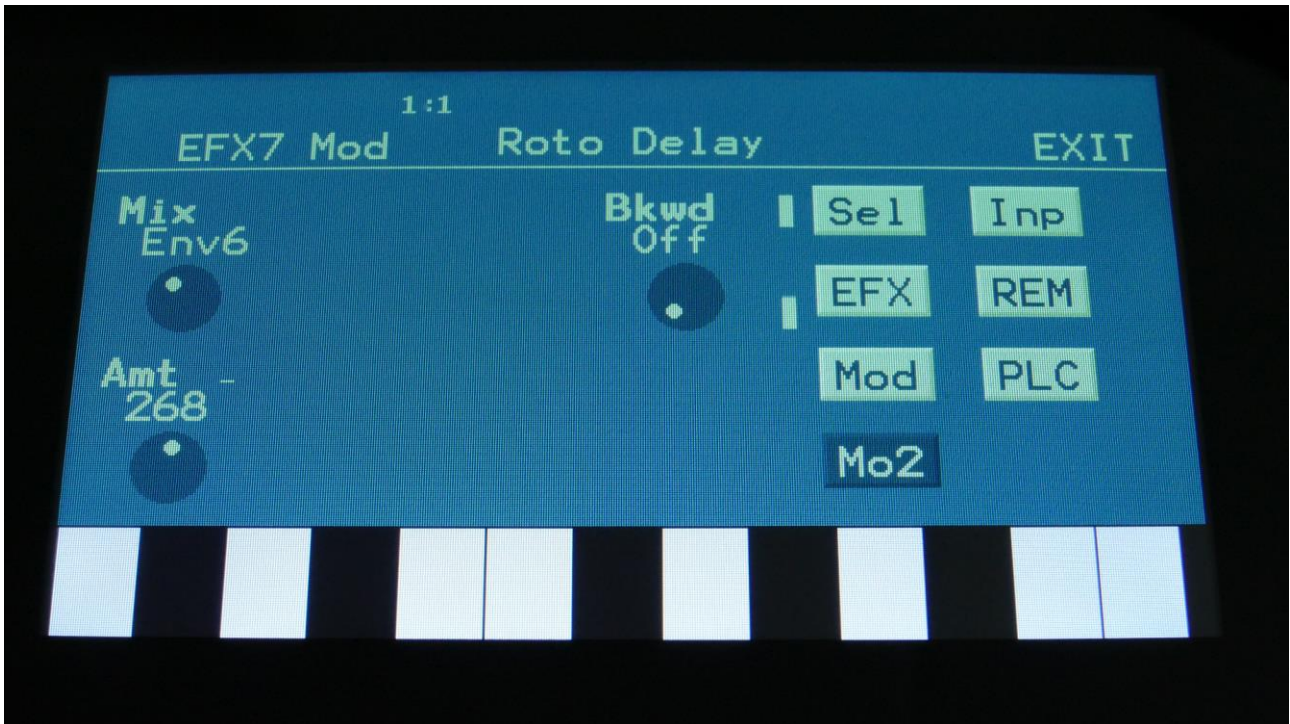

The Effect dry/wet mix can be modulated on all effects.

Touch the MO2 touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Mix: Modulates the effect dry/wet mix.

Bkwd: This is only visible, when a delay effect is selected. Turning this on, will make the delay effect play back backwards.

Effect Inputs

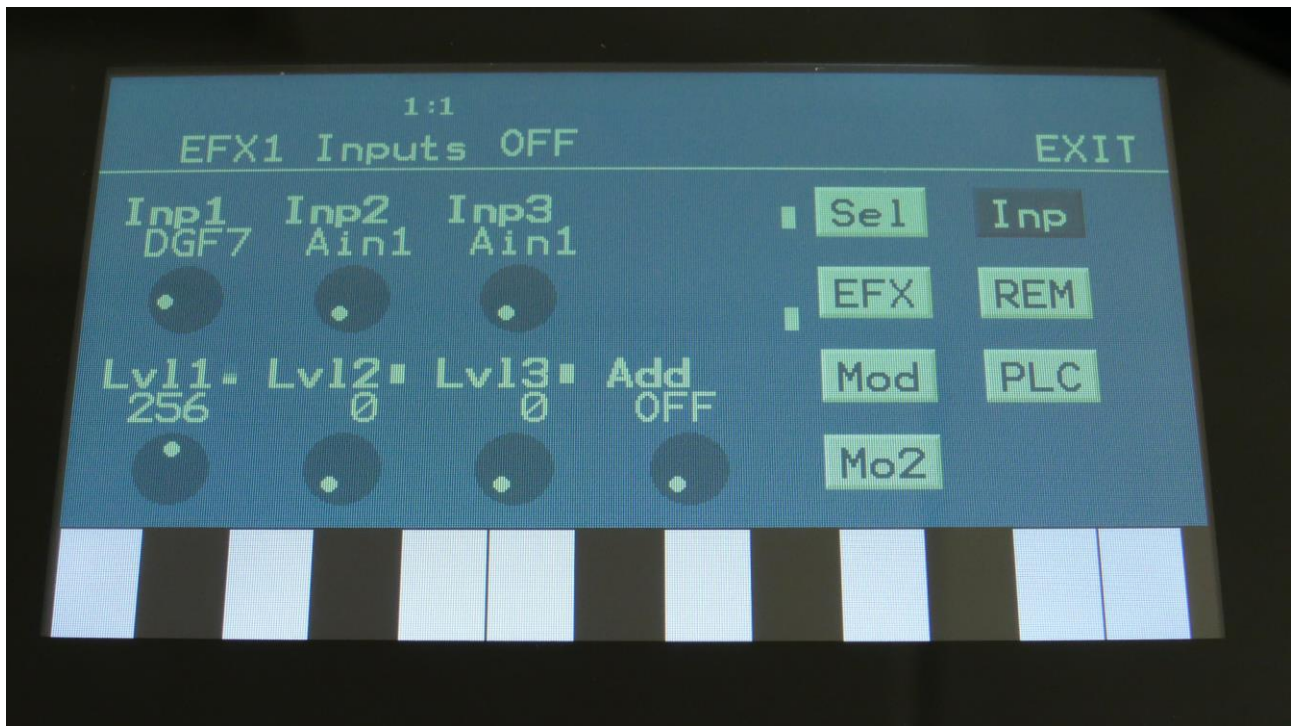

Touch the Inp touch button, to enter this page.

The VU-meters at the right of the screen, shows the Effect input and output activity.


Inp1, Inp2, Inp3: Select any 3 module outputs, to connect to the 3 audio inputs of the effect. A complete list of possible sources can be found in the “Connecting Modules” later in this manual.

Lvl1, Lvl2, Lvl3: Effect input levels. Sets the levels for each of the 3 sources, connected to the effect inputs. 0 to 511.

Add: Add Input Mixer. If set to 1 or 2, one of the extra mixers will be added to the effect inputs, so that the effect will have 7 audio inputs in total. Off, 1, 2.

Effect 1 to 6 Parameters

Chorus

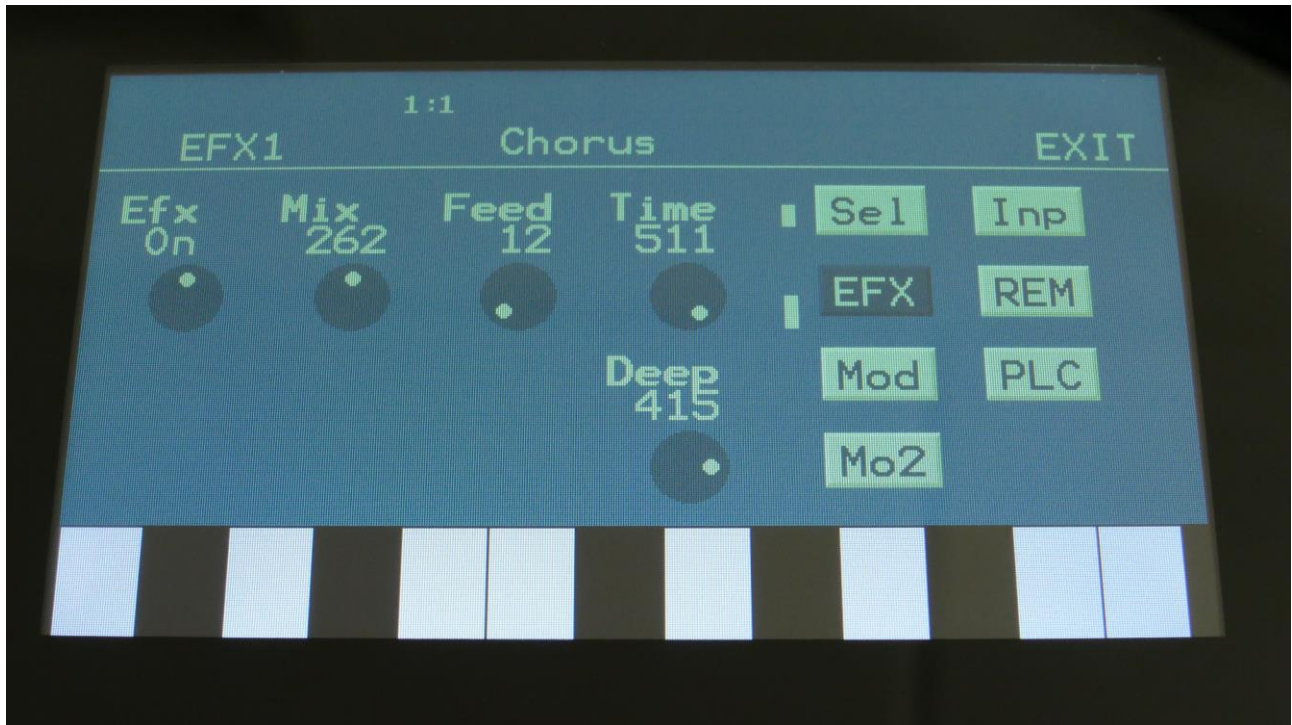

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.


Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Feed: Chorus feedback amount.

Time: Chorus Time. This should be modulated by an LFO, to get the traditional chorus effect.

Deep: Adjusts how deep the chorus box should be. A Gotharman special.

Chorus Modulation

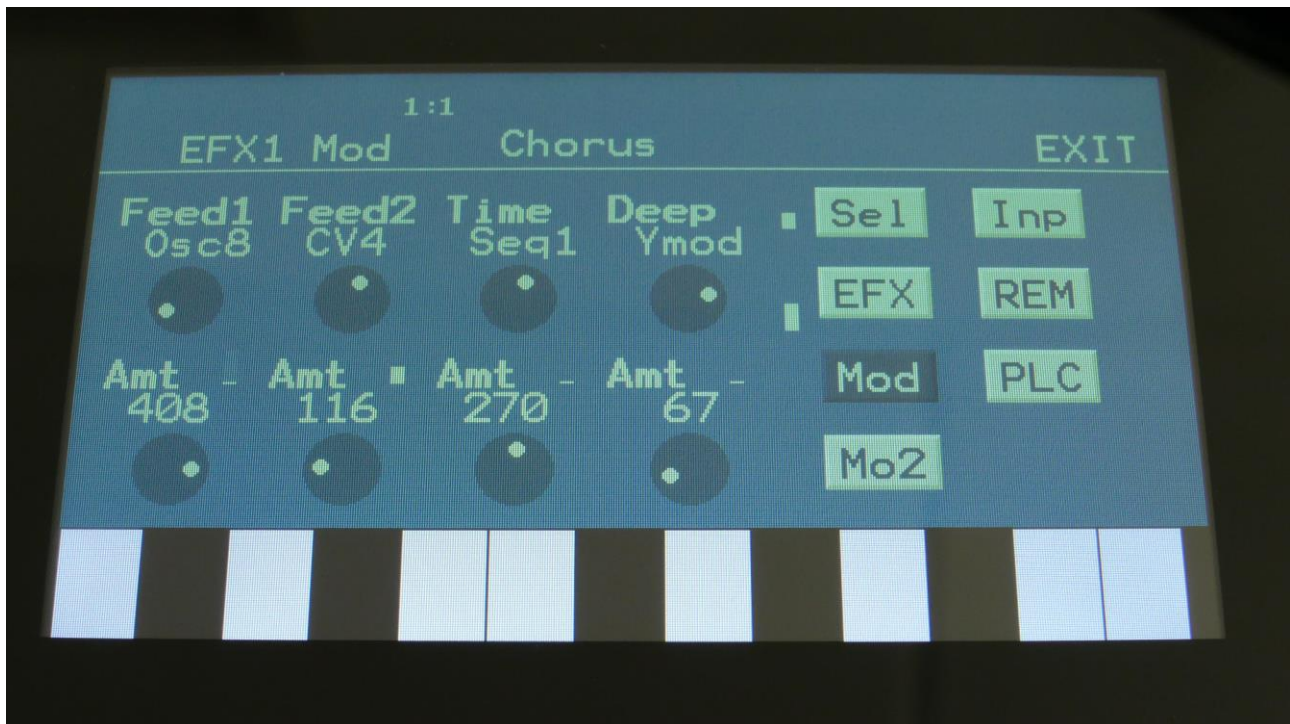

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Feed1 and Feed2: Modulates the chorus feedback.

Time: Modulates the time parameter.

Deep: Modulates the Deep parameter.

Resonator

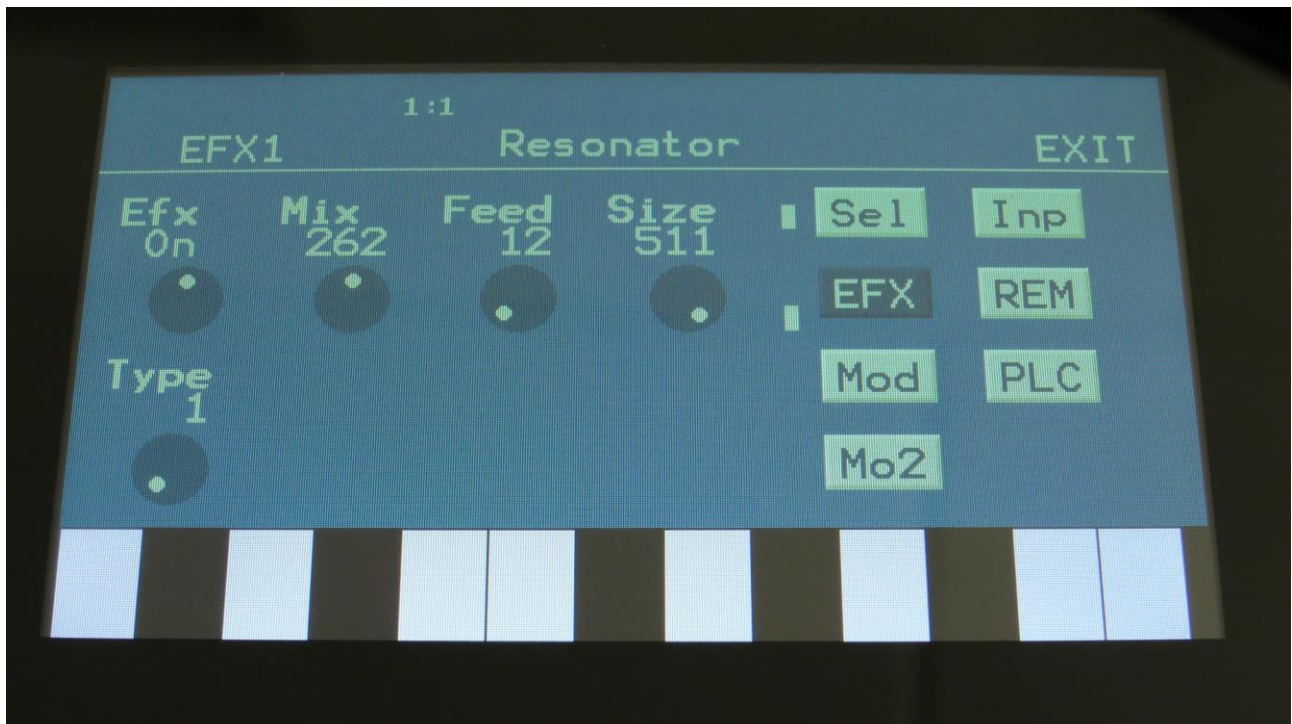

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Feed: Resonator feedback. The more this is turned up, the more it will resonate.

Size: The size of the resonator box. Different sizes will give different resonance frequencies.


Type: 2 different resonator types are available.

Type 1 is a traditional resonator, based on the Karplus Strong algorithm.

The **Type 2** Resonator is a new type, that is based on generating the resonances, that are fed back, using real filtering.

The 2 types are quite different.

Resonator Modulation

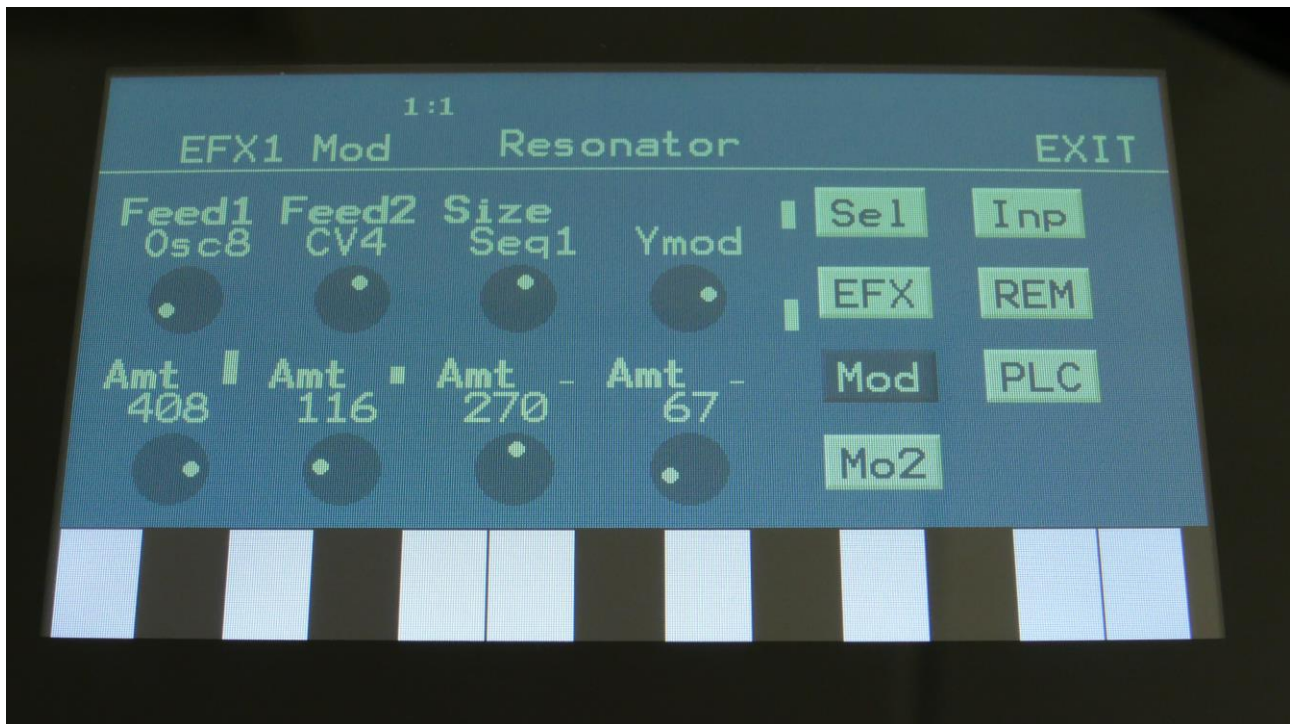

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Feed1 and Feed2: Modulates the feed parameter.

Size: Modulates the Size parameter.

Distortion

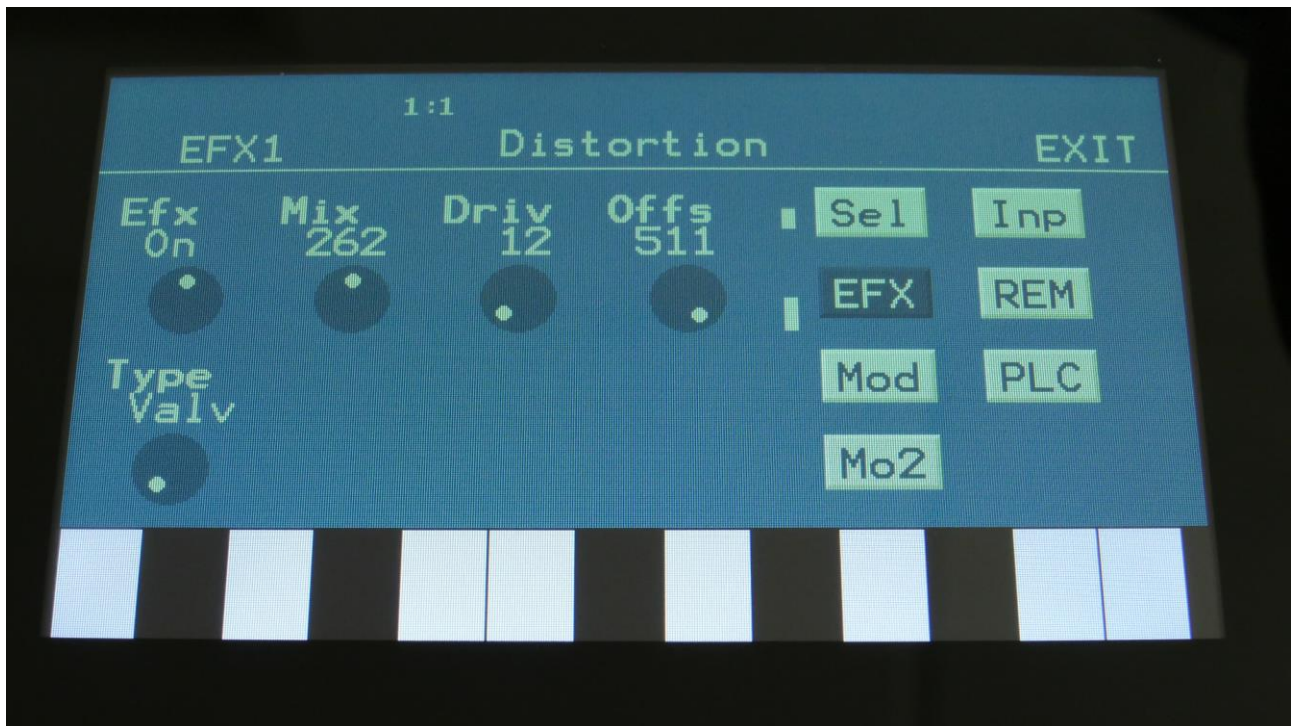

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Drive: The higher the value, the more the sound will distort. If this is set to zero, no sound will pass through the distortion.

Offs: Distortion offset. The more this is turned up, the more asymmetric the distortion will get.

Type: Distortion type. Choices are:

-**Valve:** A digital simulation of a classic valve distortion.

-**Sine:** A noisy and warm sine shaping distortion.


-**Fuzz:** Simulates a classic fuzz distortion.

-**Xdis:** Complete destruction of the sound.

-**Asym:** Asymmetrical distortion.

-**Curv:** **NEW!** Curve distortion. The Offset parameter will bend the curve of the input signal. Below 256: logarithmic curve. Above 256: Exponential curve. 256: Linear curve.

Distortion Modulation

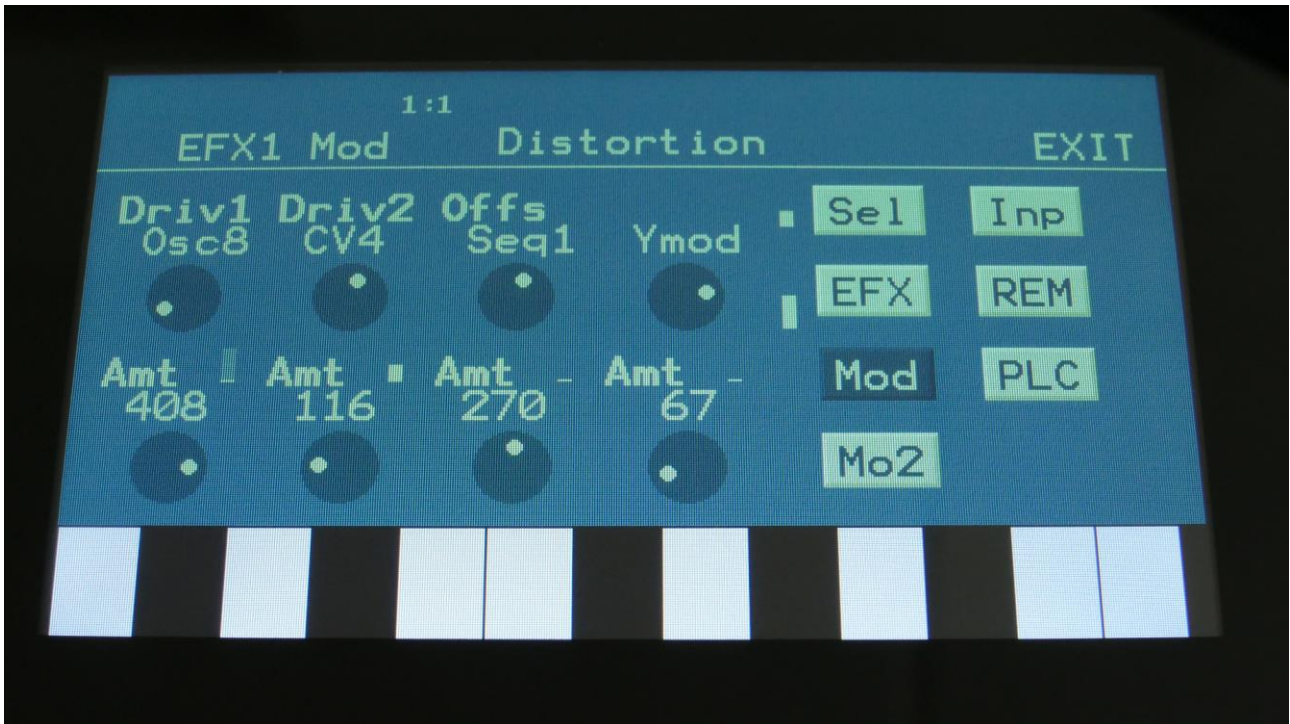

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Driv1 and Driv2: Modulates the drive parameter.

Offs: Modulates the offset parameter.

Bit Crush

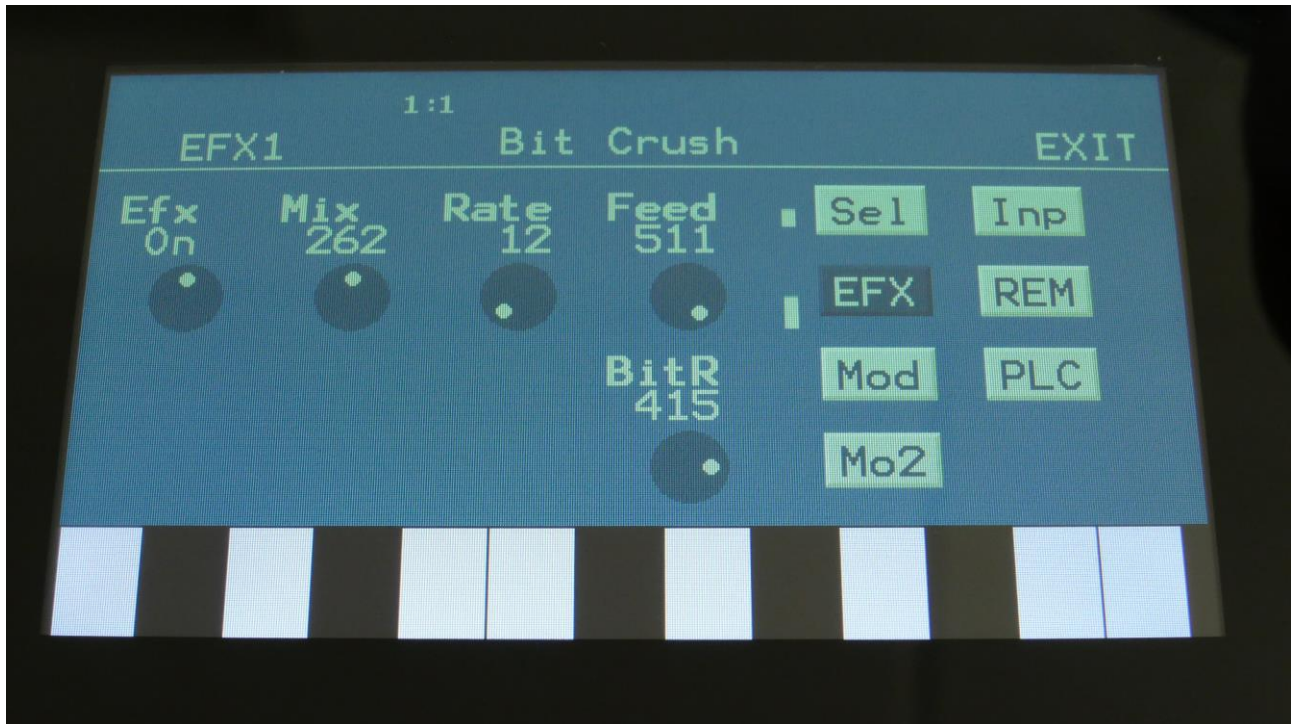

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.


Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Rate: Sample Rate Reduction. The more this is turned up, the lower the sample rate will be. From 44.1 KHz to 1 KHz.

Feed: Feedback. Turning this up will slightly overdrive the sound.

BitR: Bit Reduction. The more this is turned up, the lower the bit resolution will get. When it is turned fully down, resolution is 16 bit, when turned fully up, it is 1 bit.

Bit Crush Modulation

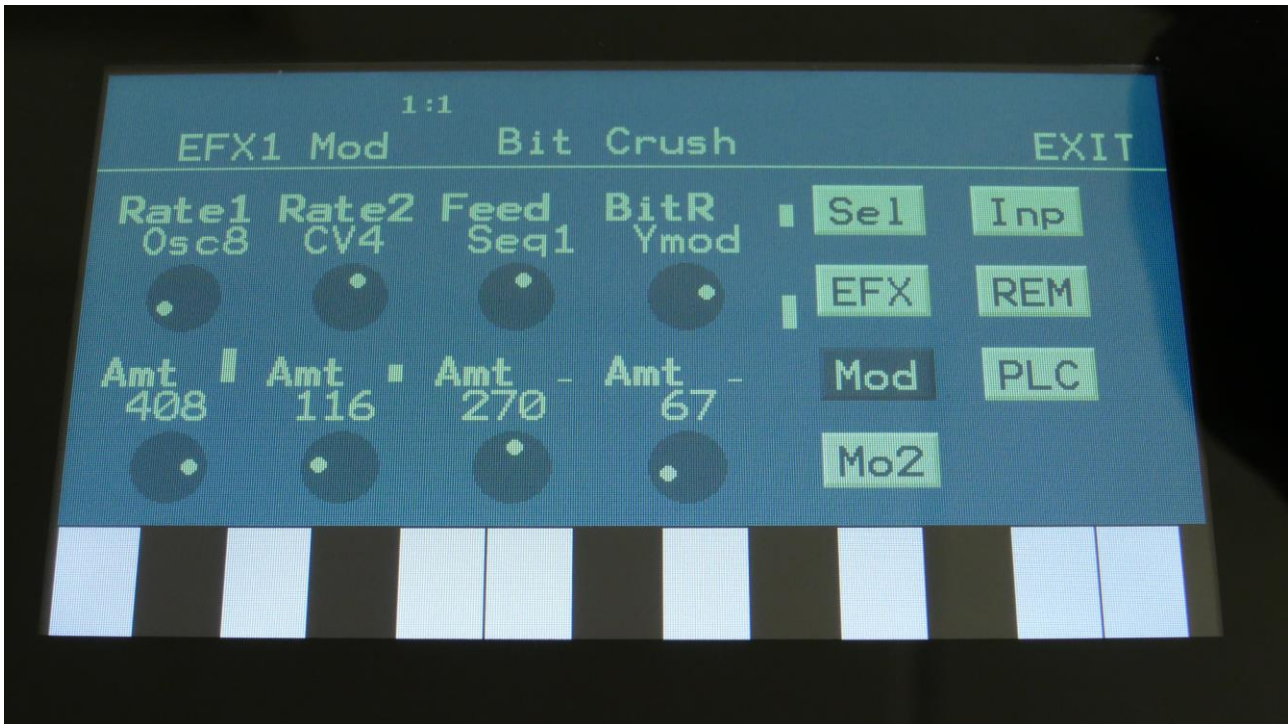

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Rate1 and Rate2: Modulates the sample rate parameter.

Feed: Modulates the feedback parameter.

BitR: Modulates the bit reduction parameter.

Pitch Shifter

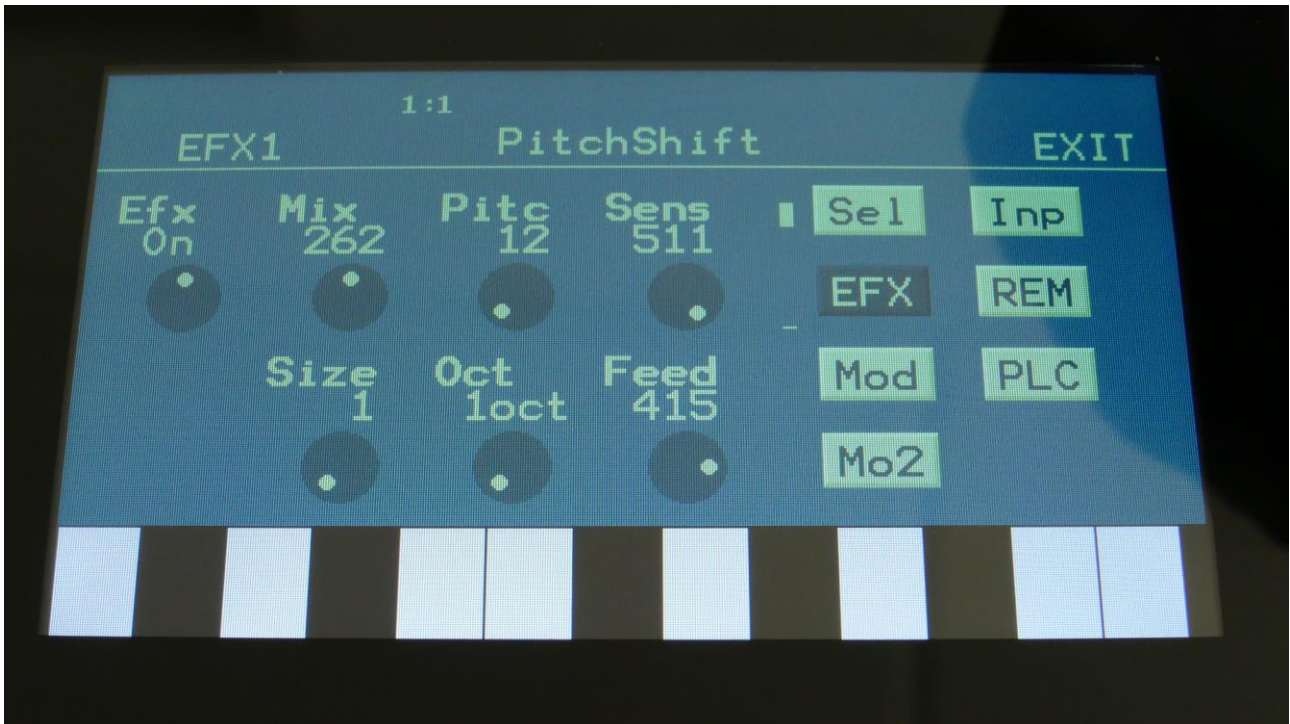

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Pitc: Smoothly pitches the sound from up to 4 octaves below the original pitch, to 4 octaves above.


Sense: Pitch detection sense. On a pure waveform, turn this fully down to make sure, that it detects all the waves of it, and pitch shifts correctly. On more complex sounds, turn this up until the desired effect are obtained. At higher settings, only portions of the sound will be pitch shifted, and when it doesn't detect any pitch, it will repeat the portion it detected, making the sound "granulate".

Size: 1 to 64. This sets the size of the buffer, used for the pitch shifting effect. When pitch shifting more complex sounds, it might make the pitch shifting more precise, when turning this parameter up a bit.

Oct: The octave range of the pitch shifter. From +/- 1 to +/- 4 octaves.

Feed: Pitch shifter feedback. Adjusts the portion of the output signal, that is fed back to the input.

Pitch Shifter Modulation

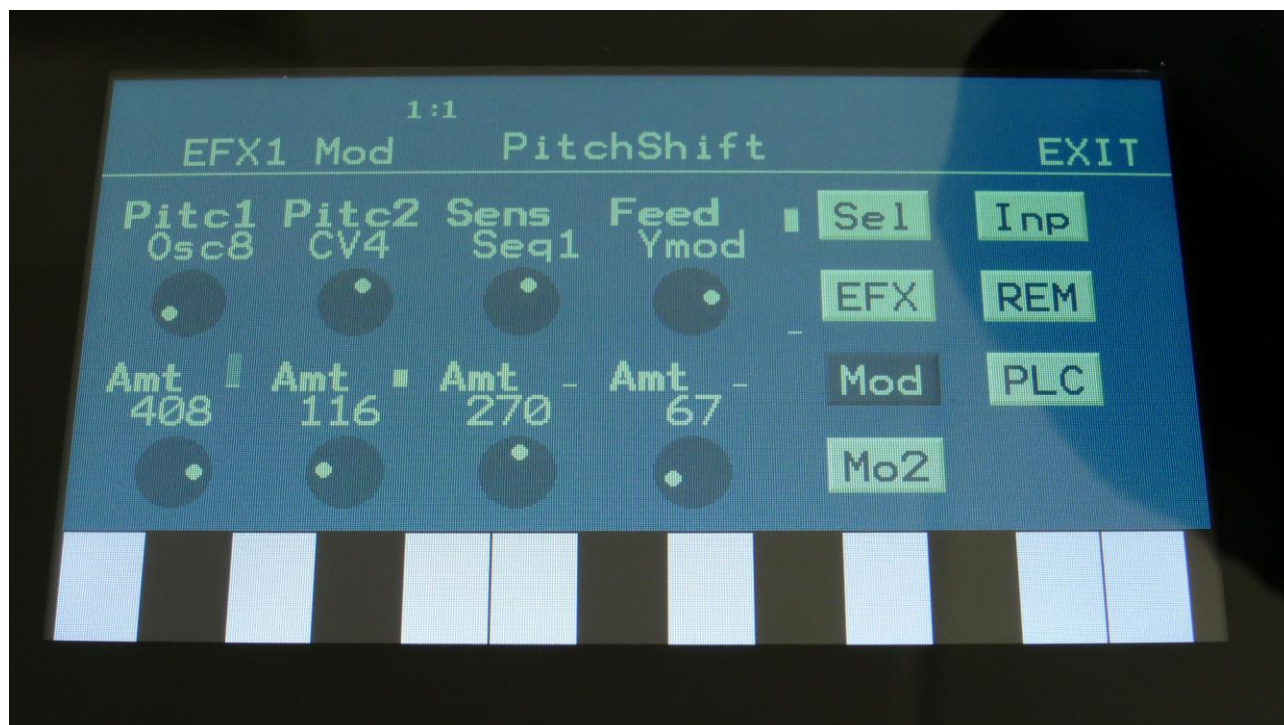

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Pitc1 and Pitc2: Modulates the pitch shift parameter.

Sens: Modulates the Sense parameter.

Feed: Modulates the Feed parameter.

Stretcher

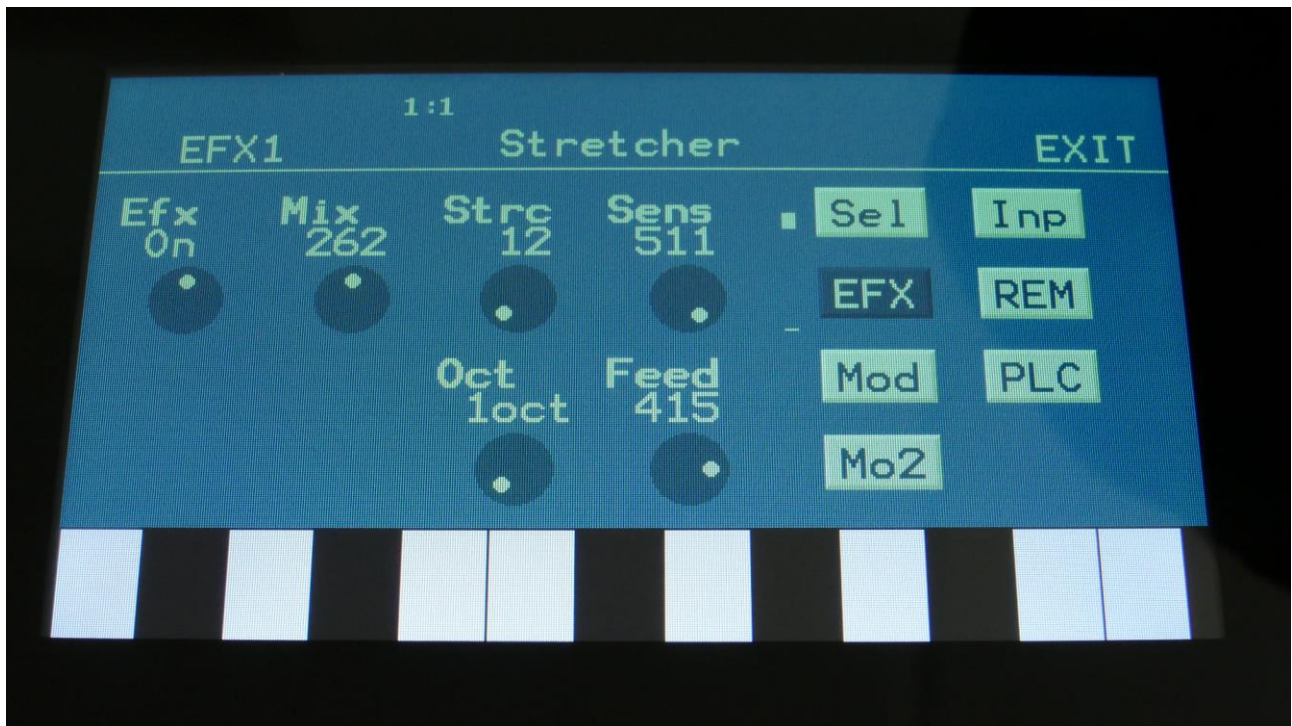

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.


Strc: The degree of time stretch.

Sens: Stretch detection sense. At lower settings the sound will “wobble”, at higher settings it will “granulate”. Adjust this to obtain different effects.

Oct: The octave range of the stretch effect. From +/- 1 to +/- 4 octaves.

Feed: Stretcher feedback. Adjusts the portion of the output signal, that is fed back to the input.

Stretcher Modulation

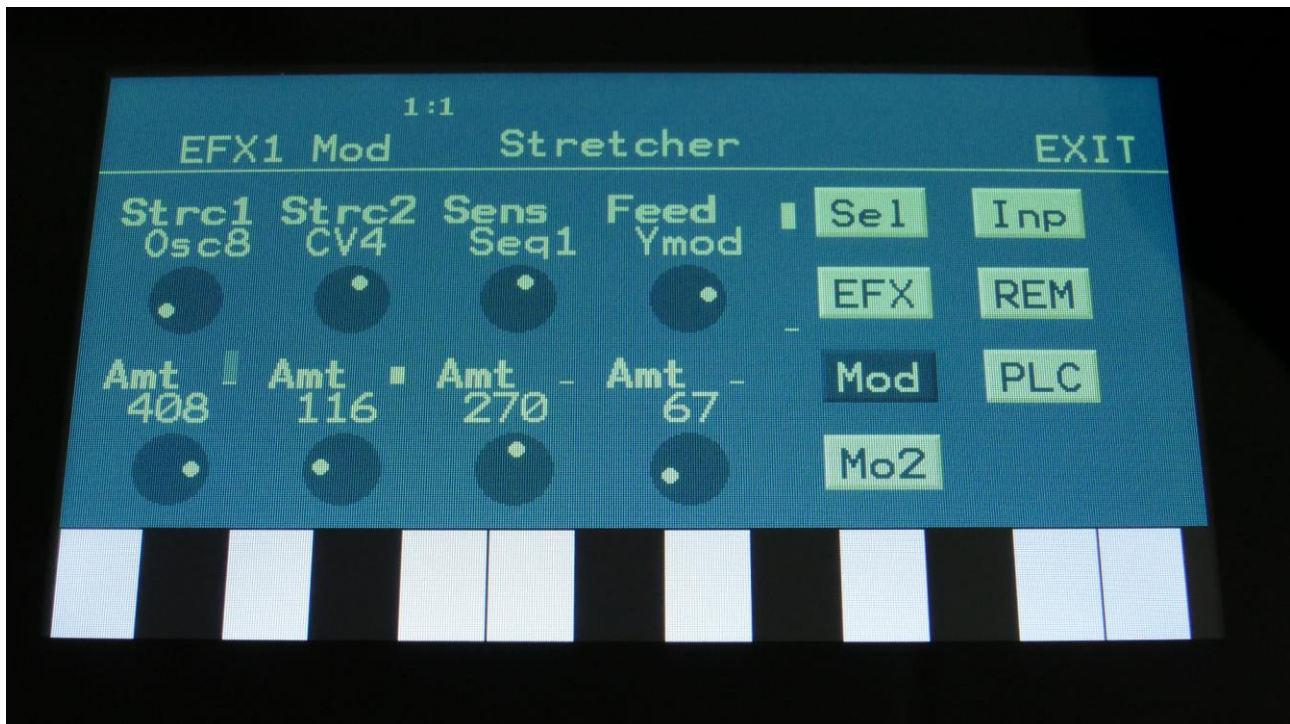

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Strc1 and Strc2: Modulates the stretch parameter.

Sens: Modulates the sense parameter.

Feed: Modulates the feed parameter.

FM

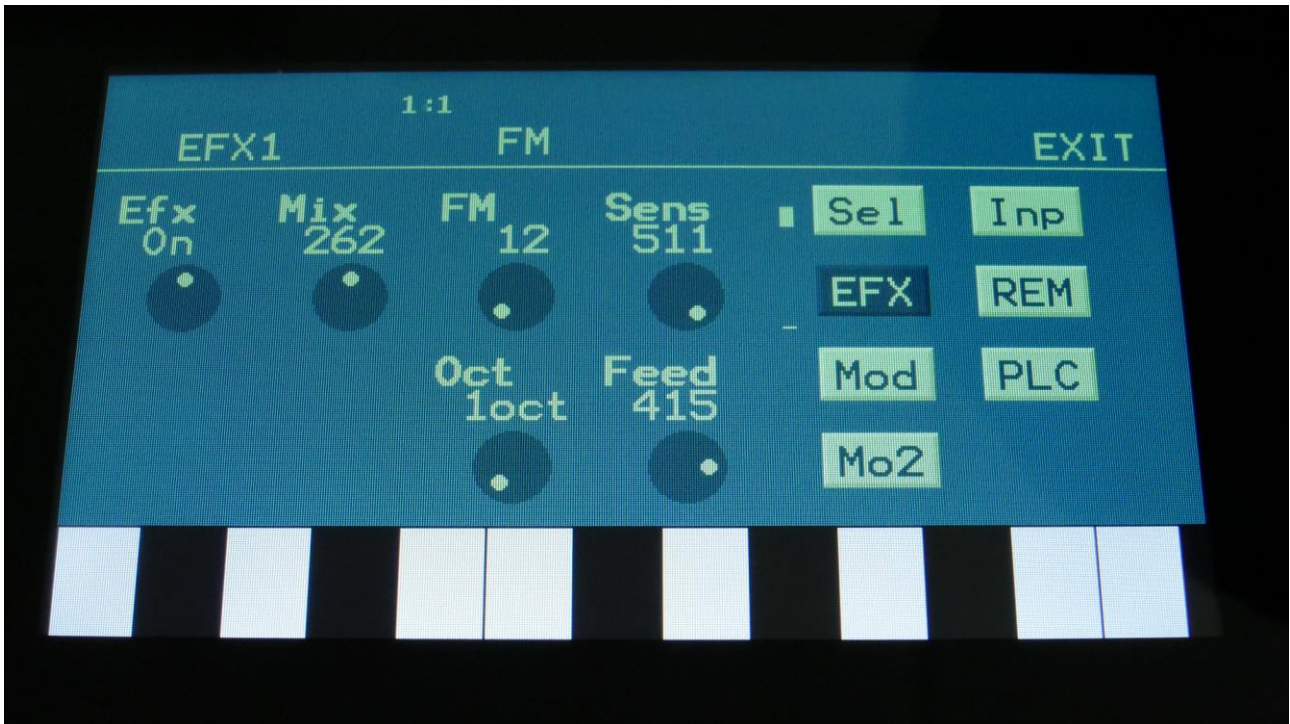

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.


FM: The amount of self-FM from 0 to up to +/- 4 octaves.

Sense: FM pitch detection sense. On a pure waveform, turn this fully down to make sure, that it detects all the waves of it, and pitch shifts correctly. On more complex sounds, turn this up until the desired effect are obtained. At higher settings, only portions of the sound will be pitch shifted, and when it doesn't detect any pitch, it will repeat the portion it detected, making the sound "granulate".

Oct: The octave range of the FM effect. From +/- 1 to +/- 4 octaves.

Feed: FM feedback. Adjusts the portion of the output signal, that is fed back to the input.

FM Modulation

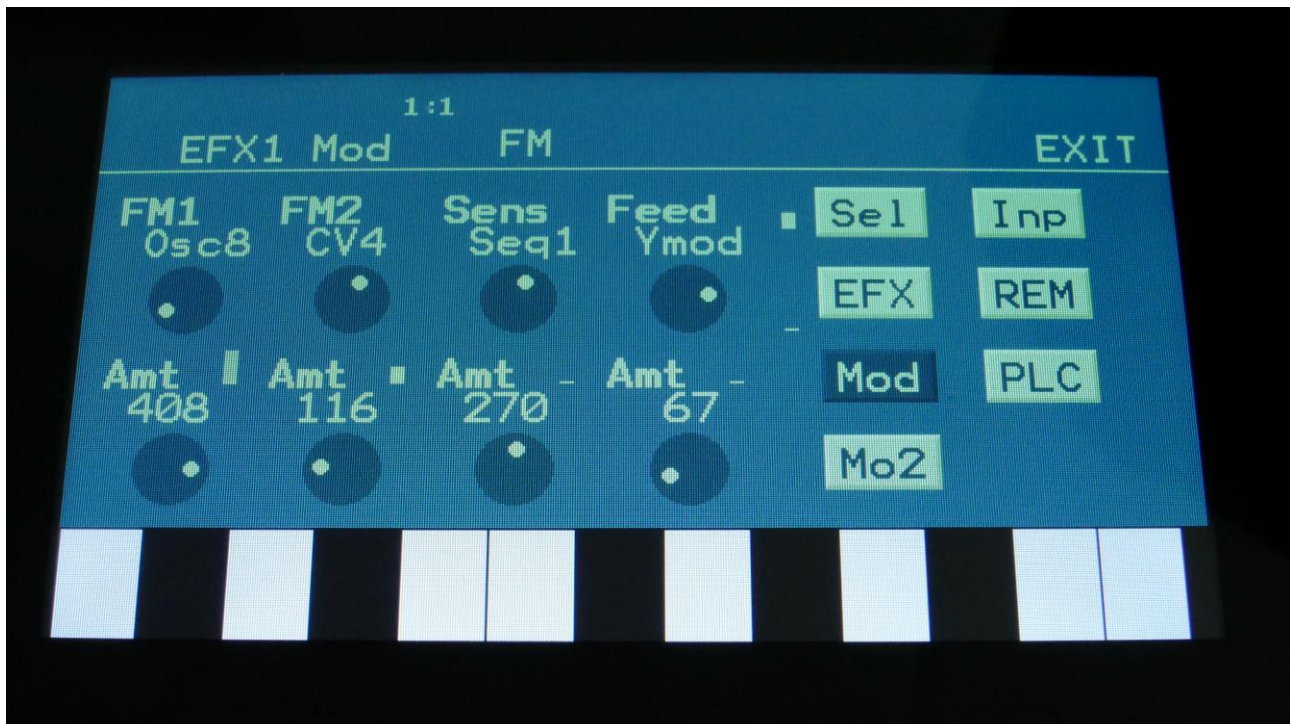

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

FM1 and FM2: Modulates the FM parameter.

Sens: Modulates the sense parameter.

Feed: Modulates the feed parameter.

Sample Pitch

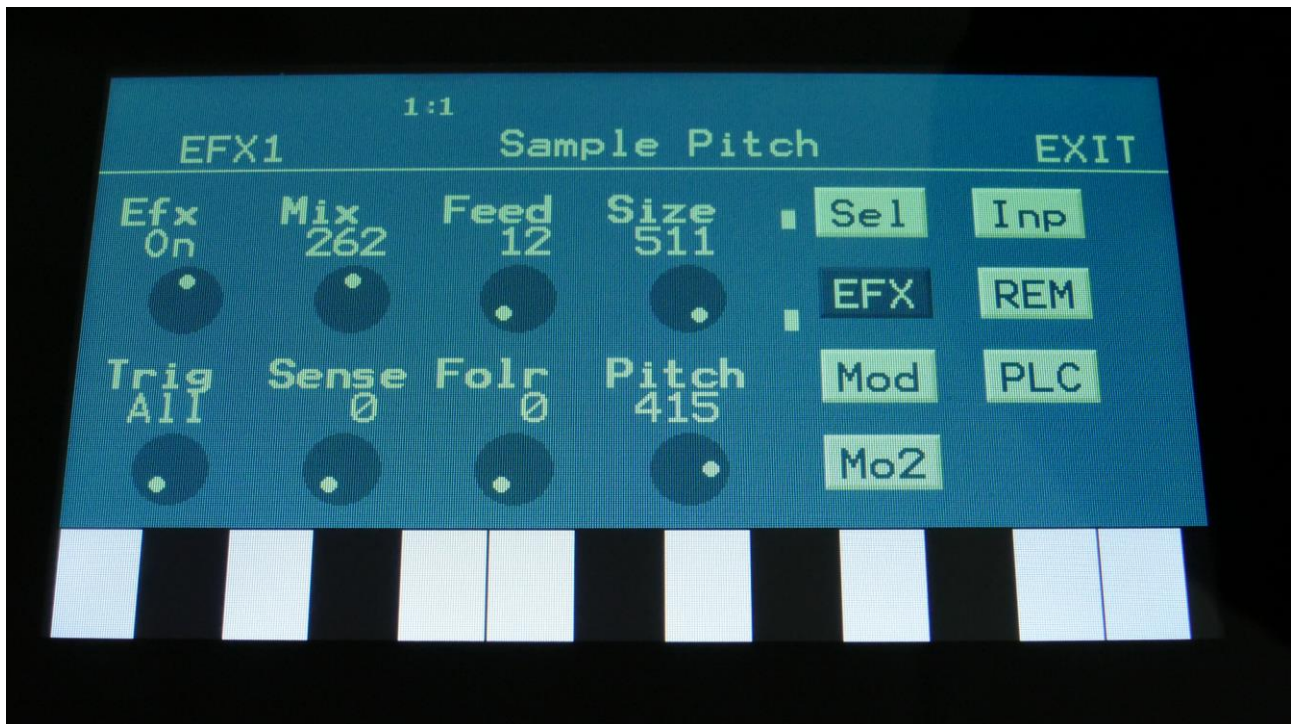

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Feed: Sets how much of the effect output signal should be fed back to its input.


Size: 0 to 511. The number of wave frames used for each pitch grain.

Trig: Off, 1 to 8, OffM, 1M to 8M. Determines if the sample pitch effect should be triggered by all parts or a single part. The "M" suffix indicates that the playback pointer will be moving in another pattern, that will give slightly different results.

Folr: The sample pitch effect output envelope follower rate.

Pitch: The playback pitch. Values below 256 will tune down, values above 256 will tune up.

Sample Pitch Modulation

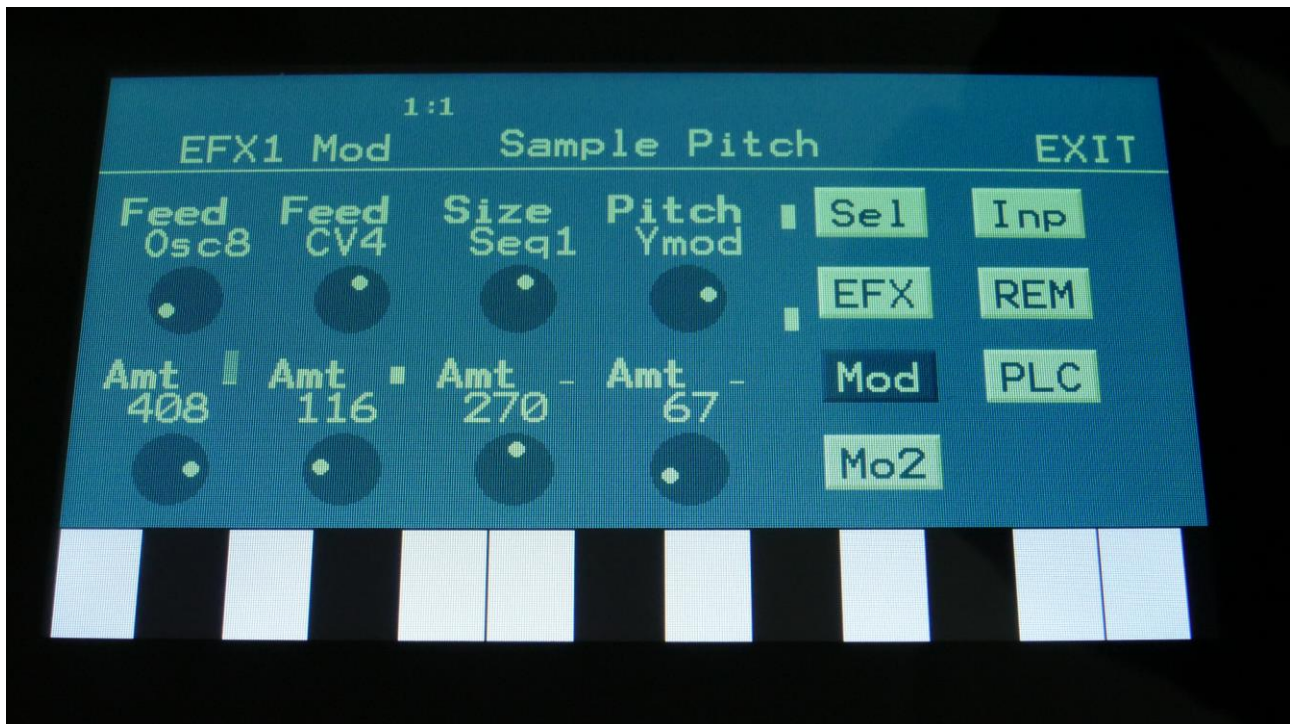

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Feed: Modulates the feed parameter.

Size: Modulates the number of waveframes, used for the pitch shifting.

Pitch: Modulates the pitch shifting.

Sample Pitch V2

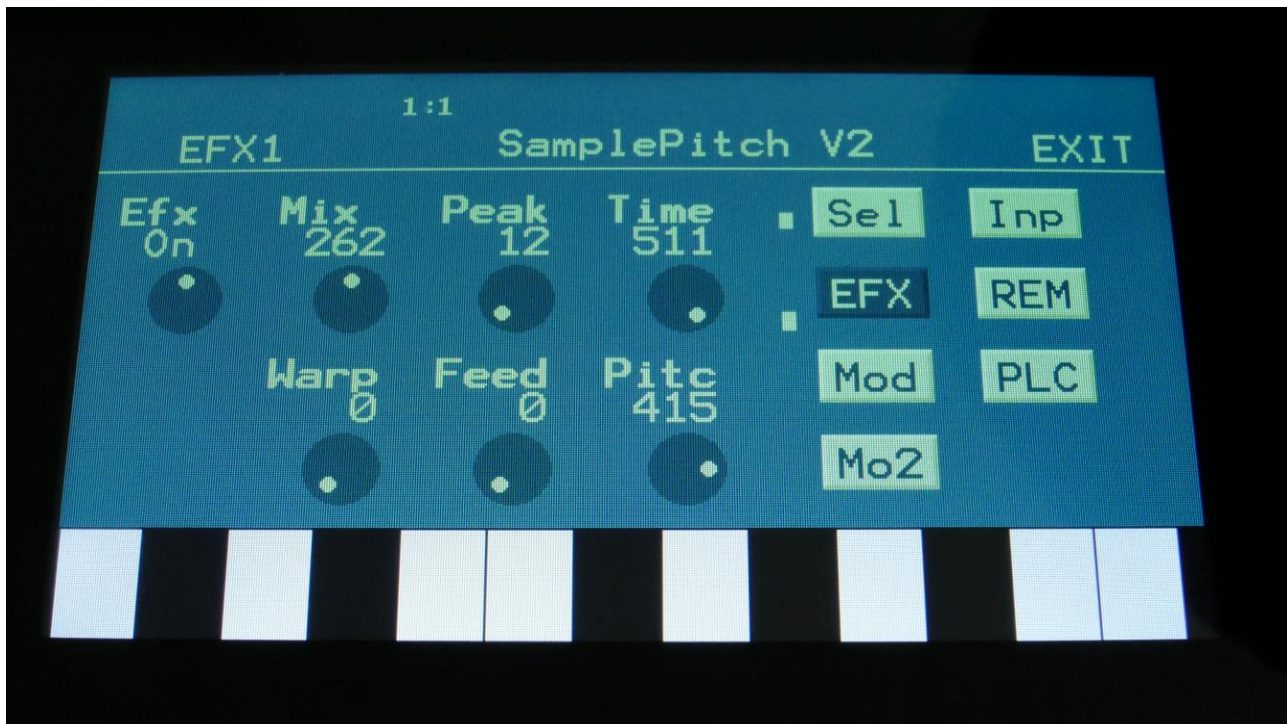

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Peak: Adjusts the formant peaks of the sound. When set to zero, the formants of the sound are not altered.


Time: Sets the time base of the pitch shifting. When set to the maximum value, the relationship between time and pitch shifting is 1:1. When turned down, this relationship gets out of sync, and things starts to sound different.

Warp: Warps the signal over the edge, to make things sound really weird.

Feed: Adjusts the portion of the output signal, that is fed back to the input.

Pitc: Sets the output pitch of the effect. Goes from minus one octave to plus one octave.

Sample Pitch V2 Modulation

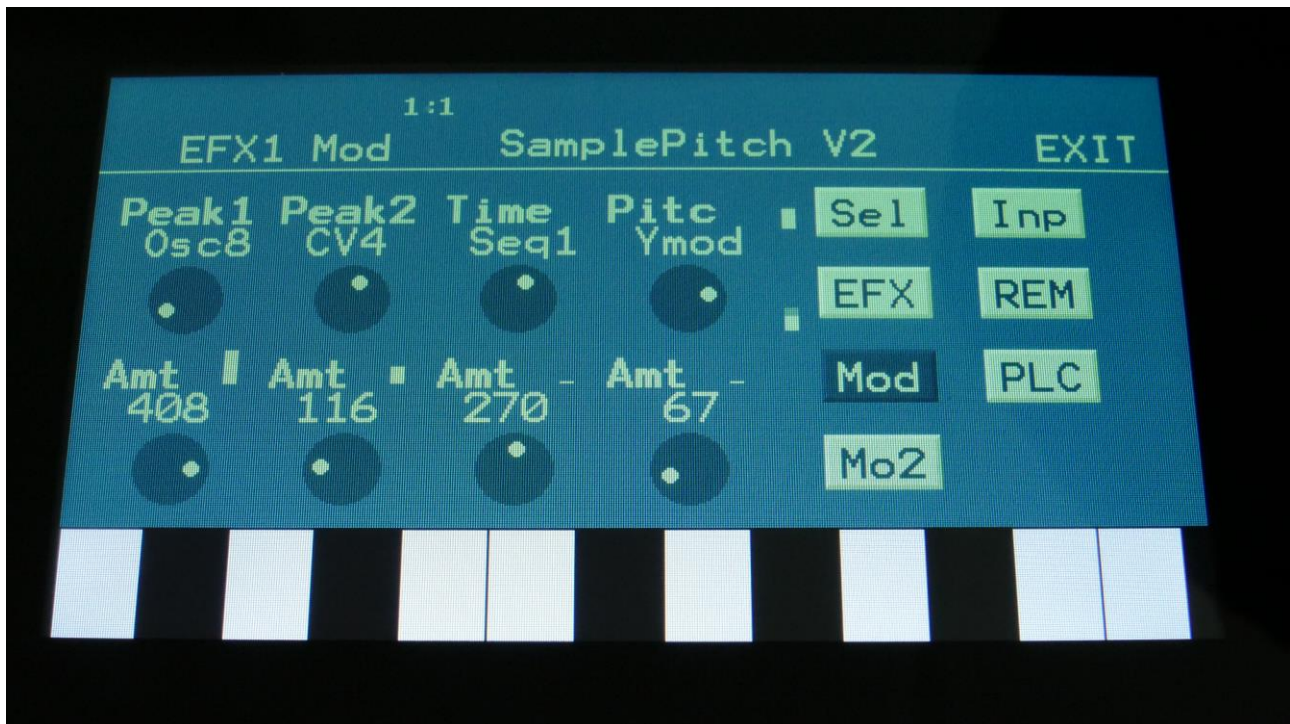

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Peak1 and Peak2: Modulates the Peak parameter.

Time: Modulates the Time parameter.

Pitc: Modulates the Pitc parameter.

Roto Pitch

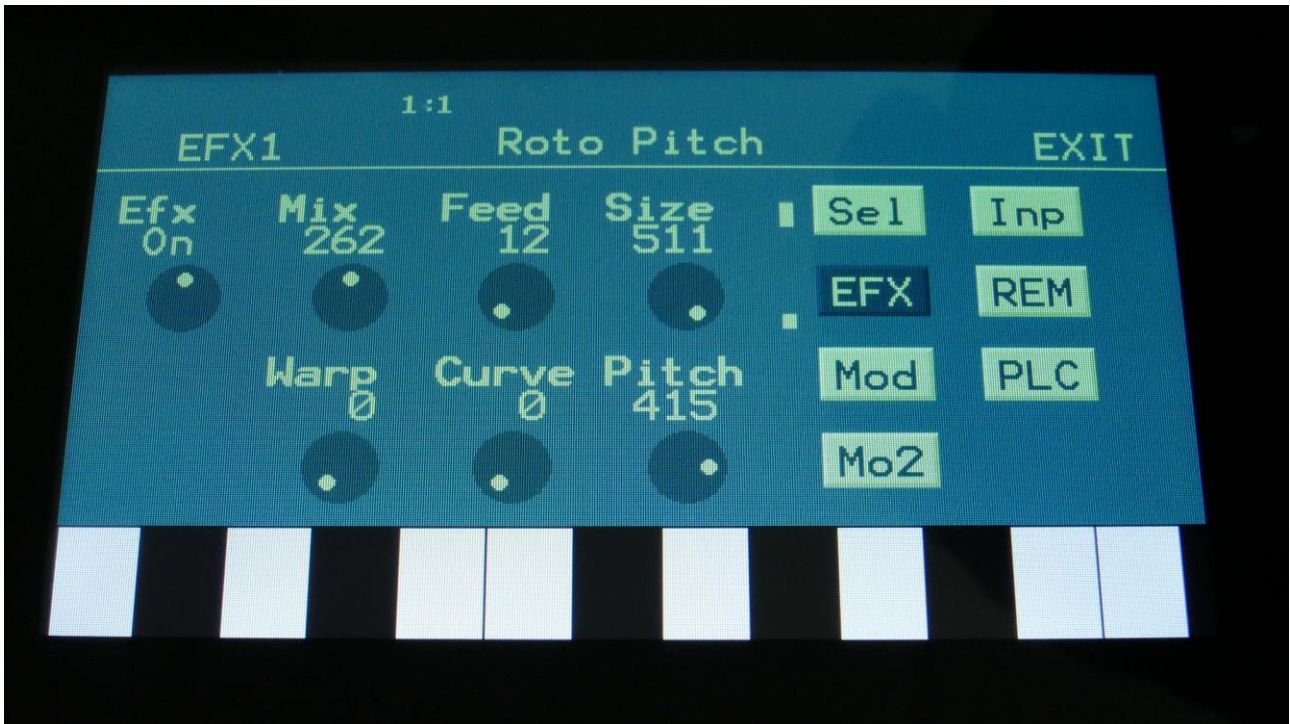

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Feed: Adjusts the portion of the output signal, that is fed back to the input.


Size: Sets the size of the pitch shifting buffer. At higher values, this will create a pitch shifting delay.

Warp: Warps the signal over the edge, to make things sound really weird.

Curve: Set the curve for the pitch rotation. From logarithmic (0) to linear (256) to exponential (511).

Pitc: Sets the output pitch of the effect. Goes from minus one octave to plus one octave.

Roto Pitch Modulation

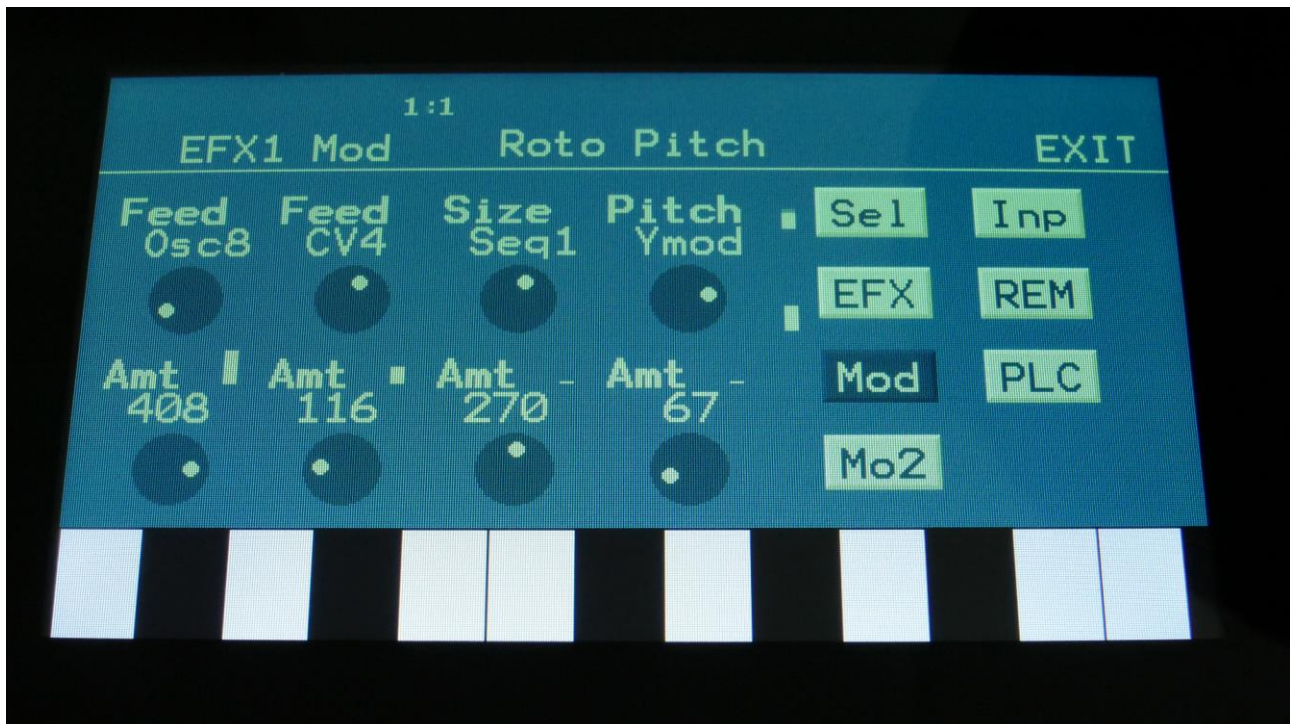

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Feed1 and Feed2: Modulates the Feed parameter.

Size: Modulates the Size parameter.

Pitch: Modulates the Pitch parameter.

Variator

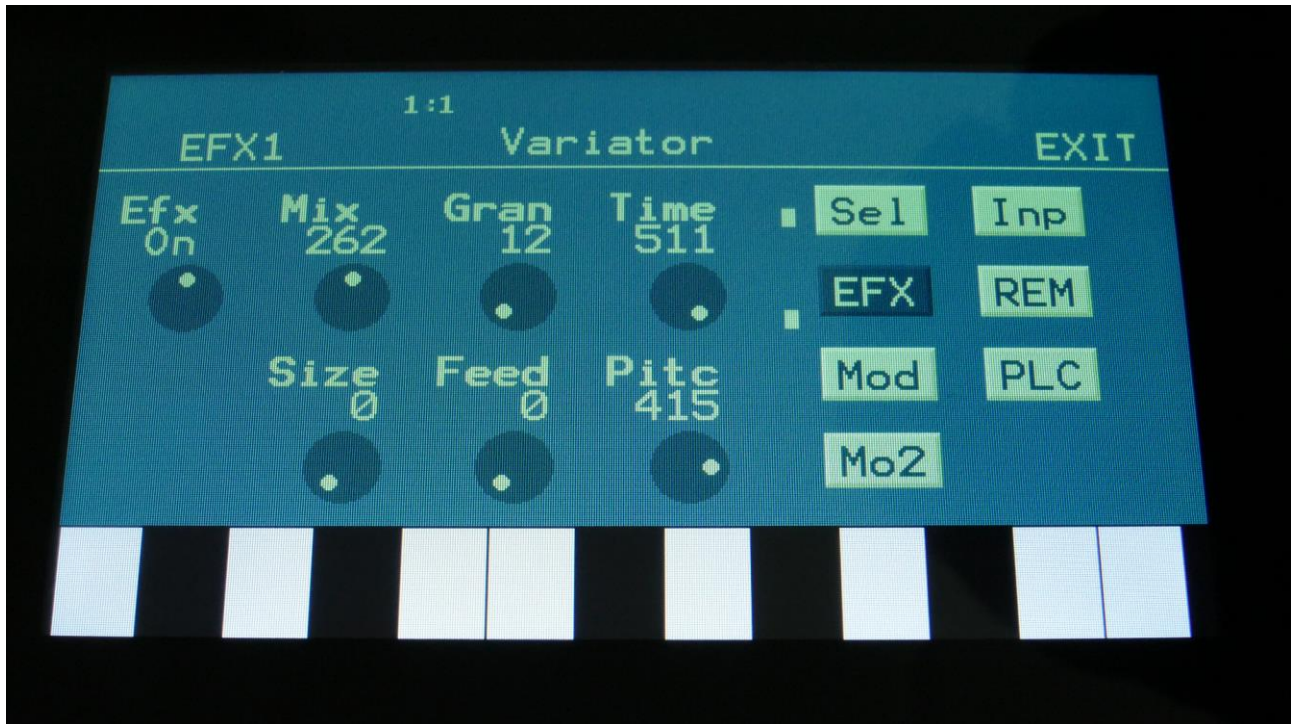

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Gran: Determines the variation pattern. Range: 0 to 511.


Time: The size of the RAM buffer used for the variator. When this is set to zero, the Variator will use no RAM at all, and become quite unpredictable.

Size: The size of one grain.

Feed: Adjusts how much of the Variator output signal should be fed back to its input.

Pitc: The amount of Variator pitch shift.

Variator Modulation

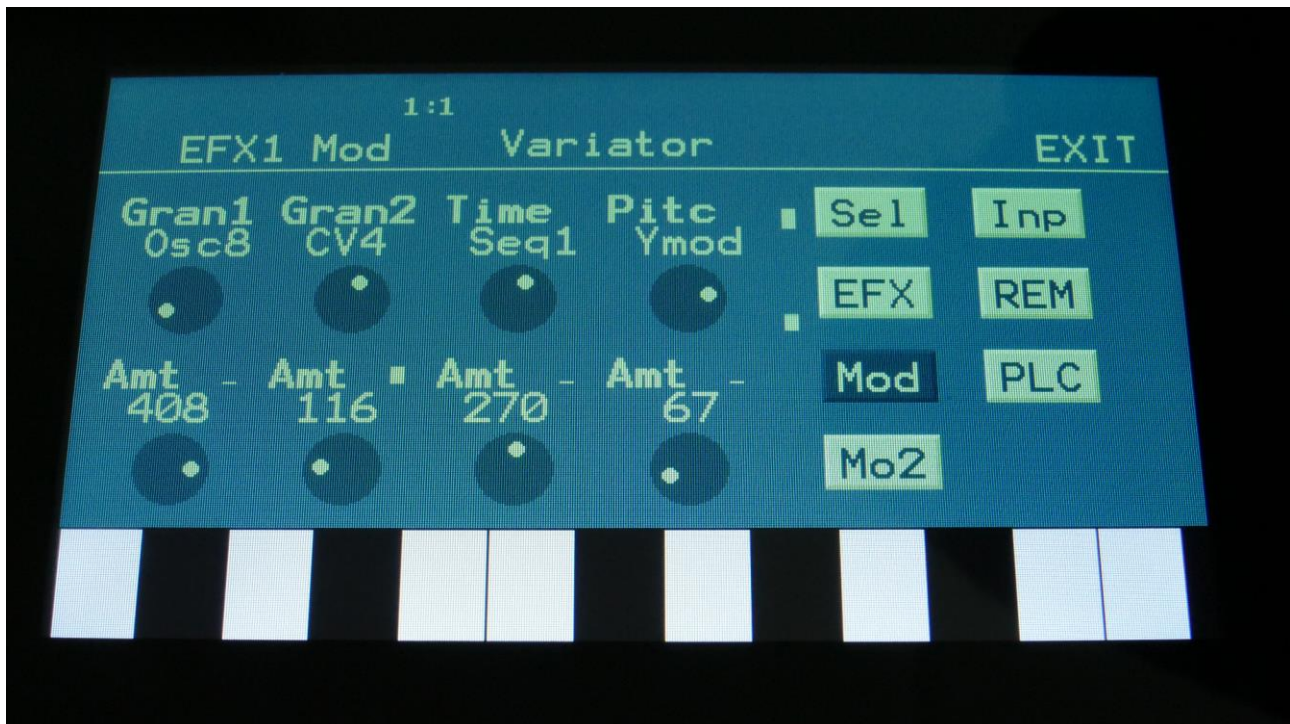

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Gran1 and Gran2: Modulates the gran variation pattern parameter.

Time: Modulates the time parameter.

Pitr: Modulates the pitch shift parameter.

PitchShaper

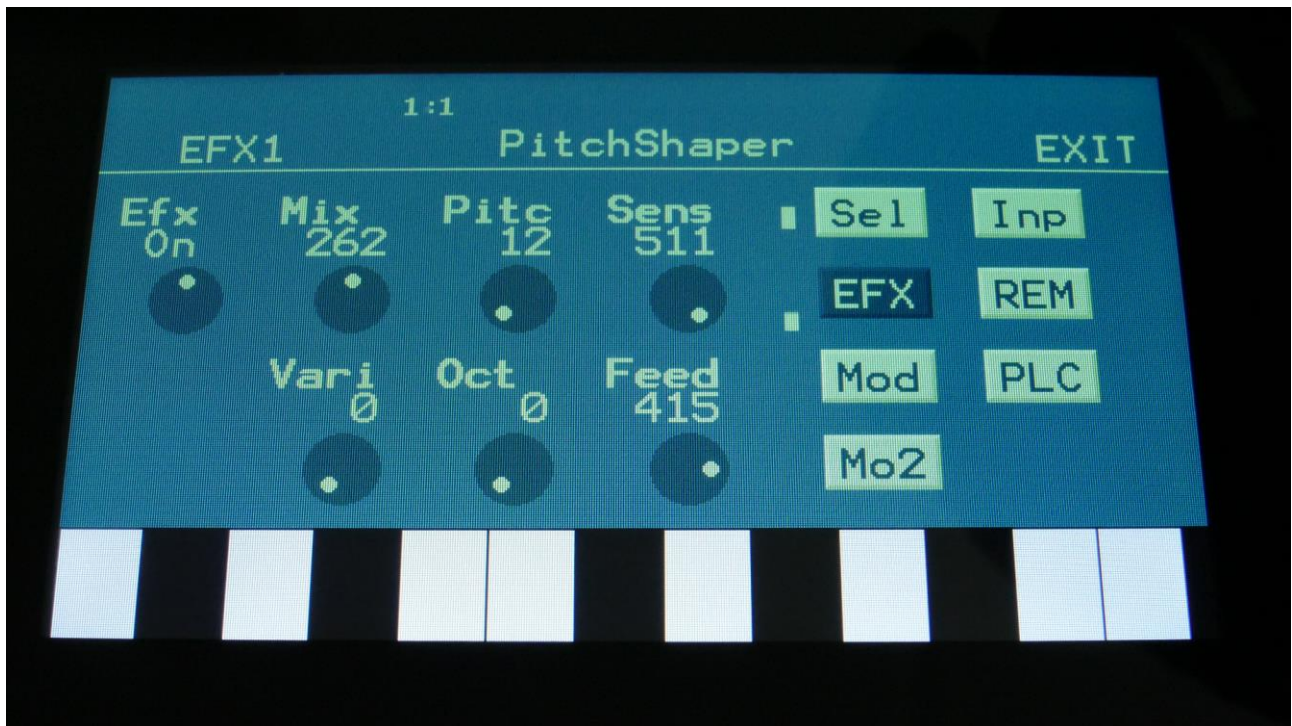

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Pitc: Sets the frequency, that the input signal should be re-pitched to.


Sense: Pitch detection sense. On a pure waveform, turn this fully down to make sure, that it detects all the waves of it, and pitch shifts correctly. On more complex sounds, turn this up until the desired effect are obtained. At higher settings, only portions of the sound will be pitch shifted, and when it doesn't detect any pitch, it will repeat the portion it detected, making the sound "granulate".

Vari: Pitch variation. The more this is turned up, the more the pitch variations on the input signal affects the pitch shaper frequency.

Oct: Octave transpose. From 0 to +3 octaves.

Feed: Pitch shaper feedback. Adjusts the portion of the output signal, that is fed back to the input.

PitchShaper Modulation

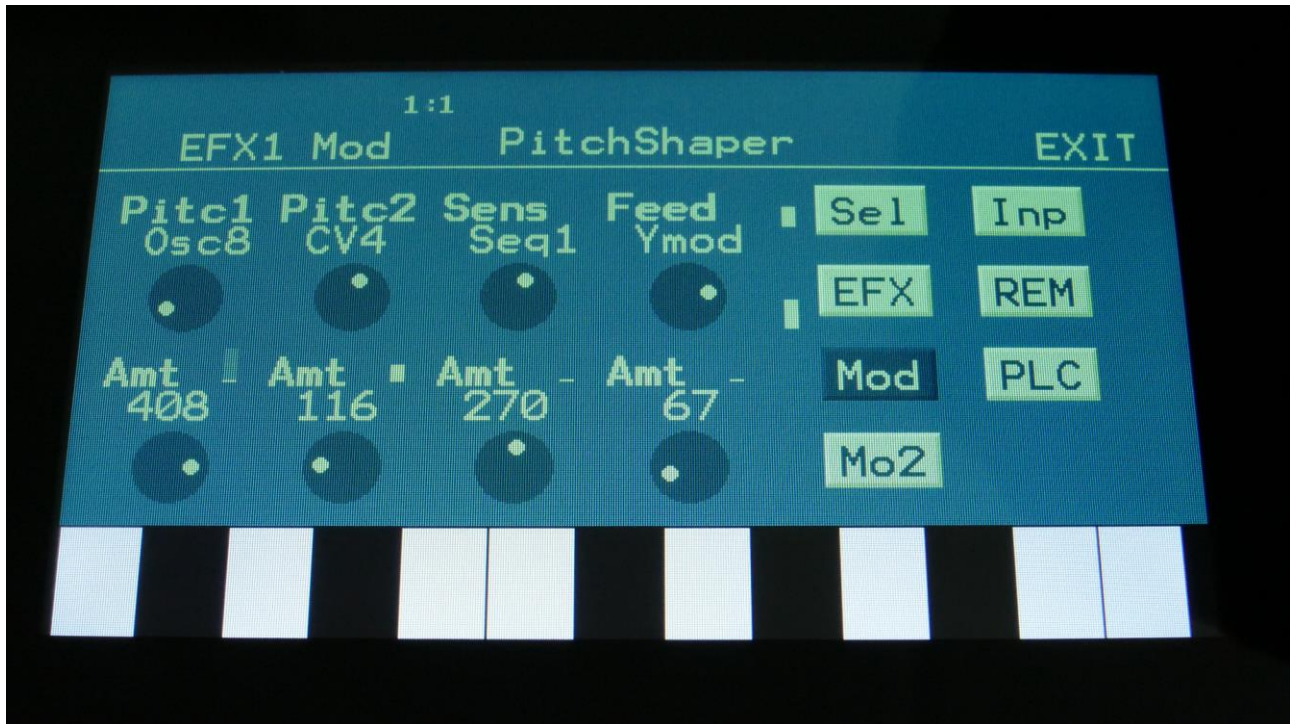

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Pitc1 and Pitc2: Modulates the pitc parameter.

Sens: Modulates the Sense parameter.

Feed: Modulates the Feed parameter.

PitchShaper2

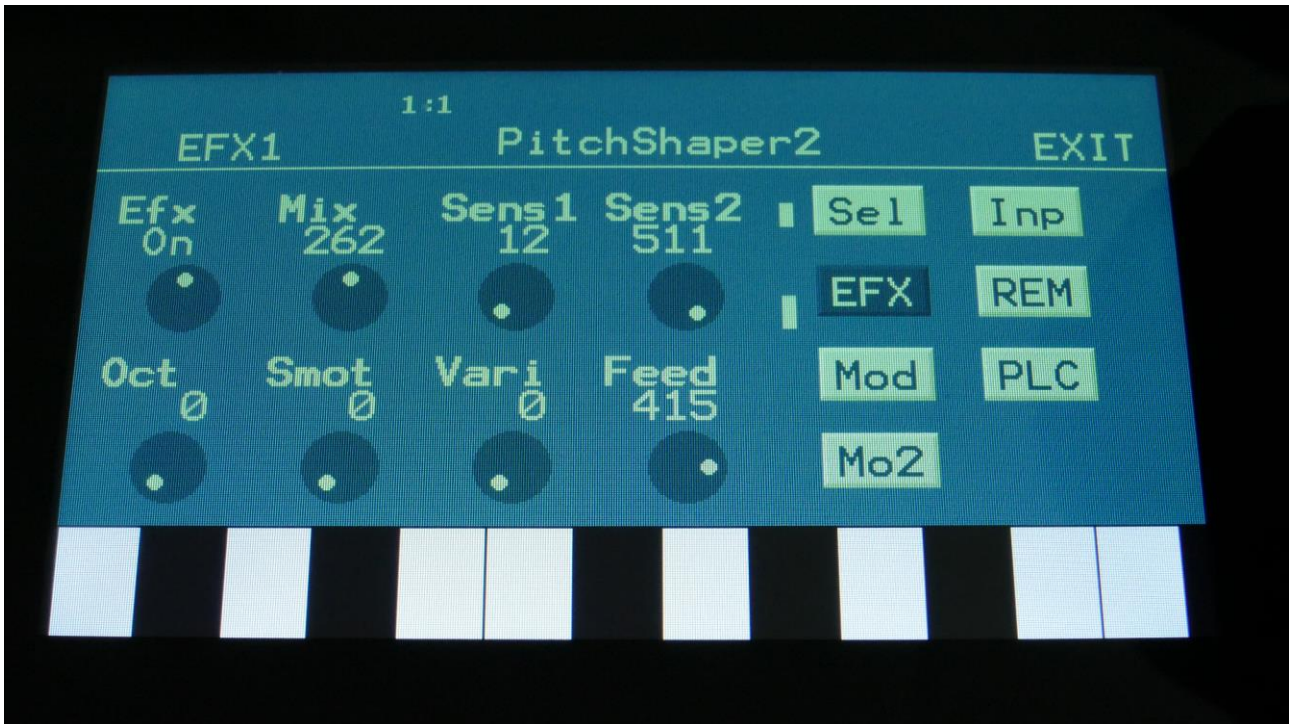

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Sens1: Pitch detection sense input 1. On a pure waveform, turn this fully down to make sure, that it detects all the waves of it, and pitch shifts correctly. On more complex sounds, turn this up until the desired effect are obtained. At higher settings, only portions of the sound will be pitch shifted, and when it doesn't detect any pitch, it will repeat the portion it detected, making the sound "granulate".

Sens2: Pitch detection sense input 2. On a pure waveform, turn this fully down to make sure, that it detects all the waves of it, and pitch shifts correctly. On more complex sounds, turn this up until the desired effect are obtained. At higher settings, only portions of the sound will be pitch shifted, and when it doesn't detect any pitch, it will repeat the portion it detected, making the sound "granulate".


Oct: Octave transpose. From 0 to +3 octaves.

Smot: Smooth. The more this is turned up, the more the changes in pitch are smoothened.

Vari: Pitch variation. The more this is turned up, the more the pitch variations on the input 1 signal affects the pitch shaper frequency.

Feed: Pitch shaper feedback. Adjusts the portion of the output signal, that is fed back to the input.

PitchShaper2 Modulation

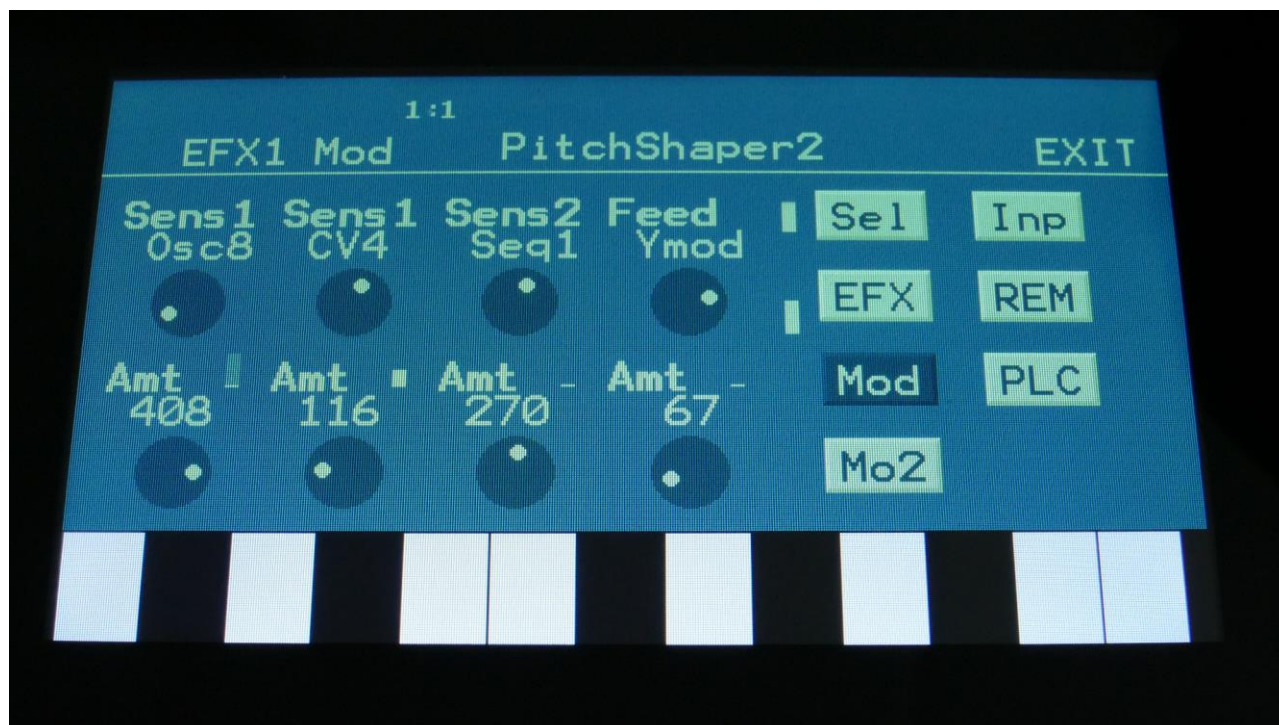

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Sens1 and Sens2: Modulates the sens 1 and 2 parameters.

Feed: Modulates the Feed parameter.

Time Stretch

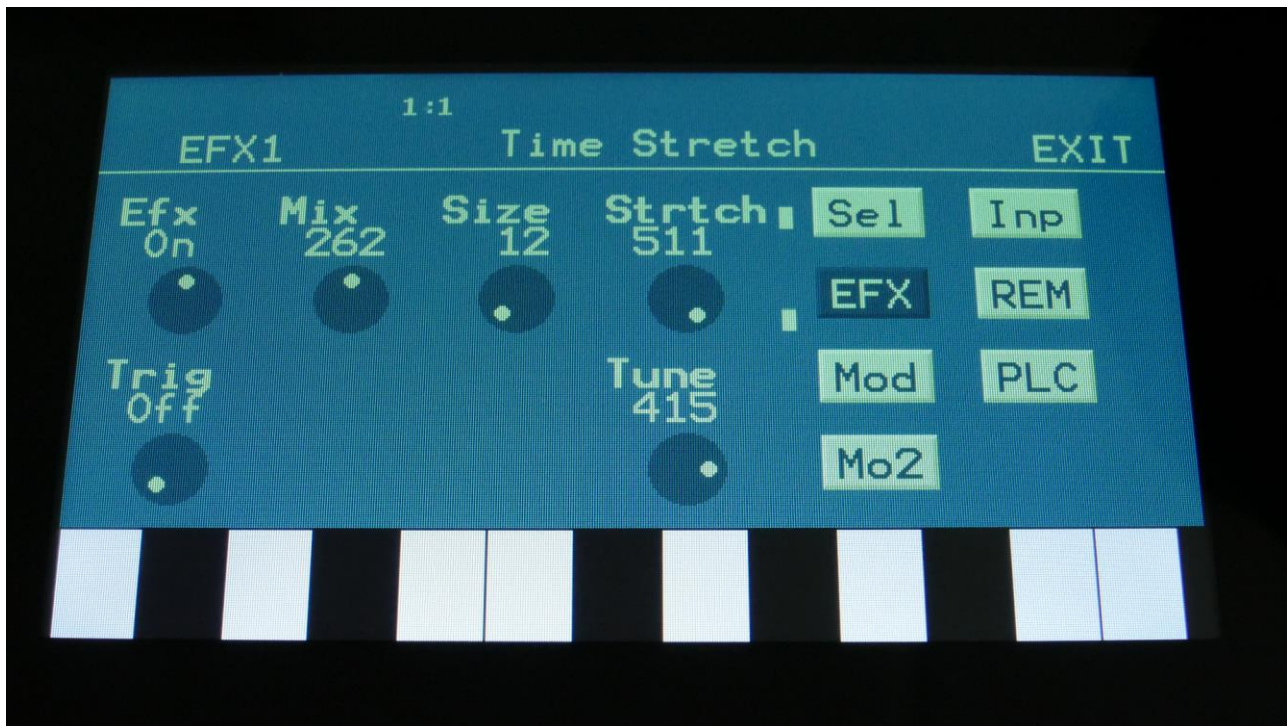

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.


Size: 0 to 511. The size of the RAM buffer used for the TimeStretcher.

Strtch: 0 to 511. Time stretch. A value below 256 will stretch the sound longer, a value above 256 will compress the sound to become shorter.

Trig: Off, 1 to 8. Determines if the time stretch effect should be triggered by a part or not.

Tune: Pitch Coarse. A value below 256 will pitch the signal down, a value above 256 will pitch it up.

Time Stretch Modulation

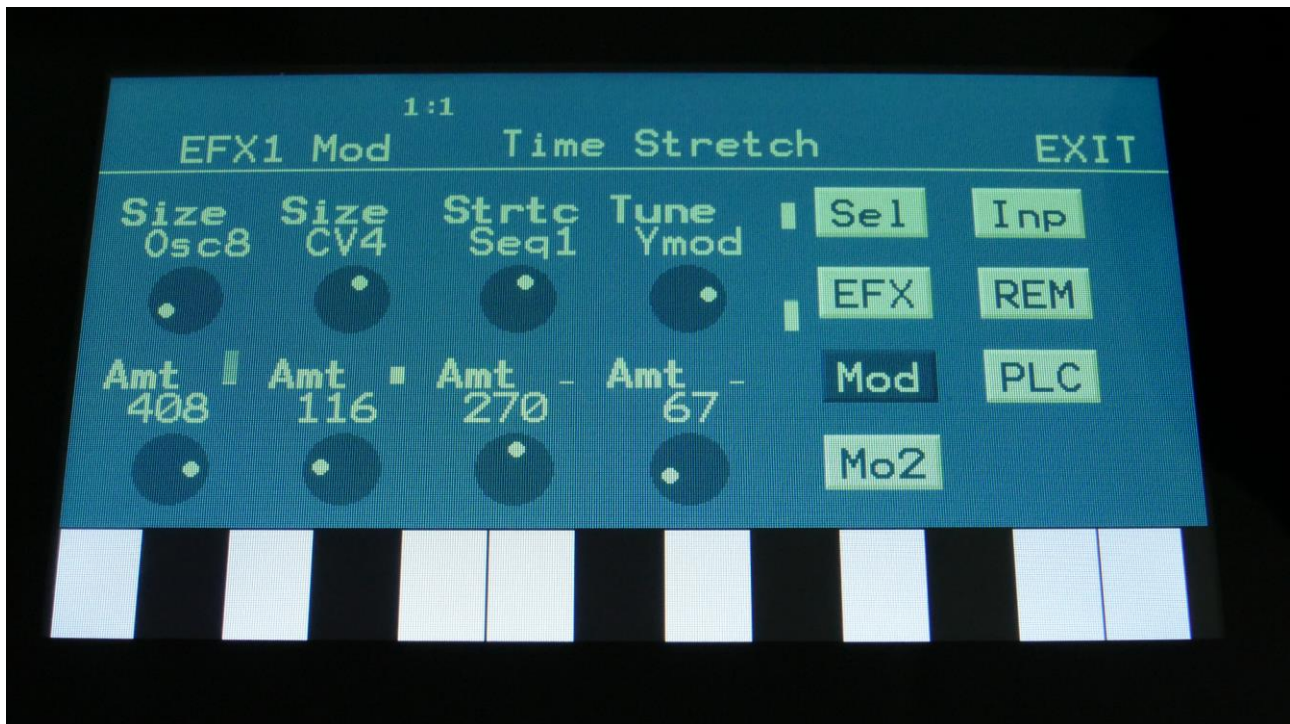

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Size: Modulates the size of the time stretch input buffer.

Strtc: Modulates the time stretching.

Tune: Modulates the pitch coarse.

Filter

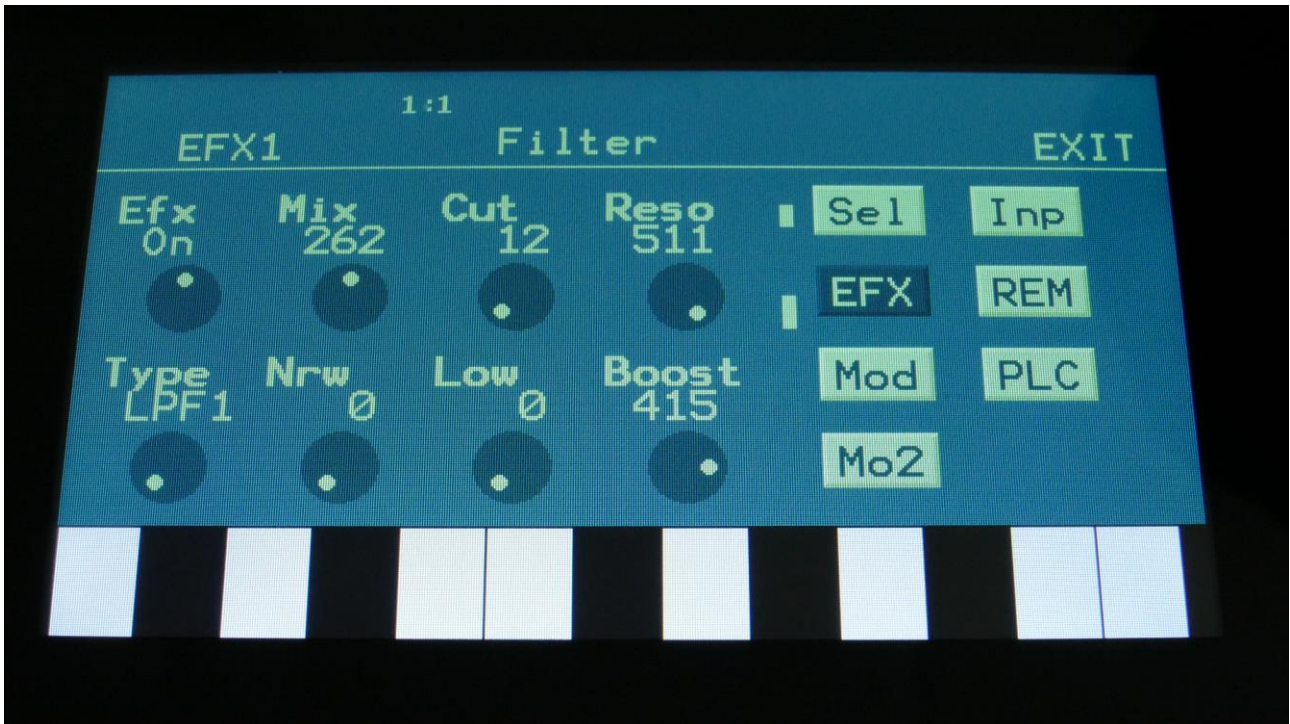

The filter types:

LPF1: Lowpass filter with a rather weak character. Resonance does not self-oscillate.

LPF2: Lowpass filter that are a bit sharper than LPF1. Resonance does not self-oscillate.

LPF3: Sharp Lowpass filter with self-oscillating resonance.

LPF4: Very sharp Lowpass filter with self-oscillating resonance.

BPF1: Bandpass filter with a rather weak character. Resonance does not self-oscillate.

BPF2: Bandpass filter with focus on the bass area. Distorts at higher input levels. Resonance does not self-oscillate.

BPF3: Sharp Bandpass filter with self-oscillating resonance.

HPF1: Sharp Highpass filter with self-oscillating resonance.

HPF2: High gained Highpass filter with self-oscillating resonance. Distorts at higher input levels.

HPF3: Sharp Highpass filter with self-oscillating resonance. A bit weaker than HPF1.

Dstr: Destruction. A rather defective filter. Self-oscillates at some points, distorts at others.

FAT1: Slightly distorting lowpass filter, with a sharp response and self-oscillating resonance.

FAT2: A slightly weaker version of FAT1.

LoFi: A very distorting and unpredictable lowpass filter.

LPF5: A lowpass filter with a very soft character. Resonance does not self-oscillate.

BPF4: A bandpass filter with a very soft character and self-oscillating resonance.

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Cut: 0 to 511. Sets the cutoff frequency of the filter.

Reso: 0 to 511. Sets the amount of resonance applied to the filter.


Type: Sets the filter type. See the list of filter types.

Nrw: 0 to 511. Turning this up, will make the frequency response of the filter more and more narrow.

Low: 0 to 511. Sets the lowest frequency offset point of the filter. Turning this up, will in many filter types, make the bass bottom more present or distorted.

Boost: 0 to 511. Gains the filter output level.

Filter Modulation

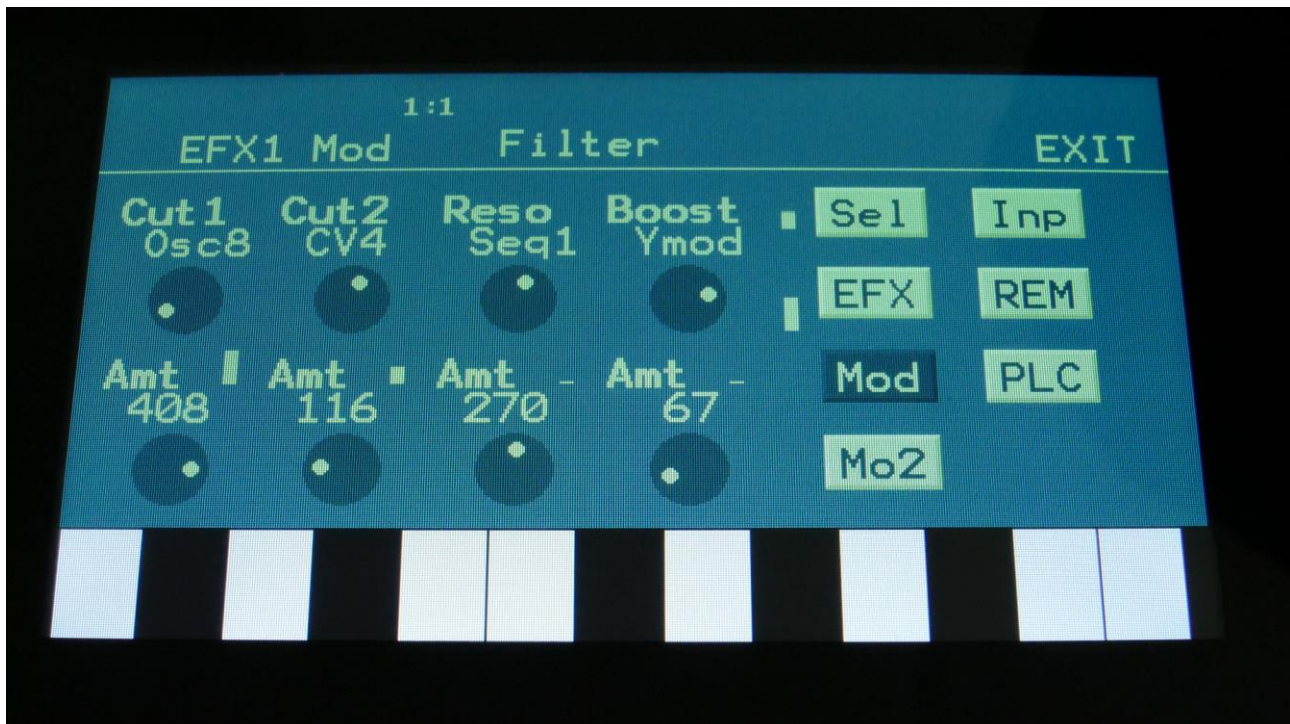

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Cut1, Cut2: Will modulate the filter cutoff frequency.

Reso: Will modulate the amount of resonance applied to the filter.

Boost: Will modulate the filter output gaining.

Triple BPF

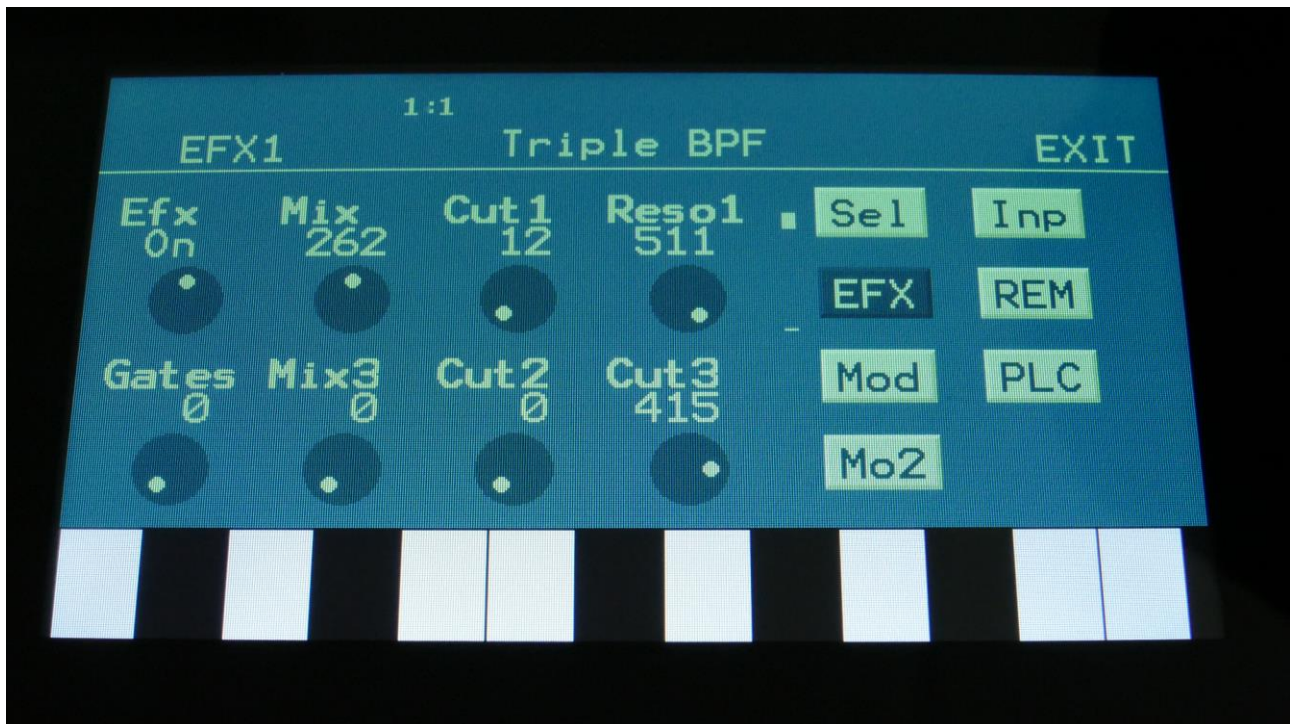

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Cut1: The cutoff frequency of band pass filter 1.

Reso1: The resonance of all 3 band pass filter.


Gates: Band pass filters 1, 2 and 3 running through an XOR gate. The Gates parameter adjusts the mix between the clean signal from the filters and the XOR'ed signal.

Mix3: Band pass filter 3 level.

Cut2: The cutoff frequency of band pass filter 2.

Cut3: The cutoff frequency of band pass filter 2.

Triple BPF Modulation

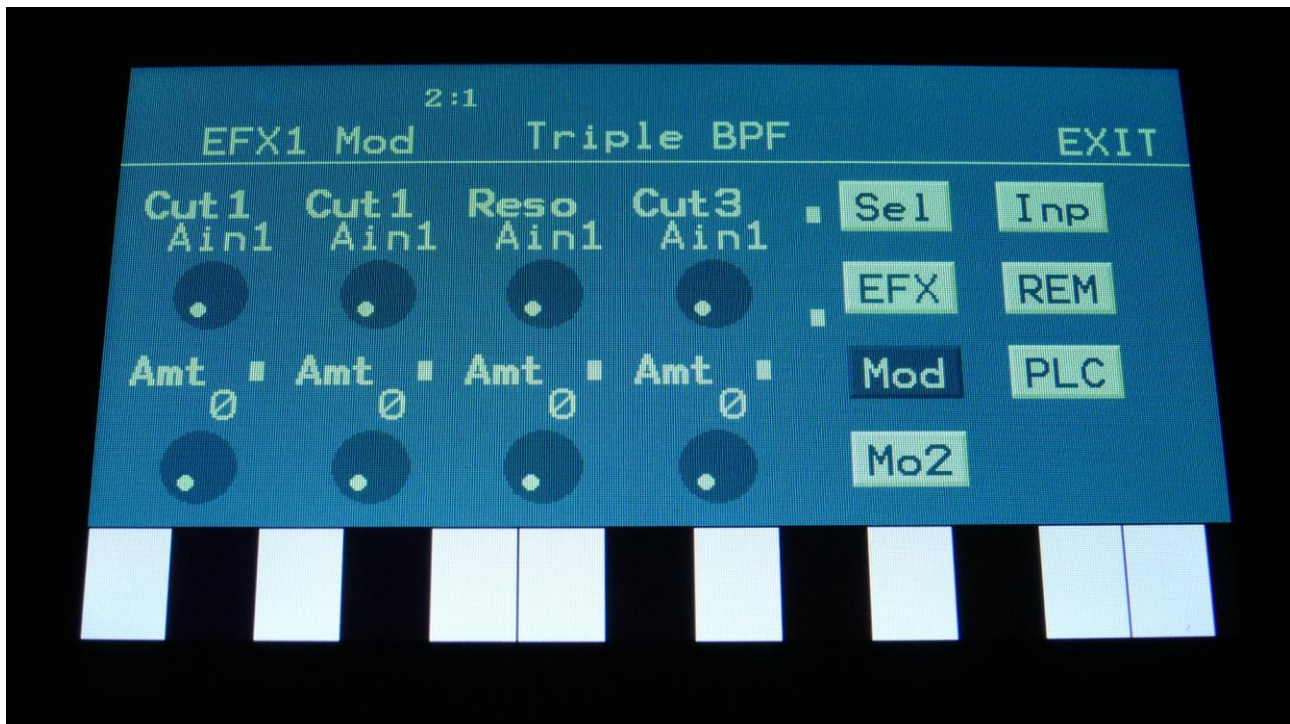

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Cut1: Modulates the Cut1 parameter.

Reso1: Modulates the Reso1 parameter.

Cut3: Modulates the Cut3 parameter.

WaveFolder

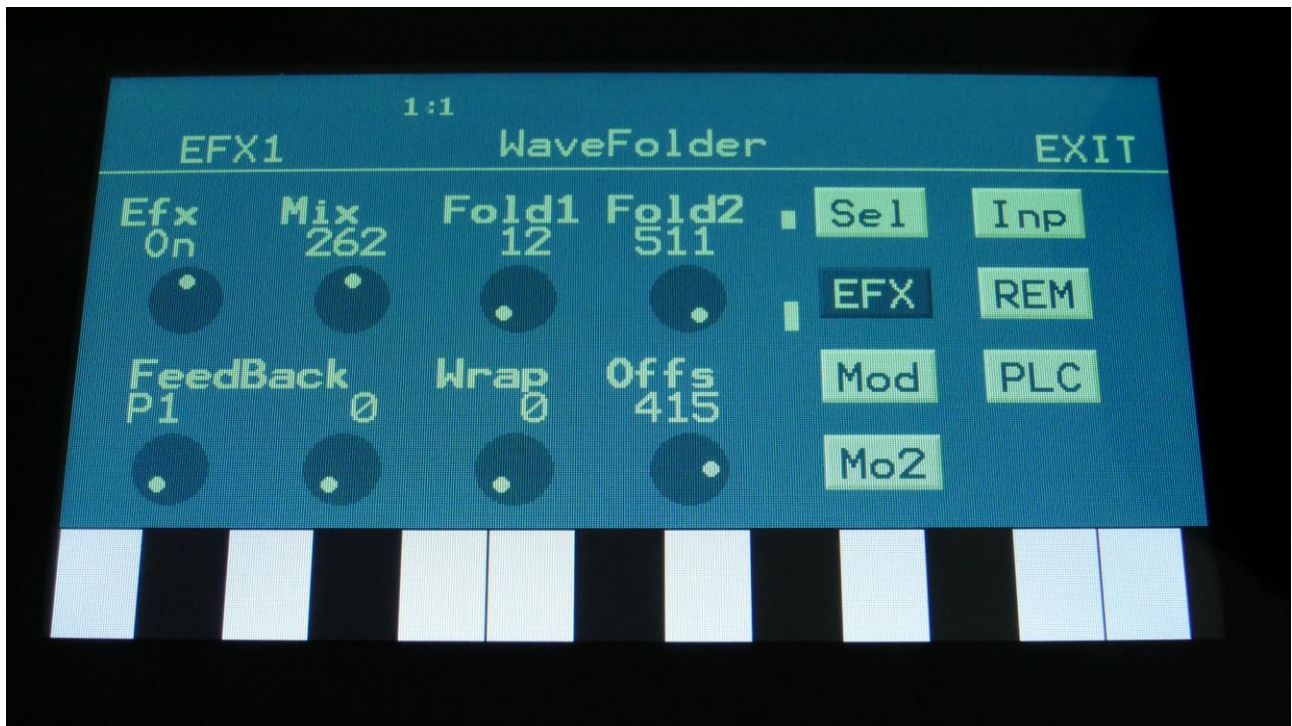

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Fold1: The level of the 4-stage wavefolder 1.


Fold2: The level of the 4-stage wavefolder 2.

FeedBack: Feedback point and feedback level. Feedback points: P1-P4: Wavefolder1 stage1-4. P5-P8: Wavefolder2 stage1-4.

Wrap: Wraps the folded signal over the edge.

Offs: Wavefolding offset.

WaveFolder Modulation

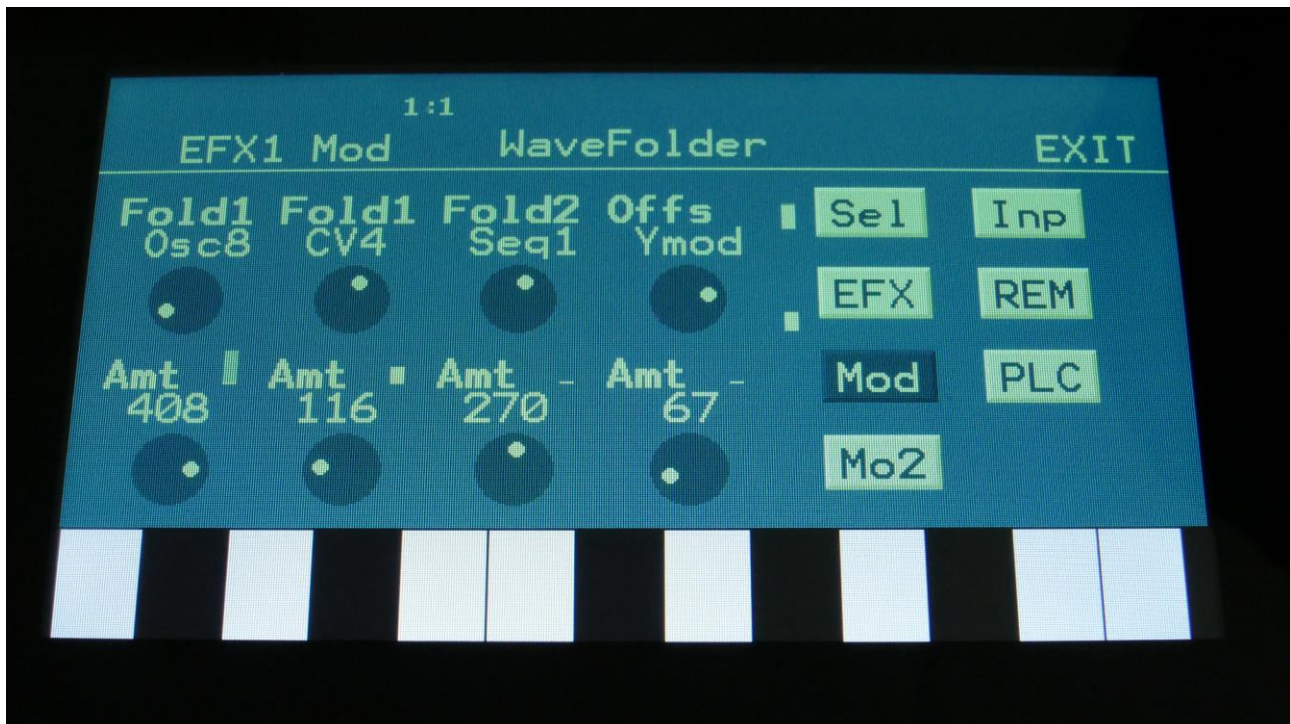

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Fold1: Modulates the Fold1 parameter.

Fold2: Modulates the Fold2 parameter.

Offs: Modulates the Offs parameter.

FAT

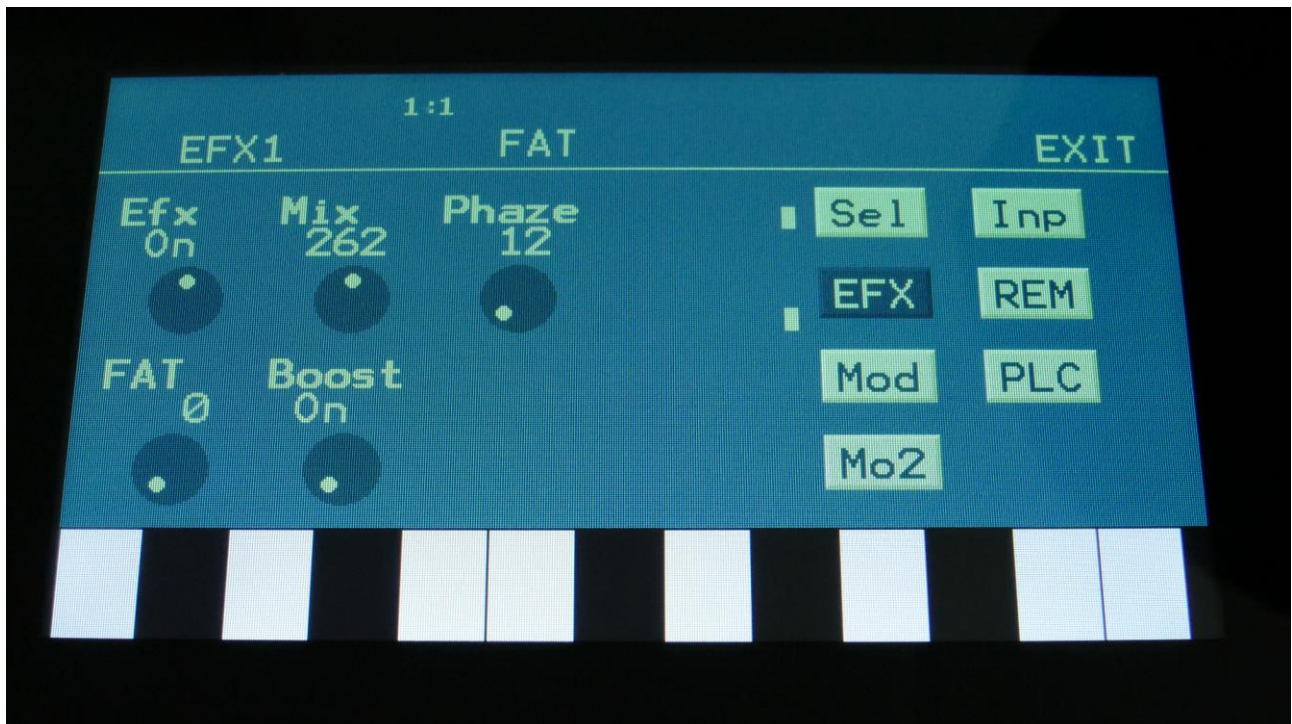

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.


Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Phaze: Adjusts the phase difference of the FAT layers. When turned fully down, all layers are in phase. The more it is turned up, the more the layers goes out of phase to each other. Useful for creating comb filter type sounds.

FAT: Adds 0 to 3 layers of the input sound to itself.

Boost: When this is on, the FAT layers are sonically added to each other, which will make the sound louder, and might cause it to saturate. If it is off, the sound stays at its original sonic level, even when layers are added.

FAT Modulation

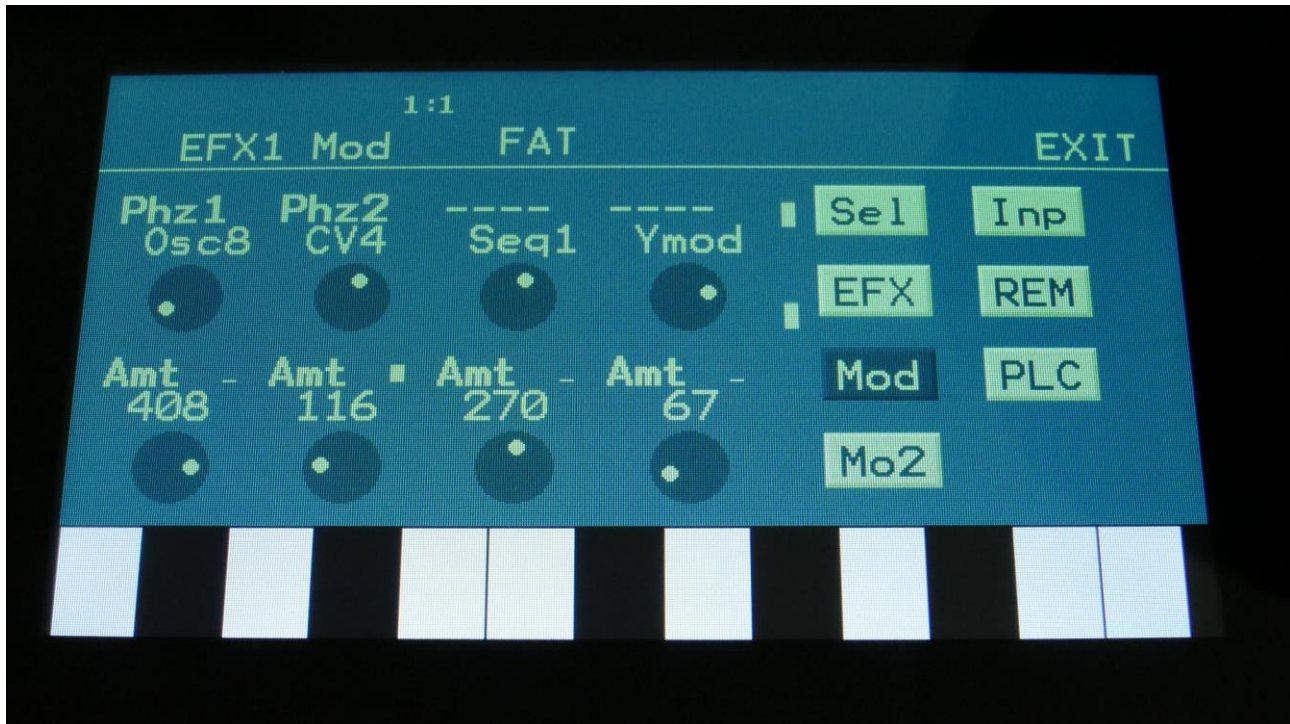

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.


For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Phz1 and Phz2: Modulates the Phaze parameter.

EQ

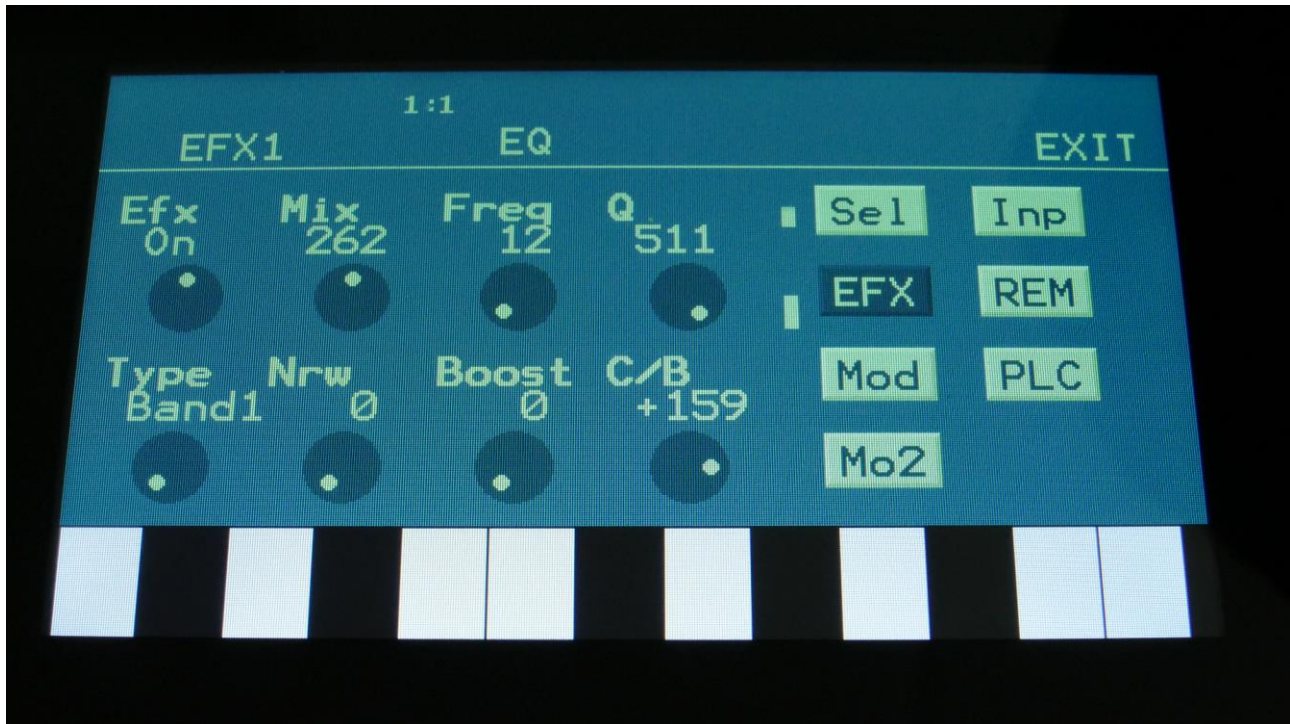

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output. The output of the EQ is inverted. This means, that when the Mix parameter is set to 256, the EQ is actually subbed from the audio input. Set the Mix parameter to different values, to obtain different EQ effects, or just turn it fully up to 511, to get a normal parametric EQ.

Freq: Sets the frequency, at which the EQ will cut or boost.

Q: Sets the width of the frequency band, that will be cutted/boosted.

Type: Sets the EQ characteristics. The types available are:

Band1: Cut/boost the frequency/range, selected by Freq/Q.

Band2: Like Band1, but with a slightly sharper sound.

Band3: Like Band2, but with an even sharper sound.

Low: Cut/boost the frequencies below the frequency selected by Freq.

High1: Cut/boost the frequencies above the frequency selected by Freq.

High2: Like High1, but with a sharper sound.


FAT: Like Band3, but it fattens the sound a bit.

Nrw: Turning this up, will narrow the frequency band affected by the EQ.

Boost: Turning this up, will boost the output gain of the EQ.

C/B: Cut/Boost. Setting this to a negative value, will damp frequencies on the input signal. Setting it to a positive value, will boost frequencies on the input signal.

EQ Modulation

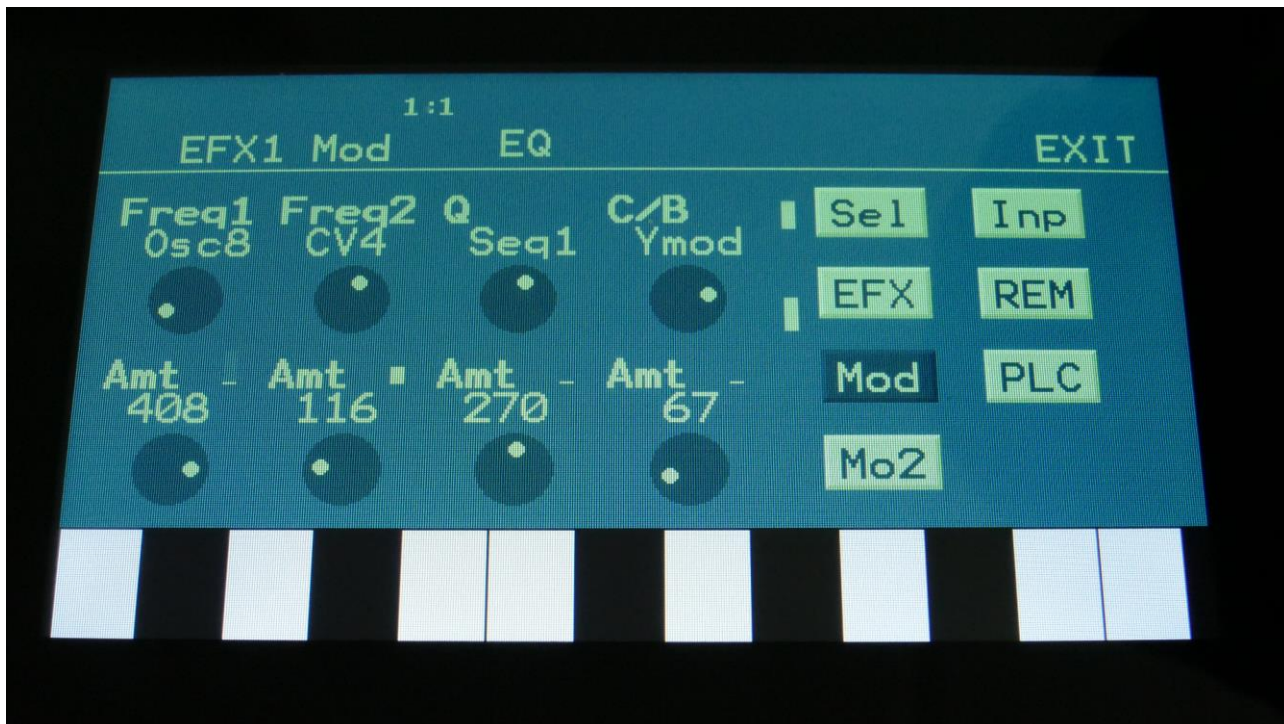

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Freq1/Freq2: Will modulate the EQ frequency.

Q: Will modulate the EQ frequency width.

C/B: Will modulate the cut/boost parameter.

EQ2

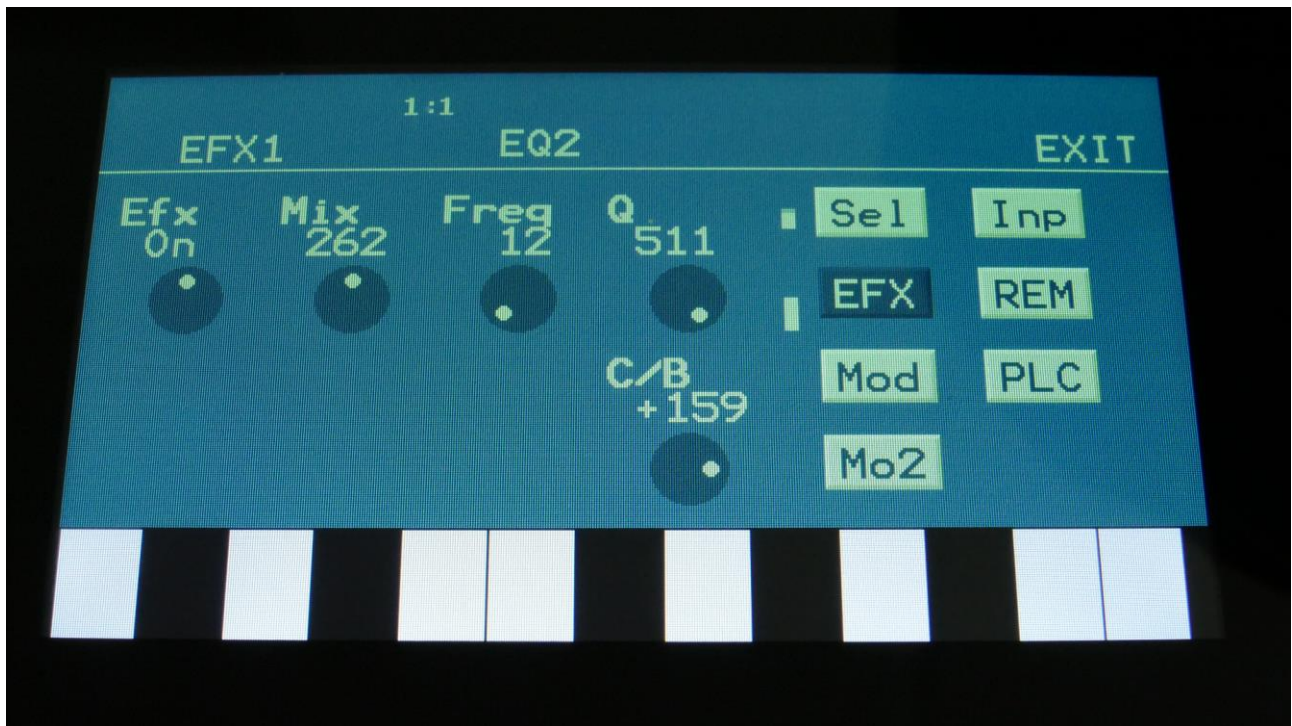

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.


Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Freq: Sets the frequency, at which the EQ will cut or boost.

Q: Sets the width of the frequency band, that will be cutted/boosted.

C/B: Cut/Boost. Setting this to a negative value, will damp frequencies on the input signal. Setting it to a positive value, will boost frequencies on the input signal.

EQ2 Modulation

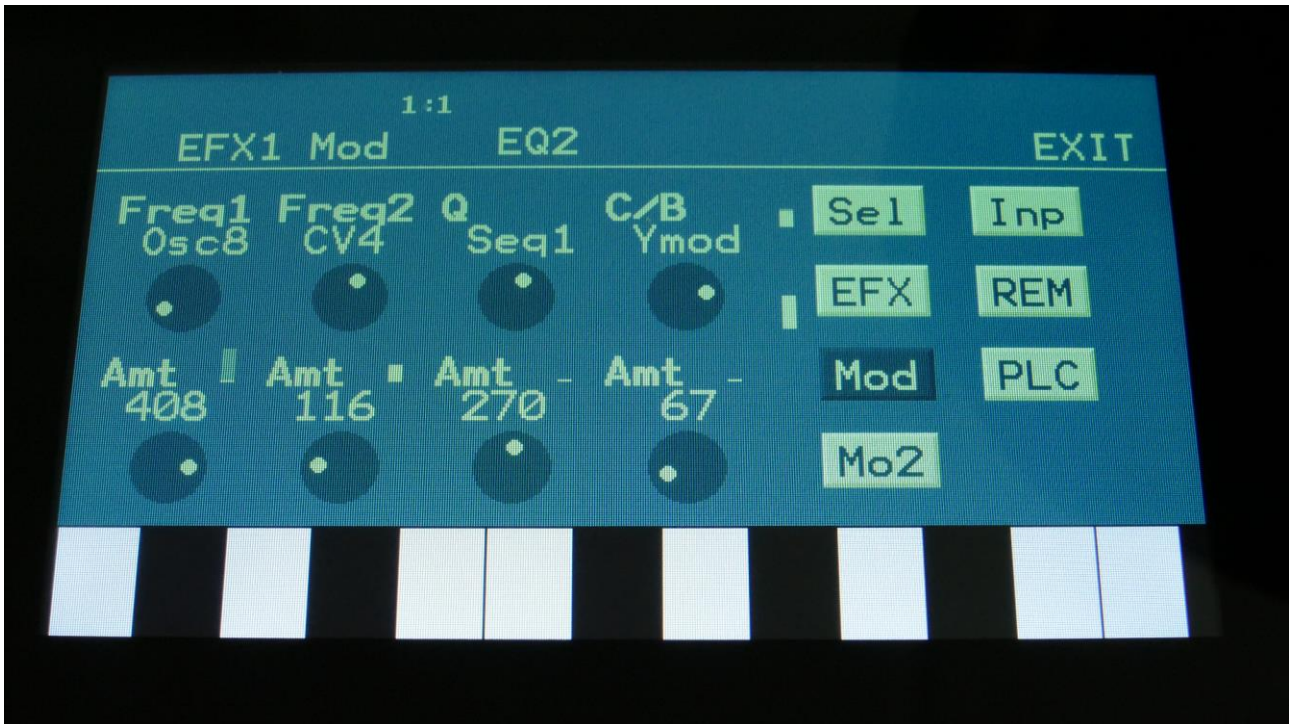

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Freq1/Freq2: Will modulate the EQ frequency.

Q: Will modulate the EQ frequency width.

C/B: Will modulate the cut/boost parameter.

OverShifter



Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Freq: Turning this up will shift the frequency spectrum of the input signal up.

Feed: Turning this up, will feed the output signal of the OverShifter back to its input. At certain settings, this can get really brutal!

Ring: Turning this up will add ringing/metal/noise to the signal.

Shape: Turning this up will alter the shape of the OverShifter, and add harmonics to the sound.

OverShifter Modulation



Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the "Connecting Modules" chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Freq1 and Freq2: Modulates the frequency shift parameter.

Feed: Modulates the Feed parameter.

Shape: Modulates the Shape parameter.

Bass Enhancer



Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.


Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Bass: 0 to 511. Sets the amount of bass enhancement. At zero no sound is going through the bass enhancer, at 511 it is bass enhancing so much, that it creates distortion.

HiFq: 0 to 511. High frequency attack content. When turning this up, a subtle attack will be added to the sound, that is going through the bas enhancer.

For optimal bass enhancement, and not too much distortion, it is best to keep the Mix and the Bass parameters below the middle value.

Bass Enhancer Modulation

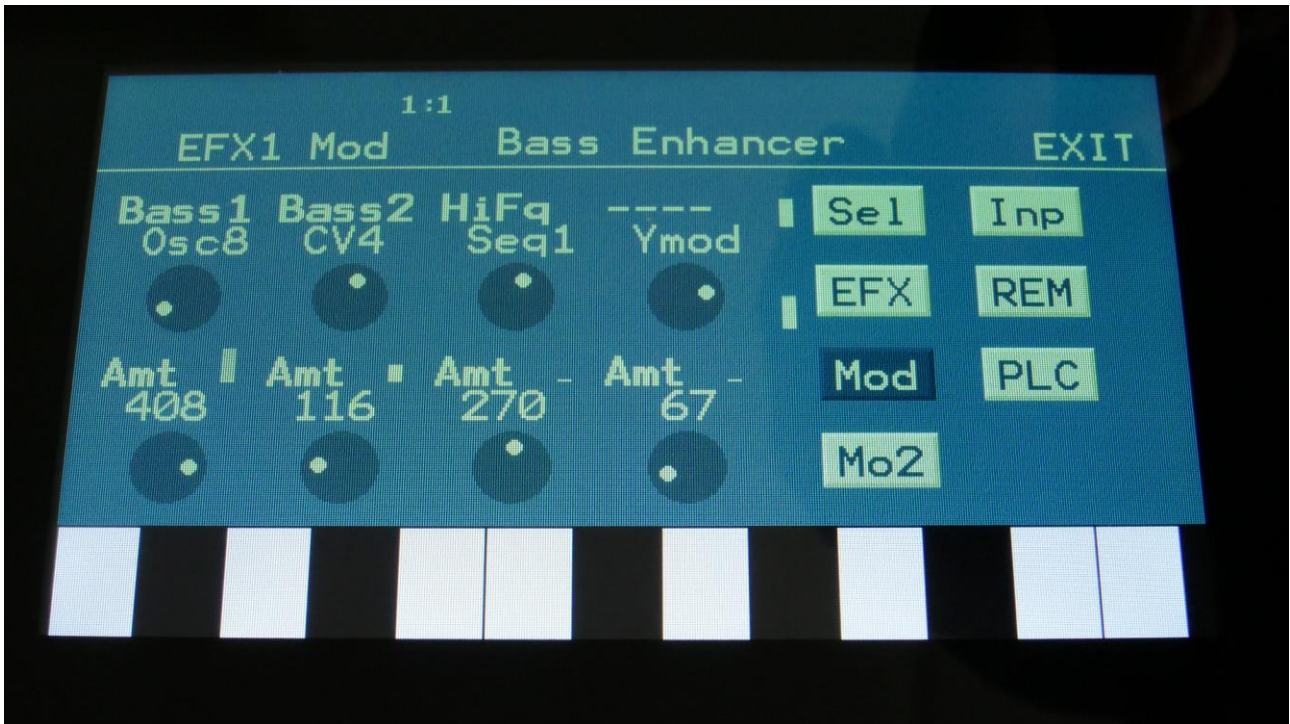

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Bass1 and Bass2: Modulates the amount of bass enhancement.

HiFq: Modulates the high frequency attack content.

Compressor

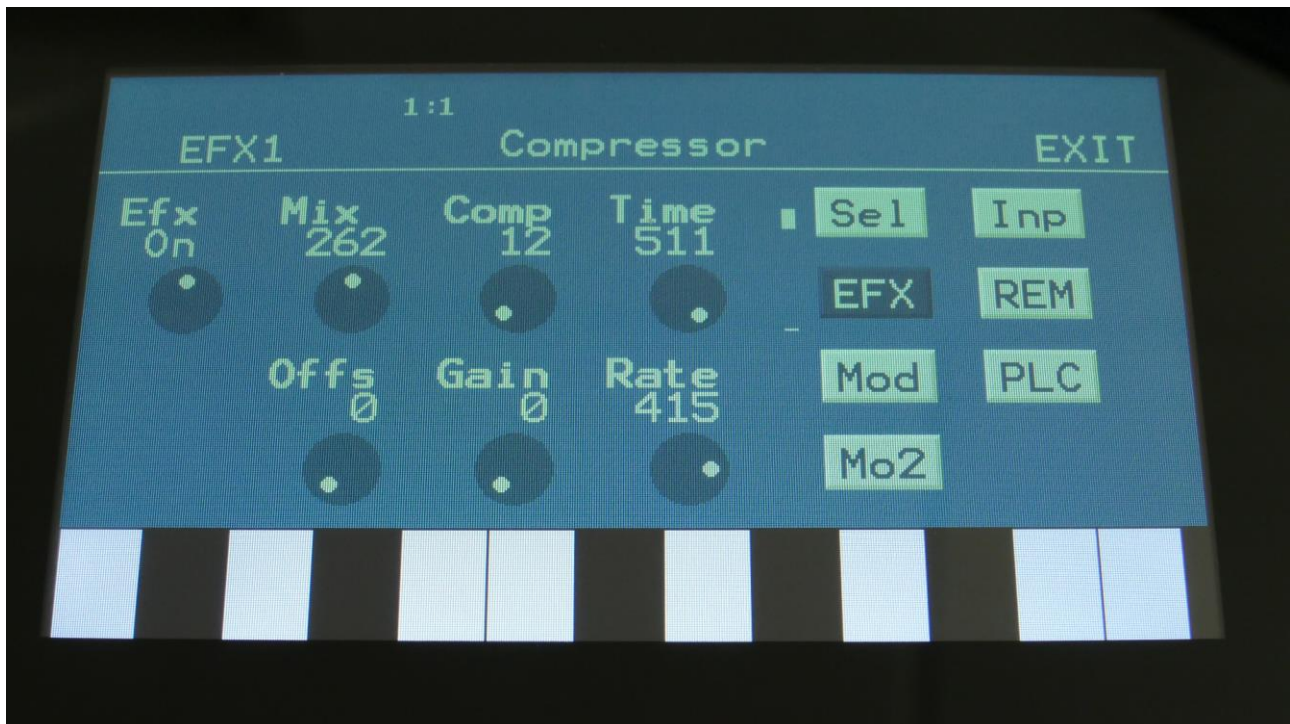

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Comp: 0 to 511. Compression amount. The more this is turned up, the more the portion of the signal, that are higher than the offset value, will be damped.


Offs: 0 to 511. Sets the level point where the compression will kick in. The more this is turned up, the higher the input signal will need to be, before it starts to compress.

Gain: 0 to 511. Sets the output gain of the compressor.

Time: 0 to 511. The more this is turned up, the longer time it will take, for the compression to kick in.

Rate: 0 to 511. This sets how fast the compressor will react to level changes of the input signal. The more it is turned up, the slower it will react.

Compressor Modulation

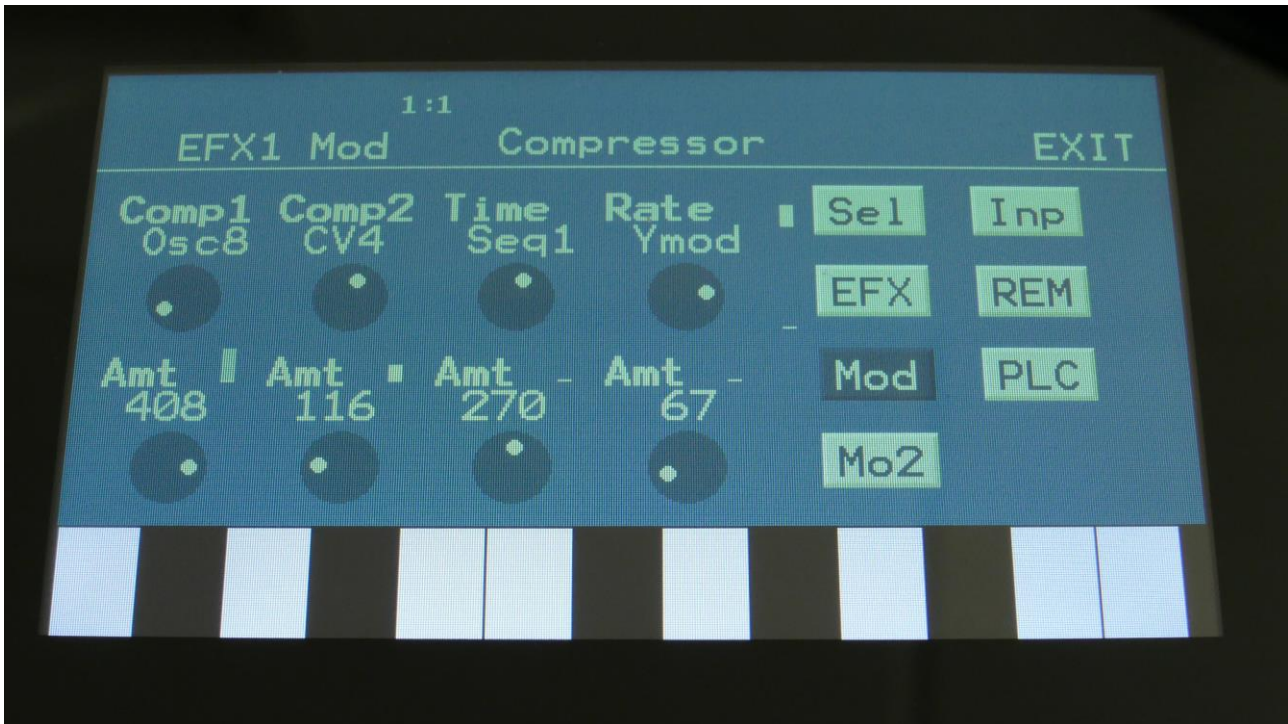

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Comp1, Comp2: Will modulate the compression amount.

Time: Will modulate the compression “kick in” time.

Rate: Will modulate the time it takes for the compressor to react to changes on the input signal.

Expander

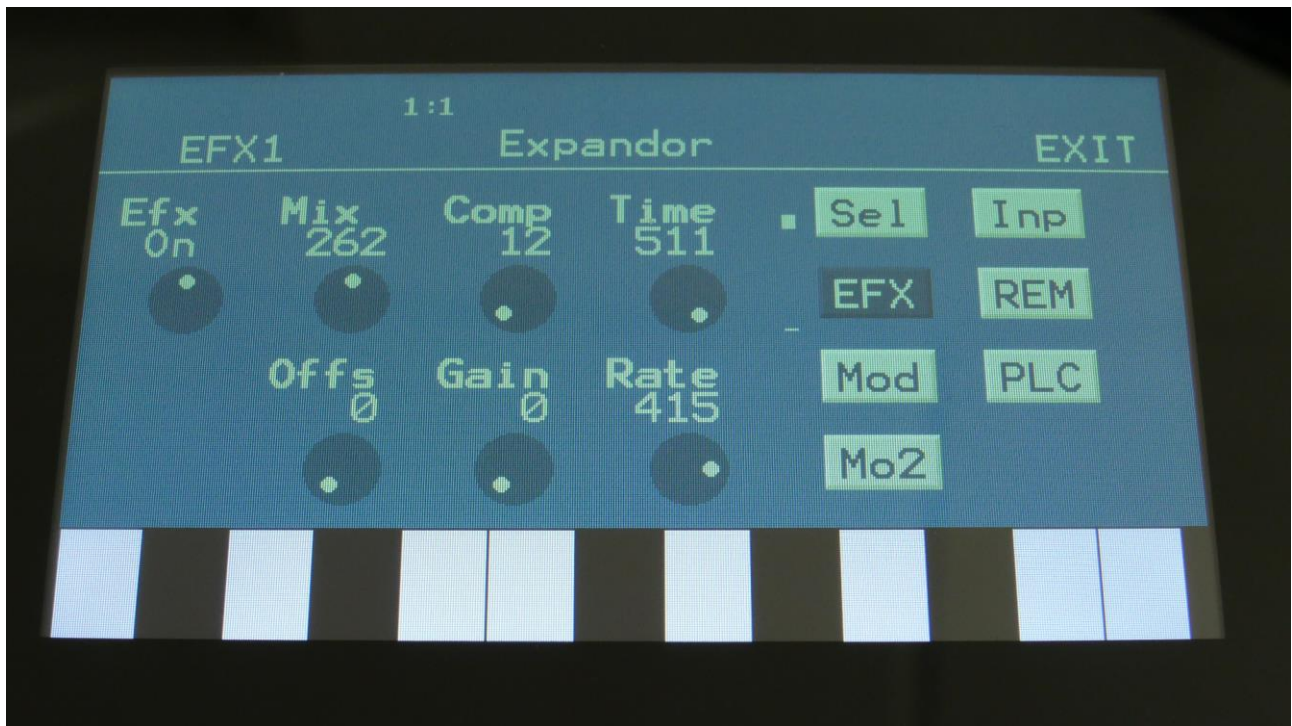

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Comp: 0 to 511. Compression amount. The more this is turned up, the more the portion of the signal, that are higher than the offset value, will be gained.


Offs: 0 to 511. Sets the level point where the expansion will kick in. The more this is turned up, the higher the input signal will need to be, before it starts to gain.

Gain: 0 to 511. Sets the output gain of the expander.

Time: 0 to 511. The more this is turned up, the longer time it will take, for the expansion to kick in.

Rate: 0 to 511. This sets how fast the expander will react to level changes of the input signal. The more it is turned up, the slower it will react.

Expander Modulation

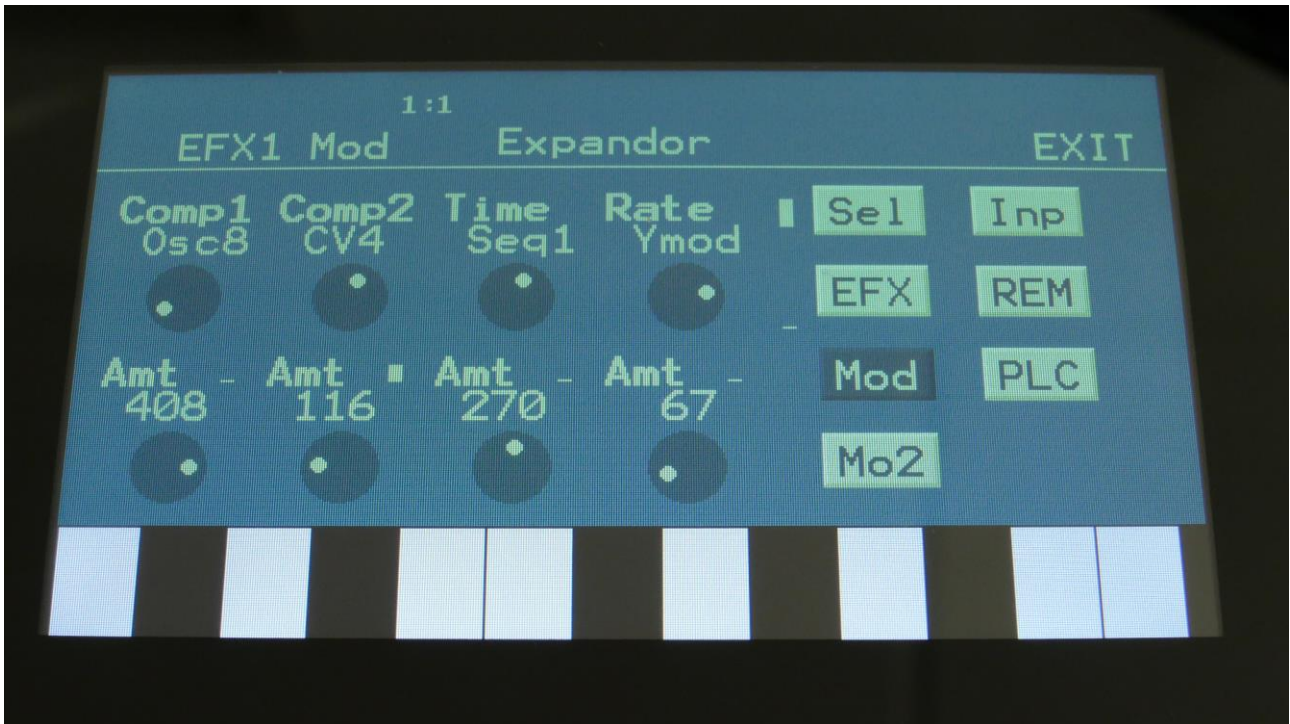

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Comp1, Comp2: Will modulate the expansion amount.

Time: Will modulate the expansion “kick in” time.

Rate: Will modulate the time it takes for the expander to react to changes on the input signal.

Delay1, Roto delay, Bright Delay and Bright Roto Delay

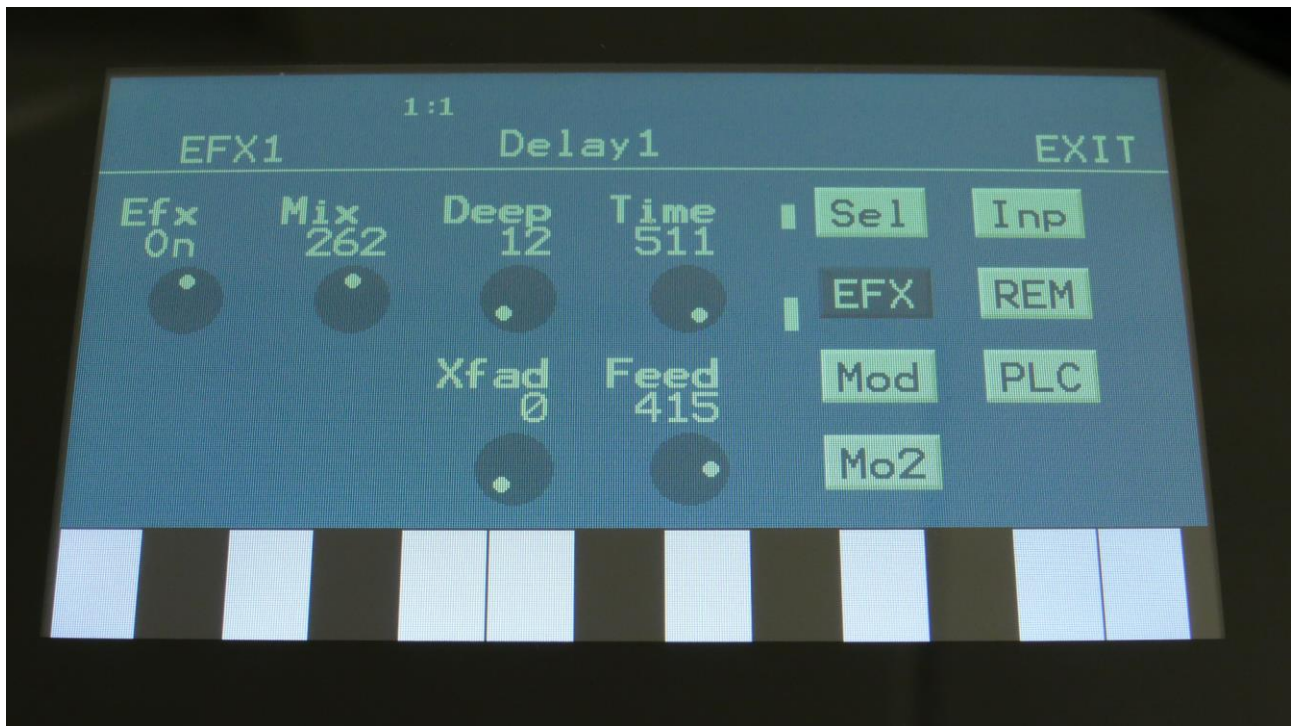

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.


Deep: Simulates a delay box, with adjustable physical depth.

Time: Delay time.

Xfade: Crossfade. Makes the delay effect sound smoother, by crossfading the feedback repeats into each other.

Feed: Delay feedback amount. At values over middle, the feedback signal will be gained and create infinite feedback. This might cause some saturation.

Delay1, Roto delay, Bright Delay and Bright Roto Delay Modulation

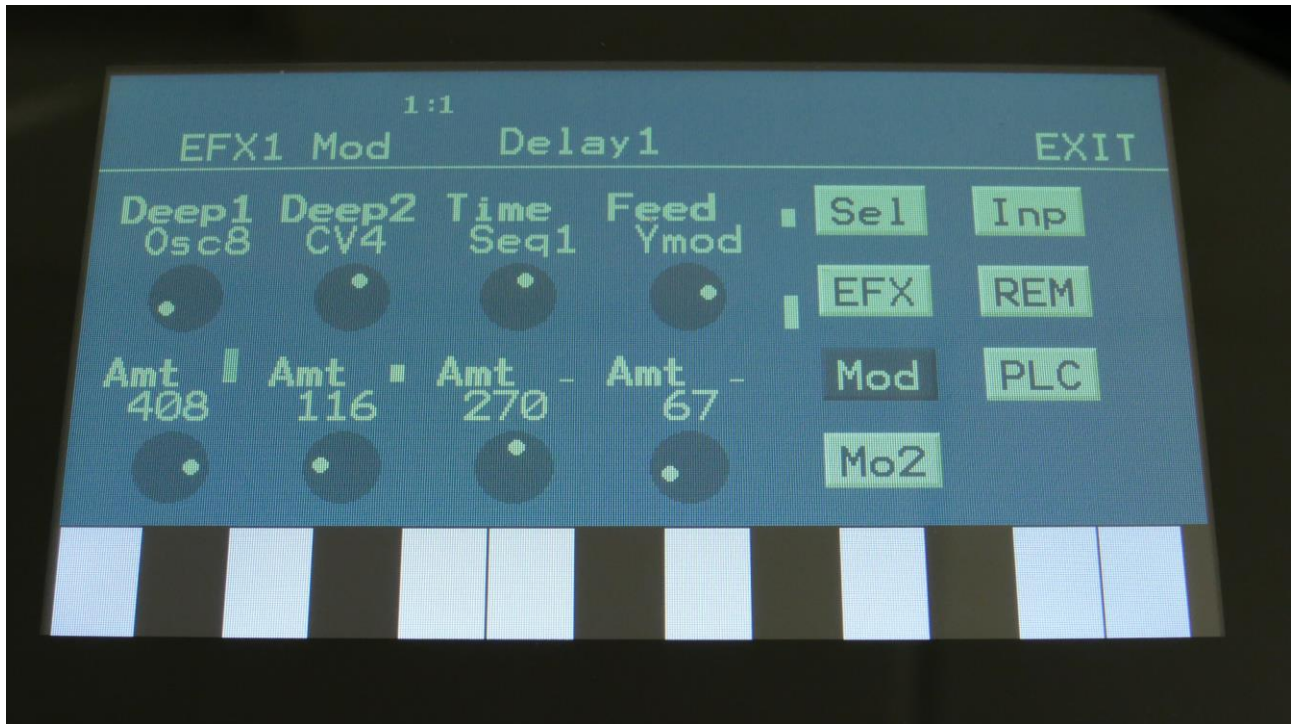

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Deep1 and Deep2: Modulates the deep parameter.

Time: Modulates the delay time parameter.

Feed: Modulates the feed parameter.

Reso EQ

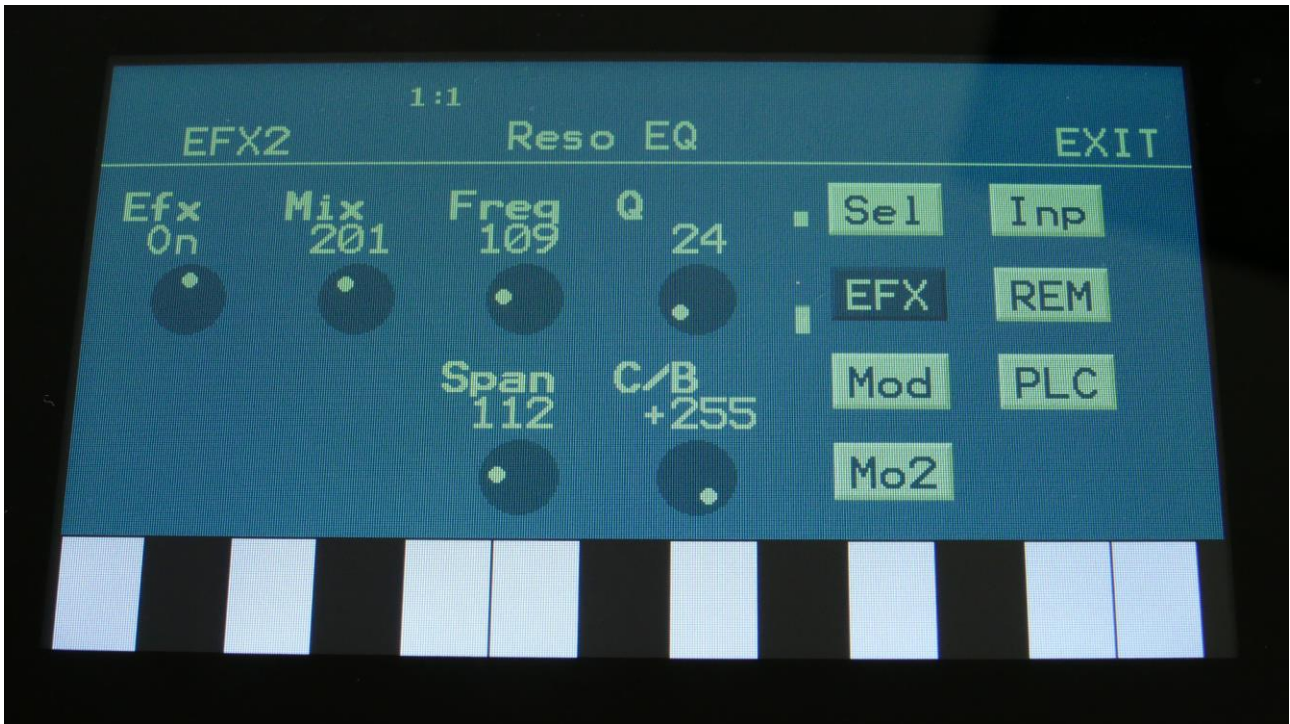

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.


Freq: Sets the center frequency of the frequency span, at which the EQ will cut or boost.

Q: Sets the resonance, which will create 2 peaks/dips at the outer ranges of the frequency span, at higher settings.

Span: Sets the width of the frequency band, which will be cutted/boosted.

C/B: Cut/Boost. Setting this to a negative value, will damp frequencies on the input signal. Setting it to a positive value, will boost frequencies on the input signal.

Reso EQ Modulation

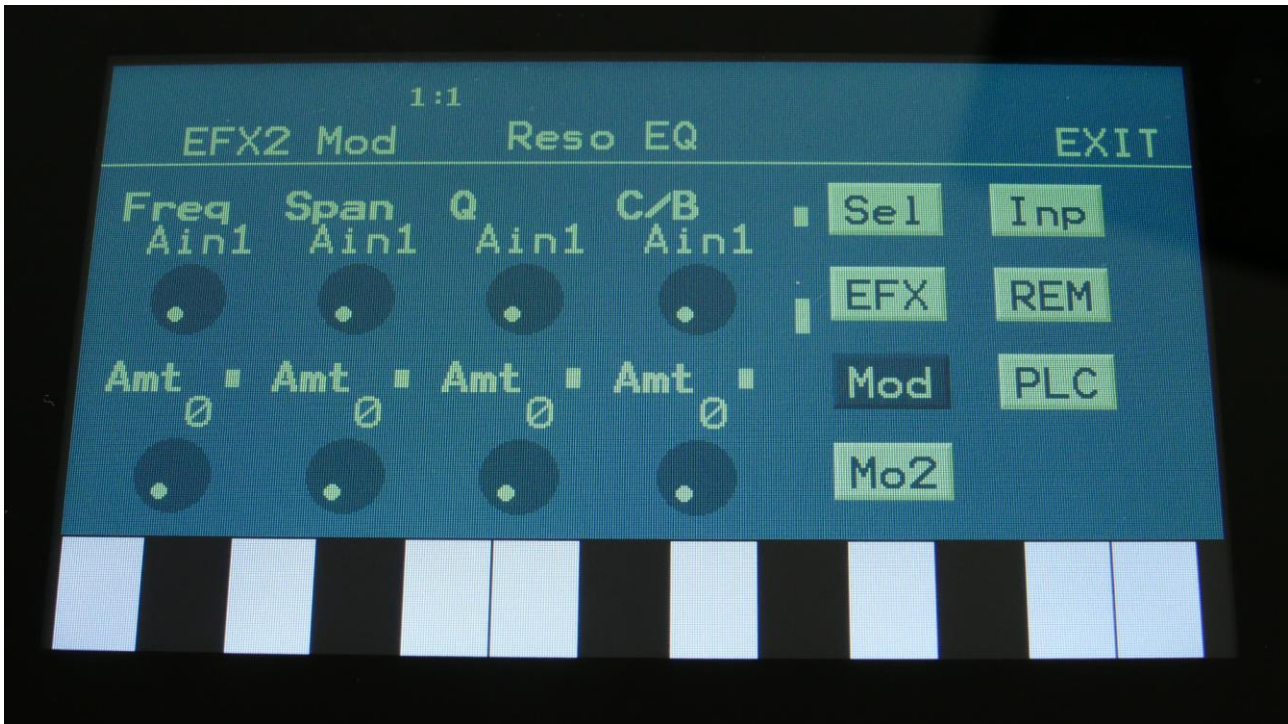

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:


Freq: Will modulate the EQ center frequency.

Span: Will modulate the frequency span.

Q: Will modulate the 2 peaks/dips.

C/B: Will modulate the cut/boost parameter.

Mod Delay

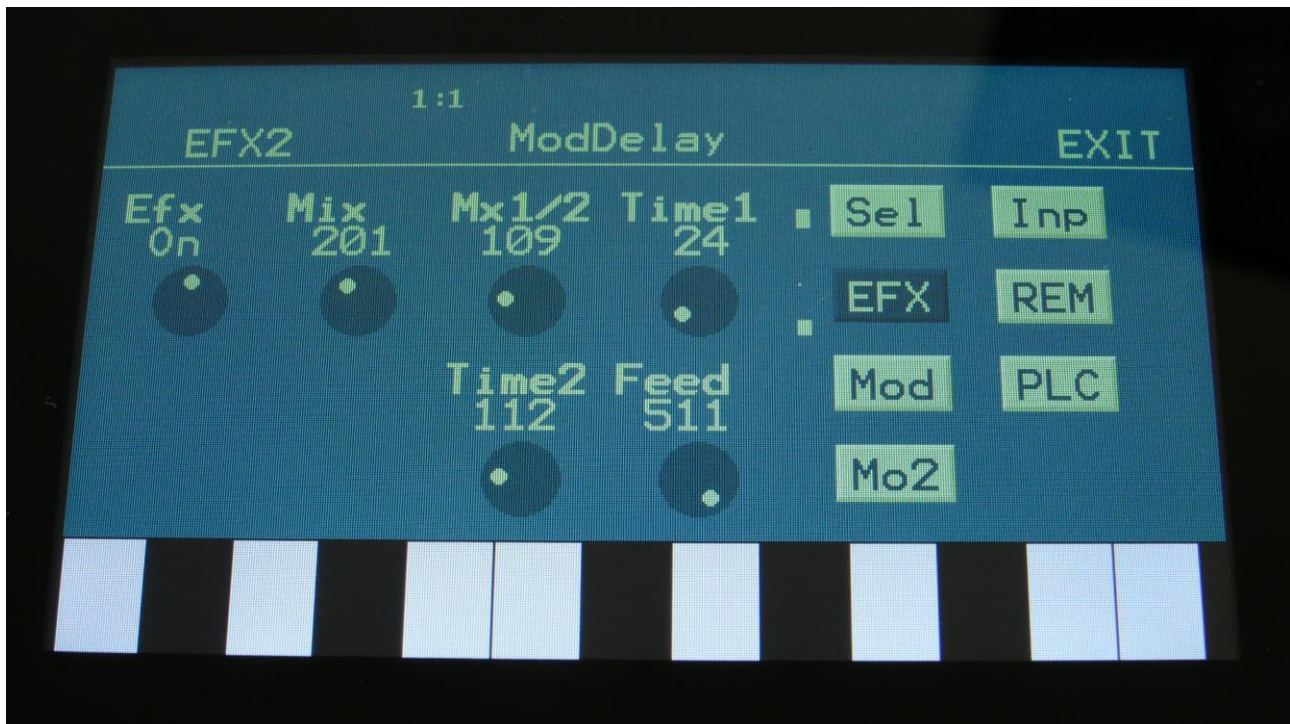

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.


Mix1/2: Mix between delay taps 1 and 2.

Time1: Delay time tap 1.

Time2: Delay time tap 2.

Feed: Delay feedback amount.

Mod Delay Modulation

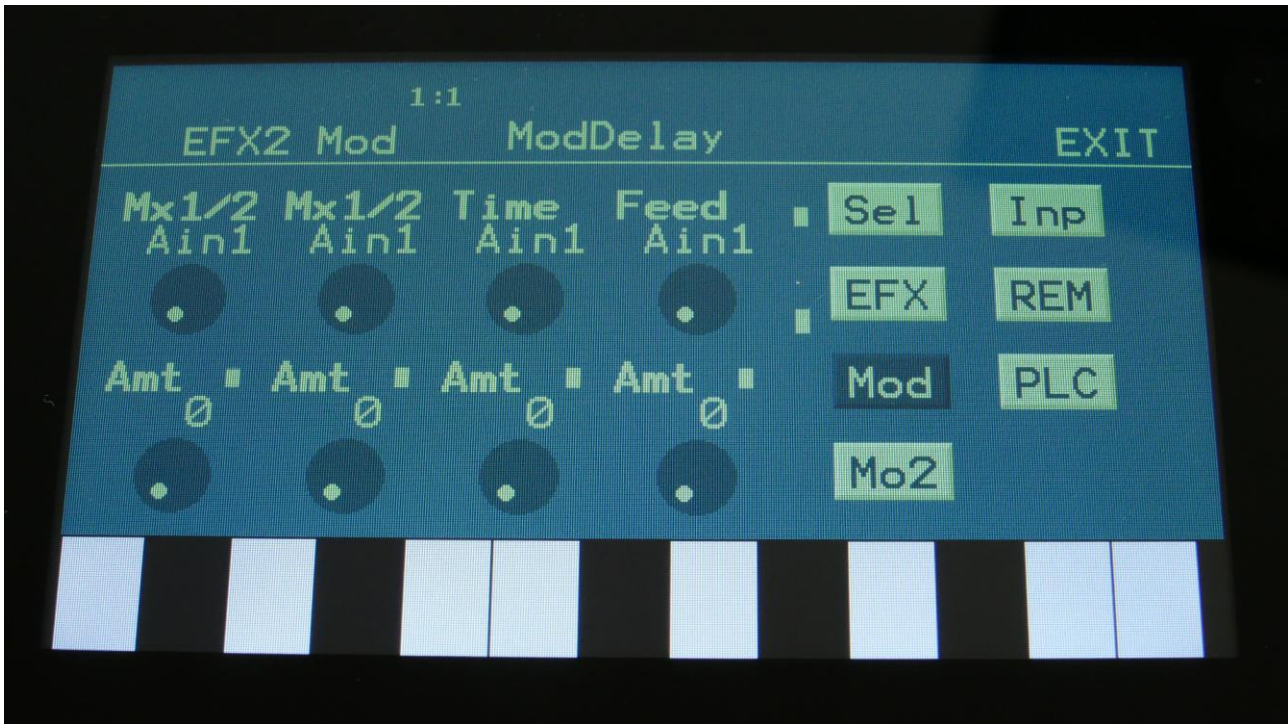

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Mix1/2: Modulates the mix between delay tap 1 and 2.

Time: Will modulate delay time 1.

Feed: Modulates the feed parameter.

Comb Filter

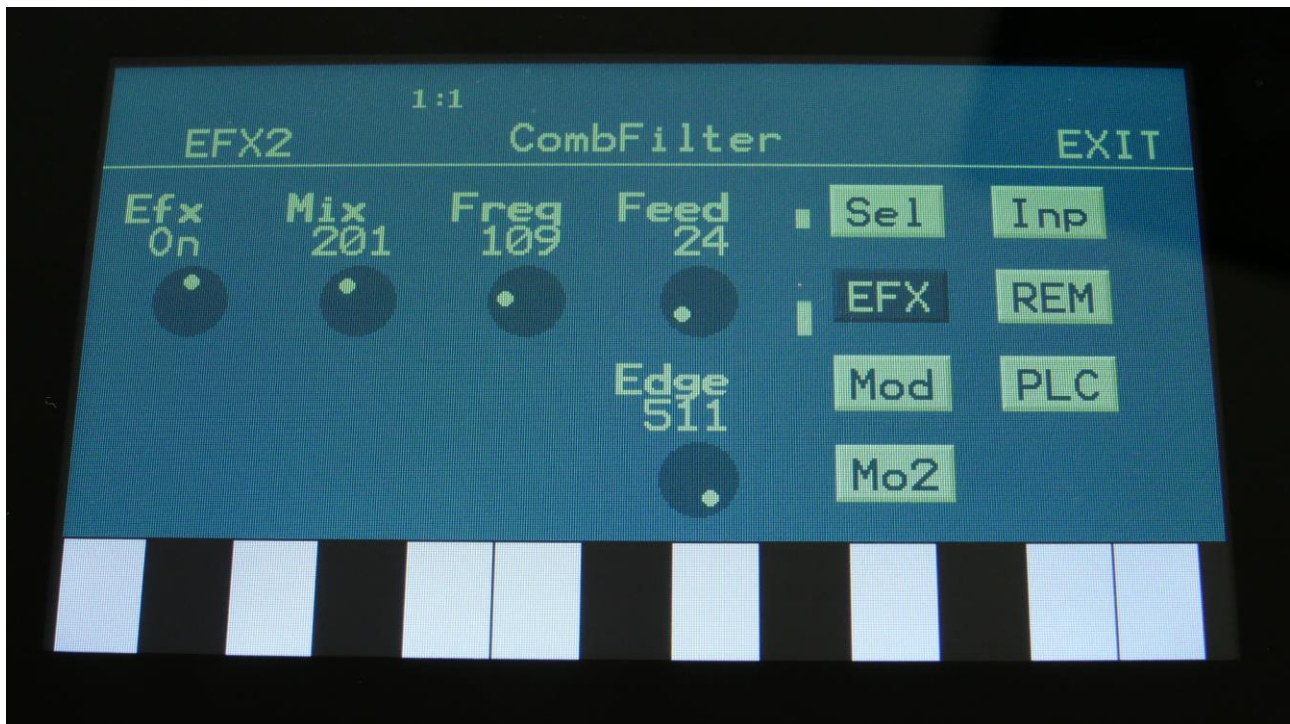

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.


Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Freq: The center frequency of the filter peaks.

Feed: Comb filter feedback amount.

Edge: Amount of edge distortion added to the comb filter.

Comb Filter Modulation

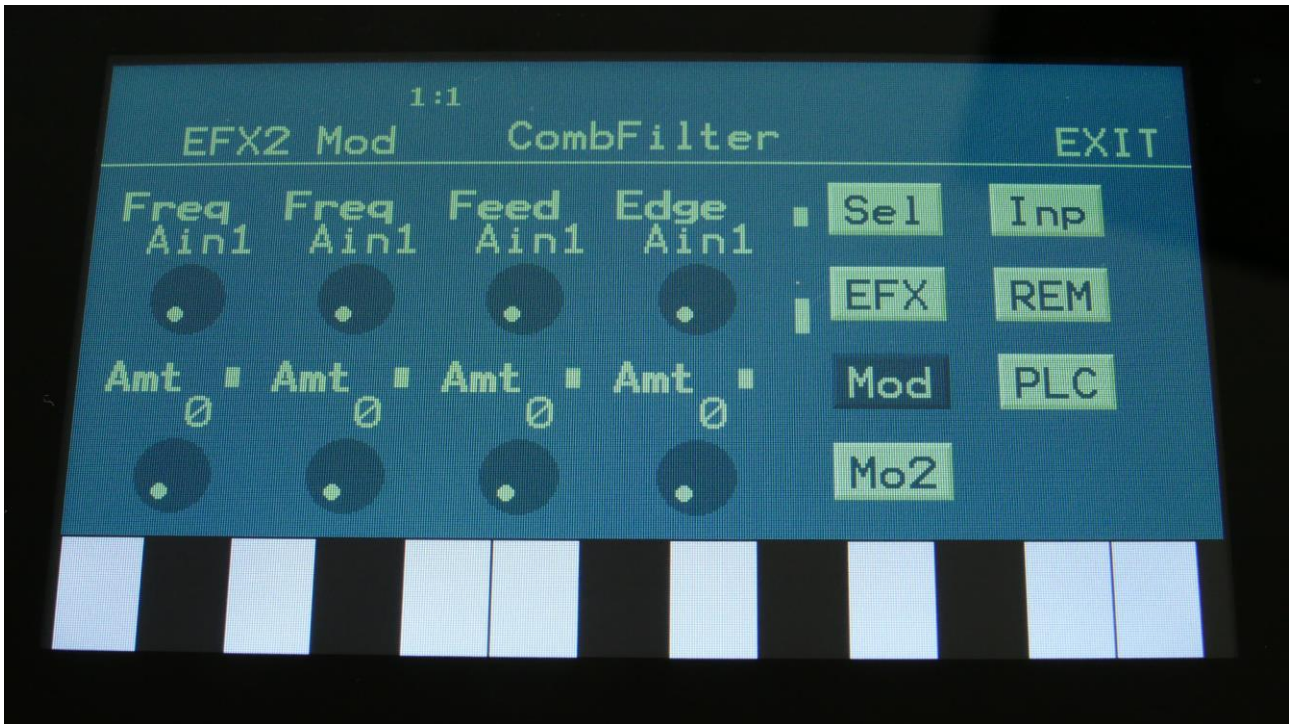

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Freq: Modulates the center frequency of the filter peaks.

Feed: Modulates the feed parameter.

Edge: Modulates the edge parameter.

Compressor 2

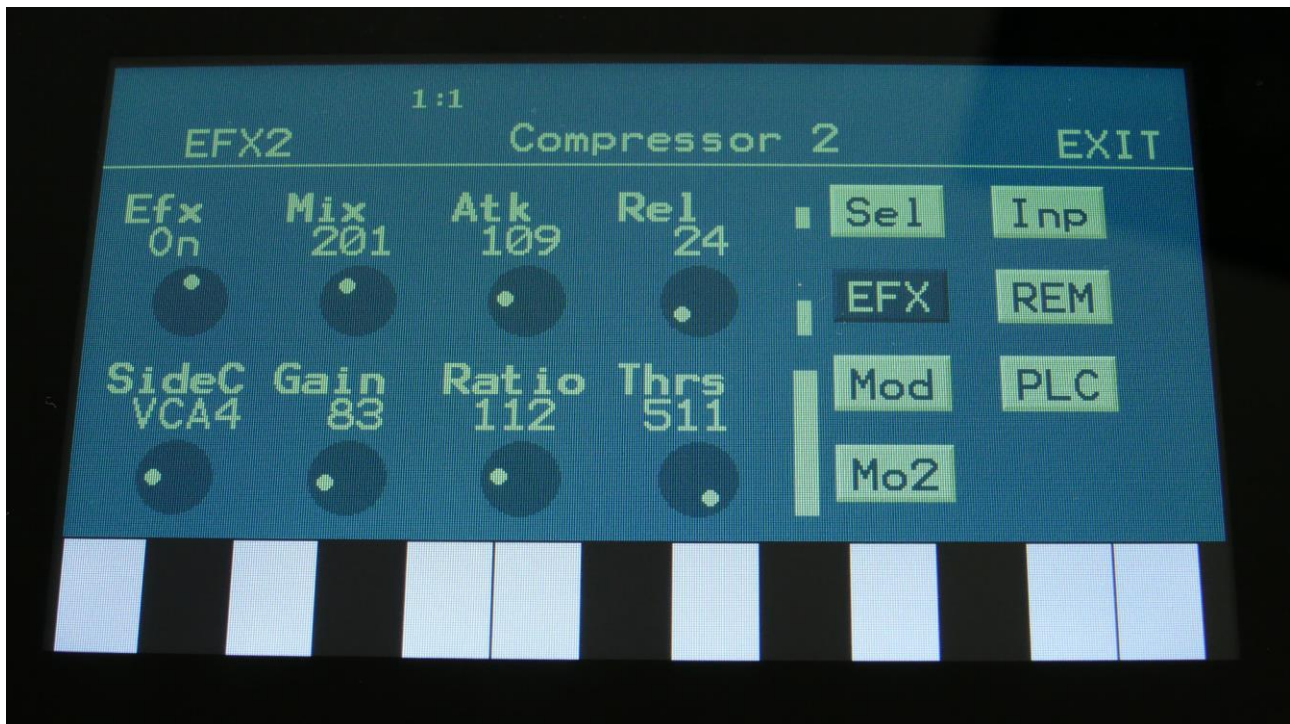

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

The larger VU-meter right below these (not shown on the picture) illustrates the compressor VCA output level.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Atk: Attack time. The time it takes for the compressor to attenuate the signal, after a signal higher than the set threshold has been detected.

Rel: Release time. The time it takes the compressor to return to a 1:1 signal gain, after the signal level has been attenuated.


SideCh: Side Chain. Select any audio/modulation signal to trigger the compressor.

Gain: Make up gain. Since the compressor is attenuating the input signal, it might be necessary to gain it a bit.

Ratio: Sets the strength of the compression.

Thrs: Threshold. Sets the signal level, at which the compressor will start to work.

Compressor 2 Modulation

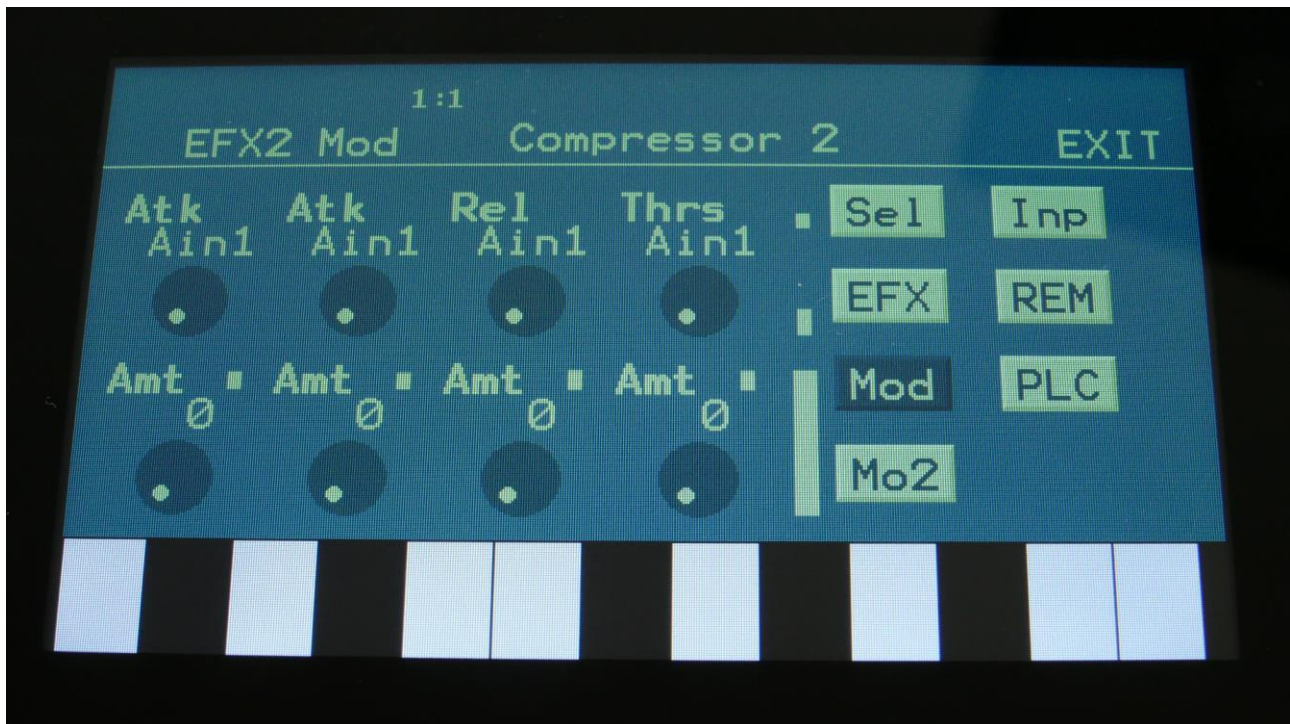

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:


Atk: Modulates the attack time.

Rel: Modulates the release time.

Thrs: Modulates the threshold.

Effect 7 and 8 Parameters

Delay1, Roto delay, Bright Delay and Bright Roto Delay

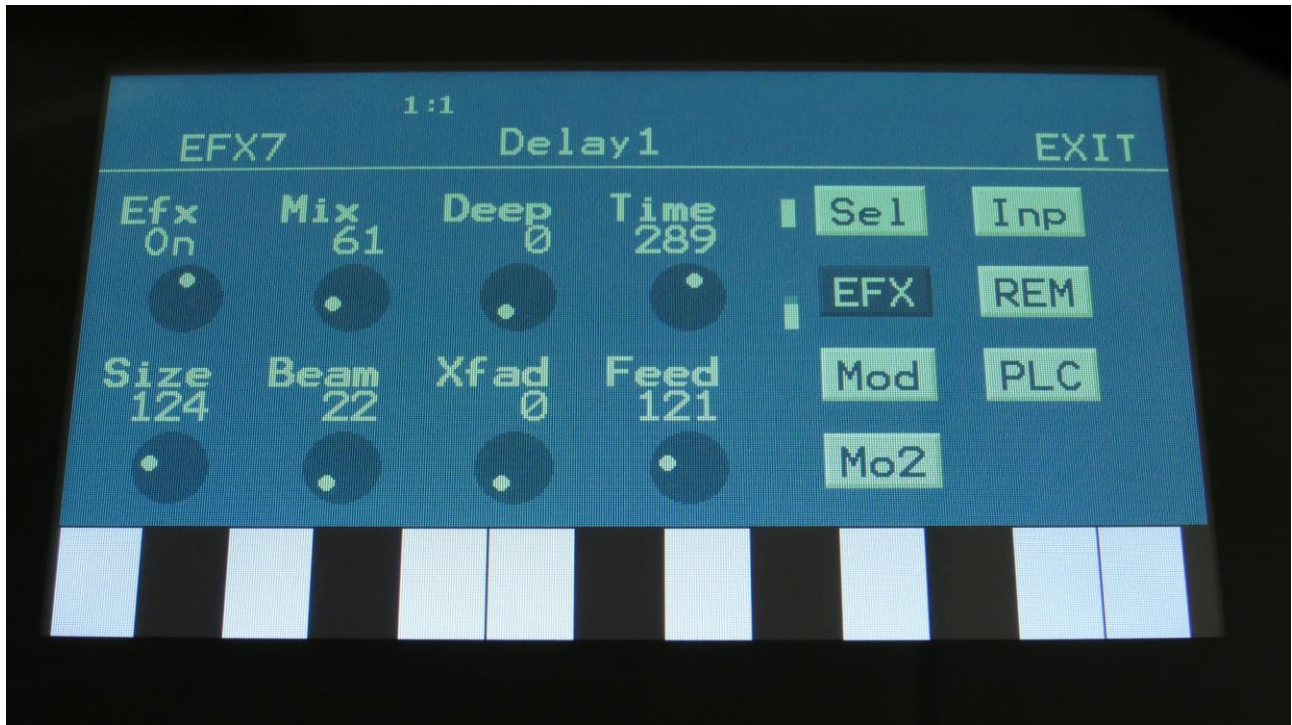

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Deep: Simulates a delay box, with adjustable physical depth.

Time: Delay time.


Size: A granular parameter. The more this is turned up, the less space of the delay box is used, causing some echo's to repeat, and others not to sound at all.

Beam: A granular parameter, that "beams" some of the delay sound grains to another place.

Xfade: Crossfade. Makes the delay effect sound smoother, by crossfading the feedback repeats into each other.

Feed: Delay feedback amount. At values over middle, the feedback signal will be gained and create infinite feedback. This might cause some saturation.

Delay1, Roto delay, Bright Delay and Bright Roto Delay Modulation

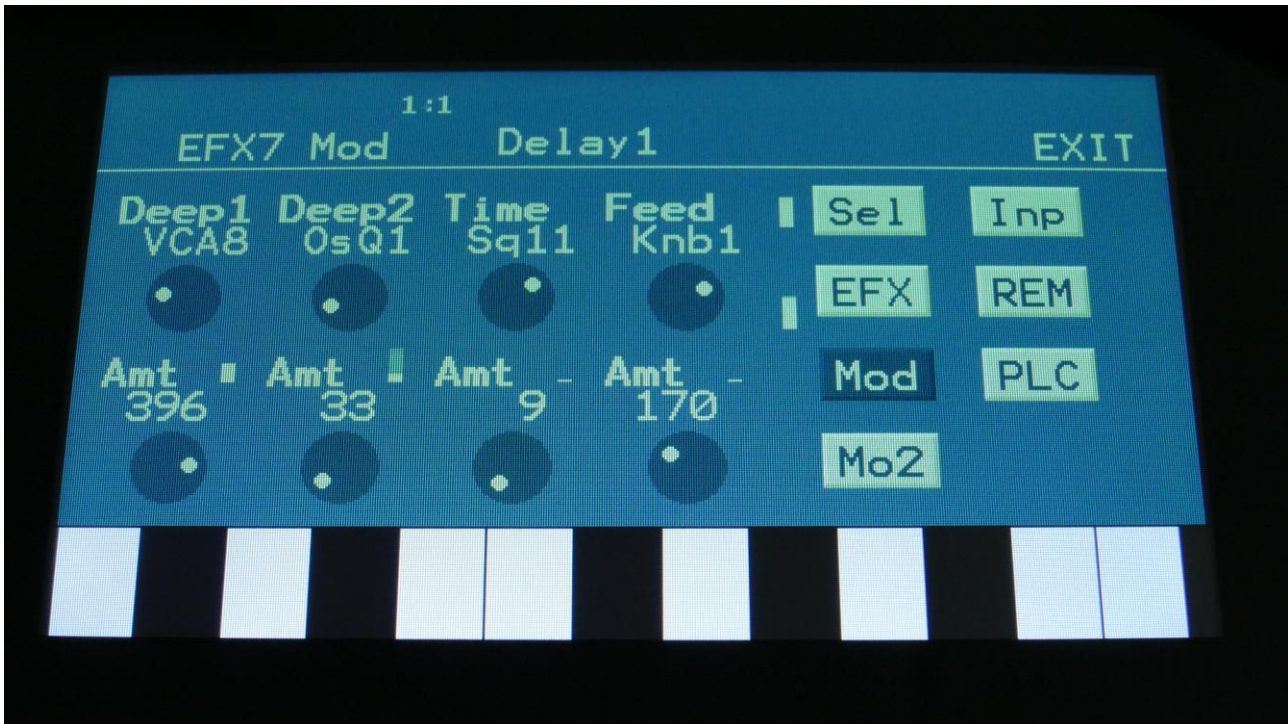

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Deep1 and Deep2: Modulates the deep parameter.

Time: Modulates the delay time parameter.

Feed: Modulates the feed parameter.

Granulator SQ

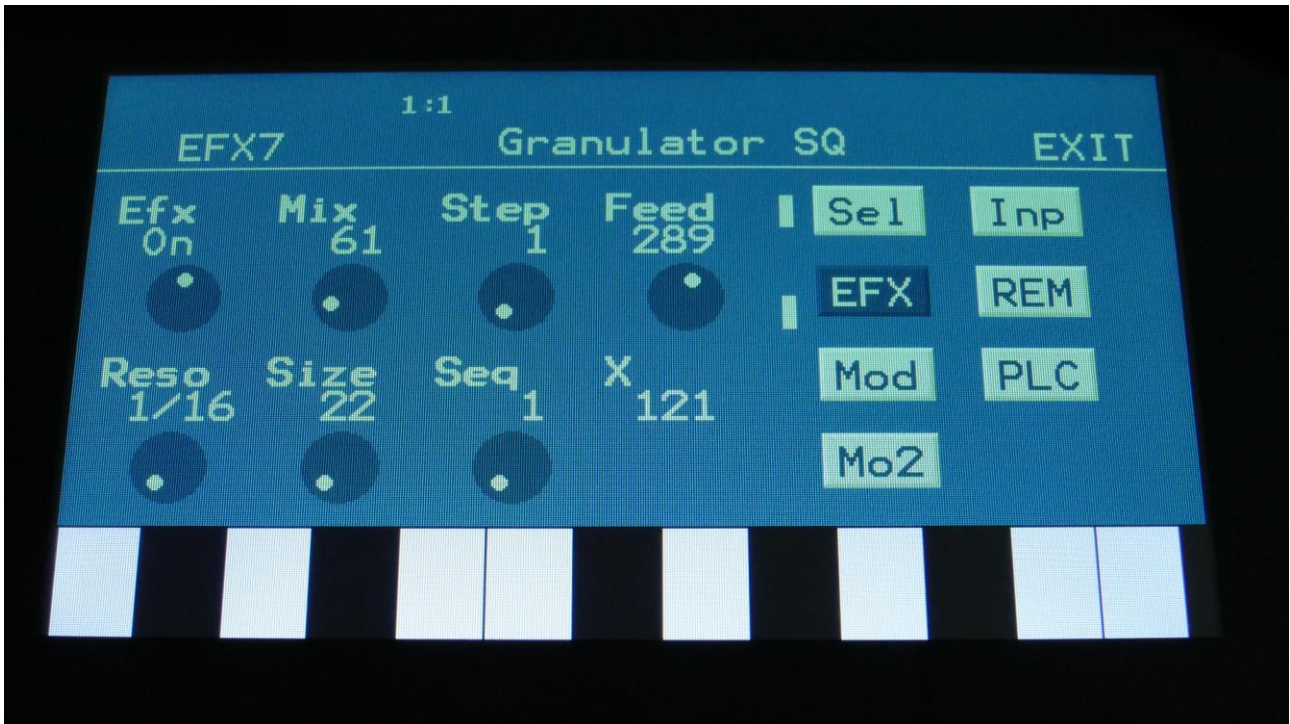

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Step: Sets how many steps the granulator sequencers should go through, until they starts over again from step one. Range: 1 to 16.

Feed: Adjusts how much of the Granulator output signal should be fed back to its input.


Resolution: Adjusts the resolution of the sequencer track, that controls the granulator. The granulator only uses the controller values of the sequencer steps, so the controller track and the granulator can run in different resolutions.

Size: A granular parameter. The more this is turned up, the less space of each granulator step is used, causing the granulator to “stutter”.

Seq: Selects which of the 16 sequencer controller tracks, the granulator should get its step values from. Each value selects a different portion of the granulator input, to be played back.

X: “X” intermodulation of the sound. Another Gotharman special 😊

Granulator SQ Modulation

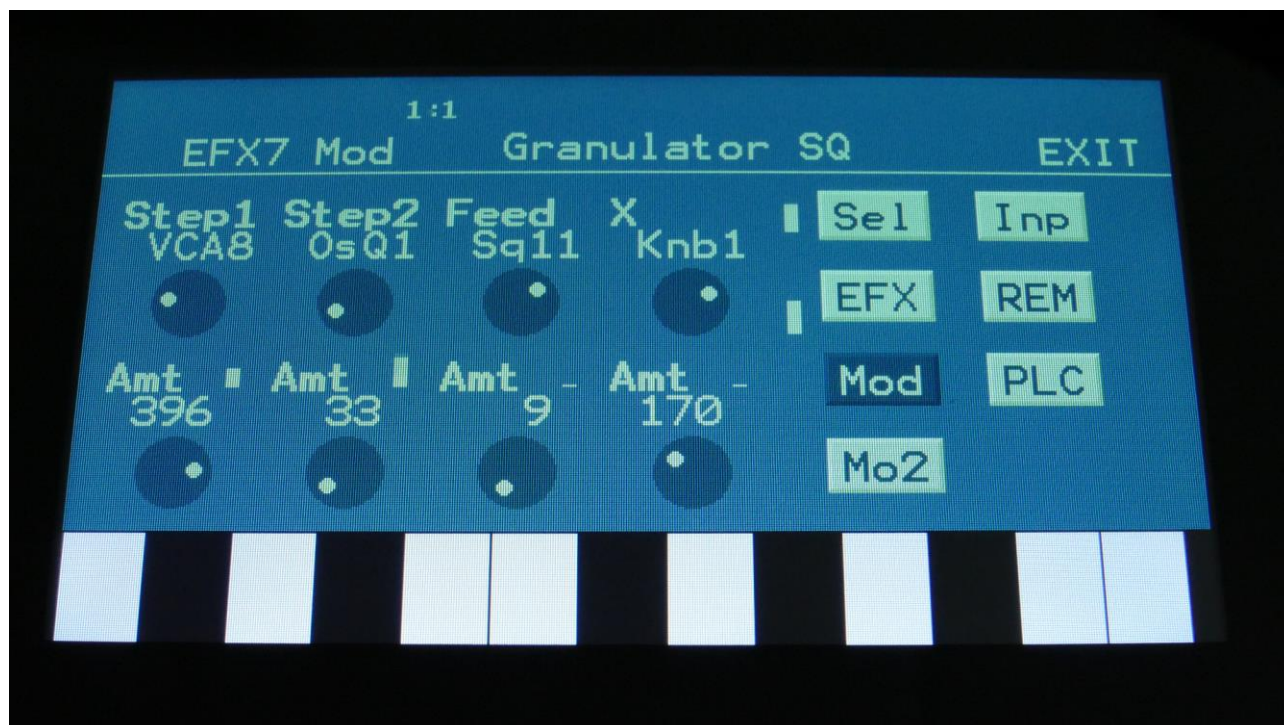

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Step1 and Step2: Modulates the number of steps parameter.

Feed: Modulates the feed parameter.

X: Modulates the “X” parameter.

Variator

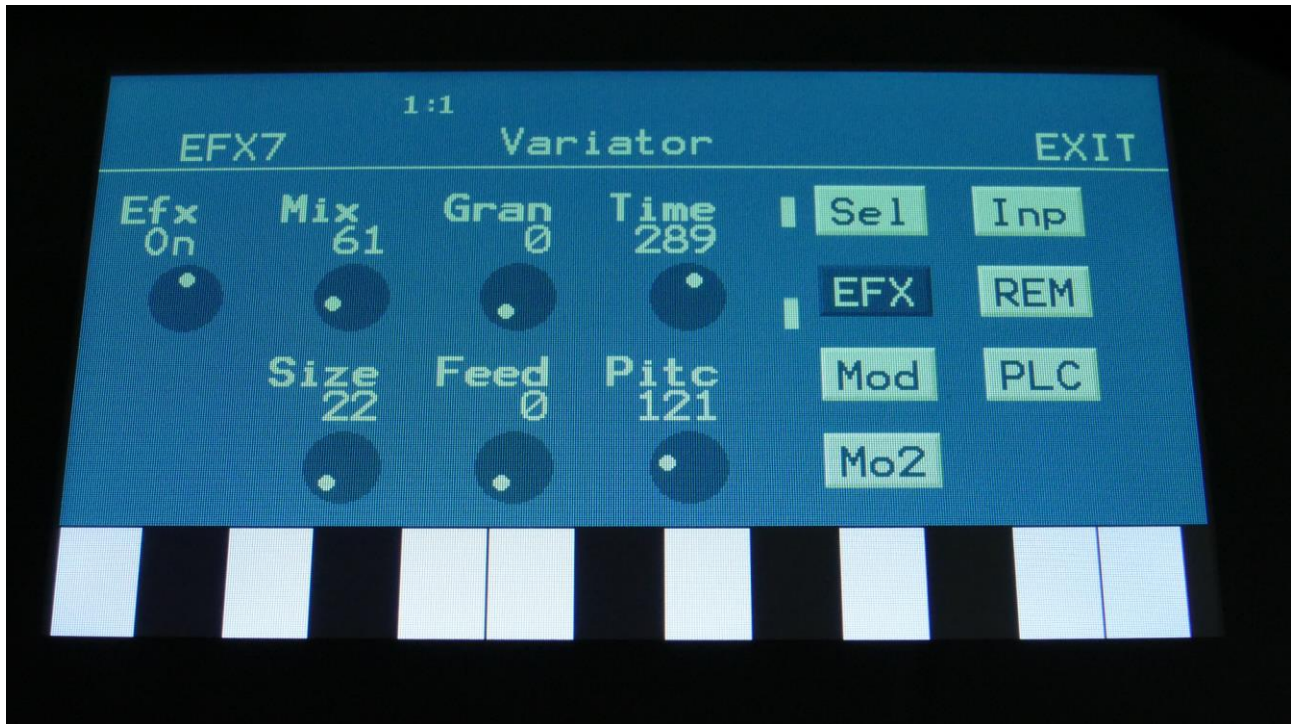

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Gran: Determines the variation pattern. Range: 0 to 511.


Time: The size of the RAM buffer used for the variator. . When this is set to zero, the Variator will use no RAM at all, and become quite unpredictable.

Size: The size of one grain.

Feed: Adjusts how much of the Variator output signal should be fed back to its input.

Pitc: The amount of Variator pitch shift.

Variator Modulation

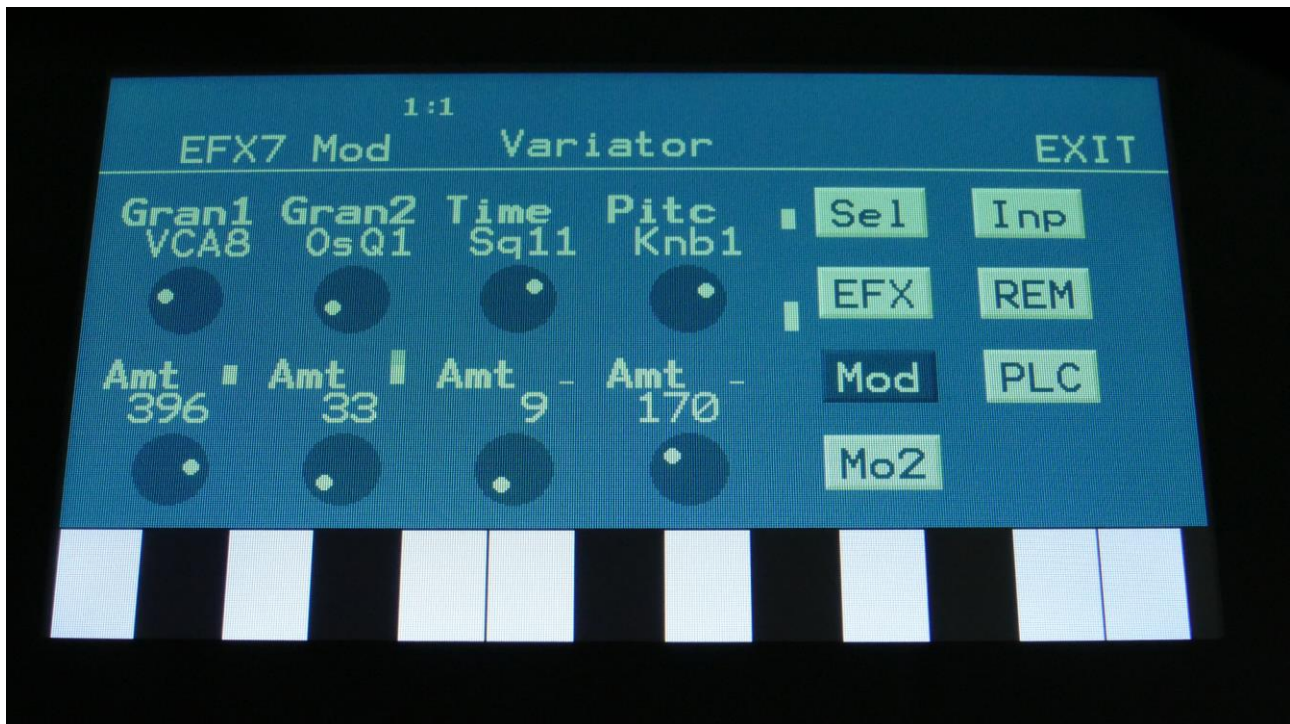

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Gran1 and Gran2: Modulates the gran variation pattern parameter.

Time: Modulates the time parameter.

Pite: Modulates the pitch shift parameter.

Reverb



Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.


Time: Reverb Time. The higher this is turned up, the longer the reverb will last.

Dens: Reverb density. The higher this is turned up, the more dense the reverb effect will get.

Feed: Reverb feedback. Turning this up, will result in even longer reverb times.

Timbre: At different settings of this, the reverb effect will sound a bit different.

Reverb Modulation

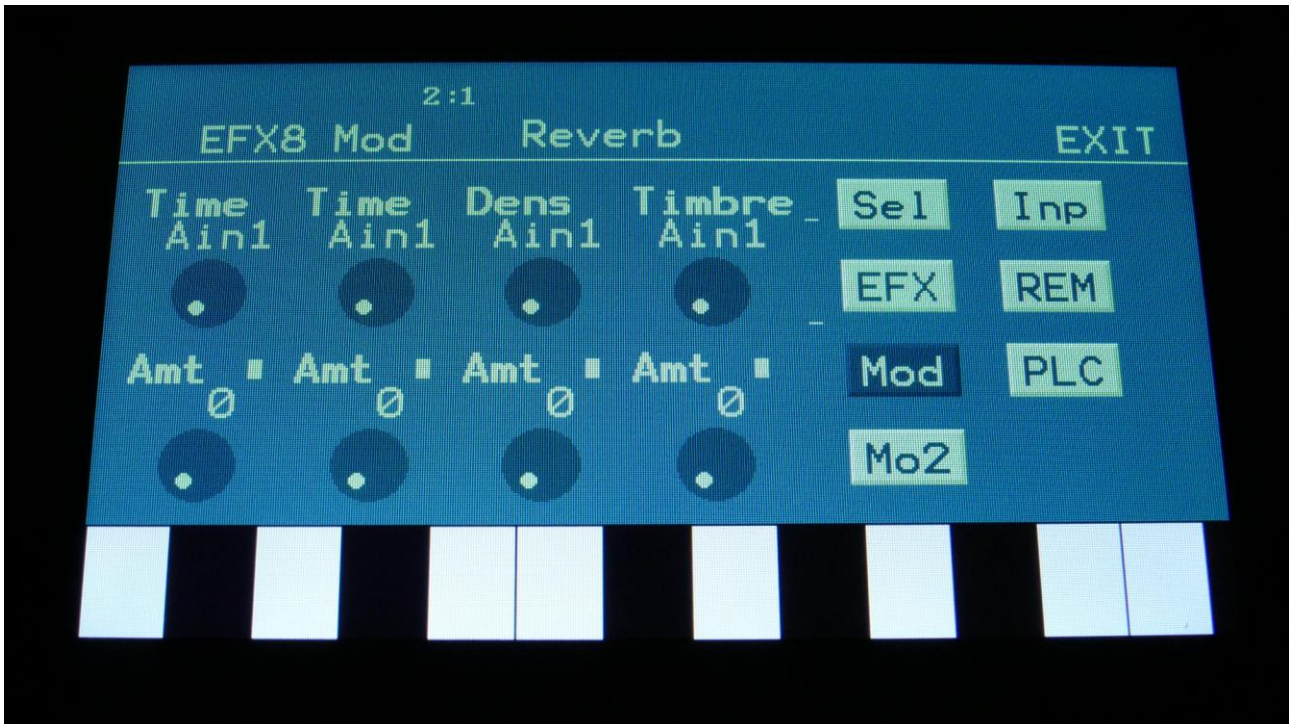

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Time1 and Time2: Modulates the Time parameter.

Dens: Modulates the Density parameter.

Timbre: Modulates the Timbre parameter.

Granulator (unsynced)

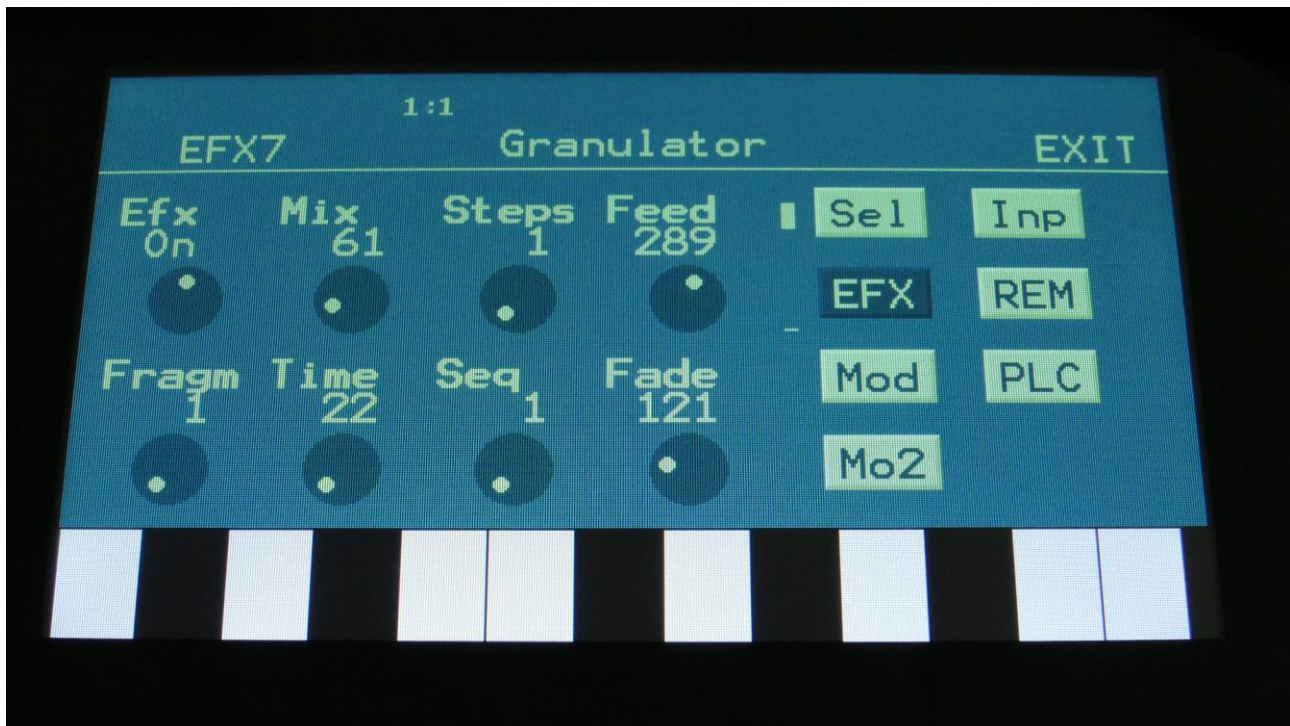

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Steps: Sets how many steps the granulator sequences should go through, until they starts over again from step one. Range: 1 to 16.

Feed: Adjusts how much of the Granulator output signal should be fed back to its input.


Fragm: Sets how many fragments (or grains) the input signal should be cutted up in. Possible values are 1, 2, 4, 8, 16, 32, 64 or 128.

Time: Sets the size of the input recording buffer. The higher the size, the bigger each grain will be.

Seq: Selects which of the 16 sequencer controller tracks, the granulator should get it step values from. Each value selects a different portion of the granulator input, to be played back.

Fade: When this parameter is turned up, each grain will fade in and out, to minimize clicks.

Granulator Modulation

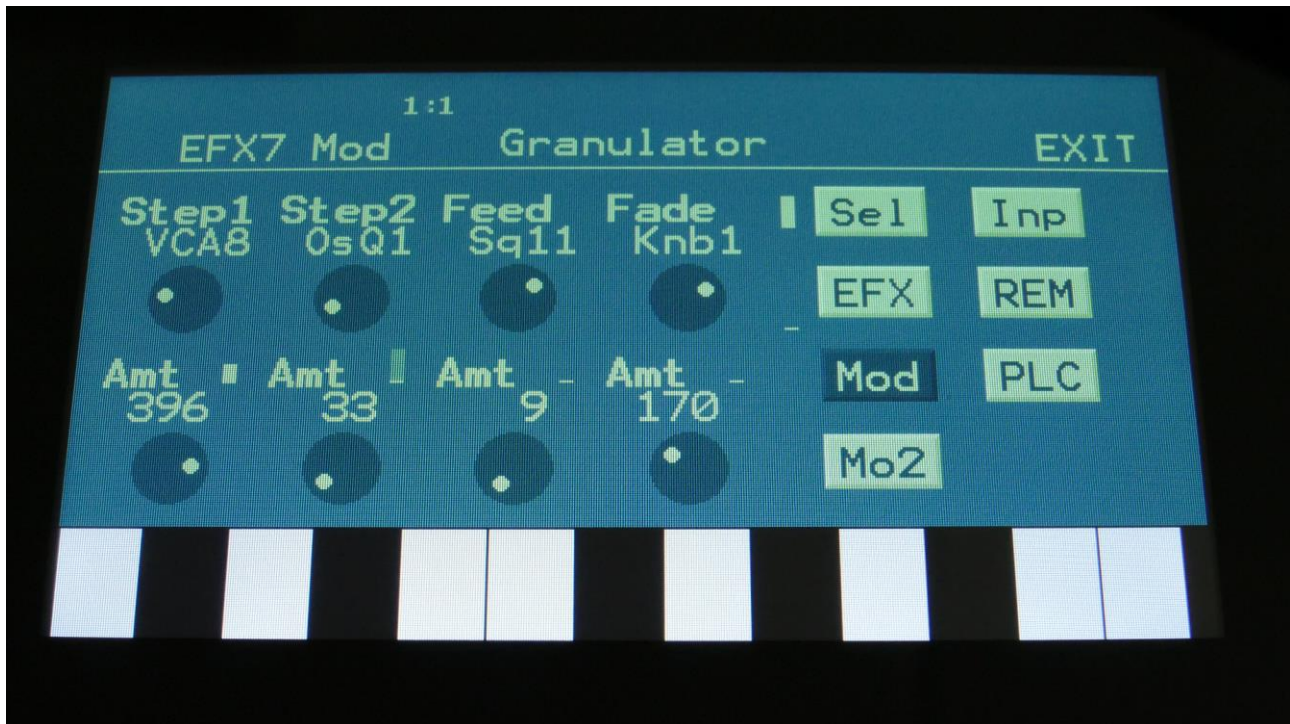

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Step1 and Step2: Modulates the number of steps parameter.

Feed: Modulates the feed parameter.

Fade: Modulates the Fade in and out times.

Xfade Granulator

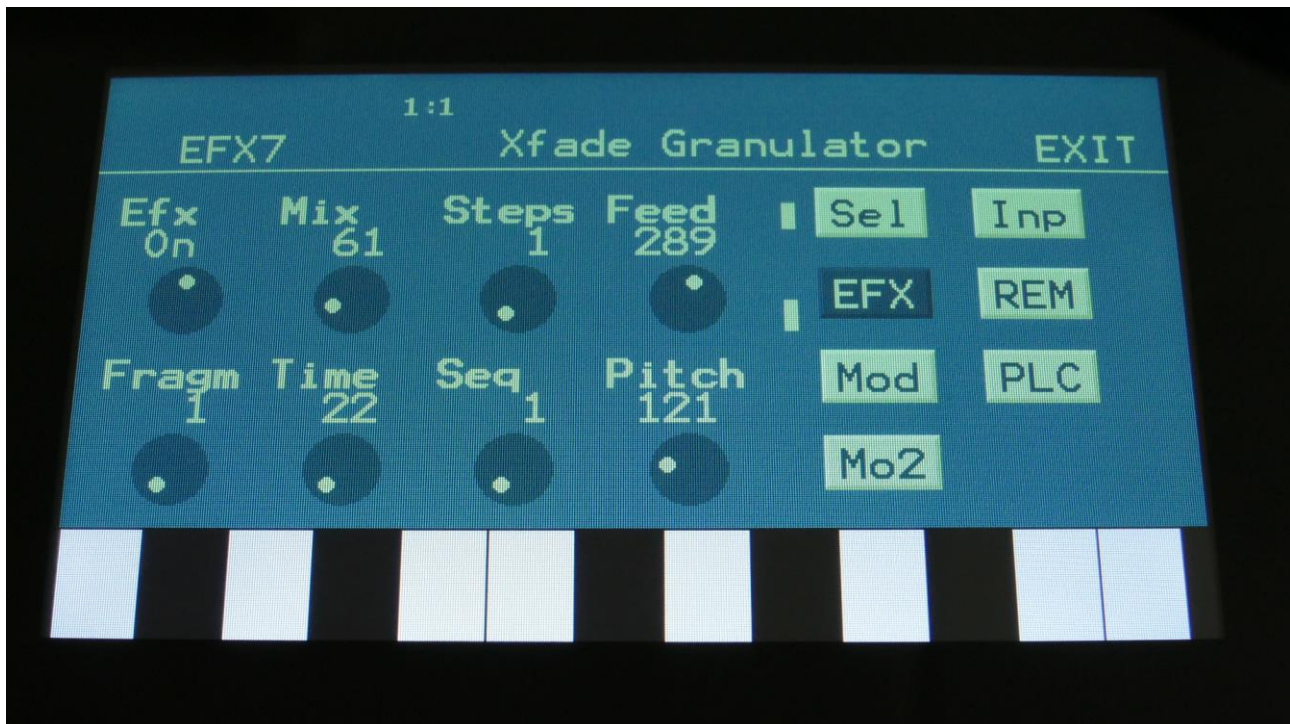

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Steps: Sets how many steps the granulator sequences should go through, until they starts over again from step one. Range: 1 to 16.

Feed: Adjusts how much of the Granulator output signal should be fed back to its input.


Fragm: Sets how many fragments (or grains) the input signal should be cutted up in. Possible values are 1, 2, 4, 8, 16, 32, 64 or 128.

Time: Sets the size of the input recording buffer. The higher the size, the bigger each grain will be.

Seq: Selects which of the 16 sequencer controller tracks, the granulator should get it step values from. Each value selects a different portion of the granulator input, to be played back.

Pitch: Sets the playback pitch of the granular sequence. A value below 256 will pitch the signal down, a value above 256 will pitch it up.

Xfade Granulator Modulation

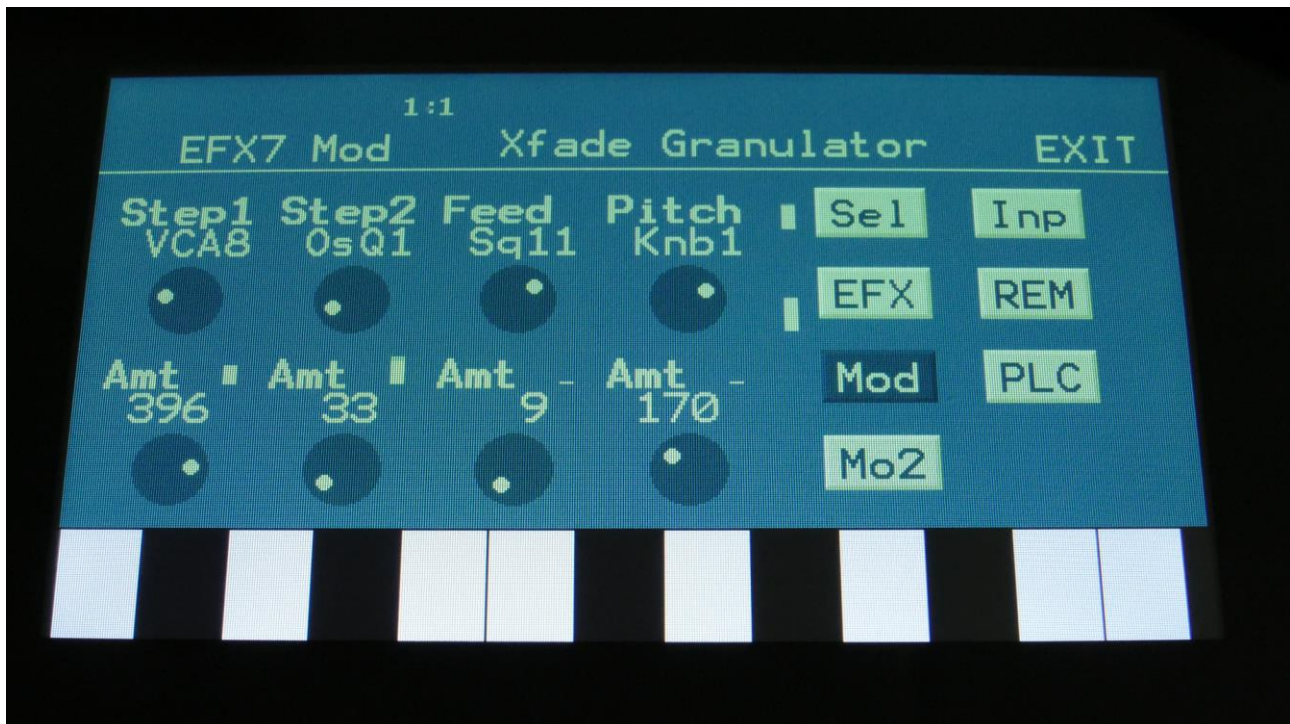

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Step1 and Step2: Modulates the number of steps parameter.

Feed: Modulates the feed parameter.

Pitch: Modulates the pitch of the granular sequence.

Abstract0

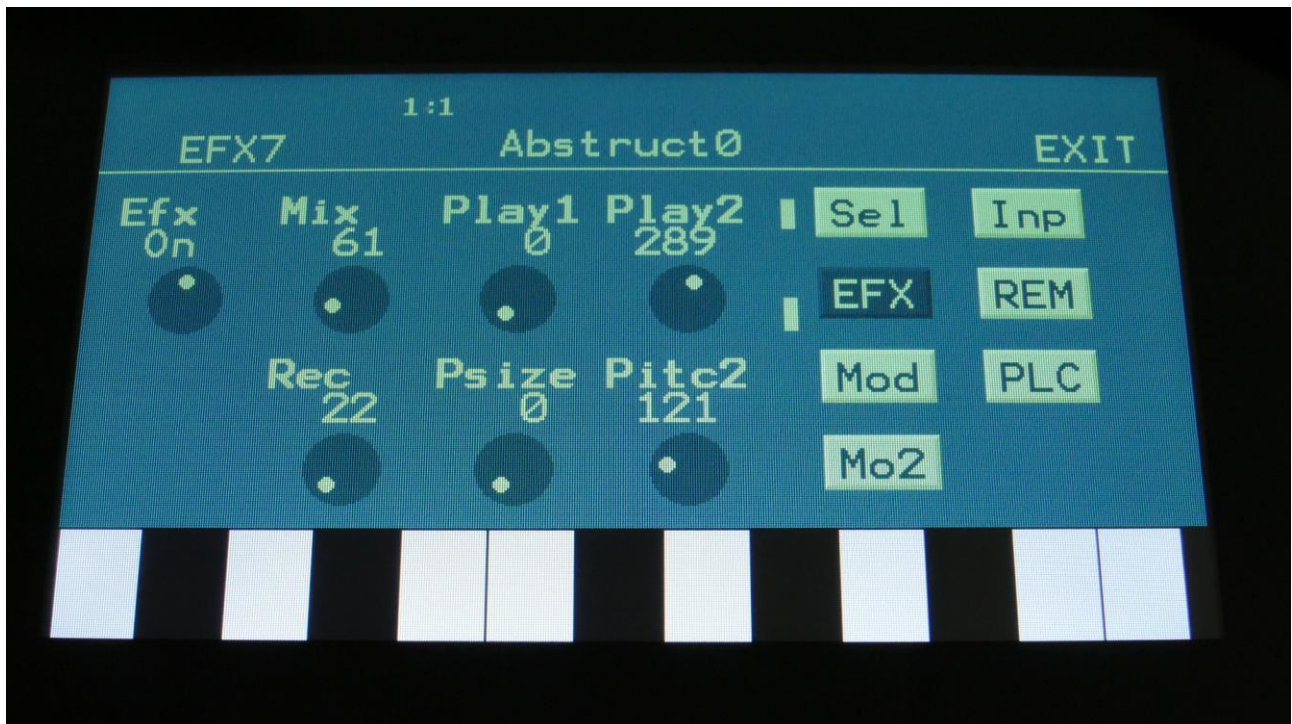

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Play1, Play2: 0 (Off), 1 to 511. Sets for how long time each of the playback heads should play back, until it jumps to a new random location.


Rec: 0 to 511. Sets the record buffer size. Determines for how long time it should record the input, before it starts over again.

Psize: 0 (Off), 1 to 255. This parameter sets the total playback buffer size, independent of the record buffer size. If this parameter is 0, the Rec parameter determines the playback buffer size, but if it is at any other value, this parameter determines the playback buffer size. It can be used as a fast way of adjusting the playback length of both playback heads at the same time. At low settings, granular effects with very small grains can be obtained. If the value of this is higher than

the Rec parameter, it will play back areas of the record buffer, that is not being recorded, and create a "Freeze" effect.

Pitc2: 0 to 511. Sets the pitch of the playback for playhead 2. A value below 256 will pitch the signal down, a value above 256 will pitch it up.

Abstract0 Modulation

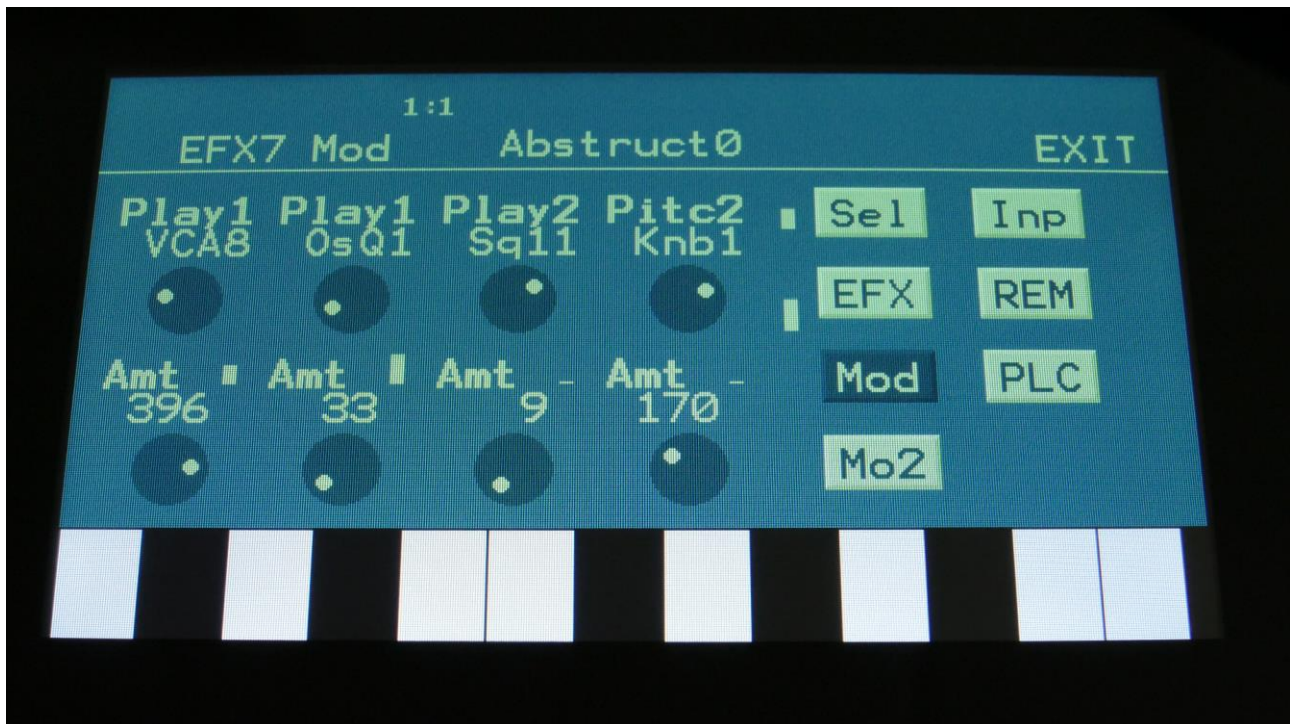

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Play1: Modulates the size of playback head 1.

Play2: Modulates the size of playback head 2.

Pitc2: Modulates the pitch of playback head 2.

Time Stretch

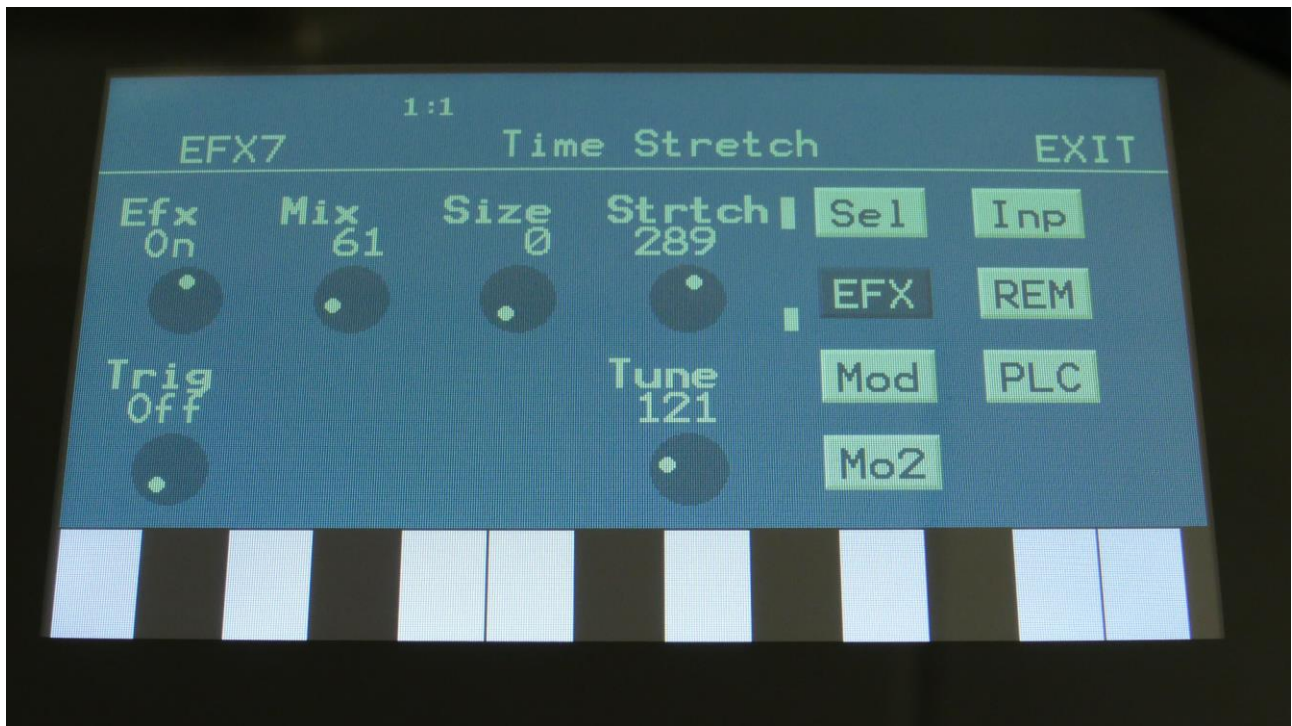

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Size: 0 to 511. The size of the RAM buffer used for the TimeStretcher.

Strtch: 0 to 511. Time stretch. A value below 256 will stretch the sound longer, a value above 256 will compress the sound to become shorter.

Trig: Off, 1 to 8. Determines if the time stretch effect should be triggered by a part or not.

Tune: Pitch Coarse. A value below 256 will pitch the signal down, a value above 256 will pitch it up.

1:1

EFX7 Mod Time Stretch EXIT

Size VCA8 Size OsQ1 Strtc Sq11 Tune Knb1 Sel Inp

Amt 396 Amt 33 Amt 9 Amt 170 EFX REM

Mod PLC

Mo2


The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

Size: Modulates the size of the time stretch input buffer.

Tune: Modulates the pitch coarse.

Roto Pitch

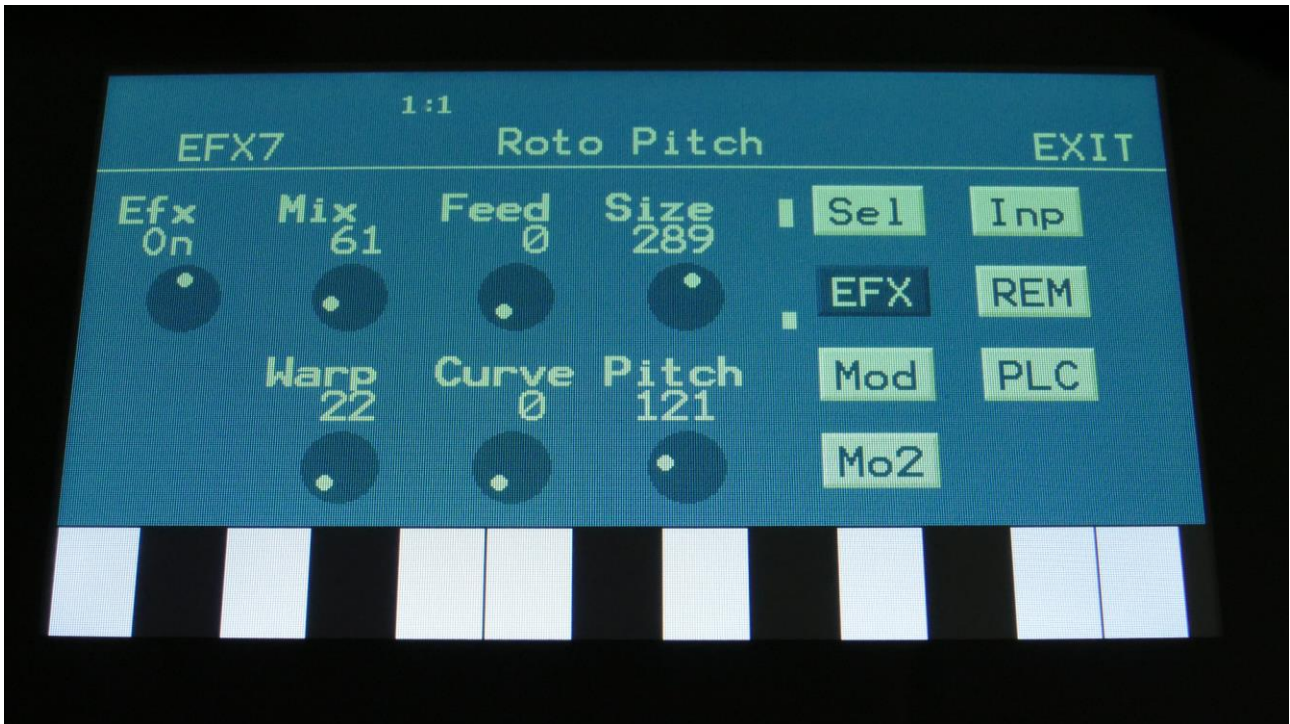

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Feed: Adjusts the portion of the output signal, that is fed back to the input.


Size: Sets the size of the pitch shifting buffer. At higher values, this will create a pitch shifting delay.

Warp: Warps the signal over the edge, to make things sound really weird.

Curve: Set the curve for the pitch rotation. From logarithmic (0) to linear (256) to exponential (511).

Pitc: Sets the output pitch of the effect. Goes from minus one octave to plus one octave.

Roto Pitch Modulation

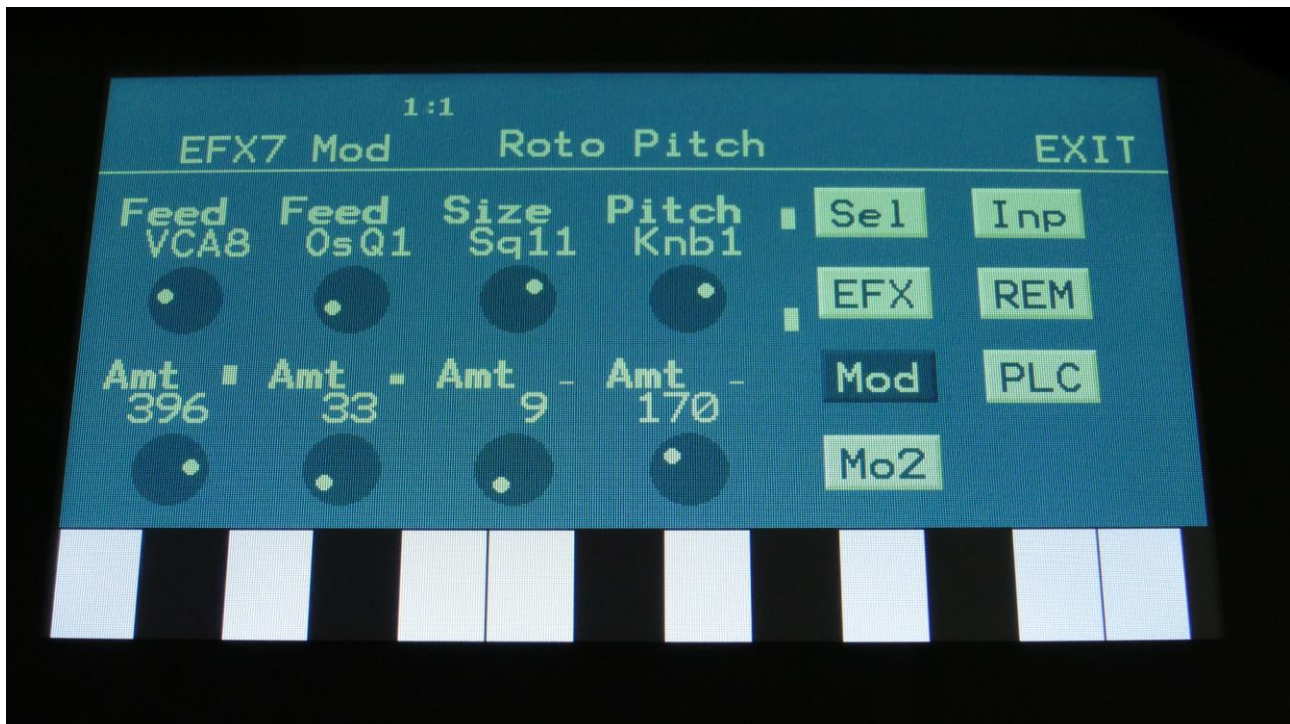

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Feed1 and Feed2: Modulates the Feed parameter.

Size: Modulates the Size parameter.

Pitch: Modulates the Pitch parameter.

Sample Pitch V2



Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.

Peak: Adjusts the formant peaks of the sound. When set to zero, the formants of the sound are not altered.


Time: Sets the time base of the pitch shifting. When set to the maximum value, the relationship between time and pitch shifting is 1:1. When turned down, this relationship gets out of sync, and things starts to sound different.

Warp: Warps the signal over the edge, to make things sound really weird.

Feed: Adjusts the portion of the output signal, that is fed back to the input.

Pitc: Sets the output pitch of the effect. Goes from minus one octave to plus one octave.

Sample Pitch V2 Modulation

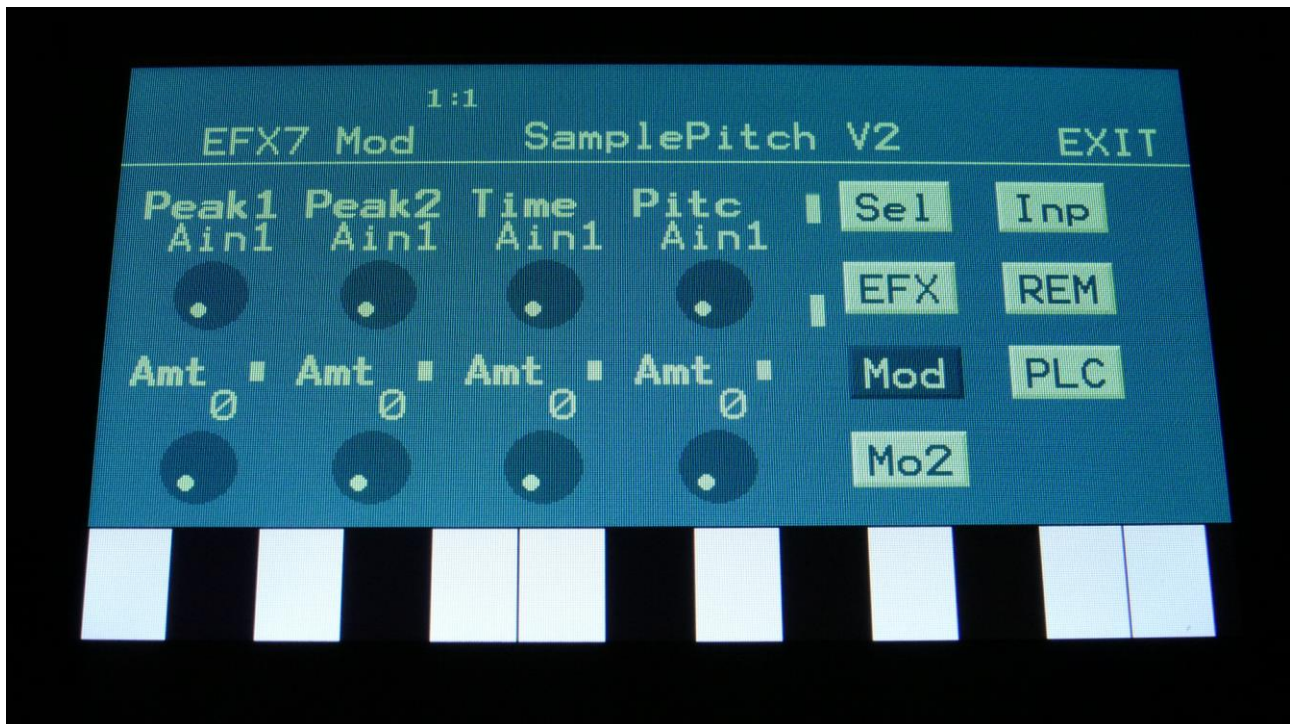

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Peak1 and Peak2: Modulates the Peak parameter.

Time: Modulates the Time parameter.

Pitc: Modulates the Pitc parameter.

Mod Delay

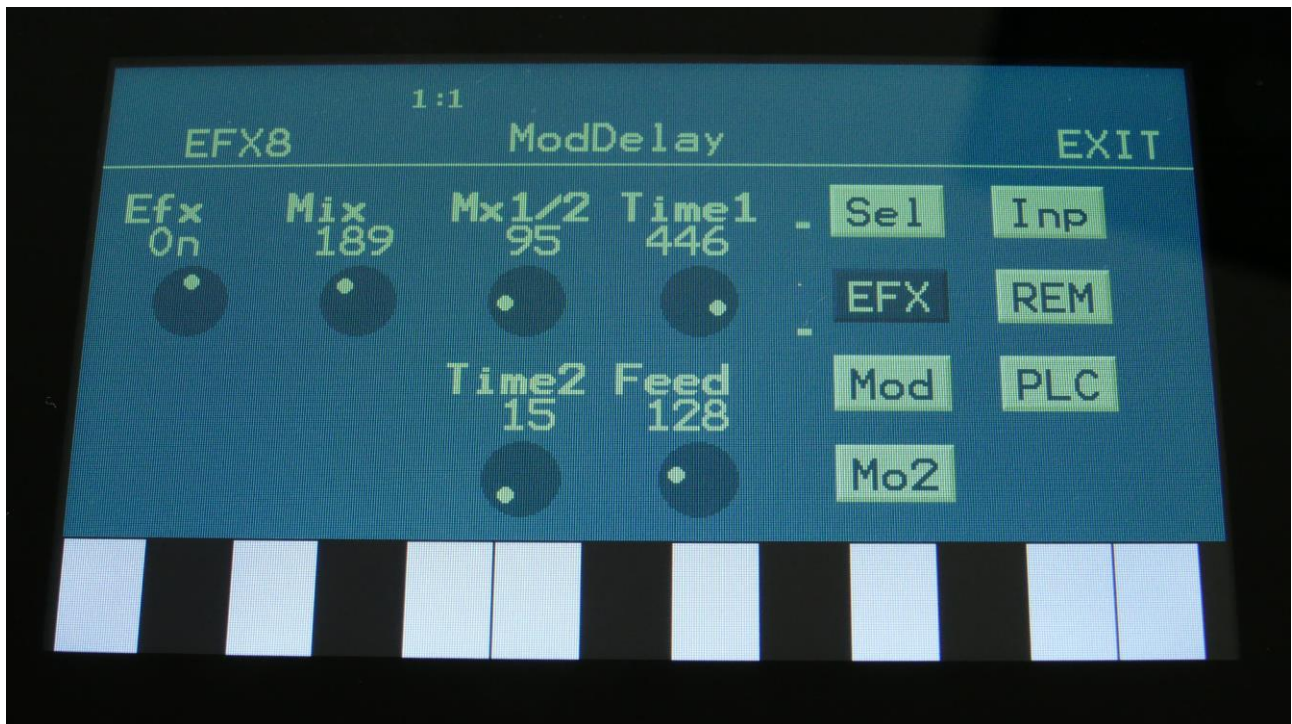

Touch the EFX touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output.

Efx: Off, on. When the effect is off, it is bypassed.

Mix: The mix between the un-effected signal on the effect input, and the effected signal on the effect output.


Mix1/2: Mix between delay taps 1 and 2.

Time1: Delay time tap 1.

Time2: Delay time tap 2.

Feed: Delay feedback amount.

Mod Delay Modulation

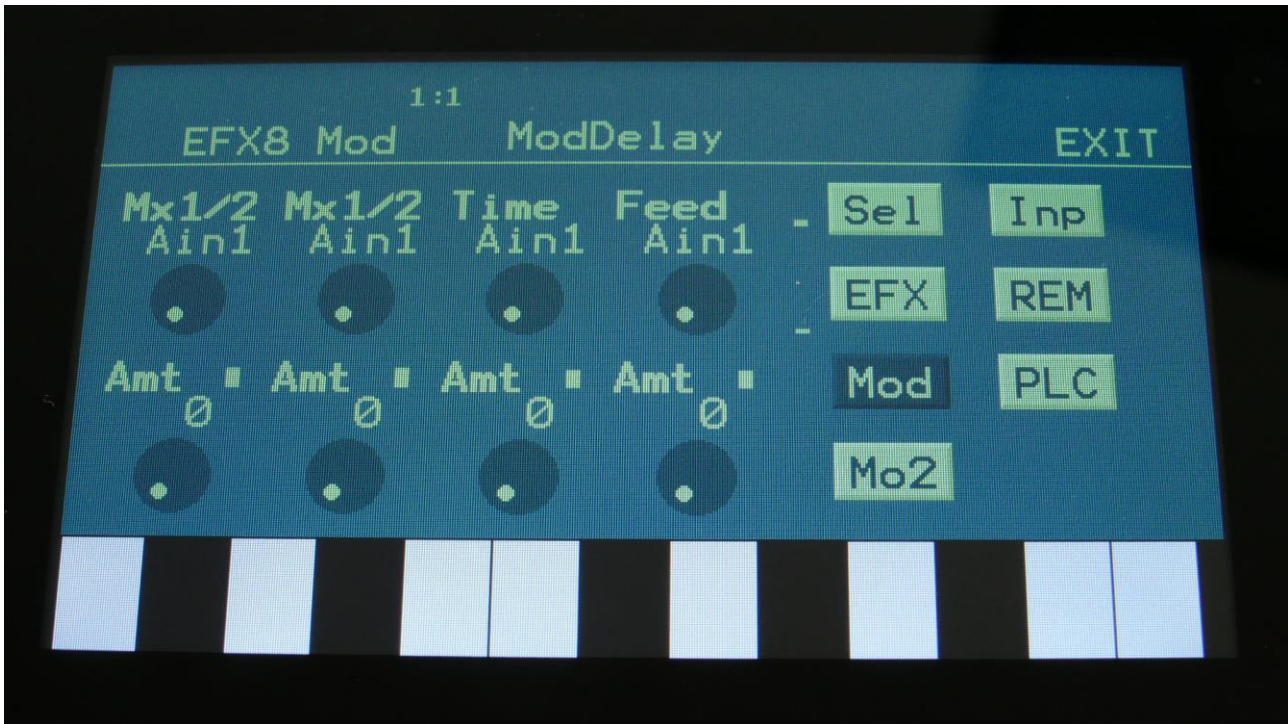

Touch the Mod touch button, to access this page.

The 2 VU-meters at the right of the screen, shows the Effect input and output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.


The parameters on this page:

Mix1/2: Modulates the mix between delay tap 1 and 2.

Time: Will modulate delay time 1.

Feed: Modulates the feed parameter.


Outputs Module

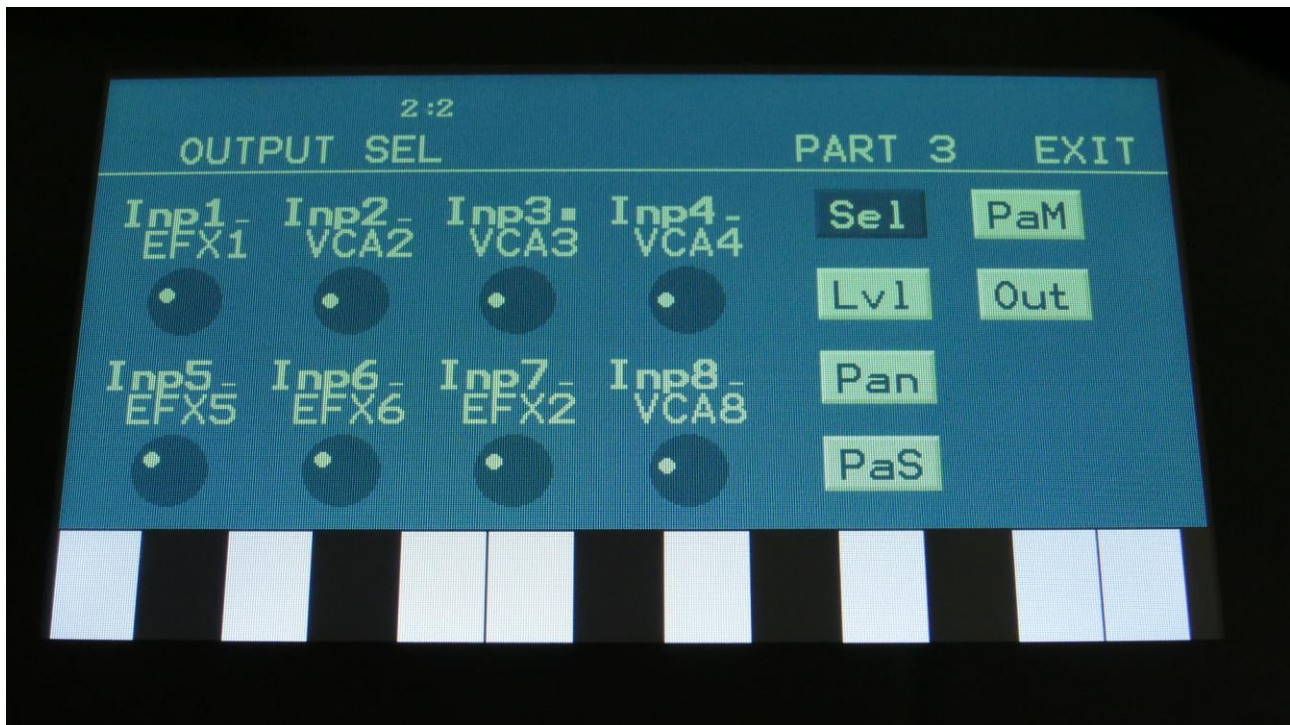

In the output module, signals can be assigned and routed to the different audio outputs. Panning of sounds and pan modulation is also done here.

PLEASE NOTICE: In the standard configuration, with 4 analog filters installed, the signals sent to VCF3 and 4, are also sent to audio out 3 and 4, so signals from the output module are not sent to these.


Output Module Parameters

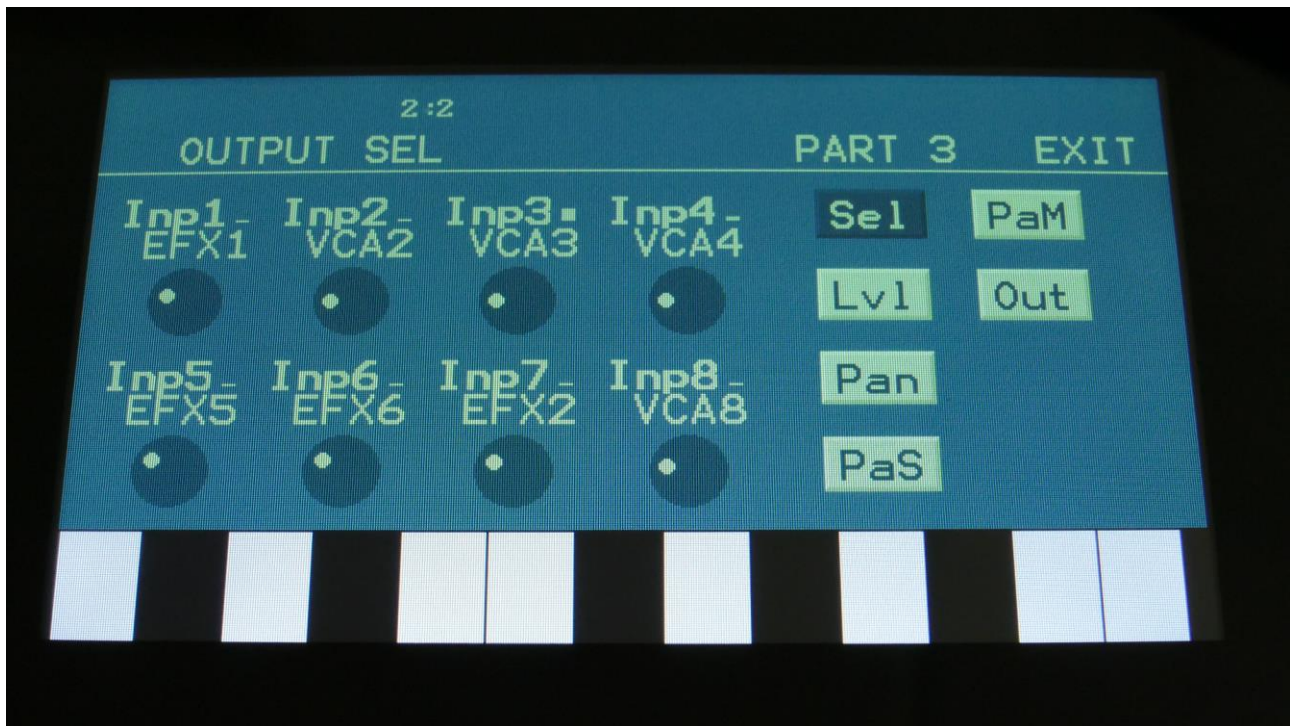

OUTPUT SEL

Touch the "Sel" button to enter this page.


Inp1-Inp8: Selects the source for input 1-8 of the output module. Any audio/modulation source can be selected. For a complete list of sources, please see the "Connecting Modules" chapter, later in this manual. The small VU-meters near the parameter names, show the activity of the selected input source.

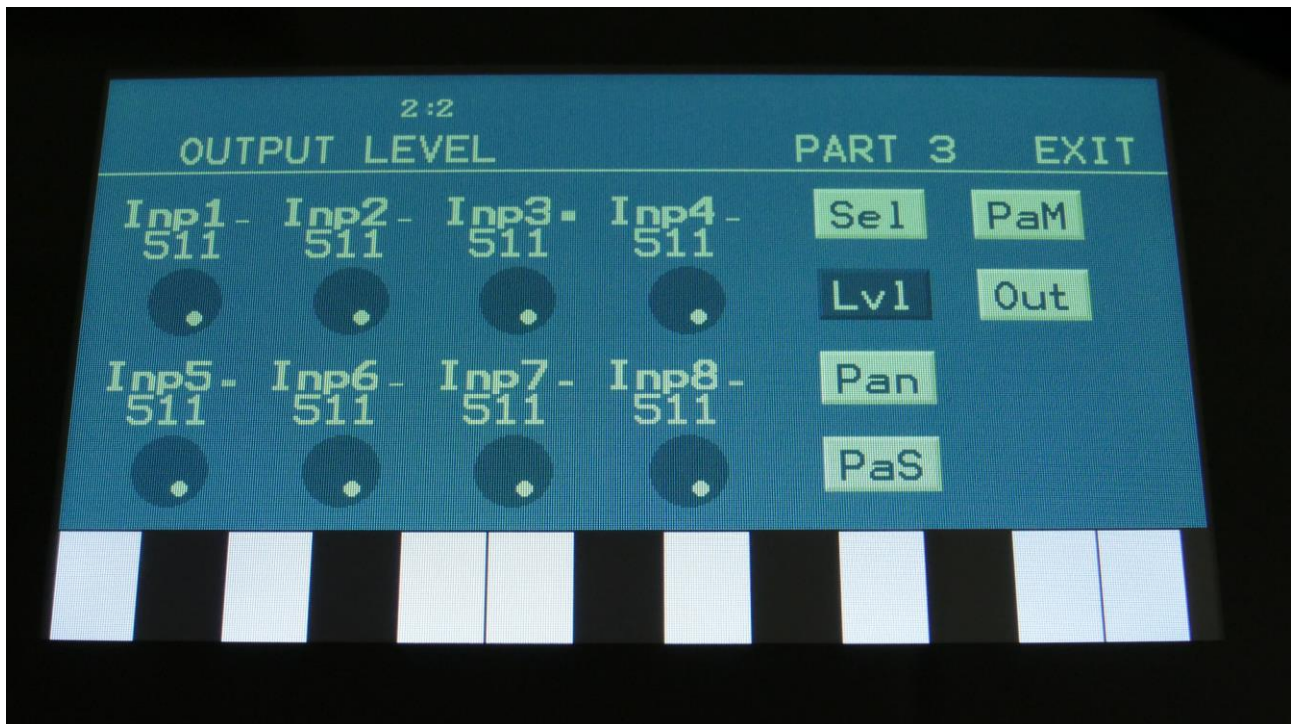

OUTPUT LEVEL

Touch the “Lv1” button to enter this page.


Inp1-Inp8: Sets the output level for input 1-8 of the output module. The small VU-meters near the parameter names, show the activity of the selected input source.

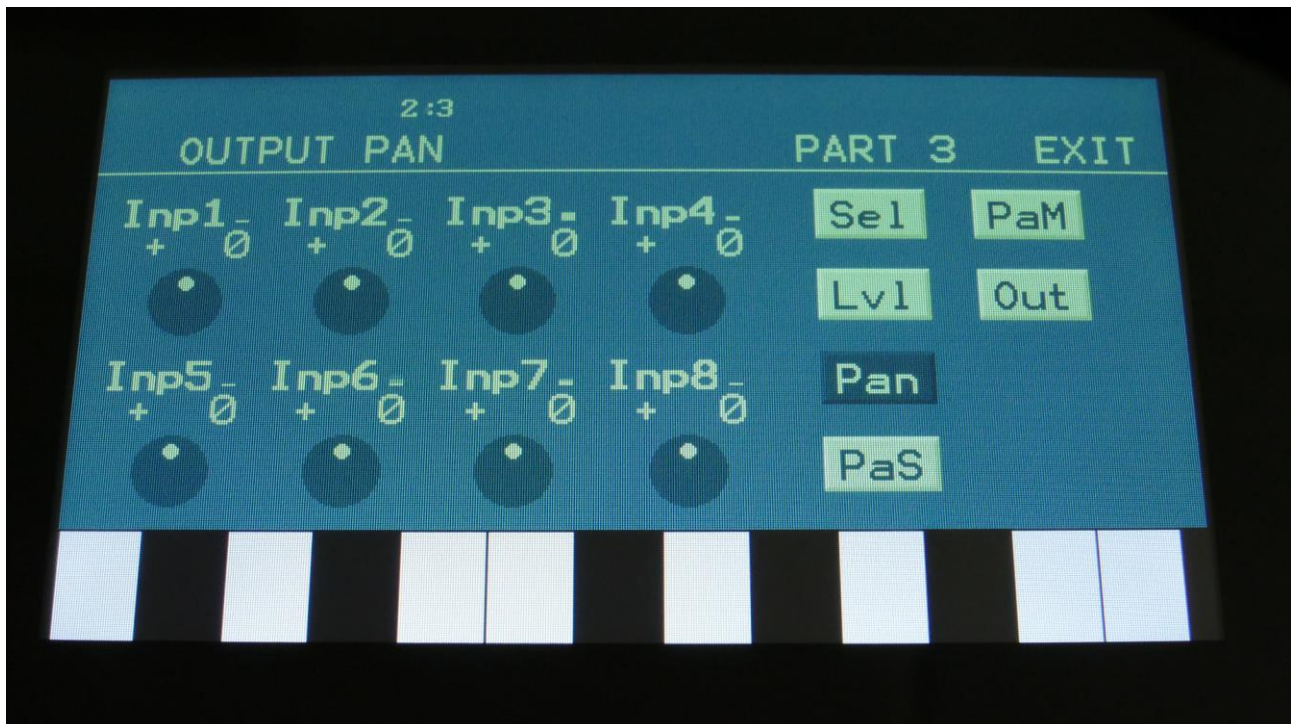

OUTPUT PAN

Touch the “Pan” button to enter this page.


Inp1-Inp8: Sets the output panning for input 1-8 of the output module. The small VU-meters near the parameter names, show the activity of the selected input source.

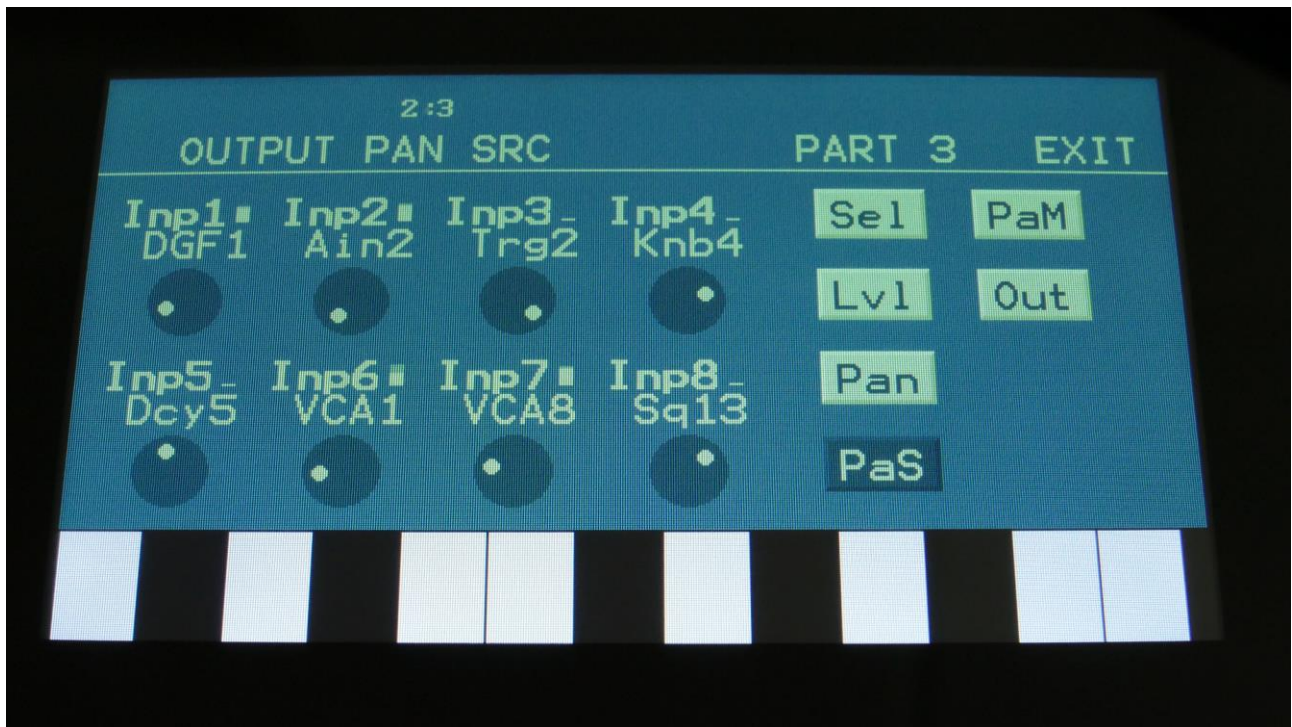

OUTPUT PAN SRC

Touch the “PaS” button to enter this page.


Inp1-Inp8: Selects the pan modulation source for input 1-8 of the output module. Any audio/modulation source can be selected. For a complete list of sources, please see the “Connecting Modules” chapter, later in this manual. The small VU-meters near the parameter names, show the activity of the selected pan modulation source.

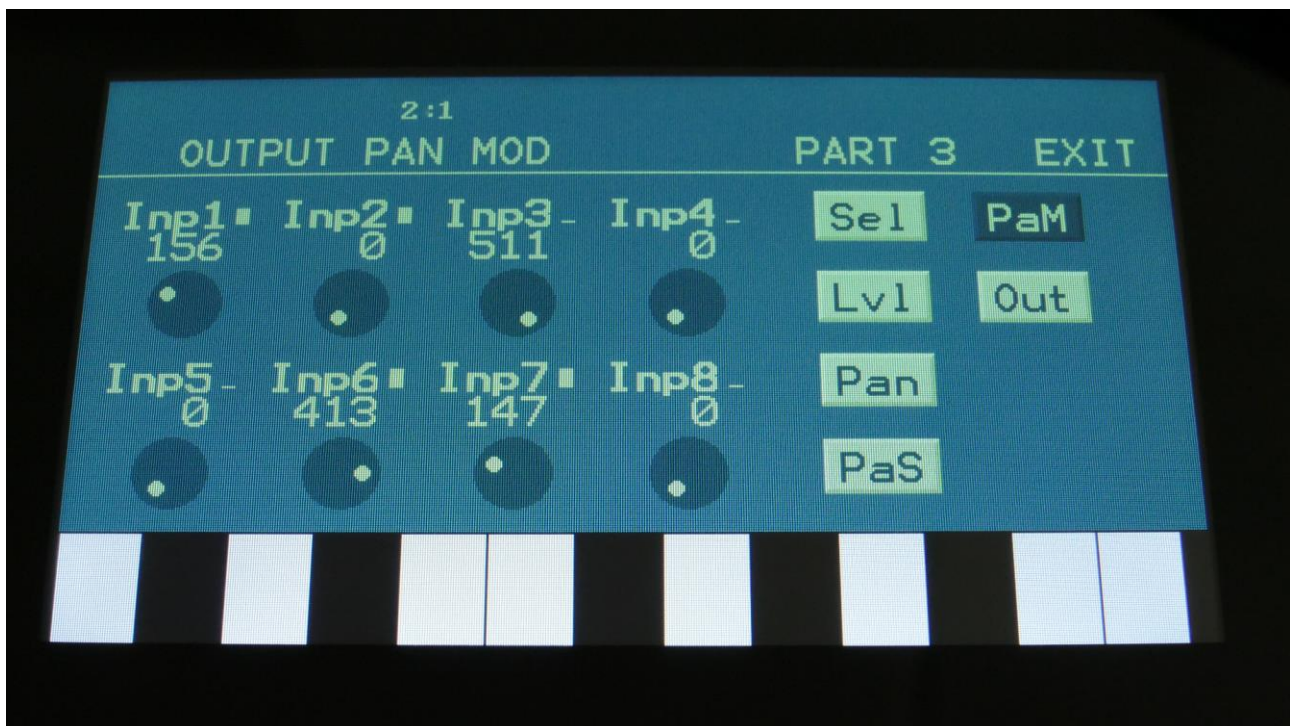

OUTPUT PAN MOD

Touch the “PaM” button to enter this page.

Inp1-Inp8: Sets the pan modulation amount for input 1-8 of the output module. The small VU-meters near the parameter names, show the activity of the selected pan modulation source.

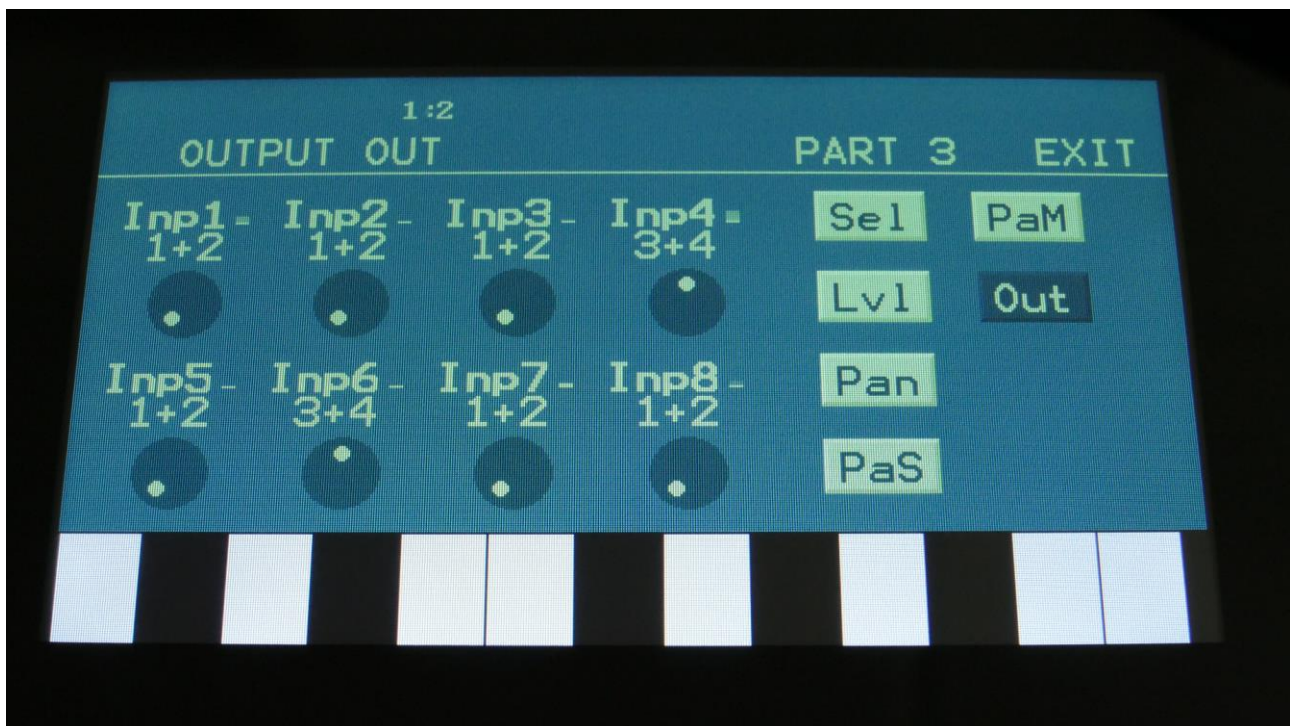


OUTPUT OUT

Touch the “Out” button to enter this page.

Inp1-Inp8: Selects the pair of audio outputs, that input 1-8 will be sent to. The small VU-meters near the parameter names, show the activity of the selected input source.

PLEASE NOTICE: In the standard configuration, with 4 analog filters installed, the signals sent to VCF3 and 4, are also sent to audio out 3 and 4, so signals from the output module are not sent to these. Signals can only be sent to output 3 and 4, if single line filter boards are installed.

ENV – Envelopes

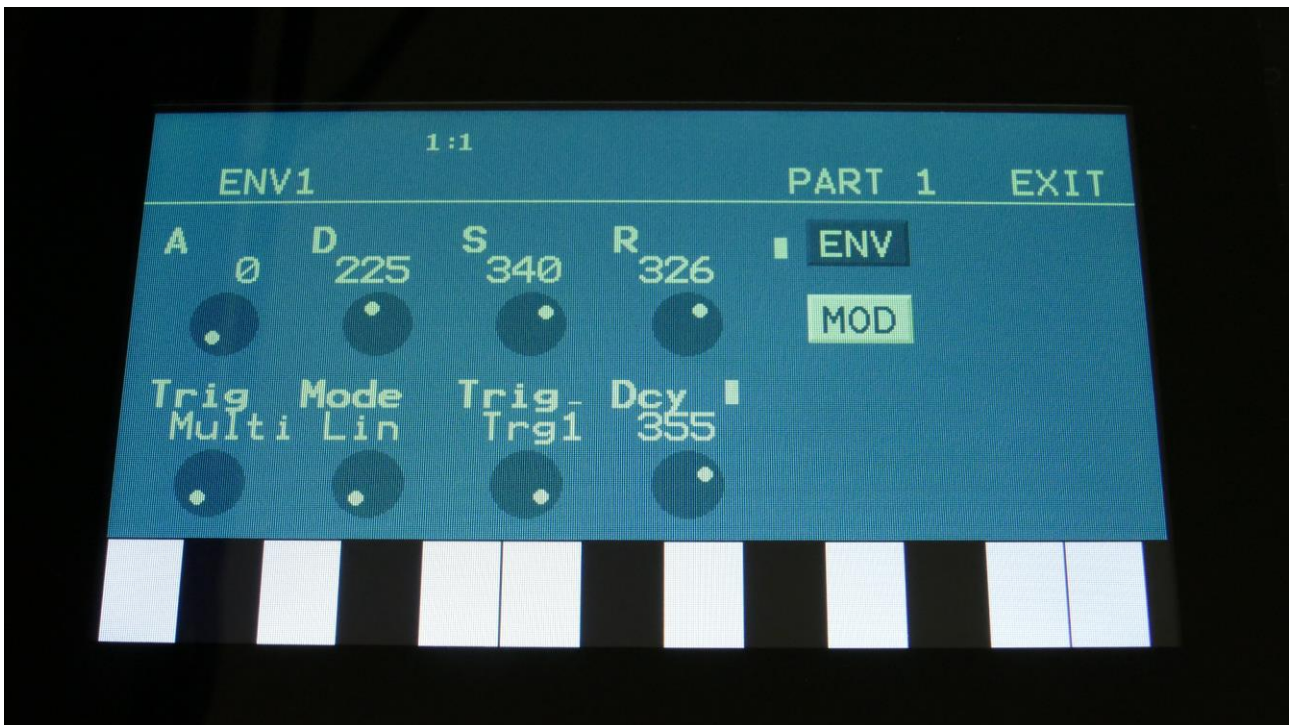


Urano has 8 envelope modules, each with an ADSR envelope and a Decay envelope. The ADSR envelope can run in various linear and logarithmic modes, the envelope time can be timed by 4, for long envelope times, and the ADS segment can be looped. The envelopes can be triggered by any sources. The A, D, R and output amount parameters can be modulated.

Envelope 2, the decay envelope, is always linear. When the ADSR Envelope is looped, the Decay envelope is looped in sync with this.

Envelope Parameters

From the synth modules page, touch ENV to enter the envelope pages.

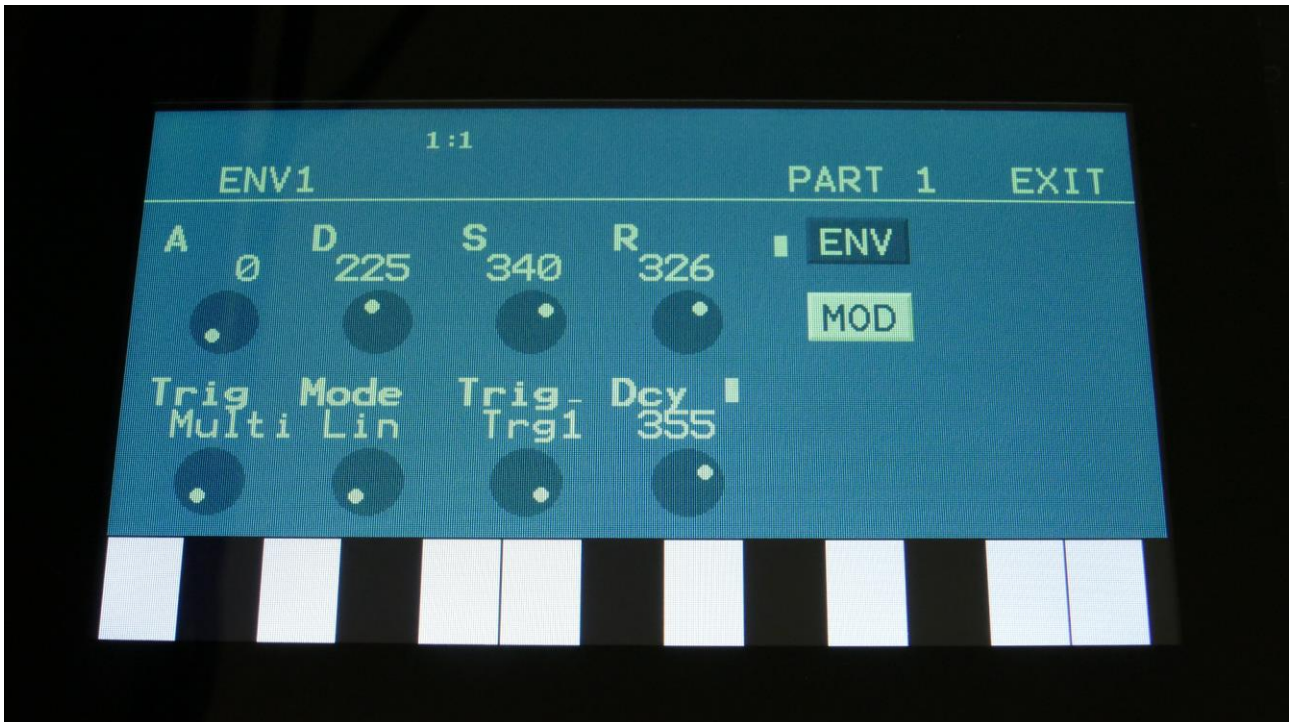

Touch the ENV touch button, to enter the envelope parameters page.

The 2 VU-meters at the right of the screen, shows the Envelope and the Decay Envelope outputs.

A: 0 to 511. ADSR Envelope attack time. The time it will take the envelope to rise from zero to its maximum value, when a note event is received and held down.

D: 0 to 511. ADSR Envelope decay time. When the envelope has reached its maximum value, in the time set by the attack parameter, it will decay, until it reaches the sustain level, and stay there, as long as the note that triggered it is held.

S: 0 to 511. ADSR Envelope sustain level. Explained under the "Dec" parameter.

R: 0 to 511. ADSR Envelope release time. The time it will take the envelope to decay from the value it is at, when a note off event are received, to zero.

Trig: Multi/Single trigger. When this parameter is set to multi, and the envelopes (both the ADSR and the Decay envelope) is triggered by an internal note source (trigger buttons, internal sequencer, touch screen keyboard), the envelopes will re-trigger every time a note on is received, regardless of, if the trigger has ever been low. When this parameter is set to Single, the envelope trigger must go low, before it goes high again, to trigger the envelopes.

When triggering the envelopes from non-note sources (LFO's etc) or from external sources (the trigger or CV inputs), they will always act in single mode, and these triggers **MUST** go low, before they go high to trigger the envelopes.


Mode: Selects if the envelope curve should be linear (**Lin**), or logarithmic (**Log**). The logarithmic curve gives the envelope a softer and less “clicky” attack. The **Lin4** and **Log4** modes sets the behaviors as mentioned above, but with envelope times, that are 4 times longer.

The **LinLp** and **LogLp** modes will make the attack, decay and sustain segment of the envelope loop, for as long as the part trigger is active. When the part trigger is released, the envelope will continue to the release segment, and fade out. When any of these loop modes are selected, the Decay envelope will also loop, in sync with the ADSR envelope. This is useful, if you, for instance, needs a trigger, every time the ADSR envelope loops.

Trig: Envelopes trigger. Any modulation/audio source can trigger the Envelopes. For a complete list of modulation sources, see the “Connecting Modules” chapter, later in this manual. For “normal” use, you would set this between “Trg1” and “Trg8”, which is the part triggers.

Dcy: 0 to 511. Decay Envelope decay time. The time it will take the decay envelope to decay, after it has been triggered.

Envelope Modulation

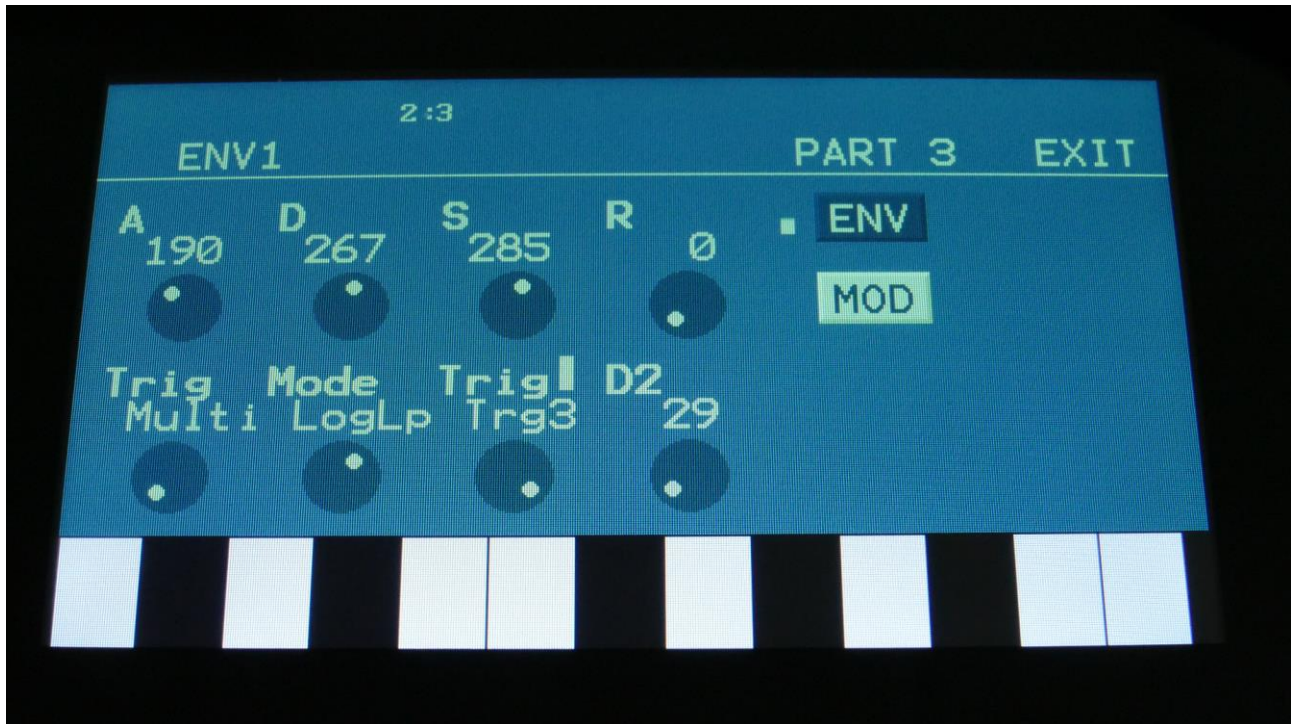

Touch the MOD touch button, to enter the envelope modulation page.

The VU-meter at the right of the screen, shows the Envelope output. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


A: Modulates the ADSR Envelope attack time.

D: Modulates the ADSR Envelope decay time.

R: Modulates the ADSR Envelope release time.

AM: Modulates the ADSR Envelope output amount.

LFO

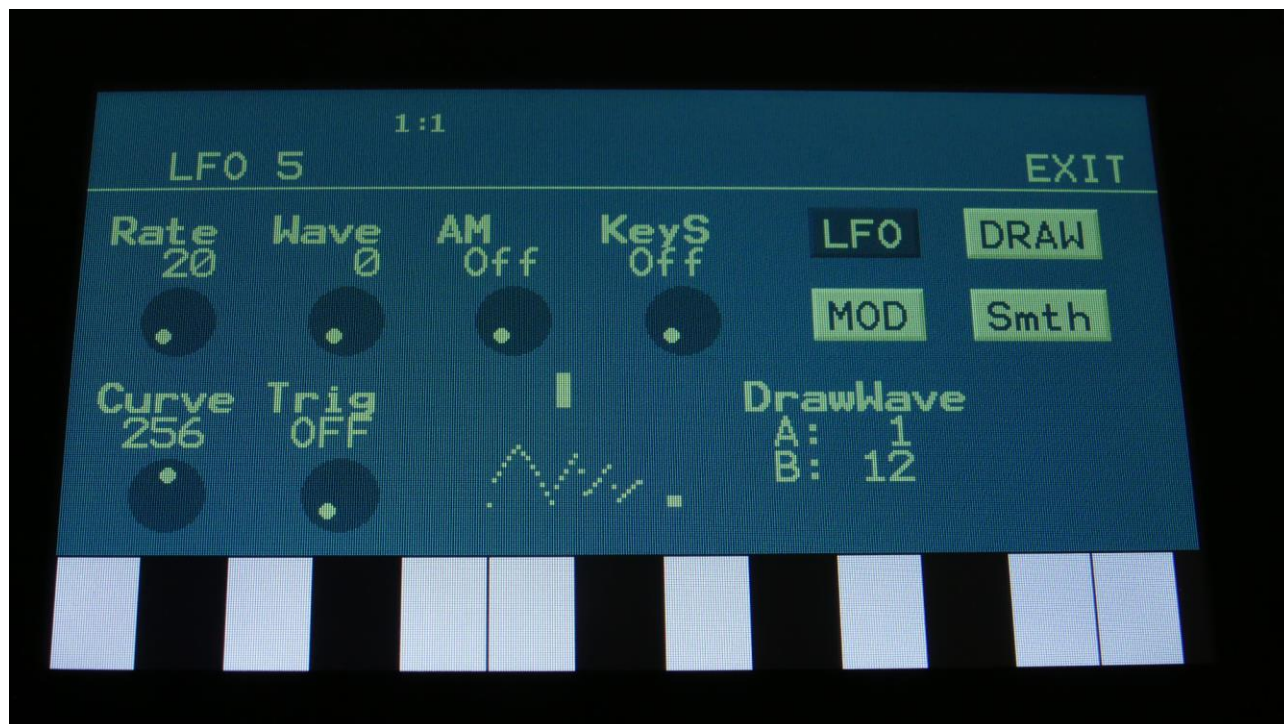

Urano has 8 LFO's with a waveform that morphs from triangle to sawtooth to pulse to FM waves. Curve can be adjusted from logarithmic to linear to exponential.

It is also possible to draw your own LFO waveforms. 15 of these can be stored with each preset. All draw waves can be used with multiple LFO's and with the Draw Oscillators.


The LFO's can be key synced, and a one-shot mode is available, for using the LFO's as envelopes.

The LFO's can also trigger the parts and clock the sequencer. The Rate, Wave and Curve parameters can be modulated.

One LFO are shown at a time on the LFO pages. LFO 1 to 8 are selected in the same way as synth parts are, by pushing and holding the Steps/Part button, while pressing a step button.

LFO parameters

From the synth modules page, touch the LFO block, to enter the LFO pages.

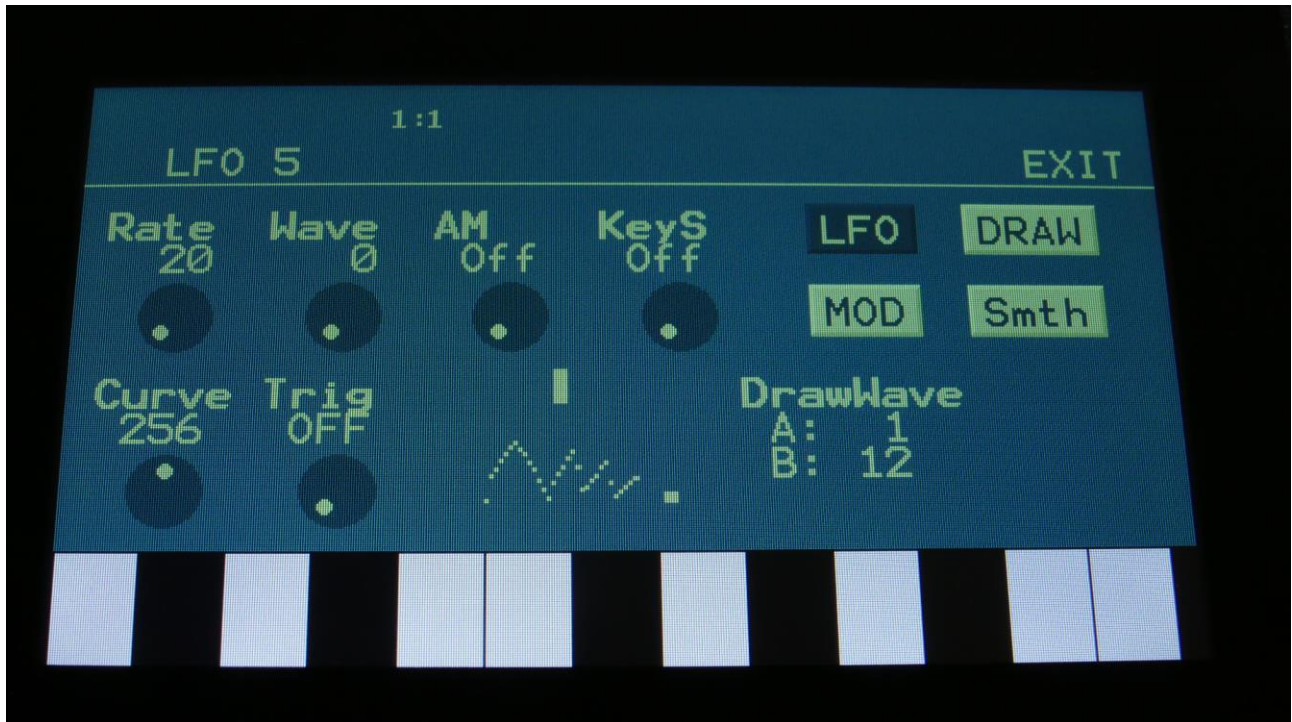

Touch the LFO touch button, to select this page.

At the bottom of this page, the current LFO waveform is shown, together with a small VU-meter, showing the LFO output activity.

Rate: 0 to 511. LFO rate. Sets the speed of the LFO.

Wave: 0 to 511. LFO output waveform. Morphs between triangle, sawtooth, square, pulse and FM waveforms. The FM waveforms are high frequency waves, that can be used for FM synthesis. In Draw Wave mode this parameter morphs between Draw Wave A and Draw Wave B.

AM: Selects the modulation source, that will control the LFO output level. If “Off” is selected, no output level control will be applied to the LFO. Any modulation source can be selected. For a complete list of modulation sources, see the “Connecting Modules” chapter.

KeyS: Off, 1 to 8, 1s to 8s, 1q to 8q: LFO key sync. The number tells which part will make the LFO restart. When a number that has an “s” after it is selected, the LFO are in single cycle mode, and will only run one cycle, every time it is triggered.

Off: The LFO is free running.

1 to 8: Every time this Drum part is triggered, the LFO will reset to its initial value, and start over.

1s to 8s: Every time this Drum part is triggered, the LFO will reset, run for one cycle, and then stop.

1q to 8q: Every time this sequencer note track starts over from step 1, the LFO will reset.

Curve: 0 to 511. Sets the curve of the LFO output waveform from logarithmic (0) to linear (256) to exponential (511), and anything in between. To get “normal” linear LFO shapes, like triangle and saw tooth, keep this parameter at its initial value 256. This parameter will not affect square waves. In Draw Wave mode this parameter warps the draw wave. Values below 256 will warp the draw wave leftwards, values above 256 will warp the draw wave rightwards.

Trig: LFO output trigger:

Off: Does nothing.


Trg1 to Trg 8: The LFO will trigger Part 1 to 8.

1/32, 1/24, 1/16, 1/12, 1/8, 1/6: The LFO will clock the internal sequencer. Every time the LFO raises above its center value, the sequencer will increment 1/32, 1/24, 1/16, 1/12, 1/8, 1/6 step, as selected. The internal sequencer clock, and any MIDI clock will be ignored. MIDI clock will still be transmitted, if the ClkOut parameter in the COMMON menu is set to on.

s/s: The LFO will make the sequencer start or stop every time its output raise above the center value.

Rst: The LFO will make all tracks of the sequencer reset to their respective start step every time its output raise above the center value.

LFO Modulation

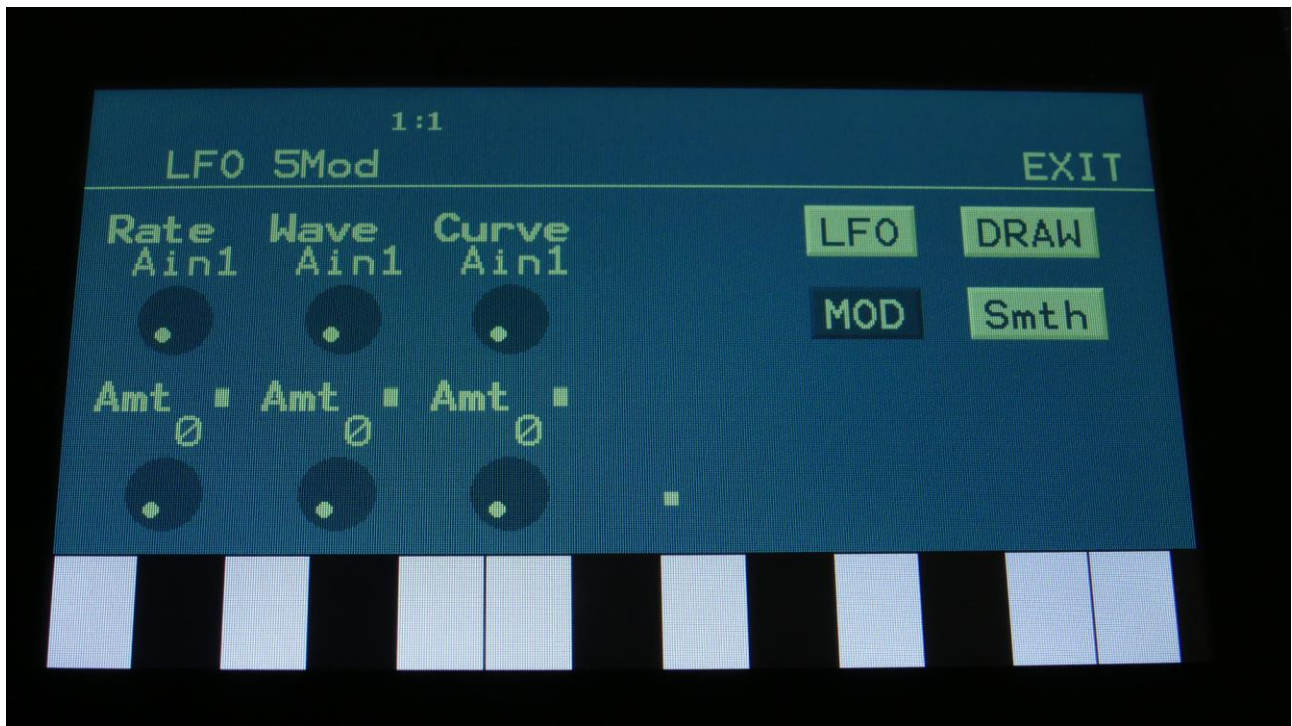

Touch the MOD touch button, to select this page.

The VU-meter at the bottom of the screen, shows the LFO activity. The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.

The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

Rate: Modulates the LFO rate.

Wave: Modulates the LFO waveshape.

Curve: Modulates the LFO Curve parameter.

LFO Draw Waves

It is possible to draw waveforms for use in the Oscillators and the LFO's. For each preset 15 draw waveforms can be stored, and these can be copied/pasted between presets.

When pasting an oscillator or LFO which uses draw waveforms, the draw waveforms are automatically pasted as well.

The **DrawWave** parameters:


When **A** (Edit Knob 7) is set to **Off**, the LFO is running as a normal LFO, generating the same waveforms as it did before this update. When **A** is set to a number between **1 and 15**, the LFO will generate the draw wave which has the corresponding number, when the Wave parameter is turned fully down, and the Curve parameter is set to its middle position (256).

With the **B** parameter (Edit Knob 8) you can select the draw wave number (1-15), which the LFO will generate, when the Wave parameter is turned fully up, and the Curve parameter is set to its middle position (256).

Turning or modulating the **Wave** parameter, will make the LFO morph between the 2 selected Draw Waves.

Activating the **Smth** touch button, will make the draw waveform more smooth.

The more the **Curve** parameter is turned down from 256, the more the Draw Wave will be warped leftwards. Turning the Curve parameter up, will make the draw wave warp rightwards.

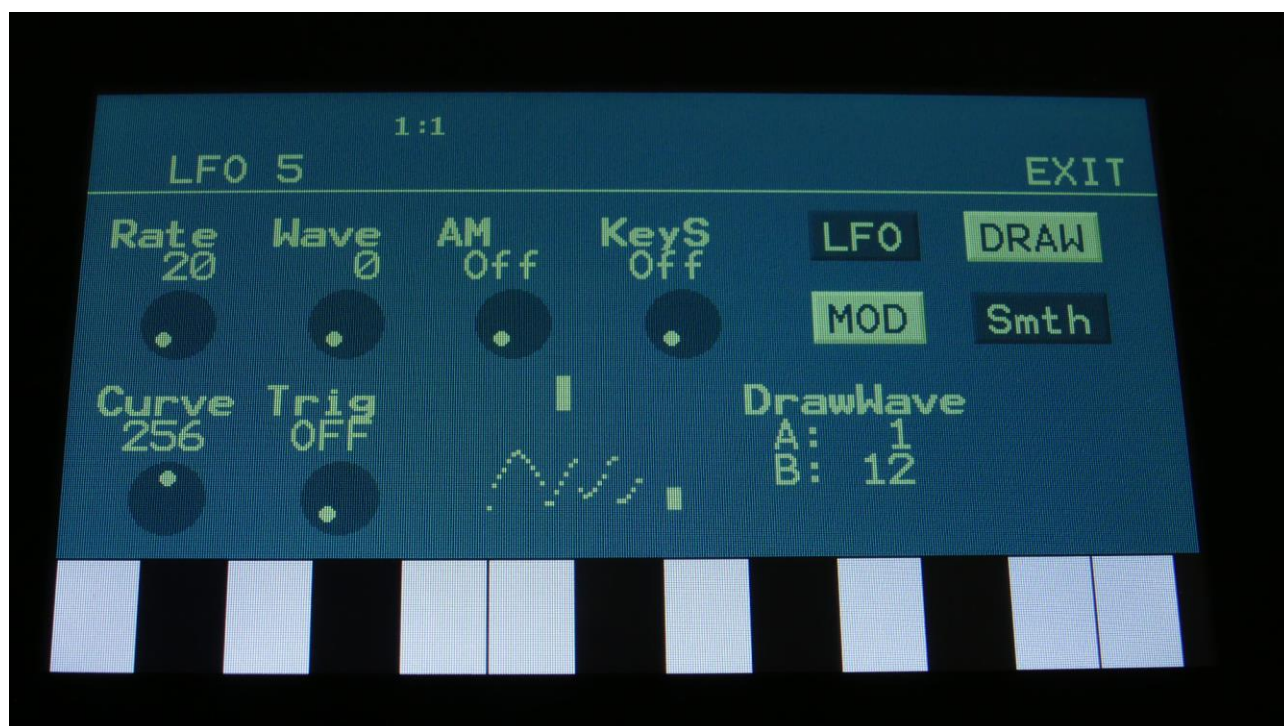

Editing the Draw Waves


To edit the draw waveforms, from the LFO page touch the DRAW button, from the Draw Oscillator pages touch the DRW button, to enter the draw wave edit page.



Here you can select the draw wave you wish to edit (draw wave 1 to 15), by **Edit Knob 2**. Then simply use your finger to draw a waveform on the display.

By **Edit Knob 1** you can set the draw mode to either **Nrm** (drawing follows your finger) or **Art** (creates random patterns).

If you would like to make sure that you are not hitting the Exit button when drawing, you can activate the Draw touch button.

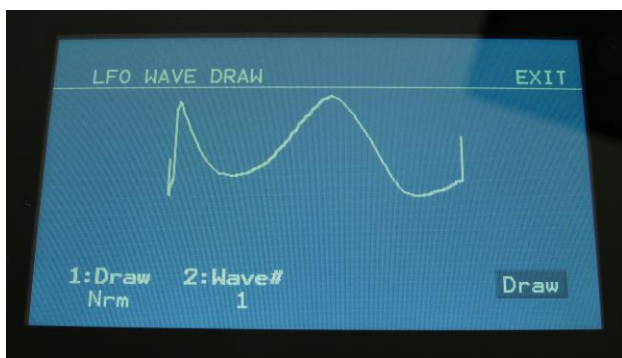

This will deactivate the Exit touch button. To re-activate the Exit button, simply hit the Draw touch button again, to de-activate this.

Saving the Draw Waves

The draw waves are saved as part of the Preset data, when you save a preset.

Copy Draw Waves


When you copy a preset, and then enter the draw wave edit page, and hit the Paste button, Urano will ask you to select the draw wave to copy from. Select the desired waveform and hit the Paste button again.



When pasting LFO's or Oscillators which uses draw waves, these are automatically pasted together with the LFO/Oscillator parameters.


Random S/H Generators

5 Random Generators / Sample/Holds are available. Every time these are triggered, they put out a new value from the input source. Triggers and inputs can be any source. For a complete list of modulation sources, see the “Connecting Modules” chapter.

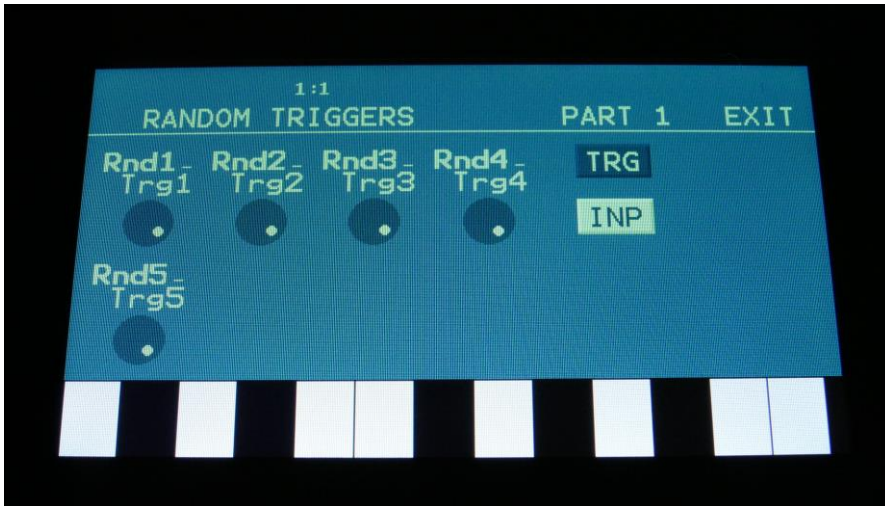

TRG page


Rnd1-Rnd5: Selects the trigger source for each of the 5 random generators.

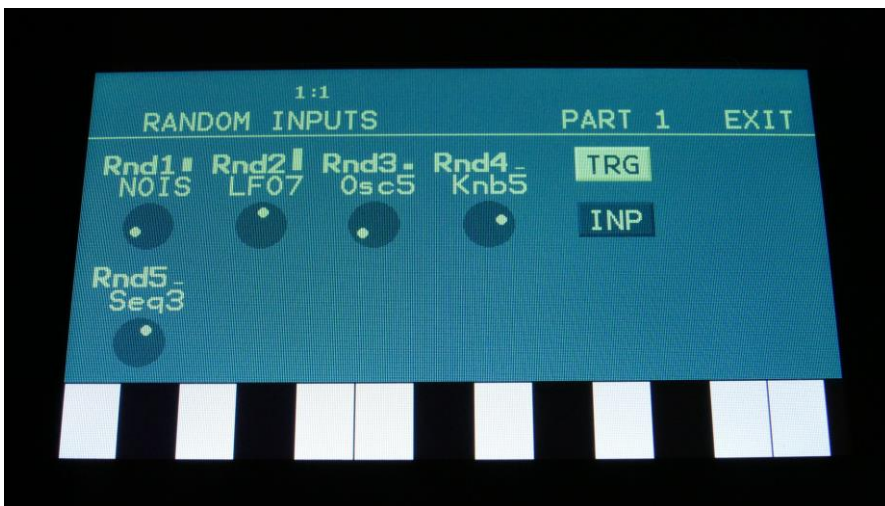

INP page

Rnd1-Rnd5: Selects the input source for each of the 5 random generators.

Triggers In

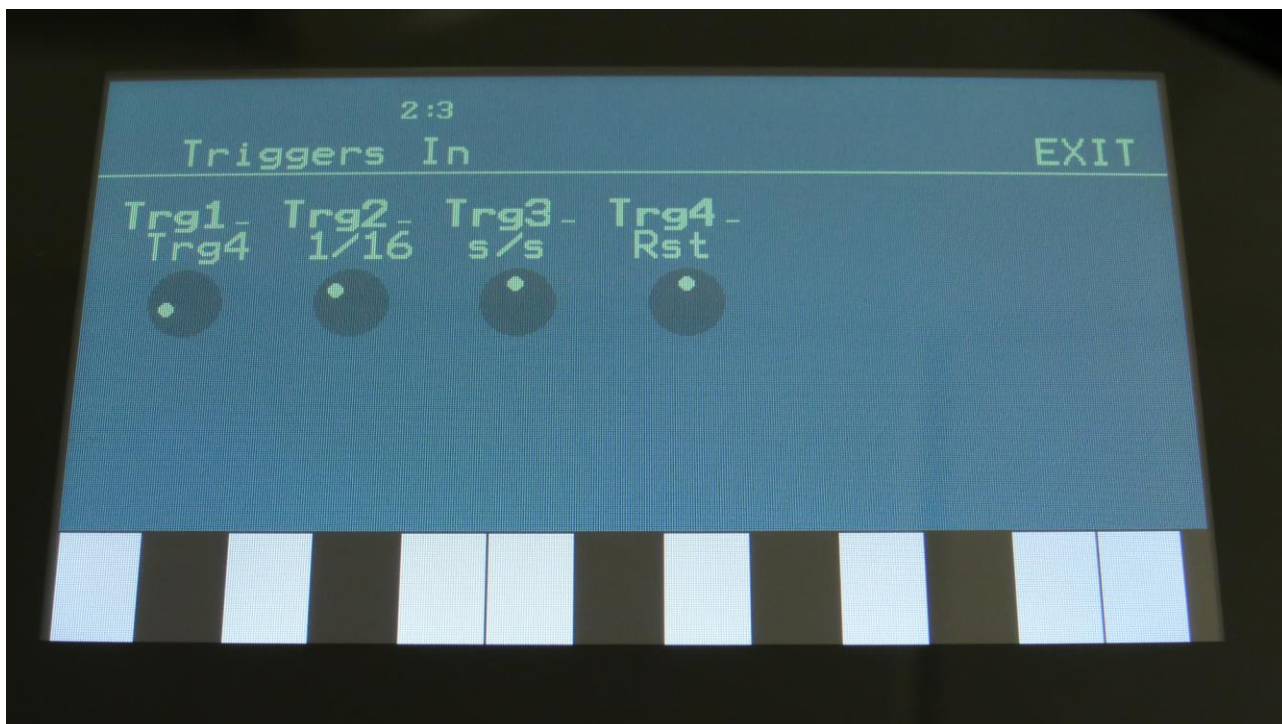

The signals applied to the 4 trigger input minijacks can trigger the 8 parts or control the sequencer clock (with divider), start/stop and reset. Signals below 1V are considered as a trigger off. Signals above 1V are considered as a trigger on. The trigger inputs can handle up to +/-45V. The signals on the trigger inputs can be monitored, converted to triggers, on the small VU-meters next to the parameter names.

Parameters

Trg1, Trg2, Trg3, Trg4: Trigger inputs destination. Choices are:

OFF: The trigger input will do nothing.

Trg1 to Trg8: The trigger input will trigger a part.

1/32: The trigger input will clock the internal sequencer. For each pulse it receives, the sequencer will increment 1/32 step. The internal sequencer clock, and any MIDI clock will be ignored. MIDI clock will still be transmitted, if the ClkOut parameter in the COMMON menu is set to on.

1/24: The trigger input will clock the internal sequencer. For each pulse it receives, the sequencer will increment 1/24 step. The internal sequencer clock, and any MIDI clock will be ignored. MIDI clock will still be transmitted, if the ClkOut parameter in the COMMON menu is set to on.

1/16: The trigger input will clock the internal sequencer. For each pulse it receives, the sequencer will increment 1/16 step. The internal sequencer clock, and any MIDI clock will be ignored. MIDI clock will still be transmitted, if the ClkOut parameter in the COMMON menu is set to on.

1/12: The trigger input will clock the internal sequencer. For each pulse it receives, the sequencer will increment 1/12 step. The internal sequencer clock, and any MIDI clock will be ignored. MIDI clock will still be transmitted, if the ClkOut parameter in the COMMON menu is set to on.


1/8: The trigger input will clock the internal sequencer. For each pulse it receives, the sequencer will increment 1/8 step. The internal sequencer clock, and any MIDI clock will be ignored. MIDI clock will still be transmitted, if the ClkOut parameter in the COMMON menu is set to on.

1/6: The trigger input will clock the internal sequencer. For each pulse it receives, the sequencer will increment 1/6 step. The internal sequencer clock, and any MIDI clock will be ignored. MIDI clock will still be transmitted, if the ClkOut parameter in the COMMON menu is set to on.

s/s: The trigger input will make the sequencer start or stop every time it receives a pulse or a gate.

Rst: The trigger input will make all tracks of the sequencer reset to their respective start step every time a pulse or a gate is received.

Triggers Out

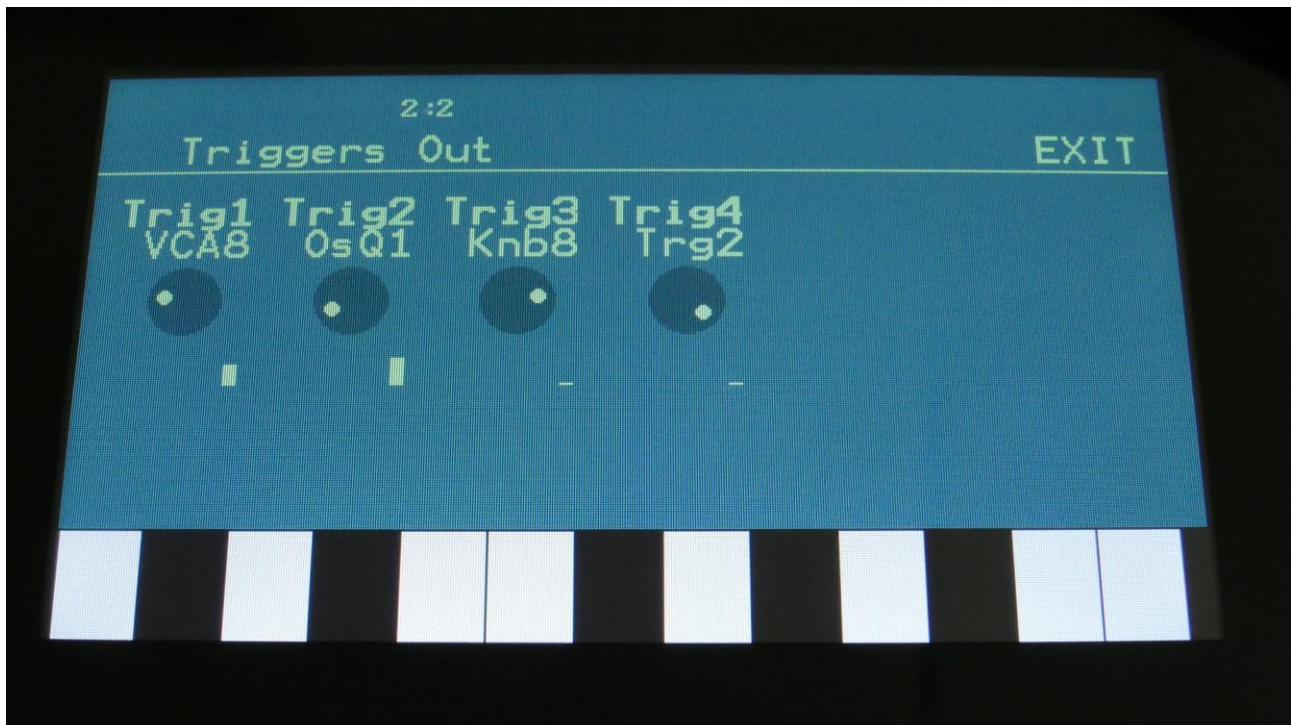

Any source can be sent to the 4 trigger output minijacks. The output range is 0V to 5 or 12V (settable via internal hardware jumper). Please notice that the trigger outputs can only be either low or high, so signals like sine waves and other waveforms, will all be converted to square waves. For a complete list of modulation sources, see the “Connecting Modules” chapter.


Parameters

Trig1 to Trig4: Selects the signals to be output, for Trigger Output 1 to 4.

CV In

The CV input minijacks does not have any settings, they can just be selected as modulation sources. The input range is -5V to +5V, and it has input protection, that will protect the circuits up to +/-45V. When controlling a part trigger note with a CV input, the input is scaled to 1V/oct.


CV Out

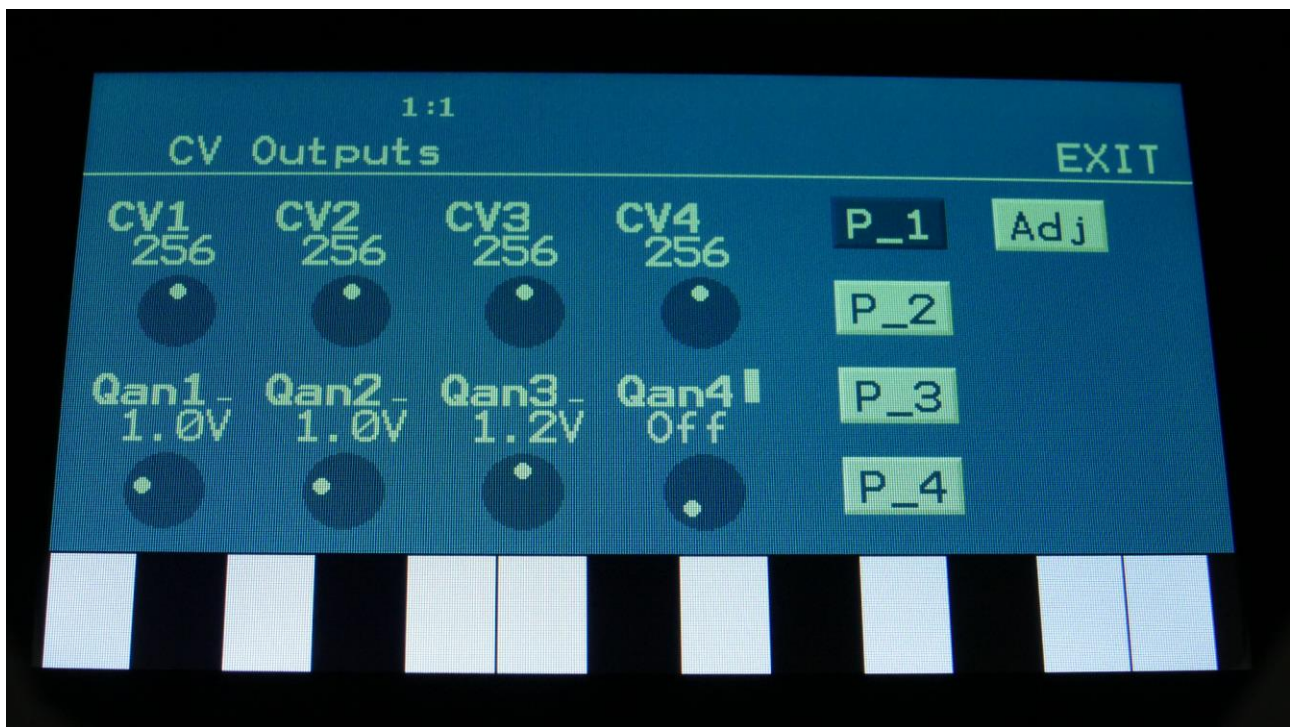

The 4 CV output minijacks can output any source. Three sources can output at the same time, on each CV output. An output offset can also be set, to make it possible to "program" external CV devices. The output range is -5V to +5V. When notes are selected as the source for Mod 1 (on P_2) (notes from a connected MIDI keyboard, the touch screen keyboard and the sequencer), the CV outputs can be scaled to 1V/oct and 1.2V/oct.

The Sources selected on P_2, P_3 and P_4 are mixed to each CV output. Only the sources selected on P_2 can be quantized.

CV Out Parameters

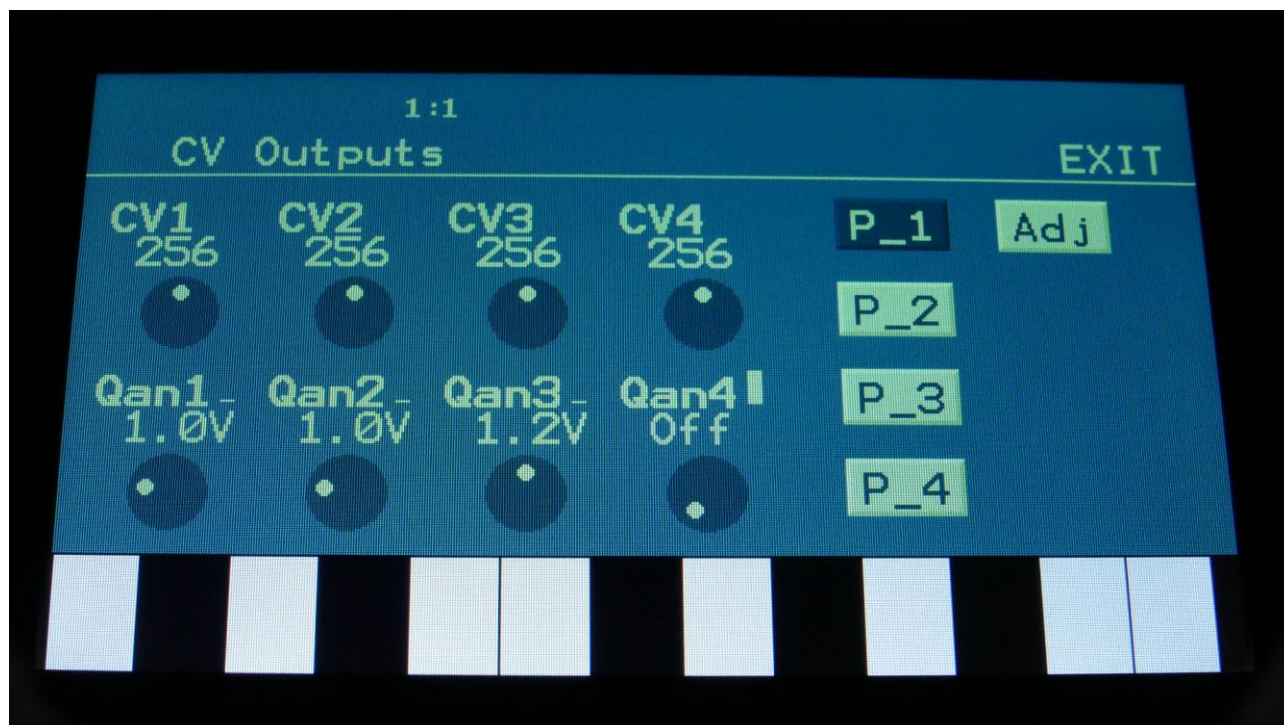

Touch the “P_1” button, to access this page.


CV1 to CV4: Offset for CV Outputs 1 to 4. Use these for setting an offset for the modulation, and to “program” fixed values for the analog devices, that you are controlling. For maximum modulation range, these should be set to 256 (the middle value).

Qan1 to Qan4: CV outputs note quantizing. When Kyb1 to Kyb8 is selected as the CV output modulation 1 source (on P_2), it is possible to scale the CV Outputs to either 1.0V or 1.2V, by setting these parameters. Select “Off”, if you don’t need any scaling. When the CV Output modulation source is set to any other source than “Kybx”, this quantize setting will be ignored.

In order to control an external device via Note Quantizing, Urano must be set up like this:

- Set the CVx parameters on the CV Outputs page to 256.
- Set the Qanx parameters to 1.0V or 1.2V as desired.
- Set the CVx parameters on the CV Outputs Mod 1 page to Kyb1, Kyb8, or any of the Kyb sources inbetween these 2 values.
- Turn the Amt parameters on this page up to 511.
- To get a Gate signal sent on the Trigger outputs, together with the note CV output, go to the TRIG OUT page, and set a trigger output to transmit Trg1 to Trg8 (select the same number as the CV Kyb source

CV Out Modulation 1

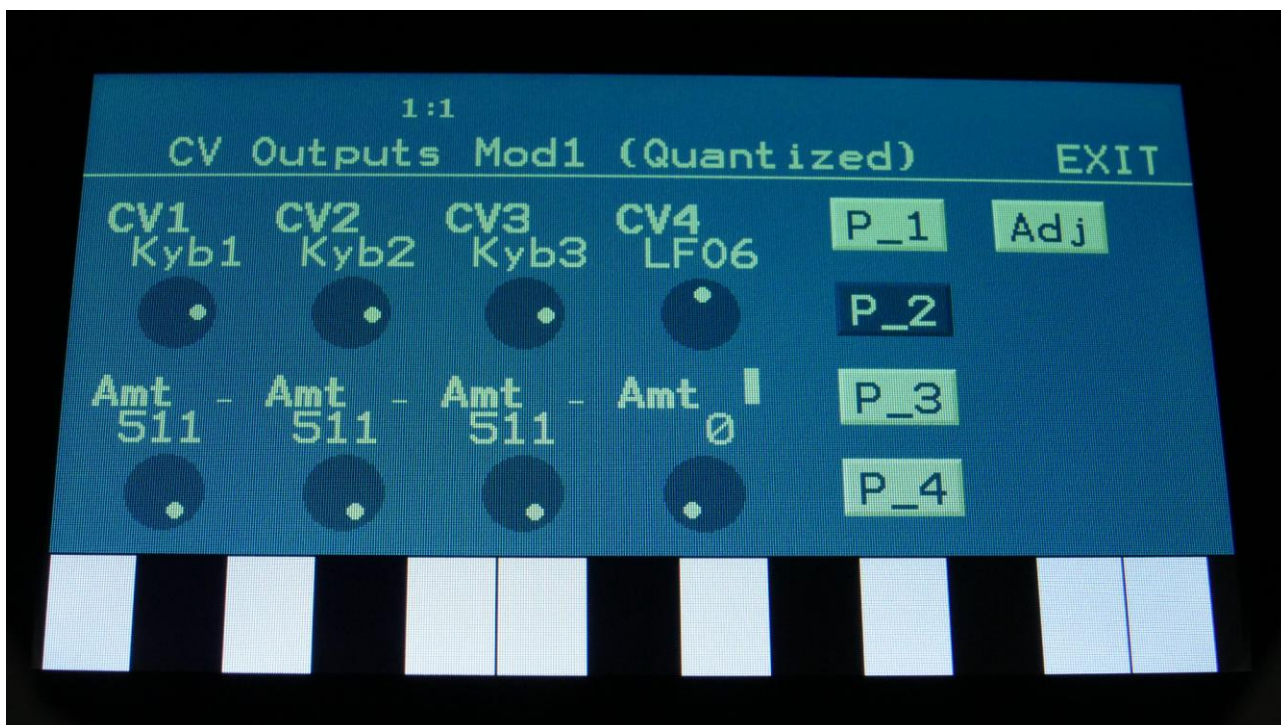

Touch the “P_2” button, to access this page.

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

CV1 to CV4: Sends the selected source to the CV outputs.

The sources selected on this page will be quantized, if the Qan parameter on P_1 is set to any other value than Off.

CV Out Modulation 2

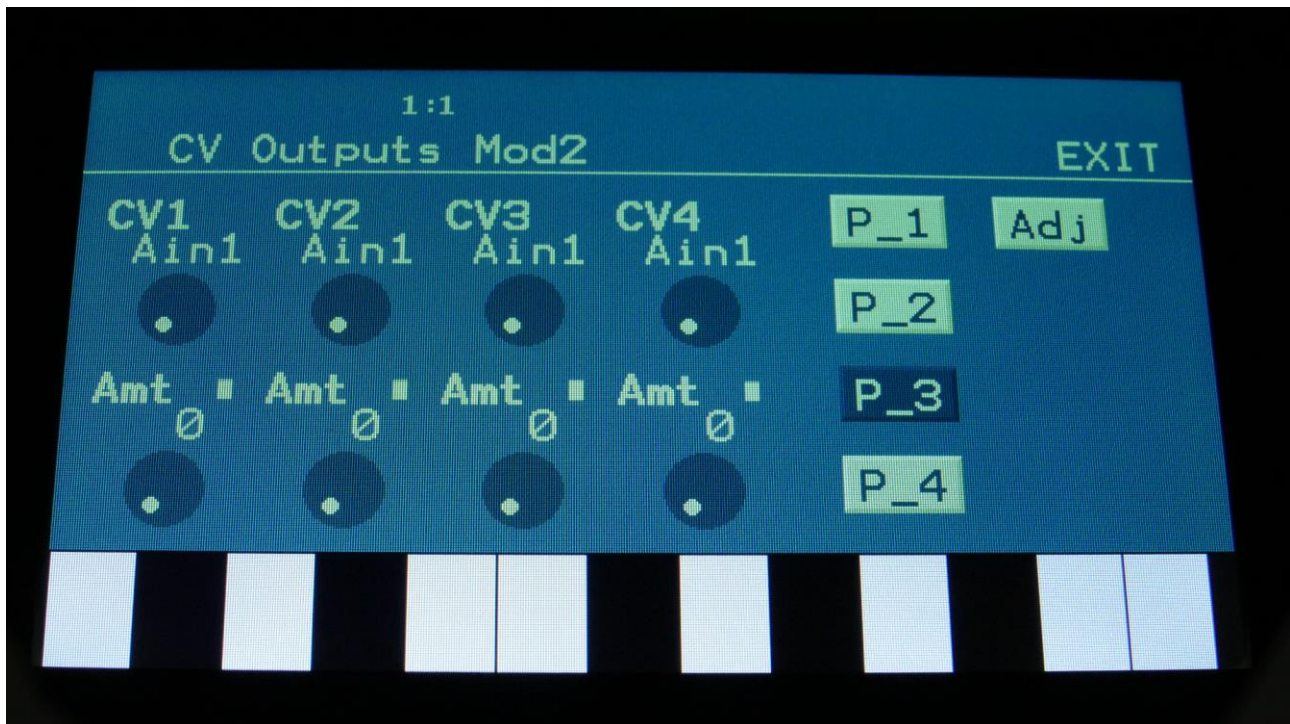

Touch the “P_3” button, to access this page.

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the “Connecting Modules” chapter.


The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

CV1 to CV4: Sends the selected source to the CV outputs.

The sources selected on this page will never be quantized.

CV Out Modulation 3

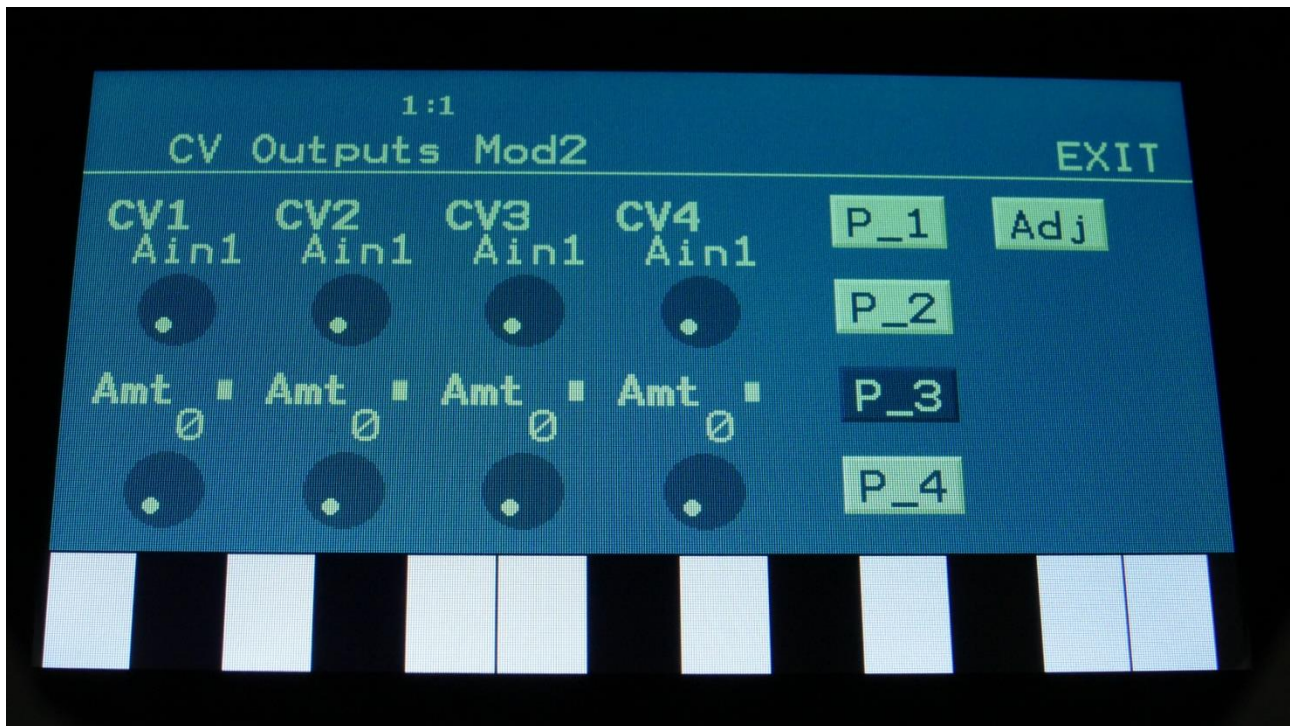

Touch the "P_3" button, to access this page.

The small VU-meters next to the parameters, shows the activity of the selected modulation sources.

For each parameter, that can be modulated, it is possible to select a modulation source, either directly or by group (**Func/Mute / Steps/Part** held), and to adjust the modulation amount. For a complete list of modulation sources, and complete instructions, see the "Connecting Modules" chapter.


The upper row of parameters selects the modulation sources, **the lower row of parameters** (Labelled Amt) adjusts the modulation amount in the range 0 to 511.

The parameters on this page:

CV1 to CV4: Sends the selected source to the CV outputs.

The sources selected on this page will never be quantized.

CV Out Adjust

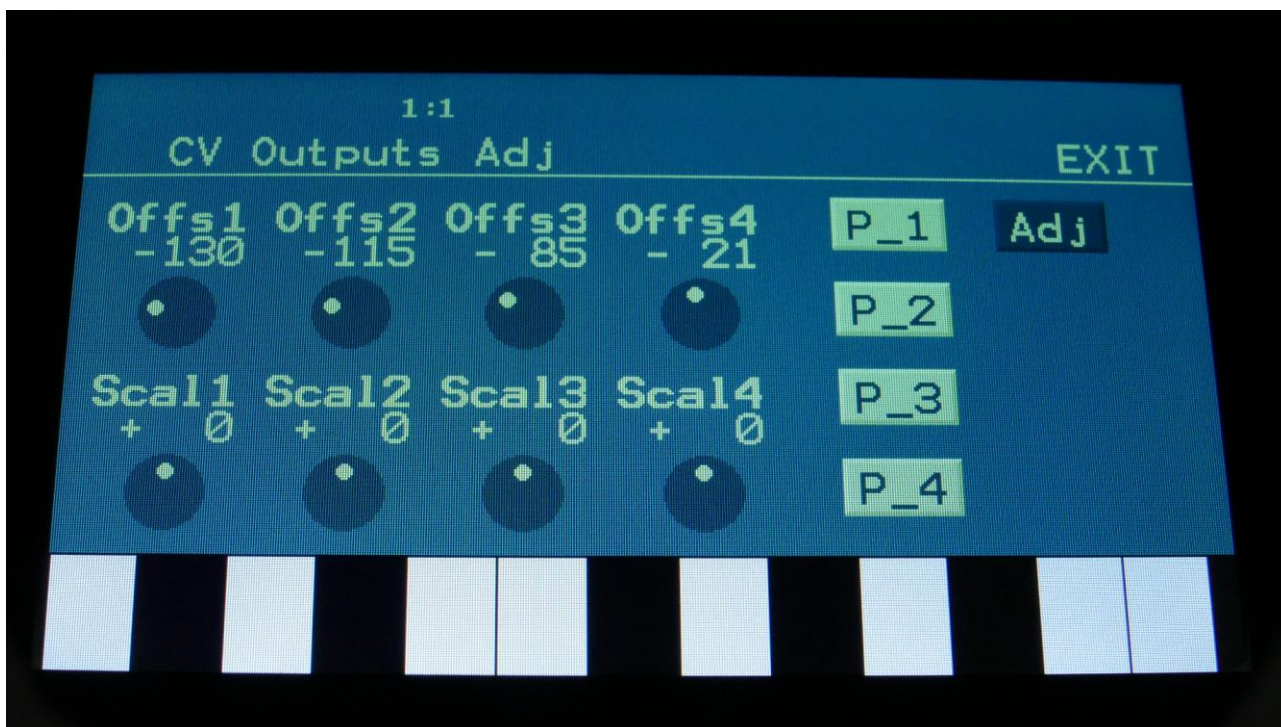

Touch the “Adj” button, to access this page.

On this page it is possible to adjust the note quantize scaling. Before you adjust these settings, you must set up the CV Output(s) like this:

- Set the CVx parameters on the CV Outputs page to 256.
- Set the Qanx parameters to 1.0V or 1.2V as desired.
- Set the CVx parameters on the CV Outputs Mod page to Kyb1, Kyb8, or any of the Kyb sources inbetween these 2 values.
- Turn the Amt parameters on this page up to 511.


Adjusting:

- Connect a voltmeter or the device to be controlled to the CV output.
- Play the middle C on the part to be output. If Kyb2 is selected as the source, play the middle C on part 2. From the factory, this is adjusted to zero volts. Adjust the Offsx parameter, to set this point as desired.
- Play C notes above and below the middle C, and adjust the Scalx (scale) parameter, as desired.

Save your adjustments:

- While on the CV Outputs Adj page, push and release the Func/Mute button, so that this lights up. Then push and release Step Button 7 (Save). Your adjustments have now been saved.

Parameter Randomizer

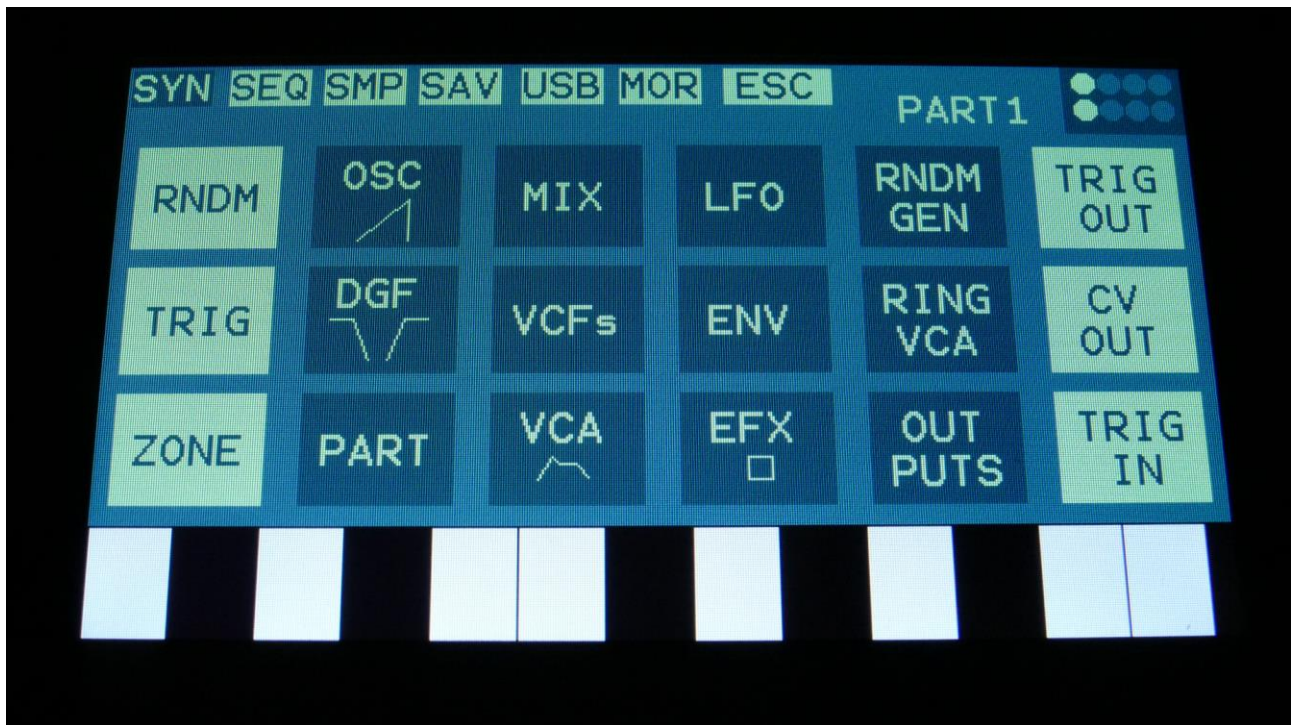


If you should ever need some new inspiration for sounds, or if you just want to surprise yourself with some sounds that you never even imagined, the Urano parameter randomizer might be exactly what you need.

Please notice that the Randomizer does not change the audio input settings of the modules, so the audio paths will not be changed, when randomizing.

To enter this, from the synth modules page, touch RNDM.

You should now enter this page:

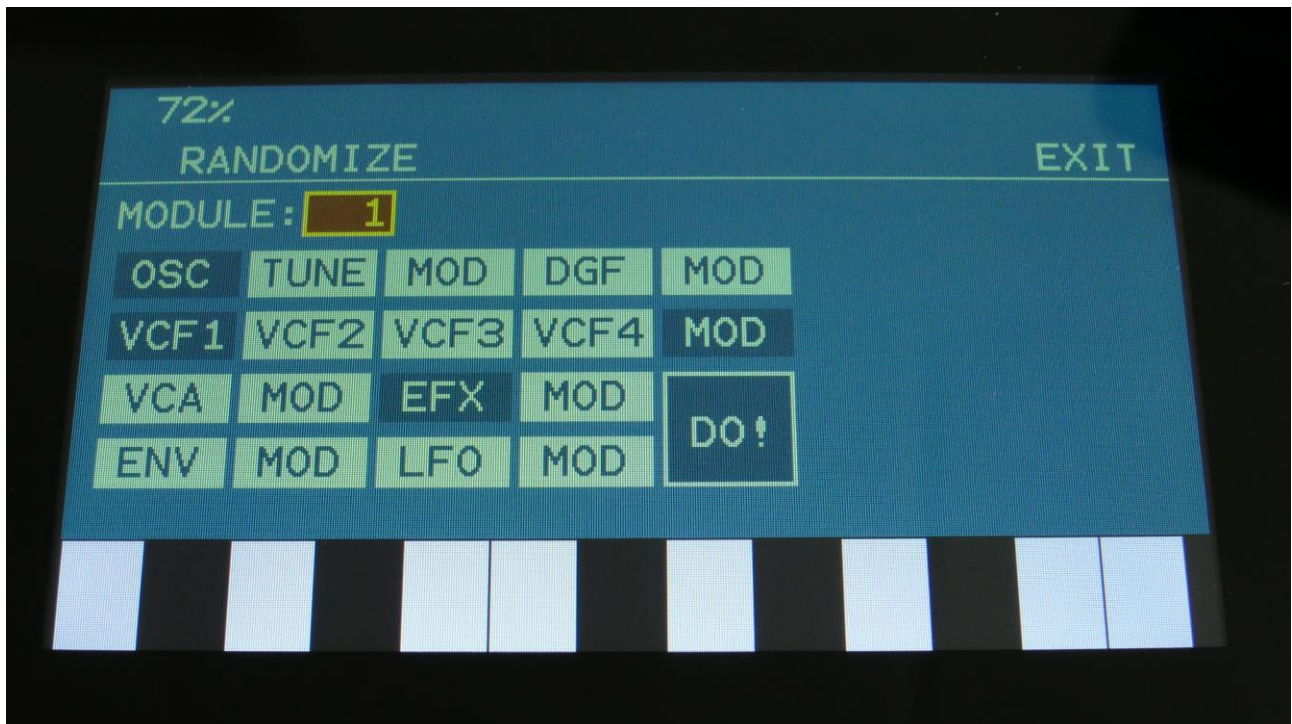

Select the module number which you would like to randomize, in the same way as you would usually select a part, by pushing and holding the Steps/Part button, while pressing one of the 8 step buttons (except for the VCF's). Switch the blocks on, that you would like to randomize, simply by touching these, adjust the percentage, that it must maximum change the parameters, using Edit Knob 1, and hit "DO!".

White blocks are not randomized, blue blocks are.

Listen to the result.

If you like it, exit the randomizer page, and save the preset.


If you don't like the result, hit "DO!" again, and keep hitting it, until something comes up, that you like. Try with different percentage settings, and try to switch different blocks on and off.

When the Randomizer page is entered, all parameters are stored into a temporary buffer, that are used for the randomization. So if you, for instance, first randomizes with 50%, and then with 20%, the result will be maximum 20% away from the initial parameter settings, when the Randomizer page was entered. It does not first randomize 50%, and then randomize 20% on top of that. To randomize things further away, you must exit the Randomizer page, and re-enter it.

Part Trigger / Poly Setup

In this block, you can set up the playback mode for each part (gate/toggle/part 1 poly), the pitch bend range, the note that will play pack, when pushing a trigger button, and if the part should be an internal or an external part.

From the synth modules page, touch TRIG to enter this page.

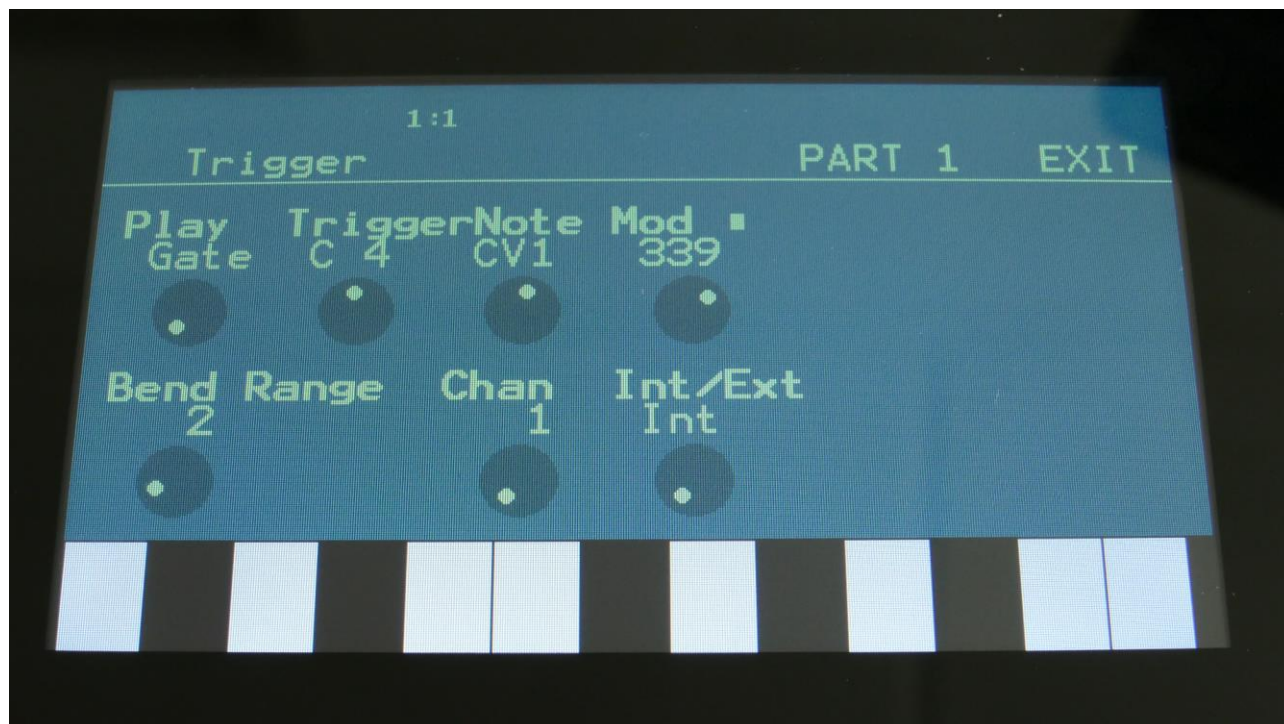

Play: Part Gate/Toggle mode. Choices are:

Gate: Gated mode. This is the “normal” play mode. When a part is triggered, it will be triggered for as long as the key/trigger button is held, and released when the key/trigger button is released.

Togl: Toggled mode. In this mode, the part gate will toggle, every time it gets a trigger. This is useful, if you have some loops or drones laid out, and you just want to switch these on and off, by hitting a trigger button. Please notice that this mode only works with the trigger buttons. When playing a part from the touch screen keyboard or an external MIDI device, the part will always play back in gated mode.

Poly (only part 1): Polyphonic mode. When part 1 is set in polyphonic mode, it will sequentially toggle between part 1, 2, 3 and 4, every time you play a note. It is not possible to make Urano automatically generate the same sound on Part 1 to 4. It will just play back whatever sounds that these parts generate.

TriggerNote: C-1 to G9. The note that will play, when the step buttons are in trigger mode (when both the Func/Mute button and the Steps/Part button are unlit), and you push the trigger button, for this part. This is also the note that is sent via MIDI out, when a part is set to external, and you hit the trigger button.

And finally this is also the note, that is sent to the internal synth or to MIDI out, when a part is triggered by a CV input.

In order to control a part with CV/Gate, a CV input should be selected as the modulation source for the trigger note, and one of the trigger inputs should be set up to trigger this part.

Trigger Note Modulation Source:

Any audio/modulation source can modulate the trigger note. Only the positive modulation sources, can be selected by the Edit Knob. To make a modulation source negative, touch the modulation source parameter. For a complete list of modulation sources, see the “Connecting Modules” chapter.

Mod: 0 to 512. Trigger Note Modulation amount

Bend Range: 0 to 12 notes. The pitch bend range for the selected part.

Chan: 1 to 16. The part output MIDI channel. This will also affect the part Sequencer Note Track. When the part is set to external, this is the MIDI channel that note data played by the trigger button, the touchscreen keyboard, on an attached MIDI device, and from the part sequencer note track are sent on, to the Urano MIDI out.

Int/Ext: Sets the part in internal (Int) or external (Ext) mode.

When a part is set to **internal** mode, all notes played by the part trigger button, the touchscreen keyboard, on an attached MIDI device, and from the part sequencer note track, controls the internal Urano part.


When a part is set to **external** mode, all notes played by the part trigger button, the touchscreen keyboard, on an attached MIDI device, and from the part sequencer note track, controls any MIDI device, that is connected to the Urano MIDI output, and that is set to the same MIDI channel, as set by the Chan parameter on this page.

Zone Setup/MicroTunings

In this block, it is possible to set up a key zone and a MIDI channel for the part, that will take effect, when Urano is set in multi-timbral mode, and is controlled from an external MIDI device. How to set Urano in multi-timbral mode is explained later in this manual, in the MOR>Common section.

In this section it is also possible to microtune each key in an octave for oscillator types 2 and Resonator.

From the synth modules, touch ZONE to enter this page.

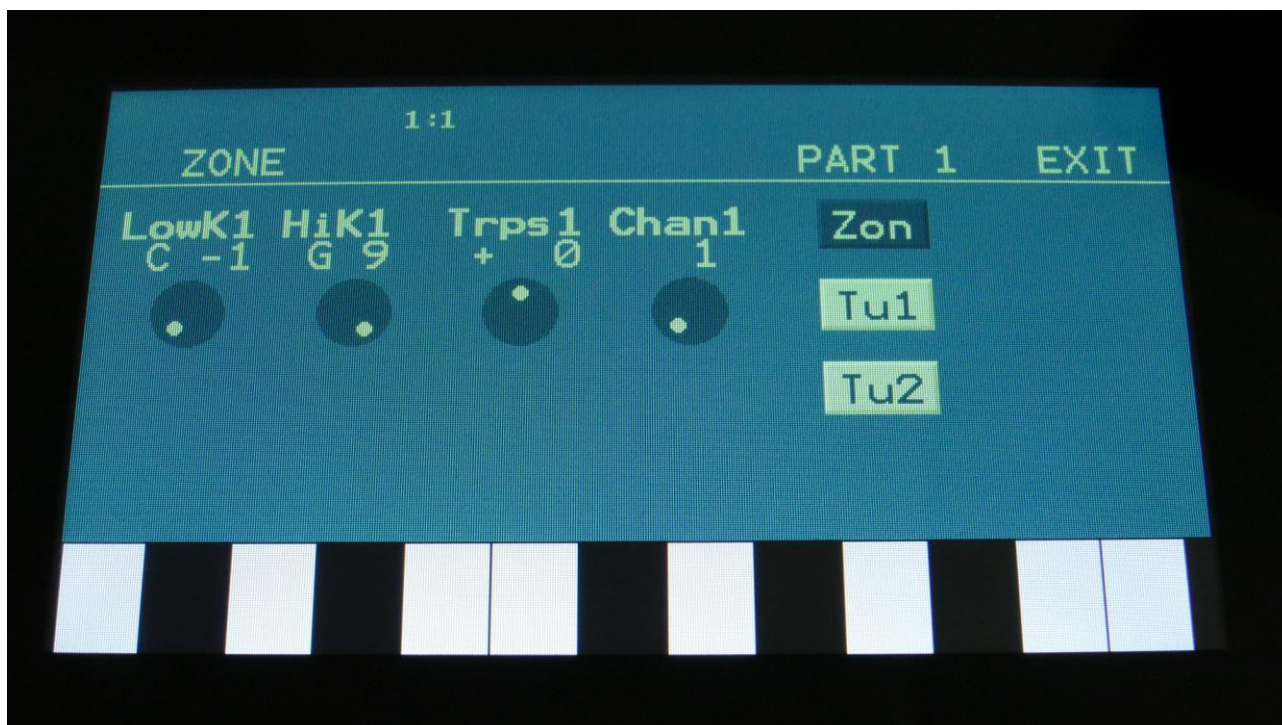


LowK1: C-1 to G9. The lowest key of the part zone.

HiK1: C-1 to G9. The highest key of the part zone.

Trps1: -64 to +63. The incoming MIDI notes, inside the key zone, are transposed up(+) or down(-), by the selected value.

Chan1: 1 to 16. The MIDI channel that will control this part.

Touch Tu1 to enter the first Microtunings page:

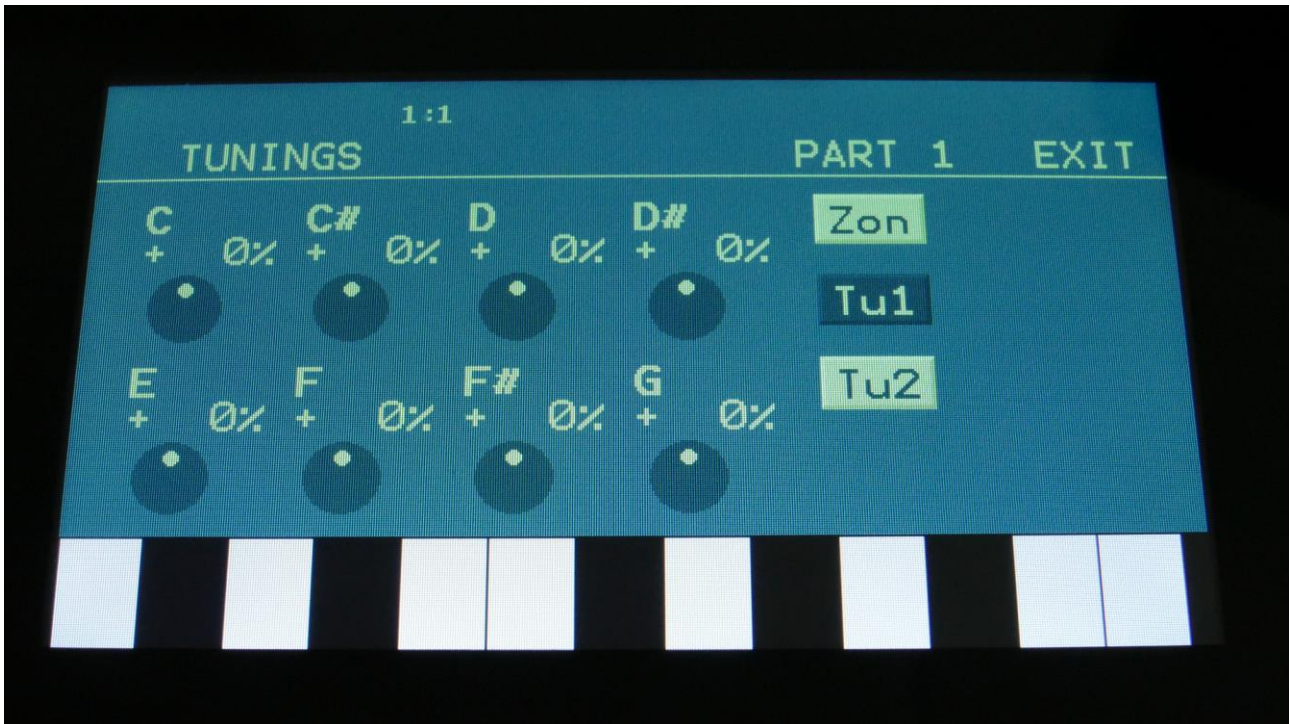


Here it is possible to microtune each note in an octave by up to +/- 50 percent. This is possible separately for each of the 8 parts, but it is only possible for the Type2 and Resonator oscillators. The Type1 oscillators, the samplers and the noise generators are not affected by these settings.

The microtune settings can easily be copied and pasted, using the existing copy/paste system, to easily set up multiple sounds with the same tunings.

On the Tu1 page, use Edit Knob 1 to 8, to set the tunings for the keys C to G. The range is +/- 50% of one note.

The tunings are morphable, so it can have different setting for Morph Layer A and B.

To set the tunings for the keys G# to B, touch Tu2, to go to the next tuning page:

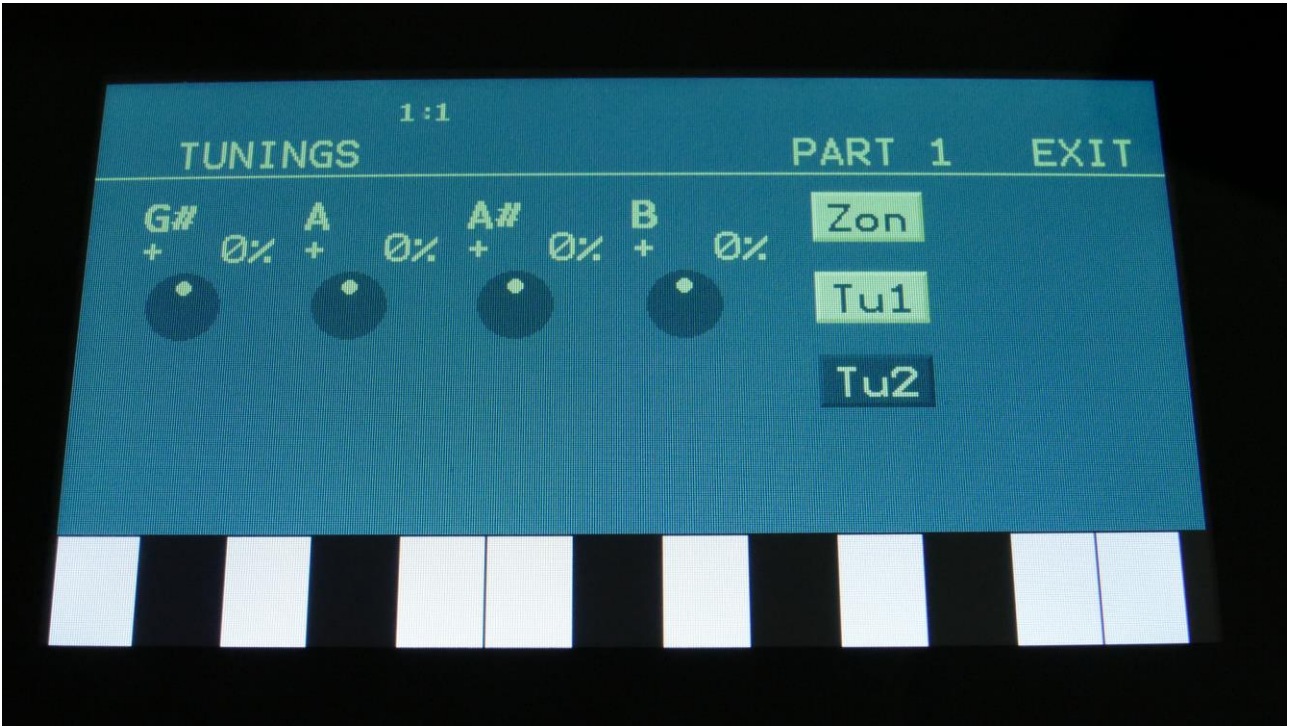

Connecting Modules

There are no specific rules, when connecting modules inside Urano. Any output can be connected to any input. Urano does not differ between the audio and modulation sources. LFO's and Envelopes can run through an audio effect, if you like.

Connecting modules on Urano can be done in 3 different ways: Manually, via the module overview and automatically.

List Of Modulation/Audio Sources

Ain1: Audio Input 1

Ain1-: Audio Input 1 inverted

Ain2: Audio Input 2

Ain2-: Audio Input 2 inverted

Ain3: Audio Input 3

Ain3-: Audio Input 3 inverted

Ain4: Audio Input 4

Ain4-: Audio Input 4 inverted

Osc1: Oscillator 1

Osc1-: Oscillator 1 inverted

Osc2: Oscillator 2

Osc2-: Oscillator 2 inverted

Osc3: Oscillator 3

Osc3-: Oscillator 3 inverted

Osc4: Oscillator 4

Osc4-: Oscillator 4 inverted

Osc5: Oscillator 5

Osc5-: Oscillator 5 inverted

Osc6: Oscillator 6

Osc6-: Oscillator 6 inverted

Osc7: Oscillator 7

Osc7-: Oscillator 7 inverted

Osc8: Oscillator 8

Osc8-: Oscillator 8 inverted

OsQ1: Oscillator 1 Quadrature Output (a sine wave shifted 45 degrees)

OsQ1-: Oscillator 1 Quadrature Output inverted (a sine wave shifted 45 degrees)

OsQ2: Oscillator 2 Quadrature Output (a sine wave shifted 45 degrees)

OsQ2-: Oscillator 2 Quadrature Output inverted (a sine wave shifted 45 degrees)

NOIS: White noise source

NOIS-: White noise source inverted

DGF1: The output of the Digital Gotharman Filter 1

DGF1-: The output of the Digital Gotharman Filter 1 inverted

DGF2: The output of the Digital Gotharman Filter 2

DGF2-: The output of the Digital Gotharman Filter 2 inverted

DGF3: The output of the Digital Gotharman Filter 3

DGF3-: The output of the Digital Gotharman Filter 3 inverted

DGF4: The output of the Digital Gotharman Filter 4

DGF4-: The output of the Digital Gotharman Filter 4 inverted

DGF5: The output of the Digital Gotharman Filter 5
DGF5-: The output of the Digital Gotharman Filter 5 inverted
DGF6: The output of the Digital Gotharman Filter 6
DGF6-: The output of the Digital Gotharman Filter 6 inverted
DGF7: The output of the Digital Gotharman Filter 7
DGF7-: The output of the Digital Gotharman Filter 7 inverted
DGF8: The output of the Digital Gotharman Filter 8
DGF8-: The output of the Digital Gotharman Filter 8 inverted
VCA1: The output of VCA 1
VCA1-: The output of VCA 1 inverted
VCA2: The output of VCA 2
VCA2-: The output of VCA 2 inverted
VCA3: The output of VCA 3
VCA3-: The output of VCA 3 inverted
VCA4: The output of VCA 4
VCA4-: The output of VCA 4 inverted
VCA5: The output of VCA 5
VCA5-: The output of VCA 5 inverted
VCA6: The output of VCA 6
VCA6-: The output of VCA 6 inverted
VCA7: The output of VCA 7
VCA7-: The output of VCA 7 inverted
VCA8: The output of VCA 8
VCA8-: The output of VCA 8 inverted
Rin1: The output Ring VCA 1
Rin1-: The output Ring VCA 1 inverted
Rin2: The output Ring VCA 2
Rin2-: The output Ring VCA 2 inverted
Rin3: The output Ring VCA 3
Rin3-: The output Ring VCA 3 inverted
Rin4: The output Ring VCA 4
Rin4-: The output Ring VCA 4 inverted
EFX1: The output of Effect 1
EFX1-: The output of Effect 1 inverted
EFX2: The output of Effect 2
EFX2-: The output of Effect 2 inverted
EFX3: The output of Effect 3
EFX3-: The output of Effect 3 inverted
EFX4: The output of Effect 4
EFX4-: The output of Effect 4 inverted

EFX5: The output of Effect 5
EFX5-: The output of Effect 5 inverted
EFX6: The output of Effect 6
EFX6-: The output of Effect 6 inverted
EFX7: The output of Effect 7
EFX7-: The output of Effect 7 inverted
EFX8: The output of Effect 8
EFX8-: The output of Effect 8 inverted
VCF1: The output of VCF 1
VCF1-/VCF3: The output of VCF 1 inverted, or the output of VCF3, when dual filters are installed
VCF2: The output of VCF 2
VCF2-/VCF4: The output of VCF 2 inverted, or the output of VCF4, when dual filters are installed
Env1: The output of ADSR Envelope 1
Env1-: The output of ADSR Envelope 1 inverted
Env2: The output of ADSR Envelope 2
Env2-: The output of ADSR Envelope 2 inverted
Env3: The output of ADSR Envelope 3
Env3-: The output of ADSR Envelope 3 inverted
Env4: The output of ADSR Envelope 4
Env4-: The output of ADSR Envelope 4 inverted
Env5: The output of ADSR Envelope 5
Env5-: The output of ADSR Envelope 5 inverted
Env6: The output of ADSR Envelope 6
Env6-: The output of ADSR Envelope 6 inverted
Env7: The output of ADSR Envelope 7
Env7-: The output of ADSR Envelope 7 inverted
Env8: The output of ADSR Envelope 8
Env8-: The output of ADSR Envelope 8 inverted
Dcy1: The output of Decay Envelope 1
Dcy1-: The output of Decay Envelope 1 inverted
Dcy2: The output of Decay Envelope 2
Dcy2-: The output of Decay Envelope 2 inverted
Dcy3: The output of Decay Envelope 3
Dcy3-: The output of Decay Envelope 3 inverted
Dcy4: The output of Decay Envelope 4
Dcy4-: The output of Decay Envelope 4 inverted
Dcy5: The output of Decay Envelope 5
Dcy5-: The output of Decay Envelope 5 inverted
Dcy6: The output of Decay Envelope 6
Dcy6-: The output of Decay Envelope 6 inverted

Dcy7: The output of Decay Envelope 7
Dcy7-: The output of Decay Envelope 7 inverted
Dcy8: The output of Decay Envelope 8
Dcy8-: The output of Decay Envelope 8 inverted
LFO1: The output of LFO 1
LFO1-: The output of LFO 1 inverted
LFO2: The output of LFO 2
LFO2-: The output of LFO 2 inverted
LFO3: The output of LFO 3
LFO3-: The output of LFO 3 inverted
LFO4: The output of LFO 4
LFO4-: The output of LFO 4 inverted
LFO5: The output of LFO 5
LFO5-: The output of LFO 5 inverted
LFO6: The output of LFO 6
LFO6-: The output of LFO 6 inverted
LFO7: The output of LFO 7
LFO7-: The output of LFO 7 inverted
LFO8: The output of LFO 8
LFO8-: The output of LFO 8 inverted
CV1: The CV input 1
CV1-: The CV input 1 inverted
CV2: The CV input 2
CV2-: The CV input 2 inverted
CV3: The CV input 3
CV3-: The CV input 3 inverted
CV4: The CV input 4
CV4-: The CV input 4 inverted
Bend: The last received MIDI pitch bend value
Bend-: The last received MIDI pitch bend value inverted
Seq1: The output of Sequencer Controller Track 1
Seq1-: The output of Sequencer Controller Track 1 inverted
Seq2: The output of Sequencer Controller Track 2
Seq2-: The output of Sequencer Controller Track 2 inverted
Seq3: The output of Sequencer Controller Track 3
Seq3-: The output of Sequencer Controller Track 3 inverted
Seq4: The output of Sequencer Controller Track 4
Seq4-: The output of Sequencer Controller Track 4 inverted
Seq5: The output of Sequencer Controller Track 5
Seq5-: The output of Sequencer Controller Track 5 inverted

Seq6: The output of Sequencer Controller Track 6
Seq6-: The output of Sequencer Controller Track 6 inverted
Seq7: The output of Sequencer Controller Track 7
Seq7-: The output of Sequencer Controller Track 7 inverted
Seq8: The output of Sequencer Controller Track 8
Seq8-: The output of Sequencer Controller Track 8 inverted
Seq9: The output of Sequencer Controller Track 9
Seq9-: The output of Sequencer Controller Track 9 inverted
Sq10: The output of Sequencer Controller Track 10
Sq10-: The output of Sequencer Controller Track 10 inverted
Sq11: The output of Sequencer Controller Track 11
Sq11-: The output of Sequencer Controller Track 11 inverted
Sq12: The output of Sequencer Controller Track 12
Sq12-: The output of Sequencer Controller Track 12 inverted
Sq13: The output of Sequencer Controller Track 13
Sq13-: The output of Sequencer Controller Track 13 inverted
Sq14: The output of Sequencer Controller Track 14
Sq14-: The output of Sequencer Controller Track 14 inverted
Sq15: The output of Sequencer Controller Track 15
Sq15-: The output of Sequencer Controller Track 15 inverted
Sq16: The output of Sequencer Controller Track 16
Sq16-: The output of Sequencer Controller Track 16 inverted
Kn1: The value of Edit Knob 1, when Qedit in COM2 is off
Kn1-: The inverted value of Edit Knob 1, when Qedit in COM2 is off
Kn2: The value of Edit Knob 2, when Qedit in COM2 is off
Kn2-: The inverted value of Edit Knob 2, when Qedit in COM2 is off
Kn3: The value of Edit Knob 3, when Qedit in COM2 is off
Kn3-: The inverted value of Edit Knob 3, when Qedit in COM2 is off
Kn4: The value of Edit Knob 4, when Qedit in COM2 is off
Kn4-: The inverted value of Edit Knob 4, when Qedit in COM2 is off
Kn5: The value of Edit Knob 5, when Qedit in COM2 is off
Kn5-: The inverted value of Edit Knob 5, when Qedit in COM2 is off
Kn6: The value of Edit Knob 6, when Qedit in COM2 is off
Kn6-: The inverted value of Edit Knob 6, when Qedit in COM2 is off
Kn7: The value of Edit Knob 7, when Qedit in COM2 is off
Kn7-: The inverted value of Edit Knob 7, when Qedit in COM2 is off
Kn8: The value of Edit Knob 8, when Qedit in COM2 is off
Kn8-: The inverted value of Edit Knob 8, when Qedit in COM2 is off
Rnd1: The output of Random Generator 1
Rnd1-: The output of Random Generator 1 inverted

Rnd2: The output of Random Generator 2

Rnd2-: The output of Random Generator 2 inverted

Rnd3: The output of Random Generator 3

Rnd3-: The output of Random Generator 3 inverted

Rnd4: The output of Random Generator 4

Rnd4-: The output of Random Generator 4 inverted

Rnd5: The output of Random Generator 5

Rnd5-: The output of Random Generator 5 inverted

Kyb1: The last received Part 1 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Kyb1-: The last received Part 1 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Kyb2: The last received Part 2 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Kyb2-: The last received Part 2 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Kyb3: The last received Part 3 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Kyb3-: The last received Part 3 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Kyb4: The last received Part 4 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Kyb4-: The last received Part 4 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Kyb5: The last received Part 5 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Kyb5-: The last received Part 5 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Kyb6: The last received Part 6 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Kyb6-: The last received Part 6 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Kyb7: The last received Part 7 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Kyb7-: The last received Part 7 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Kyb8: The last received Part 8 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Kyb8-: The last received Part 8 Note value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Vel1: The last received Part 1 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Vel1-: The last received Part 1 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Vel2: The last received Part 2 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Vel2-: The last received Part 2 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Vel3: The last received Part 3 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Vel3-: The last received Part 3 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Vel4: The last received Part 4 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Vel4-: The last received Part 4 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Vel5: The last received Part 5 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Vel5-: The last received Part 5 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Vel6: The last received Part 6 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Vel6-: The last received Part 6 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Vel7: The last received Part 7 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Vel7-: The last received Part 7 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Vel8: The last received Part 8 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons)

Vel8-: The last received Part 8 Velocity value (via MIDI, touch screen keyboard, Sequencer, Trigger buttons) inverted

Trg1: Part 1 Trigger. Every time this part is gated, this value is at maximum

Trg1-: Part 1 Trigger inverted. Every time this part is gated, this value is at zero

Trg2: Part 2 Trigger. Every time this part is gated, this value is at maximum

Trg2-: Part 2 Trigger inverted. Every time this part is gated, this value is at zero

Trg3: Part 3 Trigger. Every time this part is gated, this value is at maximum

Trg3-: Part 3 Trigger inverted. Every time this part is gated, this value is at zero

Trg4: Part 4 Trigger. Every time this part is gated, this value is at maximum

Trg4-: Part 4 Trigger inverted. Every time this part is gated, this value is at zero

Trg5: Part 5 Trigger. Every time this part is gated, this value is at maximum

Trg5-: Part 5 Trigger inverted. Every time this part is gated, this value is at zero

Trg6: Part 6 Trigger. Every time this part is gated, this value is at maximum

Trg6-: Part 6 Trigger inverted. Every time this part is gated, this value is at zero


Trg7: Part 7 Trigger. Every time this part is gated, this value is at maximum

Trg7-: Part 7 Trigger inverted. Every time this part is gated, this value is at zero

Trg8: Part 8 Trigger. Every time this part is gated, this value is at maximum

Trg8-: Part 8 Trigger inverted. Every time this part is gated, this value is at zero

Connect Modules Manually

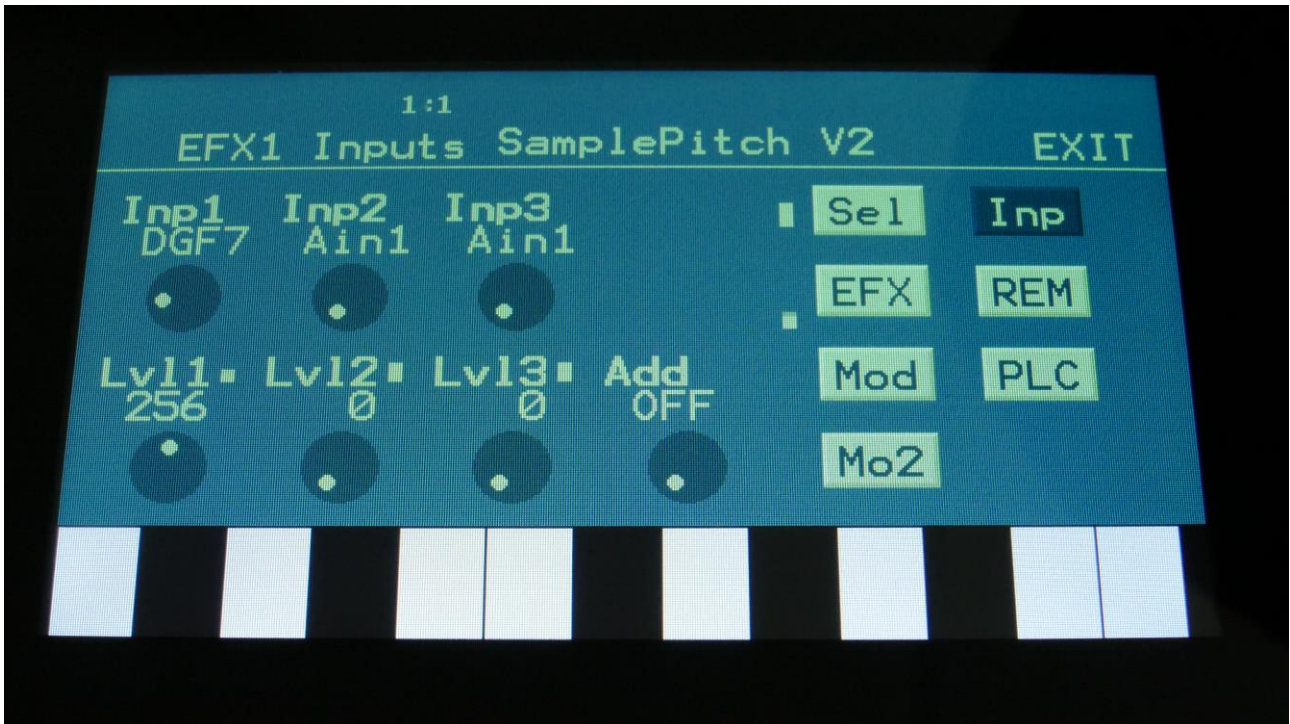


The "manual" way, is to go to a modules audio or modulation input pages, select the audio/modulation source, using Edit Knob 1 to 4, and adjust the amount/level, using Edit knob 5 to 8. Only positive sources can be selected this way. On modulation pages, you can touch the source select parameter, to change the source to negative.

Group Select

To make it easier to select sources manually, it is also possible to select these by group. Push and hold the **Func/Mute** button, and turn the source select parameter. Now it will jump through the source groups (OSC, VCF, LFO etc...). After you have turned the knob, you can release the **Func/Mute** button again, and select the modulation sources group for all 4 parameters on a page. Urano will stay in this mode, until a specific modulation source is selected, or until another edit page is selected.


To select a specific source, within the selected group, simply push and hold the **Steps/Part** button, while turning one of the modulation source select parameters. Again, you can release the **Steps/Part** button, as soon as you have turned one of the parameters, and select the modulation source for each parameter. Urano will stay in this mode, until you go back to select a group, or until another edit page is selected.

Connect Modules Via The Module Overview Page

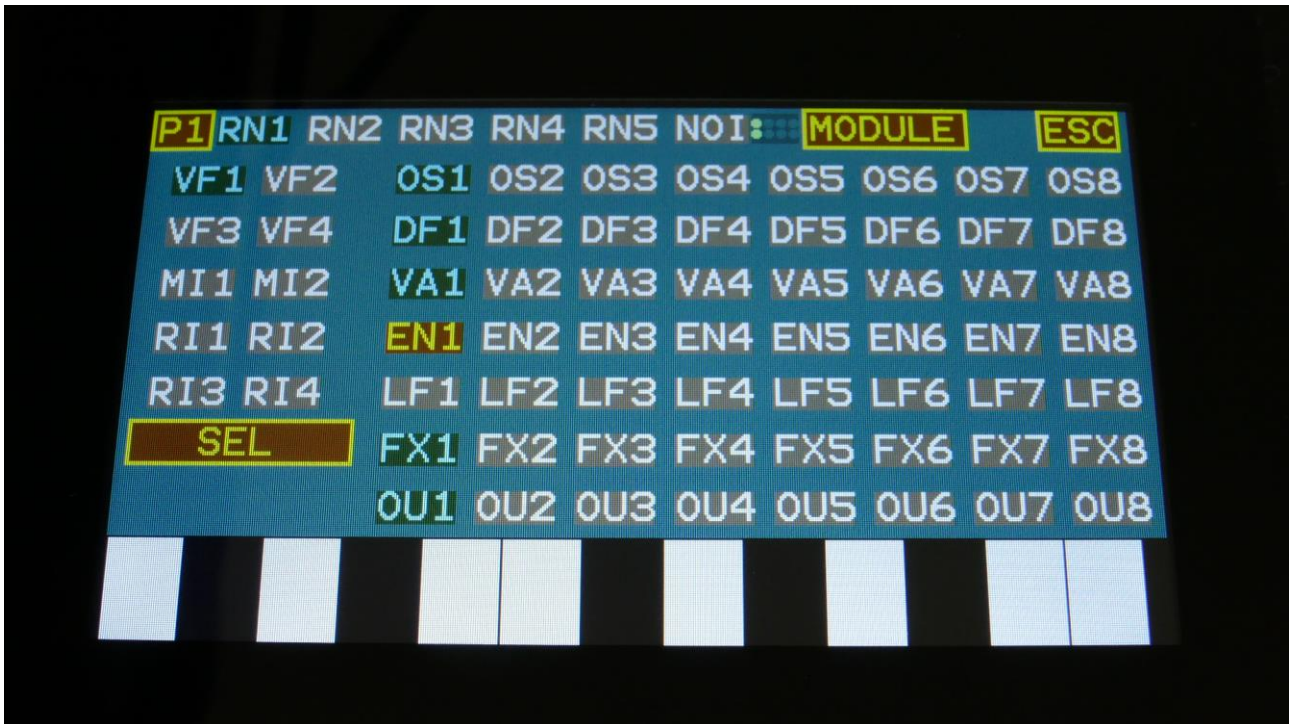


To connect modules on the overview page, first touch the module, for which you want to connect the inputs. Then touch the large SEL button. The SEL button will toggle between SEL (select module), MO1 (modulation page 1), MO2 (modulation page 2) and INP (audio inputs), every time you touch it.



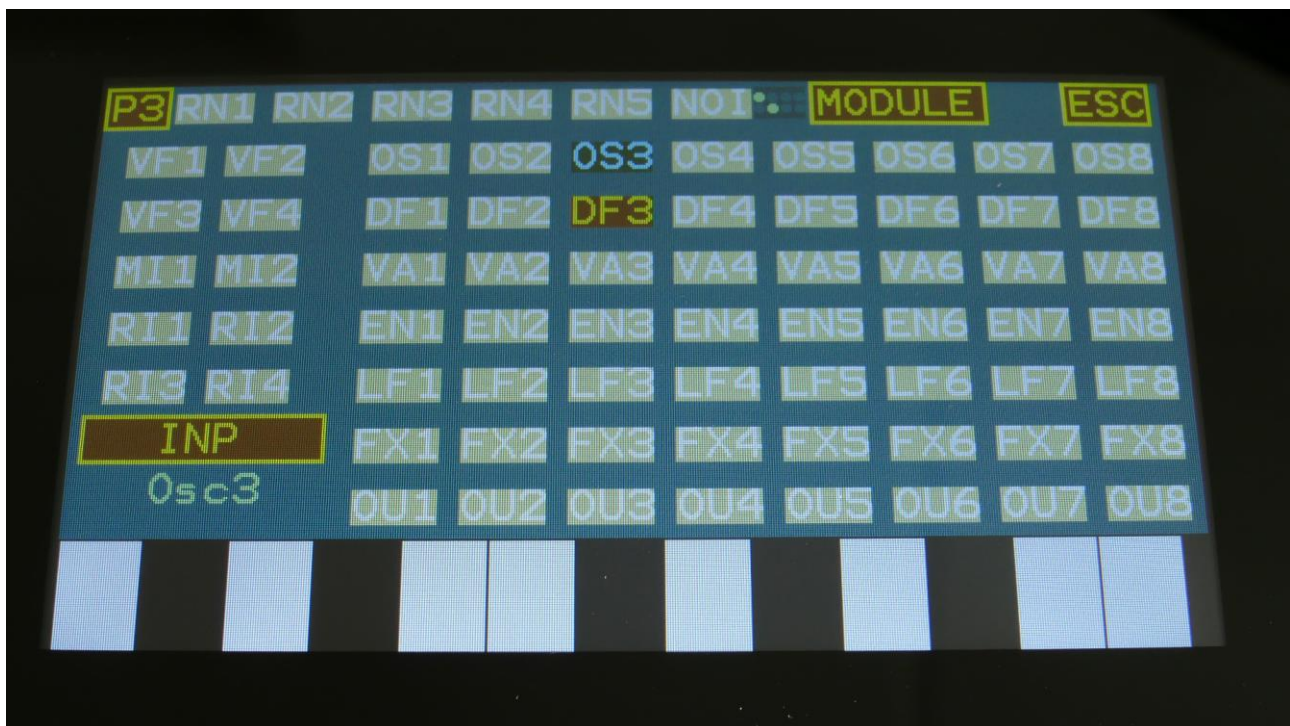


On these pages, the selected module (the module which inputs you are currently connecting), is indicated as a brown box with yellow text. The module(s) that are connected to the selected modules inputs, are indicated as dark blue boxes with light blue text. If the selected module is not included in the currently selected part, the text will be white instead of yellow. When you now touch another module, this will be connected to modulation/audio input 1 of the selected module page, and if its color was light grey before, it will now turn blue, to indicate that it is connected. If you would like to connect the other inputs, simply turn the Edit Knob, which corresponds to that input (either the input select or the level/amount knob), and touch the module, which you would like to connect. Use Edit Knob 5-8 to adjust the amounts/levels. If you are unsure about, which parameter does what (this might take some time to learn), you can touch the MODULE button at any time, to jump to the actual module page.

Connect Modules Automatically

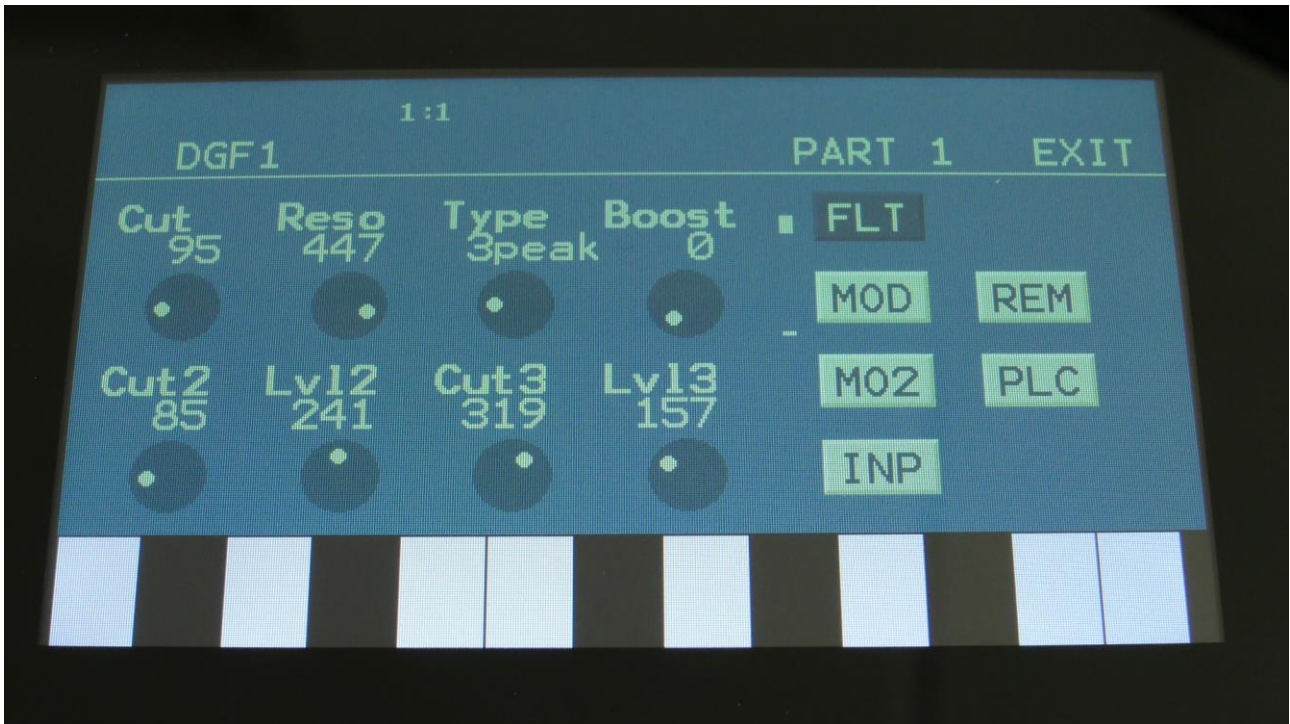

It is possible to automatically remove a module from and insert a module to an audio chain. This is only possible with modules, that have both audio inputs and outputs: DGF, VCF, VCA and EFX. To remove a module from an audio chain, select the module and jump to the module page. Touch the REM (remove) button. Urano will ask "Remove Module From Part?", and you can reply yes or no as desired. If you touched yes, Urano will now disconnect the selected module, and connect the module that was placed before this in the audio chain, to the module that was connected after the selected module.

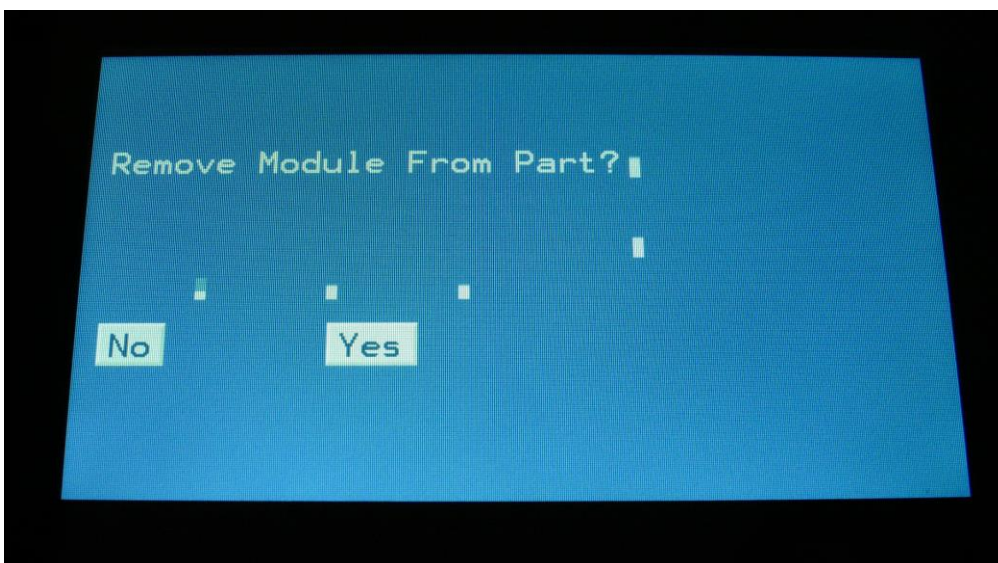

P1 PLACE MODULE AFTER? : **MODULE** **ESC**

VF1	VF2	OS1	OS2	OS3	OS4	OS5	OS6	OS7	OS8
VF3	VF4	DF1	DF2	DF3	DF4	DF5	DF6	DF7	DF8
MI1	MI2	VA1	VA2	VA3	VA4	VA5	VA6	VA7	VA8
RI1	RI2	EN1	EN2	EN3	EN4	EN5	EN6	EN7	EN8
RI3	RI4	LF1	LF2	LF3	LF4	LF5	LF6	LF7	LF8
SEL		FX1	FX2	FX3	FX4	FX5	FX6	FX7	FX8
		OU1	OU2	OU3	OU4	OU5	OU6	OU7	OU8

Sequencer

The Urano built in sequencer has 8 note tracks and 16 controller tracks. The note tracks are hard wired to the corresponding 8 parts. The controller tracks can be assigned as modulation and audio sources. Sequencer tracks can be recorded in real time, step time and in a TR way.

Each note track has a note number subtrack, a gate time subtrack, a velocity subtrack, a position subtrack, a sub-position subtrack and a step on/off subtrack. Note number, gate time, delay time, swing, velocity, position and repeats can be modulated. Swing can also be added to all 16 note tracks at the same time, by the "Swing All" function. All 8 note tracks can either control an internal part, or an external MIDI device. Each note track can be up to 64 steps long, and the resolution can be set from 1/64 to 1/2. Each step of a note track, can play back at any position of the sequence, allowing polyphonic step sequencing. A Repeats parameter has also been added, to repeat a note step up to 3 times.

A scale can be added on the output of a note track. This can be a harmonic scale, or a scale that swaps the keys of an octave, or a scale that swaps the black and the white keys.

Each controller track outputs their value to the audio/modulation sources bus and, if selected, to MIDI out (CC's and PitchBend). They can be up to 128 steps long, and resolution can be set from 1/64 to 1/2. A smooth parameter are available, that when on, will make a controller track slide from one step to the next. Smooth can be set for each step separately.

Templates are available, like ramp up, ramp down and randomize. The percentage of how much the template should affect the track is settable.

The position track has special templates for forwards, backwards, alternating, random, 2 note and 4 note sequences.

All tracks has separate last step, start step and resolution settings, so even polyrhythmic sequences are possible.


The tempo of the sequencer can be set between 51 and 306 BPM. It can sync to MIDI clock, and it is both possible to transmit and re-send MIDI clock to MIDI out.

Inputting of note number values can be done in analog/TR fashion, via the step buttons, via the touch screen, and it can be done by real time recording, either monophonic or polyphonic, and by step recording, either monophonic or polyphonic. To assist the real time recording, a metronome is present.

Inputting of controller track values can only be done via the touch screen, by real time or step recording.

It is possible to mute and edit each track separately.

Starting and stopping the Sequencer:

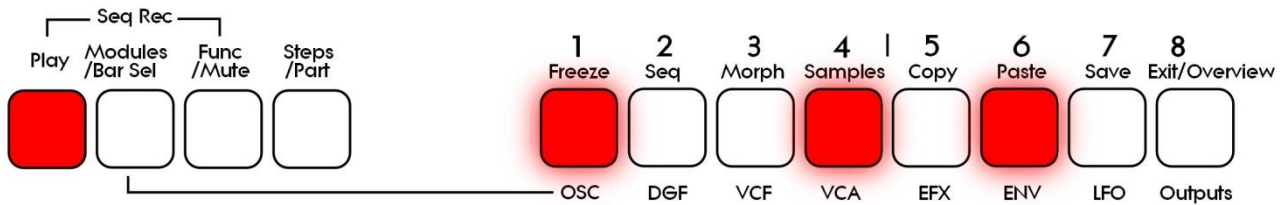

To start the sequencer playback, push and release the Play button, so that it lights up.

The sequencer will now start to play back. When the Modules/Bar Sel, the Func/Mute and the Steps/part buttons are not lighting up, every time a part is triggered to play back, the corresponding step button will light up shortly.

The sequencer playback will either start from the selected start steps of each track (CONT button light blue), or it will continue to play back from the point, where it was stopped (CONT button dark blue).


The CONT touch button can be found on the Seq Main/Last Step page.



To stop the sequencer, simply hit the Play button again, so that it is no longer lighting up.

If you hit the play button to start the sequencer, and it doesn't start, please check in the "MOR>COMMON" section (described later in this manual), that it is not set up to external MIDI sync.

Selecting a track:

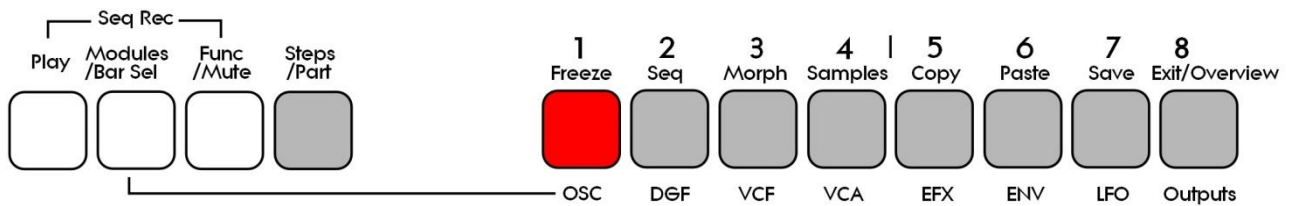

Push and hold the Steps/Part button.

The selected track number will now be shown, by one of the 8 step buttons lightning up. The number above the step button, is the track number that is currently selected.


To select another track, while still holding down the Steps/Part button, push any of the 8 step buttons.

The selected track, is the track which parameters will be shown on the display, when entering the edit pages.

When entering the Sequencer Controller tracks 9 to 16, 1 will equal 9, 2 will equal 10, and so on.

Note tracks are selected together with the part, while Controller tracks are selected separately.

Sequencer Note Track Steps view/edit:

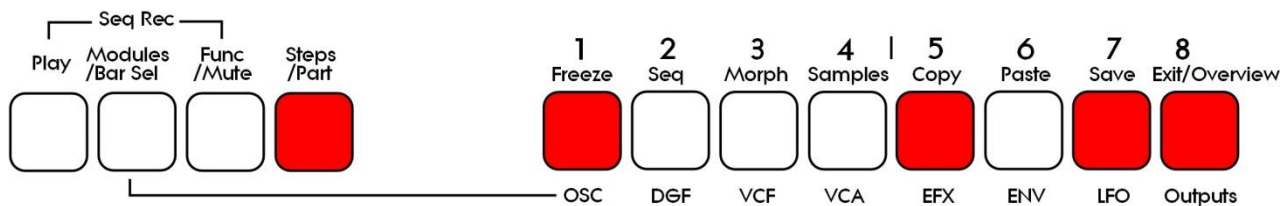

First, select the track, for which you would like to view/edit the note steps, as described on the previous page of this manual. You can, of course, select another part at any time, also after you have entered note step edit mode.

To enter note step edit mode, push and release the Steps/Part button. This should now light up. Any note sequencer steps that are switched on to play back, on the first half bar of the selected note track, will now also light up on the 8 step buttons.

If the sequencer is running, the light state of each step button will be reversed, when a step is playing back.


To switch a step on or off, simply hit the corresponding step button, as it will toggle its state.

When the sequencer is in recording mode (the Start/Stop button is flashing), pushing any of the step buttons, will set record mode to step mode, and select this step for recording. The step button will now flash.

When using the Urano sequencer as a usual step sequencer, the steps will play back from left to right. In this case, step 1 plays back at position 1, step 2 plays back at position 2 and so on. On the Urano sequencer, it is though possible to break this pattern, and make each step play back on any position, using the position subtrack. It is even possible to make more steps playing back at the same position, for polyphonic step sequencing. But more on that in the final manual...

Only 8 steps (one half bar) are shown at a time. The note tracks of Urano has 64 steps. Please read on, to experience how to switch between half bars (step 1-8, 9-16, 17-24 and so on...).

Selecting a Note Track Half Bar and/or a controller track bar, to be viewed/edited:

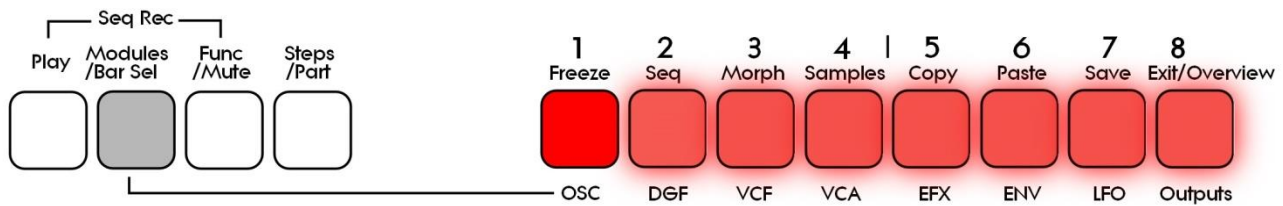

Note tracks: When you are located on any other pages, than the sequencer controller tracks pages, a half bar is selected to be viewed for a note track. The selected half bar, is the half bar that is shown on the step buttons, and one half of the bar shown on the note track pages.


Push and hold the Modules/Bar Sel button. The step button that indicates the selected half bar will now light up, while the other 7 step buttons will be flashing. Now push a step button, to select the desired half bar. Step button 1 will select the first half bar of bar one, step button 2 will select the second half bar of bar one, step button 3 will select the first half bar of bar 2 and so on...

Controller tracks: When you are located on any of the sequencer controller track pages, a bar can be selected to be viewed for the currently selected controller track. The selected bar, is the bar that is shown on the controller track pages.

While the note tracks have up to 64 steps divided into 4 bars, the controller tracks has up to 128 steps, divided into 8 bars. Each of these 8 bars can be selected, using the 8 step buttons.

Push and hold the Modules/Bar Sel button. The step button that indicates the selected bar will now light up, while the other 7 step buttons will be flashing. Now push a step button, to select the desired bar. Step button 1 will select bar 1, step button 2 will select bar 2, step button 3 will select bar 3 and so on...

Mute/Unmute Note Tracks, Start/Stop Seq/Song Recording:

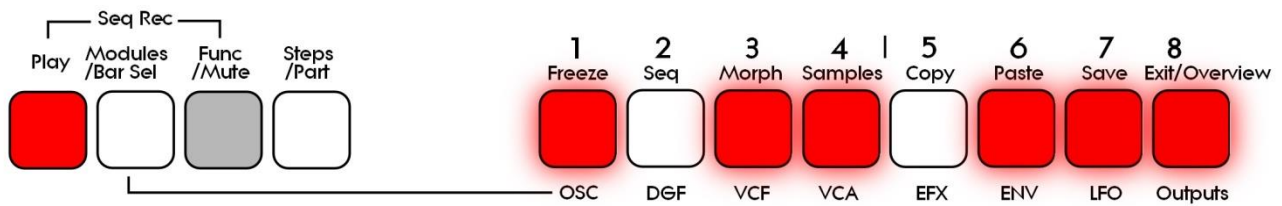

To mute, unmute or view the mute state of the 8 note tracks, push and hold the Func/Mute button.

Unmuted tracks will now be shown by a step button that is lighting up, and shortly flashes off, every time the track is triggering.

Muted tracks are shown by a step button that is unlit, and that lights up shortly, every time the track would have triggered something, if it weren't muted.

To mute or unmute a track, simply hit the corresponding step button, while still holding down the Func/Mute button.

Toggling Sequencer Record On/Off


By pushing and holding the Func/Mute button, and then pushing the Play button, when the sequencer is not in Song mode, Sequencer realtime recording mode will be toggled on or off. When the sequencer is in recording mode, the Play button will flash.

When the sequencer are in Song mode, this button combination will toggle Song realtime recording on or off.

Entering the Sequencer




From the Preset Select Page, touch the EDIT field.

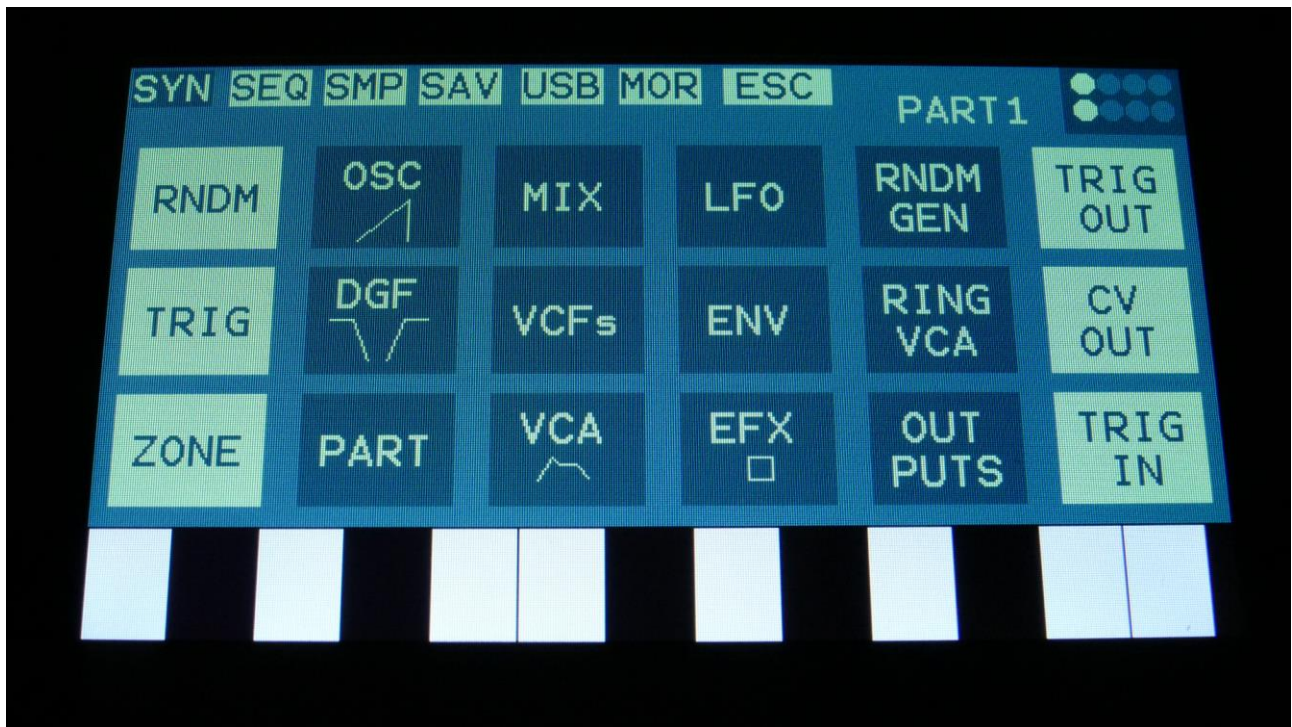

Touch SEQ on the navigation bar in the top of the screen.

This will bring you to the:

Sequencer Start Page

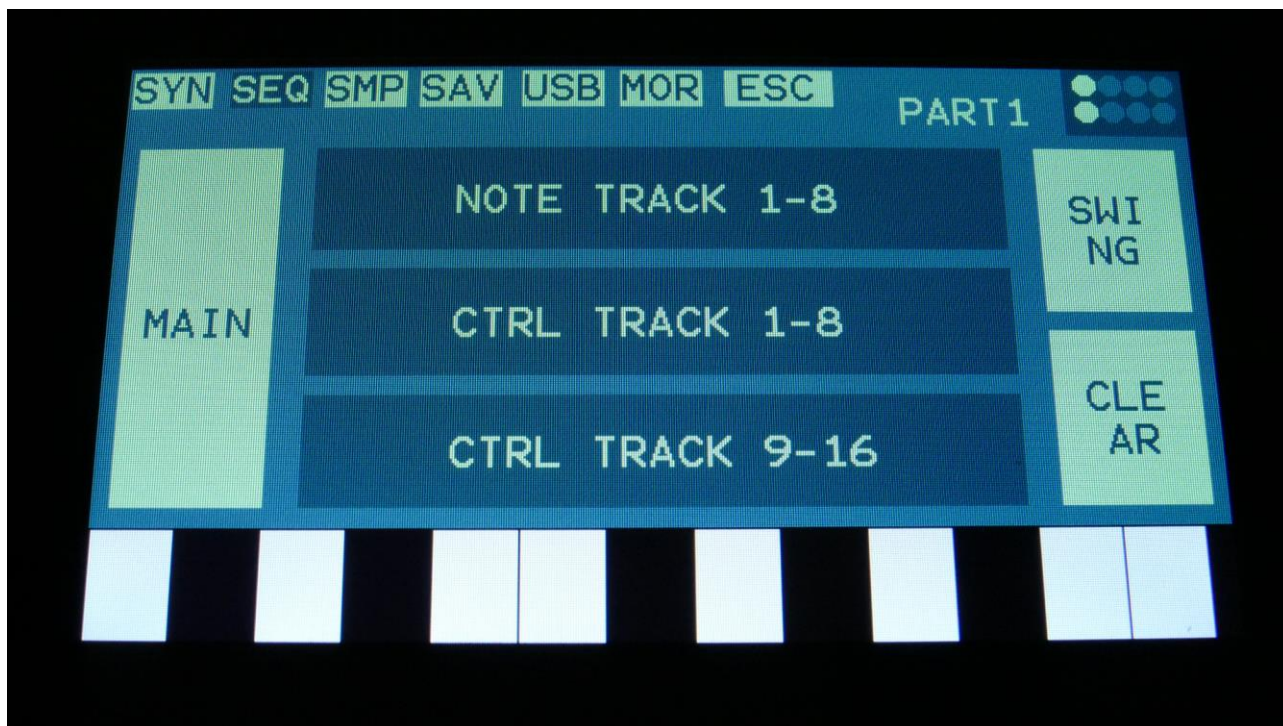

SEQ on the navigation bar has now changed its color to blue, indicating that you have entered the Sequencer pages.

From here you can jump to the Sequencer Main page, the note track and controller track edit pages and the Swing All page. It is also possible to clear the whole sequence from here.

To exit to the Preset Select page, touch "ESC".


Sequencer Main Page

The sequencer main page can be accessed by touching the MAIN field, from the sequencer start page, but it can also be accessed by touching the L.STEP/BPM field on the Preset Select page.



And, of course, it can be accessed by pushing the Seq function button.

On the sequencer Main page, it is possible to set the sequencer tempo, set the record mode to mono or poly (poly is only useful, when controlling external MIDI gear), switch the metronome on/off, set the track length, and set the step skip effect. Here it is also possible to double and clear the selected track.

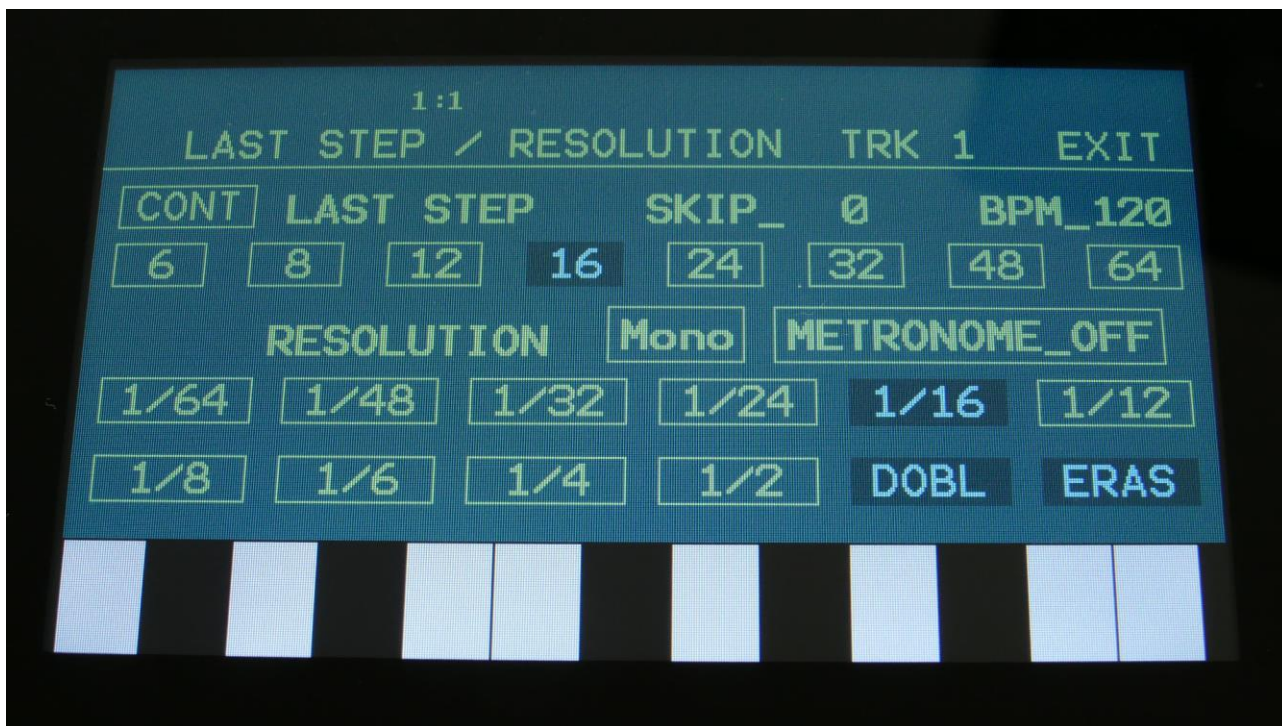

Setting the tempo: Turn Edit Knob 4 to set the tempo for the current sequence. The tempo is shown in BPM's (beats per minute) in the upper right corner of this page, and can be set between 51 and 306 BPM's.

Skip Effect: Turning up Edit Knob 3 will adjust the Skip parameter. This will cause the sequencer to randomly skip some beats here and there. The more it is turned up, the more it will skip. This affects all sequencer tracks at the same time.

Setting the Last Step of the currently selected note track

Simply touch one of the number fields right below the LAST STEP text, in this case, numbered 6, 8, 12 and so on. This will immediately set the last step on the currently selected note track.

Setting another Last Step, than the displayed ones

Turn **Edit Knob 1**. This will set the first number field to a value between 1 and 64. When you have this set to the desired value, simply touch this field, to immediately change the last step.

Setting the resolution for the currently selected note track

Simply touch one of the fields right below the RESOLUTION text, named 1/64, 1/48, 1/32 and so on. This will immediately change the resolution of the currently selected note track.

Turning the Metronome on and off

Touch the field named METRONOME_OFF. It will now turn blue, and change its text to METRONOME_On. If you touch it one more time, it will say METRONOME_Rec, and the metronome will be on, every time the sequencer is in record mode. Touch it one more time, to switch the metronome off.



Setting the Sequencer Recording Mode


By touching the field named Mono, it is possible to switch the sequencer recording mode between Mono (monophonic) and Poly (polyphonic). Since the internal parts of Urano are all monophonic, it will only make sense to set a track in polyphonic mode, when controlling external MIDI gear.

Double Note Track

Touch the "DOBL" touch button, to double the length of the track. All events from the original track, is copied to the new half. Useful if you need some extra variation in a track.

PLEASE NOTE: The track lengths cannot exceed 64 steps for the note tracks.

Sequencer Reset/Continue

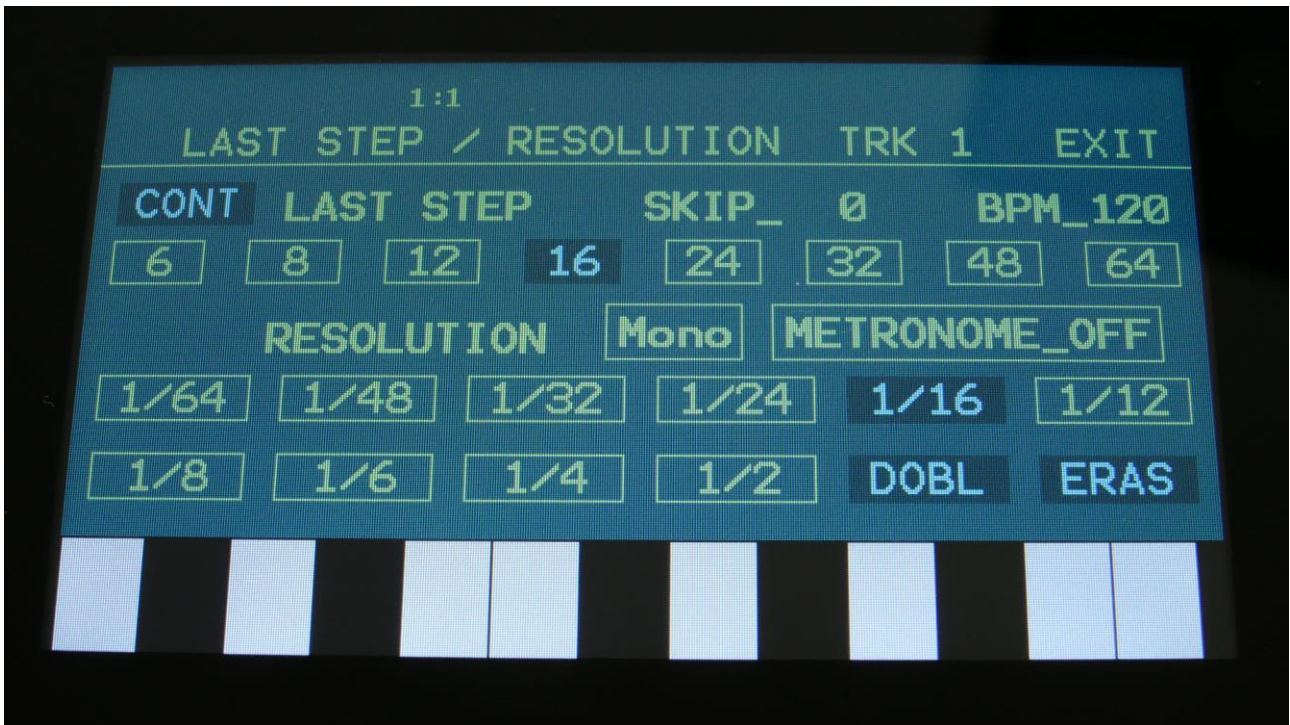


When the CONT touch button is de-activated (light blue), the sequencer will start playing back from step 1, every time you hit the Play button.

When the CONT button is activated, the sequencer will continue playback, from the point where it was stopped.

Clear Note Track

Touch the “ERAS” touch button, to enter this page:

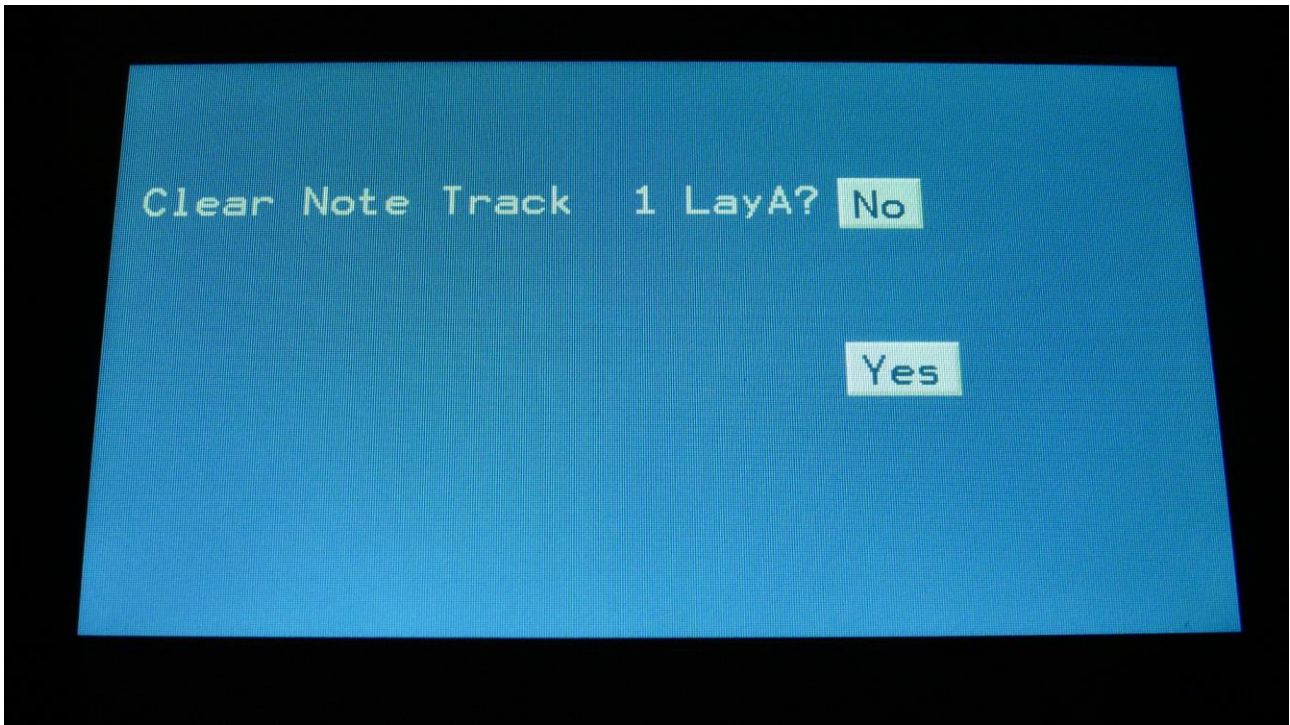

Touching “Yes” from here, will initialize all step values and parameters on the selected Morph Layer of the currently selected note track, except for the Last Step parameter. Select the Morph Layer with the Morph function button.

If you would not wish to do this, touch “No”, to exit back to the Seq Main page.

Note Tracks


Each note track can be up to 64 steps long, and resolution can be set from 1/64 to 1/2. Steps that are on, are indicated by dark blue bars, steps that are off, are indicated by crème white bars. The note numbers and other values can be recorded in real and step time, and adjusted by the Edit Knobs, and directly by touching the screen. The note tracks are divided into subtracks: Note number, gate time, velocity, position and sub position. Each note track has a note randomizer, on which you, via a random probability parameter, can set the probability for, how high the chance is, that each note will play back or not. The probability parameter can be controlled by a controller track, for probability per step. A random time parameter is also available.

A new Rept (Repeats) parameter has been added to the note track. Turning this up will add 1, 2 or 3 extra notes between 2 steps.

Note value, gate time, note time delay, swing, position, position rotation and repeats can be modulated. Templates can be used, for faster setting of the values.

Note Subtrack

From the sequencer access page, touch NOTE TRACK 1-8, to enter the note steps edit page.

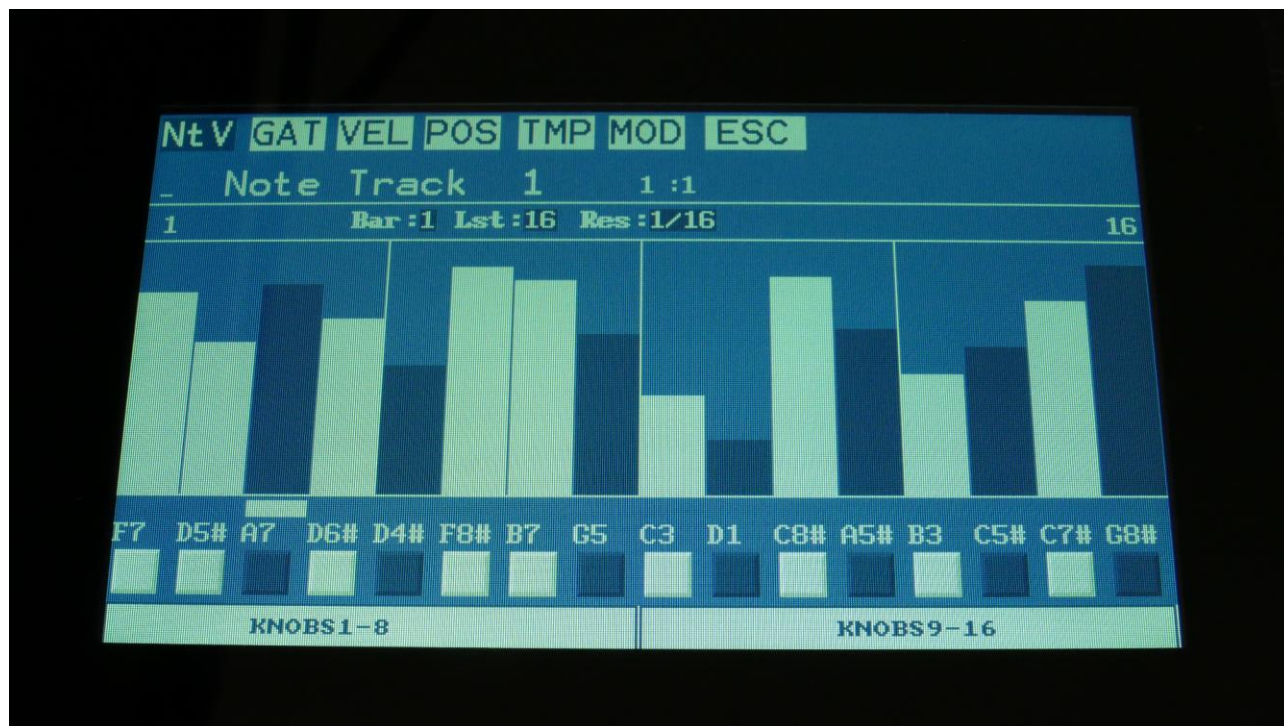

At most of this screen, you will see the note value bars. You can touch these, to change the note values. Right above these, to the left and to the right, the first and last step numbers, of the steps that are currently shown by the note value bars, are indicated. Between these numbers, a few settable parameters are shown.

In the top left side, a small VU-meter is shown, that will indicate every time a note is played back.

Here, when neither KNOBS1-8 or KNOBS9-16 is dark blue:

Edit Knob 1: Has no function.

Edit Knob 2: Selects the bar to be viewed. 4 bars can be viewed, each showing 16 steps, for a total of 64 steps. The bar number is shown just above the note grid (marked **Bar**), and the first and the last step number viewed, is shown just above the note grid, to the right and the left.

Edit Knob 3: Sets the last step that will be played back on this track, before it loops back, and plays the track again. Range: 1 to 64 steps. Value is shown as **Lst**.


Edit Knob 4: Sets the track resolution. Values: 1/64, 1/48, 1/32, 1/24, 1/16, 1/12, 1/8, 1/6, 1/4, 1/2. Value is shown as **Res.**

The note values for each step are shown right below the note value bars. Steps can be switched on (dark blue) and off (white), by touching the 16 boxes right below the values, or via the step buttons.

Note values for each step can be changed, simply by touching the note value bars.

Values can also be changed, using edit knob 1 to 8. In the bottom of the page, touch the field named “Knobs 1-8”, to edit the first 8 steps, using the edit knobs, or touch the field named “Knobs 9-16”, to edit the last 8 steps, using edit knob 1 to 8.

The fields will turn dark blue, when they are active. Every time they are touched, they will toggle between active > All > Off. The All functionality is explained on the next page.

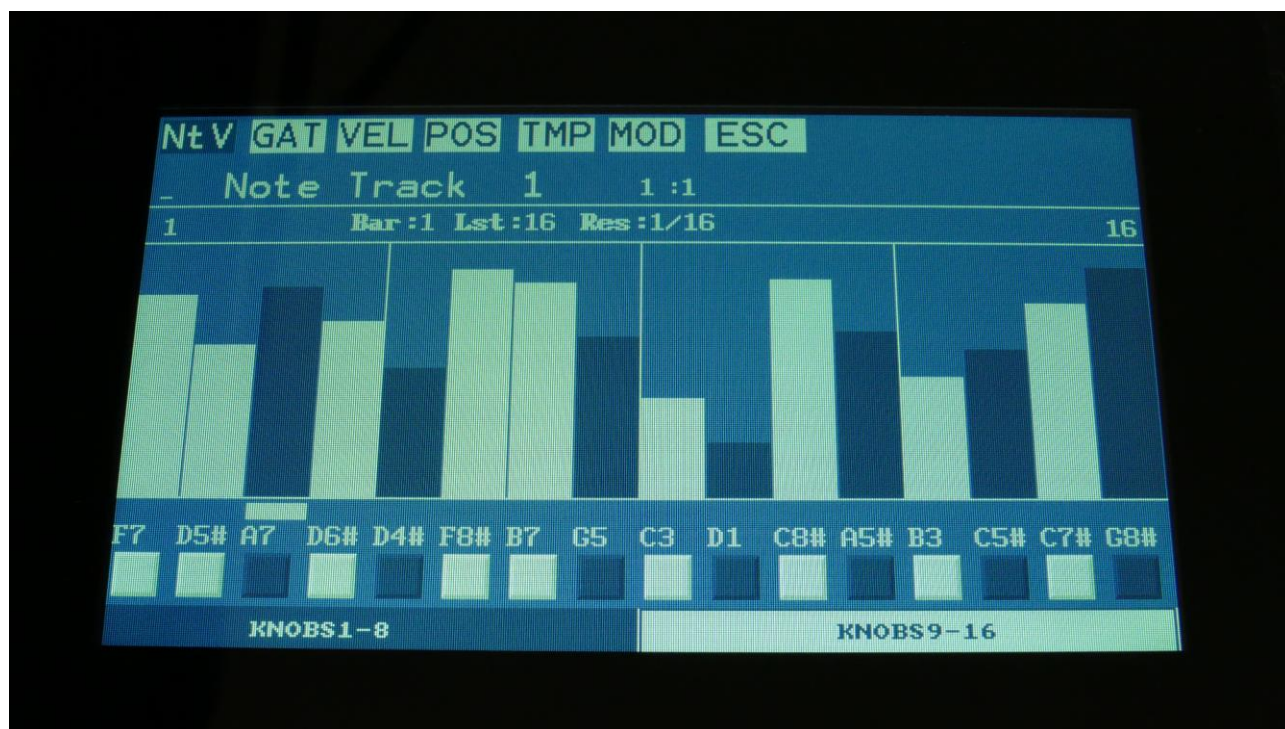


Adjusting the offset of all steps

This can be done on any subtrack, except for the sub position track.



When you have selected a group of step, to be edited using the Edit Knobs, touch the active knob select bar one more time, and it will switch to "All".

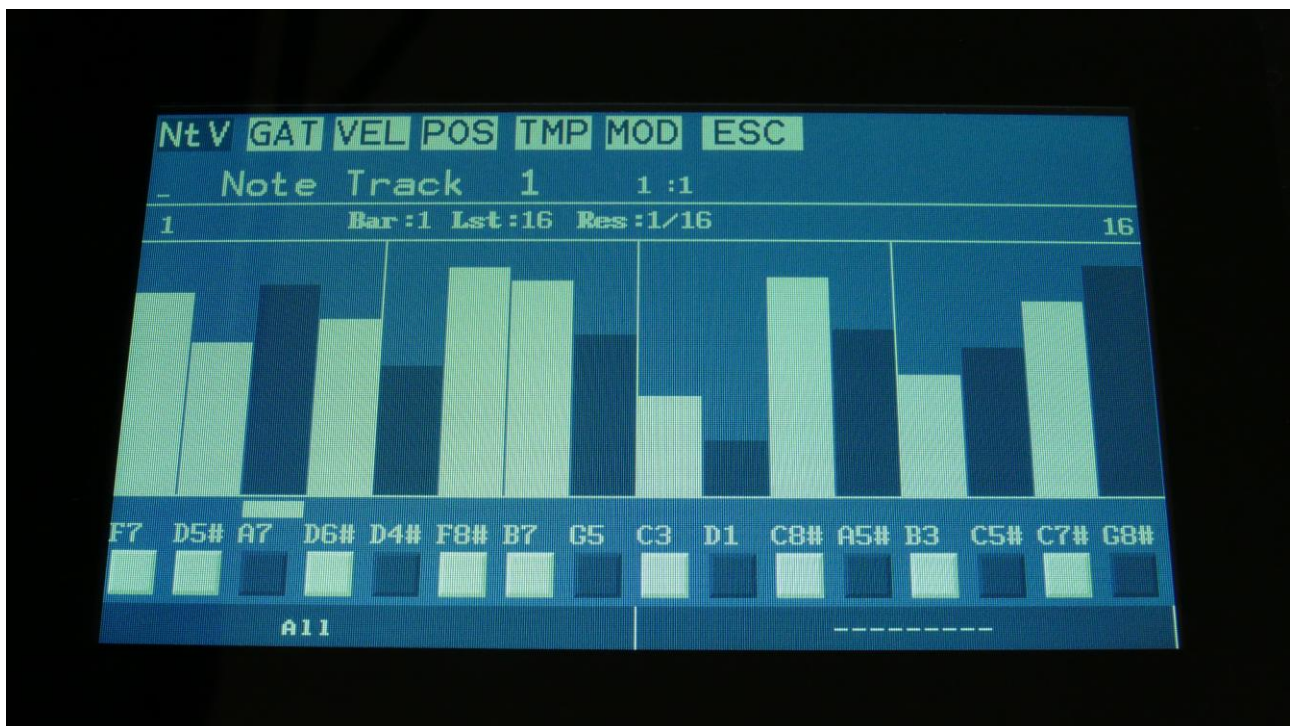

You can now, by turning Edit Knob 1, adjust the offset of all steps at the same time. Middle position of Edit Knob 1 is zero, above middle will turn the offset up, below middle will turn the offset down.

SPECIAL NOTE FOR THE POSITION SUB TRACK:


When adjusting the offset of the step positions on the position sub track, the positions will “roll over” around the selected last step. This means, that if you are turning the offset up, the last steps before the last step, will now be placed on the first steps of the track. Likewise, if you turn the offset down, the first steps of the track, will now be placed on the last steps of the track.

SPECIAL NOTE FOR THE SUB-POSITION SUB TRACK:

Offsets can’t be adjusted on this. If “All” is selected on the sub-position track, the offset of the position track will be adjusted, without any visualizing.

Gate Time Subtrack

Touch GAT in the top navigation bar, to enter the gate time steps page.

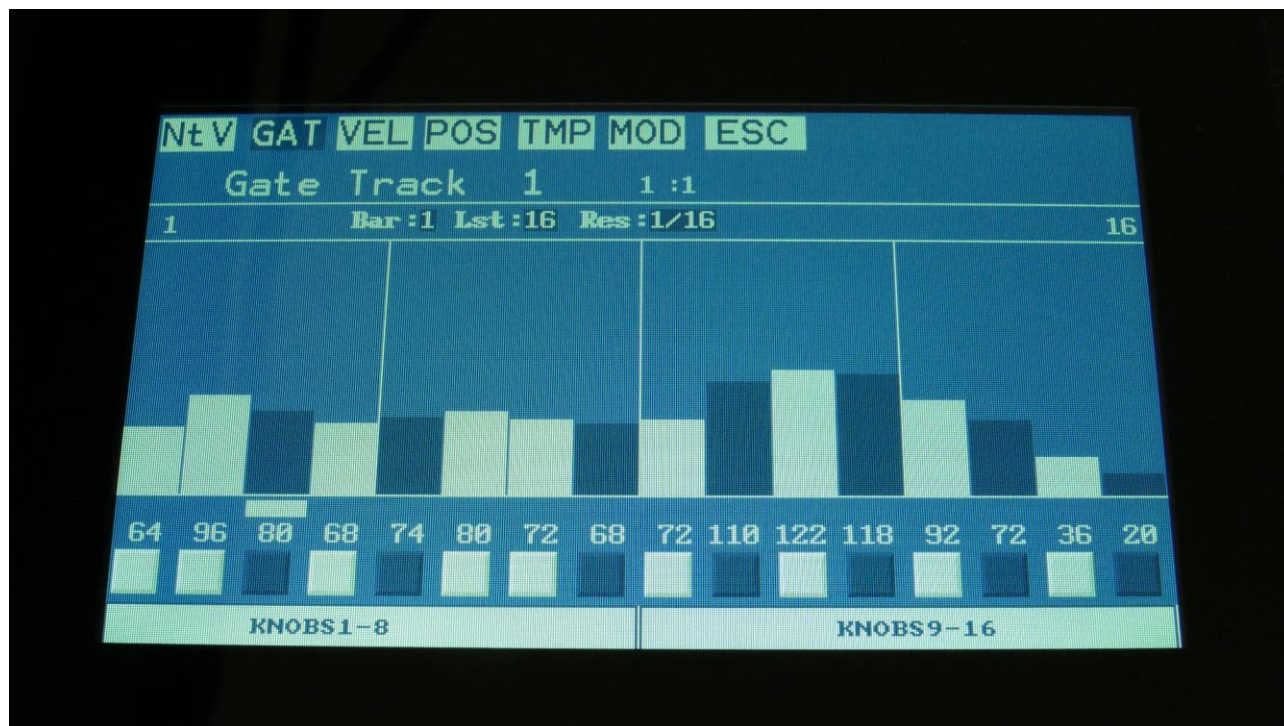

The gate time values for each step is shown as bars in the value grid, and as number right below the value grid. Steps can be switched on (dark blue) and off (white), by touching the 16 boxes right below the values, or via the step buttons.

Gate time values for each step can be changed, simply by touching the value grid.

Values can also be changed, using edit knob 1 to 8. In the bottom of the page, touch the field named "Knobs 1-8", to edit the first 8 steps, using the edit knobs, or touch the field named "Knobs 9-16", to edit the last 8 steps, using edit knob 1 to 8.

When neither KNOBS1-8 or KNOBS9-16 are dark blue:

Edit Knob 1: Has no function.

Edit Knob 2: Selects the bar to be viewed. 4 bars can be viewed, showing each 16 steps, for a total of 64 steps. The bar number is shown just above the note grid (marked **Bar**), and the first and the last step number viewed, is shown just above the note grid, to the right and the left.


Edit Knob 3: Sets the last step that will be played back on this track, before it loops back, and plays the track again. Range: 1 to 64 steps. Value is shown as **Lst**.

Edit Knob 4: Sets the track resolution. Values: $1/64$, $1/48$, $1/32$, $1/24$, $1/16$, $1/12$, $1/8$, $1/6$, $1/4$, $1/2$. Value is shown as **Res**.

Touching “ESC” will exit you to the Sequencer access page.

Velocity Subtrack

Touch VEL in the top navigation bar, to enter the velocity steps page.

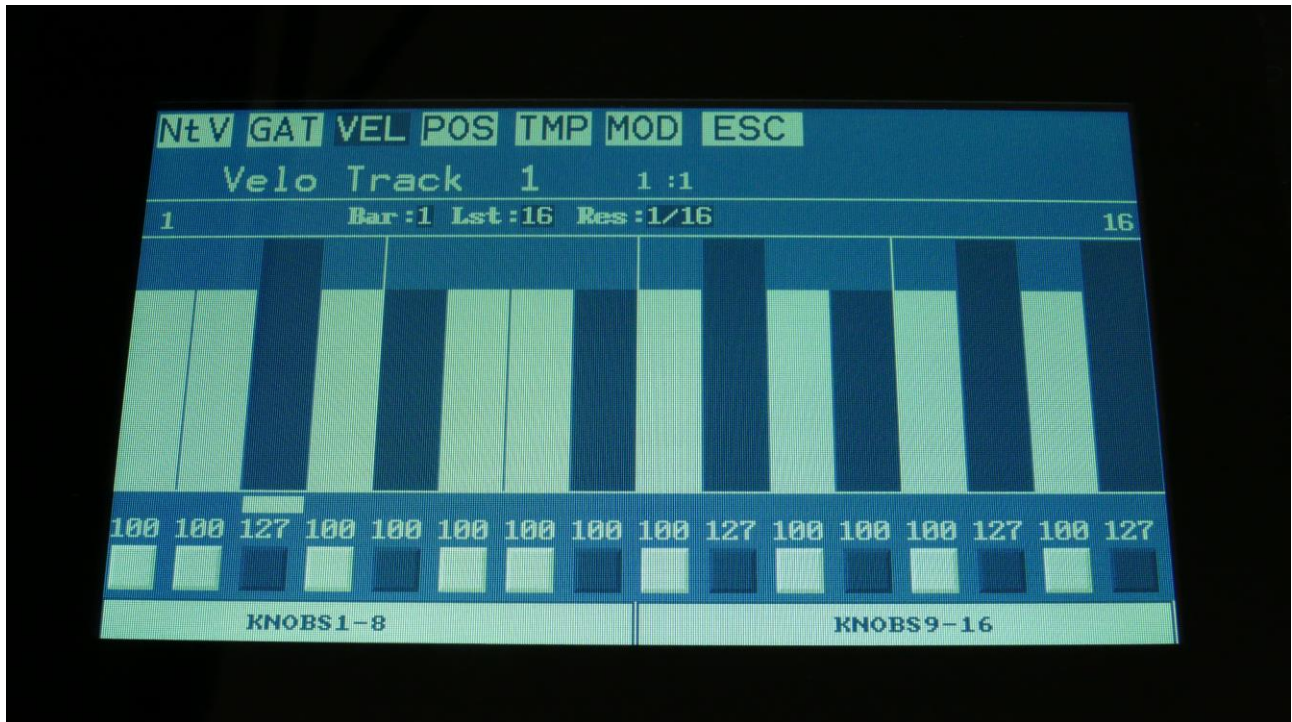

The velocity values for each step is shown as bars in the value grid, and as number right below the value grid. Steps can be switched on (dark blue) and off (white), by touching the 16 boxes right below the values, or via the step buttons.

Velocity values for each step can be changed, simply by touching the value grid.

Values can also be changed, using edit knob 1 to 8. In the bottom of the page, touch the field named "Knobs 1-8", to edit the first 8 steps, using the edit knobs, or touch the field named "Knobs 9-16", to edit the last 8 steps, using edit knob 1 to 8.

When neither KNOBS1-8 or KNOBS9-16 are dark blue:

Edit Knob 1: Has no function.

Edit Knob 2: Selects the bar to be viewed. 4 bars can be viewed, showing each 16 steps, for a total of 64 steps. The bar number is shown just above the values field (marked **Bar**), and the first and the last step number viewed, is shown just above the values field, to the right and the left.


Edit Knob 3: Sets the last step that will be played back on this track, before it loops back, and plays the track again. Range: 1 to 64 steps. Value is shown as **Lst**.

Edit Knob 4: Sets the track resolution. Values: $1/64$, $1/48$, $1/32$, $1/24$, $1/16$, $1/12$, $1/8$, $1/6$, $1/4$, $1/2$. Value is shown as **Res**.

Touching “ESC” will exit you to the Sequencer Modules page.

Position Subtrack

Touch POS in the top navigation bar, to enter the position steps page:

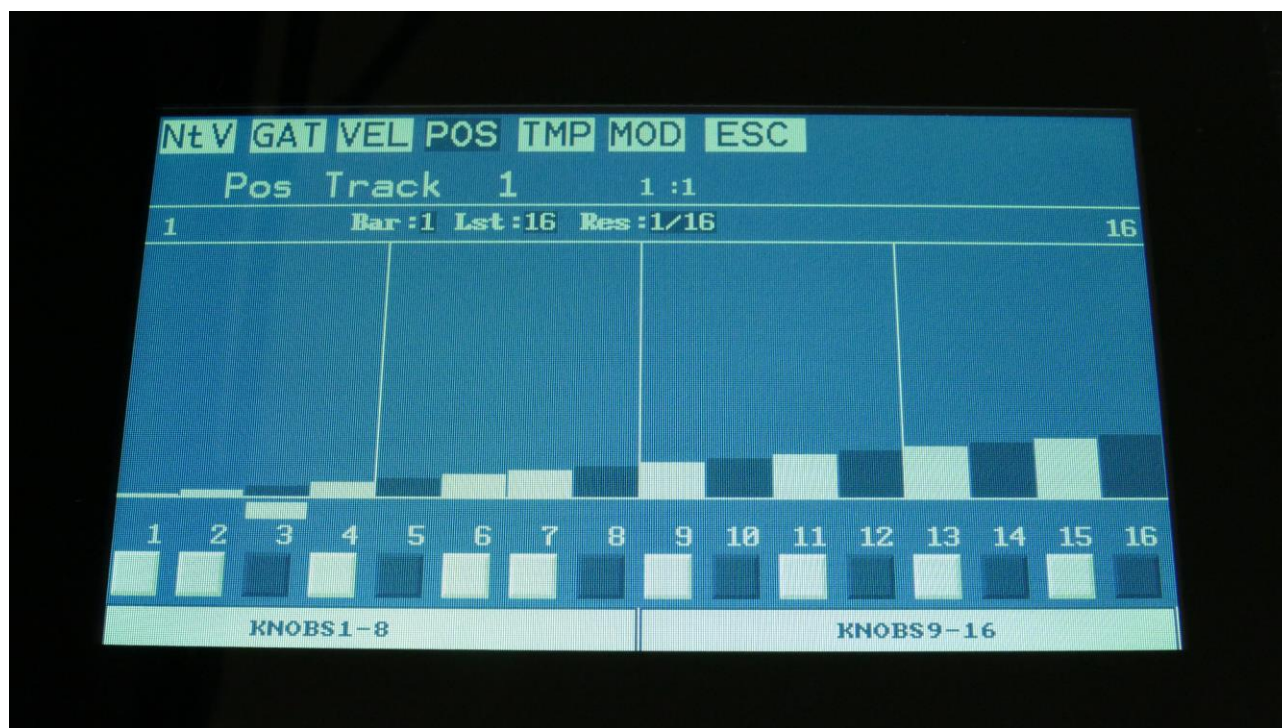

Unlike many other step sequencers, the position for each step on the Urano note tracks, can be set. For traditional step sequencing, you would leave it at its default setting, when step 1 is played back at position 1, step 2 is played back at position 2 and so on.

But the note sequencer in Urano can go further than that. Step 2 can be set to play back at position 31, if desired, just to deform a track, or experiment with it, or more steps can be set to play back at the same position, for polyphonic sequencing.

Templates (explained in the next section) are available, to force the position to make the track play forwards, backwards, random, alternating and in many other patterns, if you do not like to set this up yourself.

The position for each step is shown as bars in the value grid, and as number right below the value grid. Steps can be switched on (dark blue) and off (white), by touching the 16 boxes right below the values, or via the step buttons.

Positions for each step can be changed, simply by touching the value grid.

Values can also be changed, using edit knob 1 to 8. In the bottom of the page, touch the field named "Knobs 1-8", to edit the first 8 steps, using the edit knobs, or touch the field named "Knobs 9-16", to edit the last 8 steps, using edit knob 1 to 8.

When neither KNOBS1-8 or KNOBS9-16 are black:

Edit Knob 1: Has no function.

Edit Knob 2: Selects the bar to be viewed. 4 bars can be viewed, showing each 16 steps, for a total of 64 steps. The bar number is shown just above the values field (marked **Bar**), and the first and the last step number viewed, is shown just above the values field, to the right and the left.

Edit Knob 3: Sets the last step that will be played back on this track, before it loops back, and plays the track again. Range: 1 to 64 steps. Value is shown as **Lst**.

Edit Knob 4: Sets the track resolution. Values: $1/64$, $1/48$, $1/32$, $1/24$, $1/16$, $1/12$, $1/8$, $1/6$, $1/4$, $1/2$. Value is shown as **Res**.

Touching "ESC" will exit you to the Sequencer Modules page.

Sub Position Subtrack

When on the Position subtrack page, touch POS in the top navigation bar an extra time, to enter the sub position subtrack:



Here a value between 0 and 3 can be added to the step position for “micro-timing”.

The sub position for each step is shown as bars in the value grid, and as number right below the value grid. Steps can be switched on (dark blue) and off (white), by touching the 16 boxes right below the values, or via the step buttons.

Sub positions for each step can be changed, simply by touching the value grid.

Values can also be changed, using edit knob 1 to 8. In the bottom of the page, touch the field named “Knobs 1-8”, to edit the first 8 steps, using the edit knobs, or touch the field named “Knobs 9-16”, to edit the last 8 steps, using edit knob 1 to 8.

When neither KNOBS1-8 or KNOBS9-16 are black:

Edit Knob 1: Has no function.

Edit Knob 2: Selects the bar to be viewed. 4 bars can be viewed, showing each 16 steps, for a total of 64 steps. The bar number is shown just above the values field (marked **Bar**), and the first and the last step number viewed, is shown just above the values field, to the right and the left.

Edit Knob 3: Sets the last step that will be played back on this track, before it loops back, and plays the track again. Range: 1 to 64 steps. Value is shown as **Lst**.

Edit Knob 4: Sets the track resolution. Values: $1/64$, $1/48$, $1/32$, $1/24$, $1/16$, $1/12$, $1/8$, $1/6$, $1/4$, $1/2$. Value is shown as **Res**.

Touching “ESC” will exit you to the Sequencer Modules page.


Templates and Note Scales

Templates are available to make it easier to create ramps on a track, and to randomize things. For the position track templates are available for forwards, backwards, alternating, randomized and polyphonic playback setup.

On this page note scales are also available, for users that thinks that harmonic tones works, and for swapping around keys for experimentation.

When on either the Note, Gate, Velo or position subtracks, touch TMP on the top navigation bar, to enter the templates/note scales page.

If you enter the templates pages from the note, gate or velocity page, it will look like this:

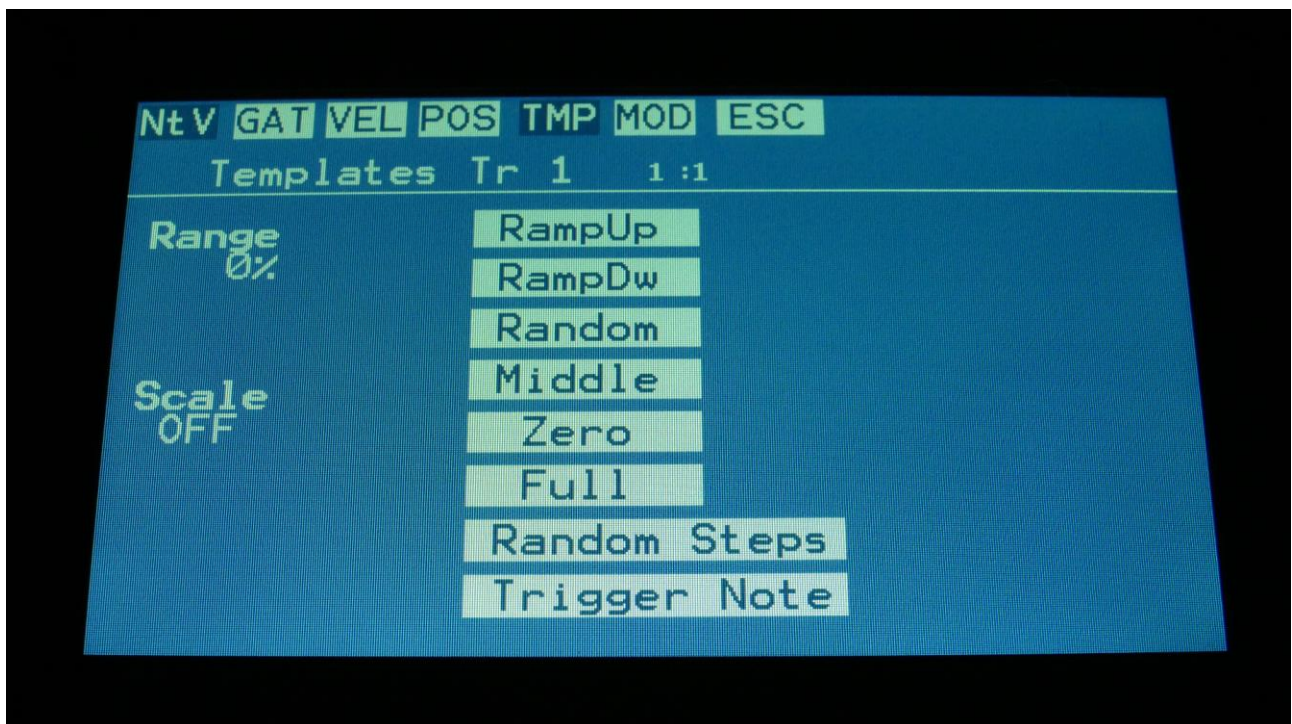

First turn Edit Knob 1, to set the range. This will set, how much the template routine will affect the values, that are already on the selected subtrack. When this is set to 100%, the template function will be absolute. Then touch any of the template boxes in the middle of the screen.

The templates work from step 1 to the last step that is set. Values after the last step are not affected.

Available templates:

- RampUp**: Ramp Up. Will lower values on steps, that are placed before last step divided by 2, and raise values on steps, placed after last step divided by 2.
- RampDw**: Ramp Down. Will raise values on steps, that are placed before last step divided by 2, and lower values on steps, placed after last step divided by 2.
- Random**: Will randomize all steps between step 1 and last step, to a degree set by the range parameter.
- Middle**: Will move any values closer to the middle value.
- Zero**: Will lower any values. –Transpose a note track down.
- Full**: Will raise any values. –Transpose a note track up.

Random Steps:

Will randomize the note steps on's/off's. The more that the Range parameter is turned up, the more notes it will set to on.


Trigger Note: Will set all note steps to the same note as the part trigger button plays.

Scale: Adds a scale to the note track output in realtime, when adjusting Edit Knob 5. Available scales are:

- Off**: No scales are added to the note track.
- Cmaj**: Forces all notes outputted from the track, to the Cmajor scale.
- Dmaj**: Forces all notes outputted from the track, to the Dmajor scale.
- Emaj**: Forces all notes outputted from the track, to the Emajor scale.
- Fmaj**: Forces all notes outputted from the track, to the Fmajor scale.
- Gmaj**: Forces all notes outputted from the track, to the Gmajor scale.
- Amaj**: Forces all notes outputted from the track, to the Amajor scale.
- Bmin**: Forces all notes outputted from the track, to the Bmajor scale.
- Cmin**: Forces all notes outputted from the track, to the Cminor scale.
- Dmin**: Forces all notes outputted from the track, to the Dminor scale.
- Emin**: Forces all notes outputted from the track, to the Eminor scale.
- Fmin**: Forces all notes outputted from the track, to the Fminor scale.
- Gmin**: Forces all notes outputted from the track, to the Gminor scale.
- Amin**: Forces all notes outputted from the track, to the Aminor scale.
- Bmin**: Forces all notes outputted from the track, to the Bminor scale.
- Swap**: Will swap notes below F inside an octave, with notes above F, and vice versa.
- BlWh**: Will swap white keys with black and vice versa.

Templates for the Position Subtrack

When entering the templates page from the Position subtrack, it will look like this:

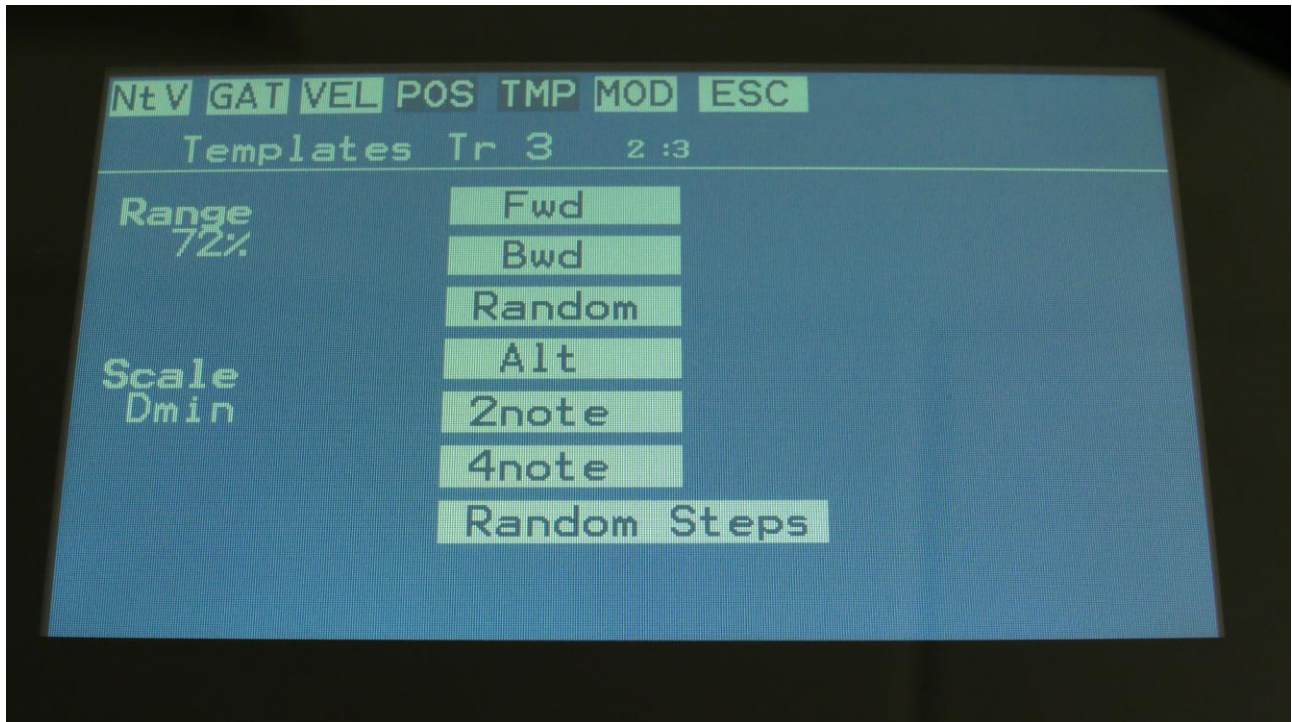

Turn Edit Knob 1, to set the range. This will set, how much the template routine will affect the values, that are already on the selected subtrack. When this is set to 100%, the template function will be absolute.

The templates work from step 1 to the last step that is set. Values after the last step are not affected.

Available templates:

- Fwd:** Forwards. The more the Range parameter is turned up, when touching this, the more the track will be forced to play back forwards.
- Bwd:** Backwards. The more the Range parameter is turned up, when touching this, the more the track will be forced to play back backwards.
- Random:** Will randomize all steps between step 1 and last step, to a degree set by the range parameter.
- Alt:** Alternate. The more the Range parameter is turned up, when touching this, the more the track will be forced to play back alternating.

-2note: 2 Note Poly. The more the Range parameter is turned up, when touching this, the more the track will be forced to play back 2 note polyphonic.


-4note: 4 Note Poly. The more the Range parameter is turned up, when touching this, the more the track will be forced to play back 4 note polyphonic.

Random Steps:

Will randomize the note steps on's/off's. The more that the Range parameter is turned up, the more notes it will set to on.

Note Track Mod Page

Touch MOD in the top navigation bar, to enter this page.

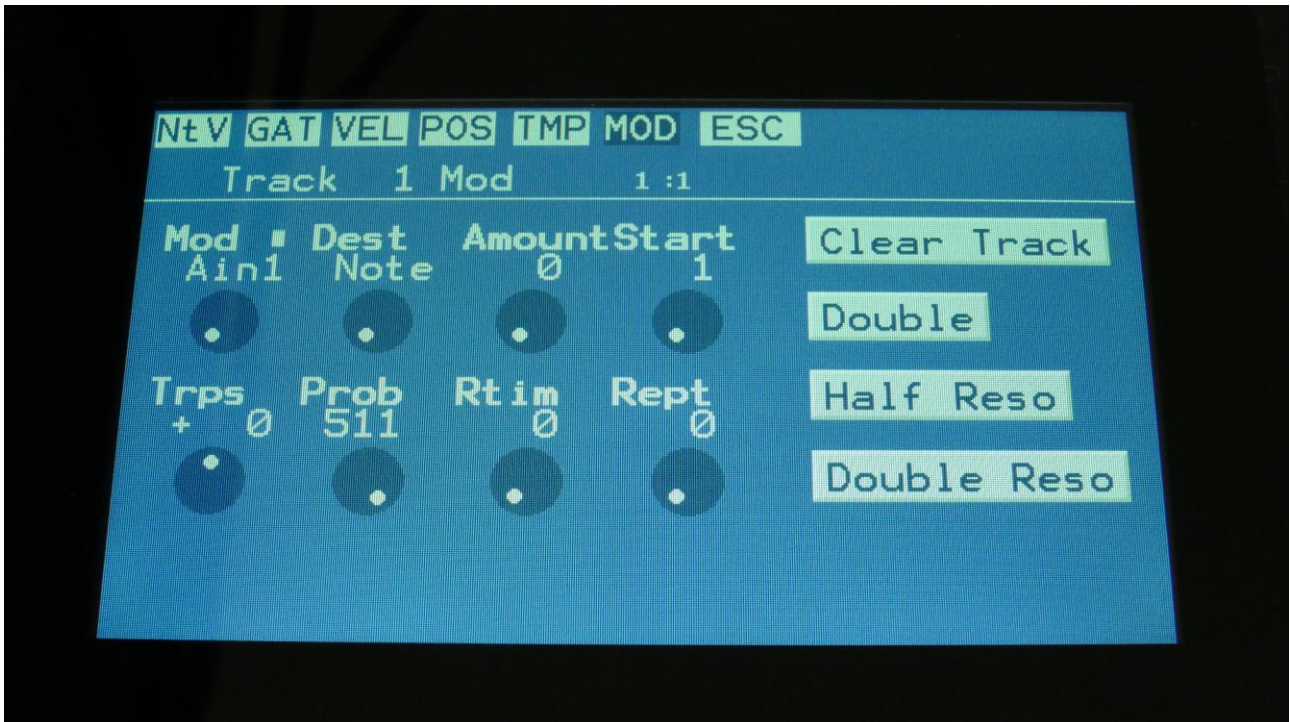

Here you can set up note track modulation, the track Note Randomizer, the start step, make step repeats, and transpose the track. It is also possible to clear or double the track, and to double or halve the track resolution, without affecting the track timing.

The parameters of this page:

Mod: Note Track modulation source. Any Urano audio/modulation source can be selected to modulate the track. For a complete list of modulation sources, see the “Connecting Modules” chapter.

Dest: Track modulation destination. Selects what should be modulated on the track. Choices are:

-Note: The note numbers of the track will be modulated. If "Kybd" is selected as the modulation source, incoming MIDI notes, and notes played on the touchscreen keyboard, will no longer play back notes. Instead they will transpose the note track. When the 2 middle notes, note number 64 (E4) and 65 (F4), are played, the note track will play back at its original pitch. When notes below these are played, the note track will be transposed down, and when keys above are played, it will be transposed up.

-Gate: The gate times of the track will be modulated.

-Dly: The delay times of the track will be modulated.

-Swing: Swing modulation will be applied to the track. This is a bit more fine than the delay time modulation.

-Velo: The velocity values of the track will be modulated.

-Pos: The position subtrack positions will be modulated.

-Rept: The Rept (Repeats) parameter will be modulated.

-Rota: Position Rotation Modulation. Will rotate the positions of the position subtrack around the selected last step.

Amount: Adjusts the amount of modulation that will be applied to the track.

Start: Sets the track start step. This will be the step, the track starts at, when hitting the Start/Stop button, or when entering this preset from another preset, while the sequencer is running. When selecting another preset, while the sequencer is running, the preset change will happen, when Note track 1 are at the step before the start step. Step 1 to 64 can be selected.

The Start step can be set globally for all tracks at the Seq Main page.

Trps: Track transpose. Will transpose the note numbers of the whole track up to 64 semitones up or down.


Prob: Track Note Randomizer Probability. When this is turned fully up, all programmed note steps of the track will play back. The more it is turned down, the less notes will play back. The notes the will not play back are selected randomly.

Rtim: Track Note Randomizer Time. When turned up, it will create random delays on the programmed note steps triggering.

Rept: When setting this to 1, 2 or 3, each step note will be repeated this number of times, in equally spaced steps, between the sequencer steps. Modulate this for some cool effects.

Clear Note Track

From the Mod page, touch the **“Clear Track”** button, to enter this page:

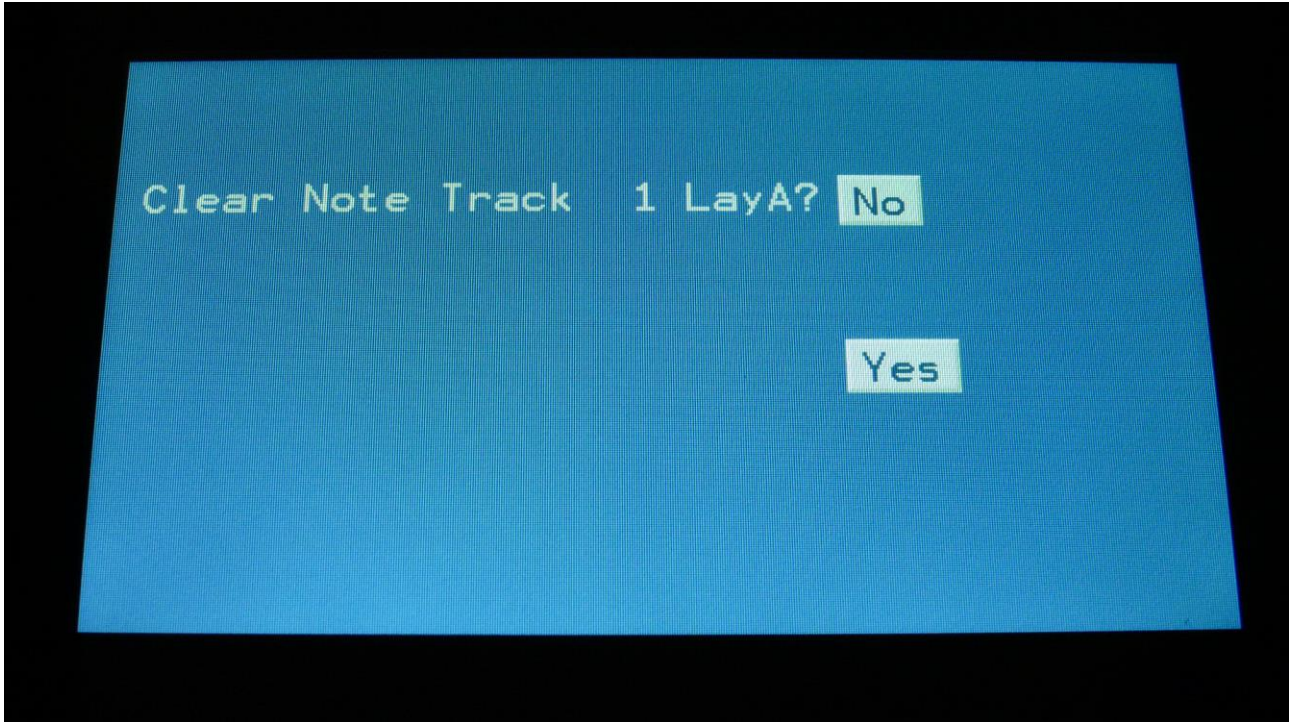

Touching “Yes” from here, will initialize all step values and parameters of the currently selected note track, on the currently selected Morph Layer (Morph function button selects the layer), except for the Last Step parameter.

If you would not wish to do this, touch “No”, to exit to the track Mod page.

Double Note Track

Touch the “Double” touch button, to double the length of the track. All events from the original track, is copied to the new half. Useful if you need some extra variation in a track.

PLEASE NOTE: The track lengths cannot exceed 64 steps for the note tracks.

Halving the track resolution

When touching the **Half Reso** button, the resolution of the currently selected track will be halved (i.e. from 1/16 to 1/8), without the timing of the track being changed.

Doubling the track resolution

When touching the **Double Reso** button, the resolution of the currently selected track will be doubled (i.e. from 1/16 to 1/32), without the timing of the track being changed.

Realtime recording of notes

You can, at any time, hit the Steps/Part button, and switch note steps on or off, but sometimes you might want to just record something, that you play on a connected MIDI device, like a keyboard or a drum pad, on the touch screen keyboard, or on Urano's trigger buttons. For this, realtime recording is usable.

You can start realtime recording by holding down the Func/Mute button, while pressing the Play button. If the sequencer is already running, it will immediately enter realtime recording mode, and any note you play will be recorded. If the sequencer is stopped, you will have to push the Play button, to start it. If the metronome is on, it will count in for 2 bars with audible metronome, before it starts realtime recording.

To make sure that the recording starts at the beginning of the track(s), make sure that CONT (continue mode) on the Seq Main/Last Step page is off.

When it is realtime recording, the Play button will flash in time with the beat.

To switch off realtime recording, simply hit the same button combination again, so that the Play button stops flashing.

Urano has two different note realtime recording modes: Mono and poly.

In mono recording mode, it records the notes in a linear time fashion, like a traditional step sequencer: One note per step. The notes you play are placed at the position where the sequencer was playing back, at the moment that you played the note. If you play more than one note on the same position, only the last note you play are recorded.


If you play several parts at the same time, each part will be recorded on separate tracks, so more parts can be recorded to sound at the same time.

In poly recording mode, the position subtrack is modified every time you play a note to be recorded. The first note you play, will be placed at step one, and the position of step one, will be set to the position, that the sequencer was playing back, when you played the note. The second note you play, will be placed at step two, and the position of step two, will be set to the position, that the sequencer was playing back, when you played the note. And so on, until you have played 64 notes. Any step can be at any position, and therefore polyphonic recording and play back is possible.


The realtime recording mode is set on the Sequencer Main page, by touching Mono/Poly field.
The choices are:
-Mono: Monophonic recording
-Poly: Polyphonic recording



On the Preset Select page, it is also possible to switch realtime recording on and off, by touching the Rec touchbutton.

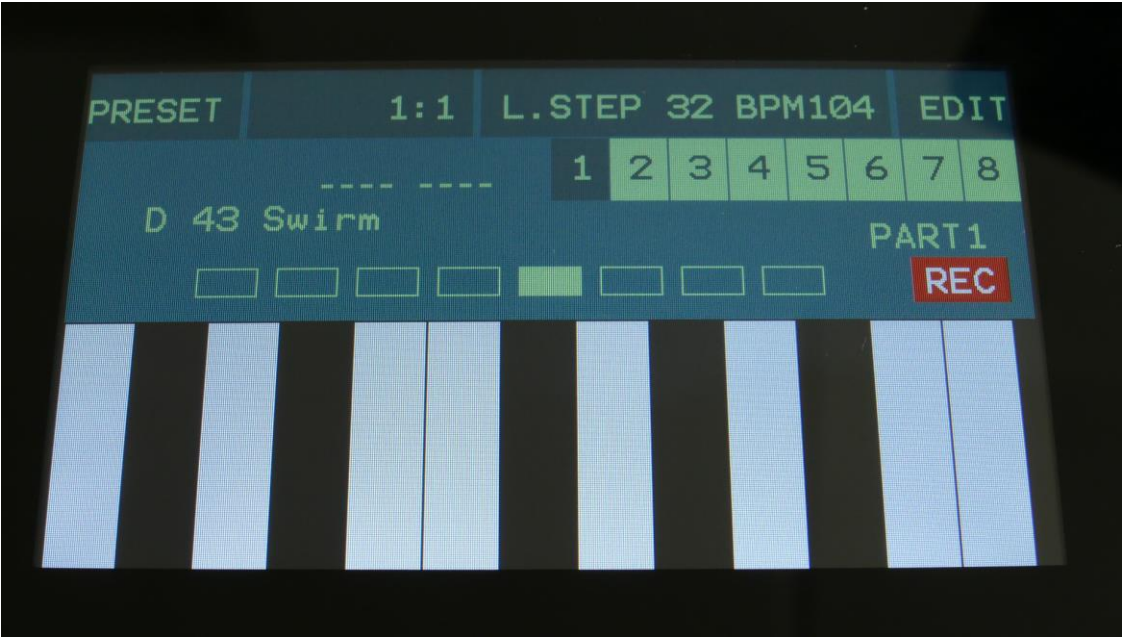

Step Recording of Notes

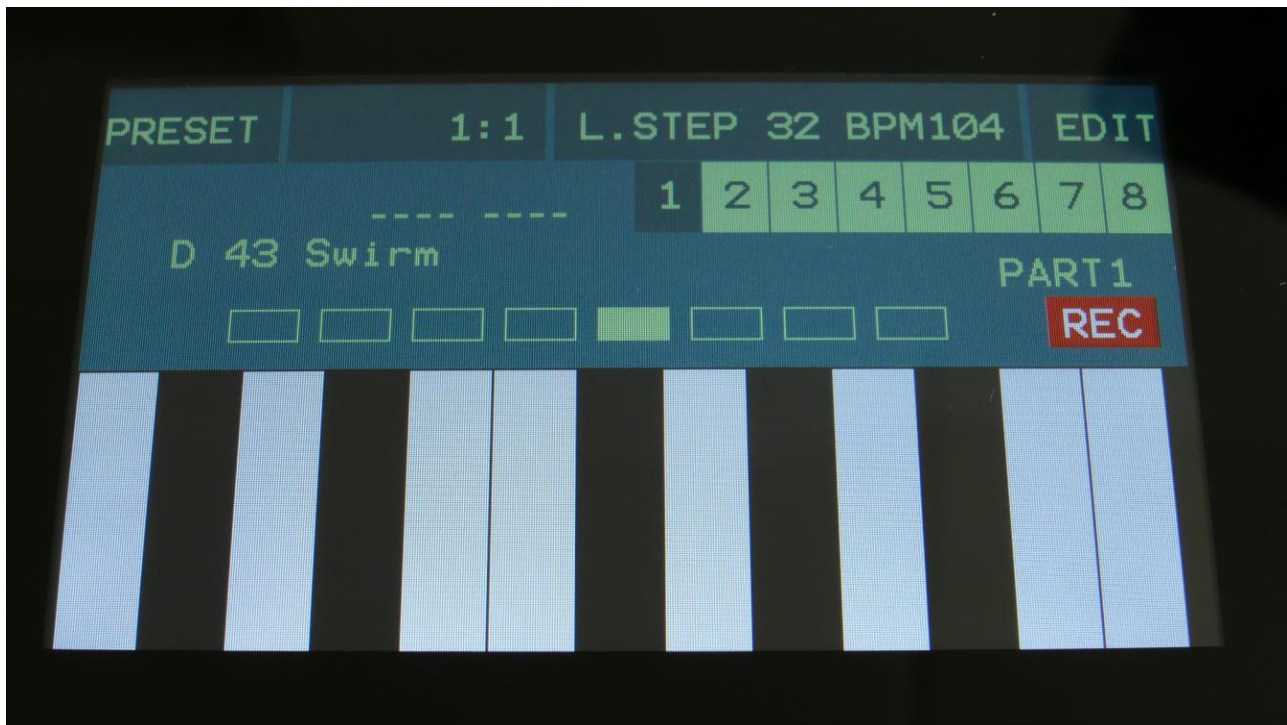

On top of the xox style and realtime recording methods, step recording of notes and controllers are also possible.

Rec mode can be set to either mono or poly.


To initiate step recording:

- Set Urano in sequencer recording mode, by touching the REC field on the Preset Select page, so that it turns red, or push and hold the Func/Mute button, while pressing the Play button.
- Start the sequencer playback, if desired. Step recording is possible no matter if the sequencer is running or not.
- Push and release the Steps/Part button, so that it lights up, and puts the 8 step buttons in step mode.
- Push the step button, that has the position for the step, that you would like to record. This will now flash.
- Play a note (or more in poly rec mode), on an attached MIDI device or on the touch screen keyboard. This will now be recorded. If any controller track is set in recording mode (explained in the next section), MIDI CC's and knob movements can also be recorded to specific steps this way.
- The Urano Sequencer will advance to the next step, every time it receives a note off.


If the sequencer is running, while step recording, the time you hold down a note, will be recorded. If the sequencer is stopped, resolution will determine the note length.

Setting up a track/part to internal or external operation

Each of the 8 Urano note tracks, can control either the internal part, that they are hard assigned to, or external MIDI gear.

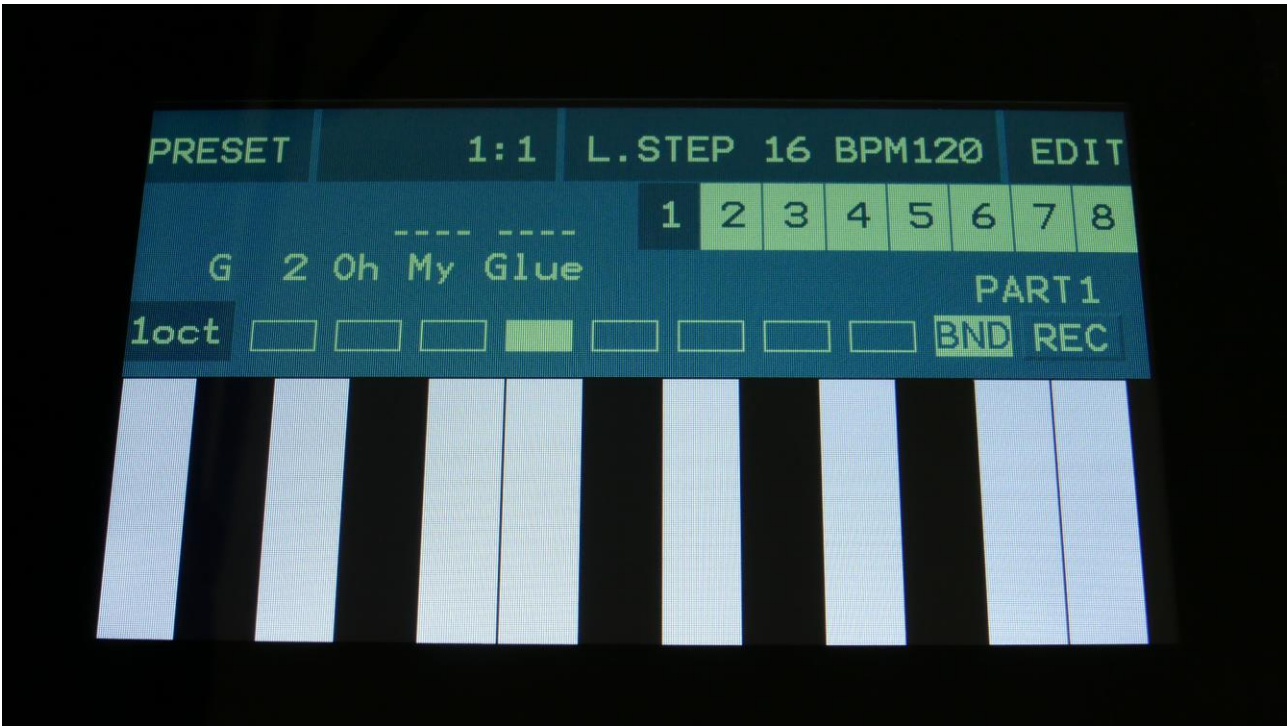


From the Preset Select page, touch the EDIT field, to enter the Synth Modules page.

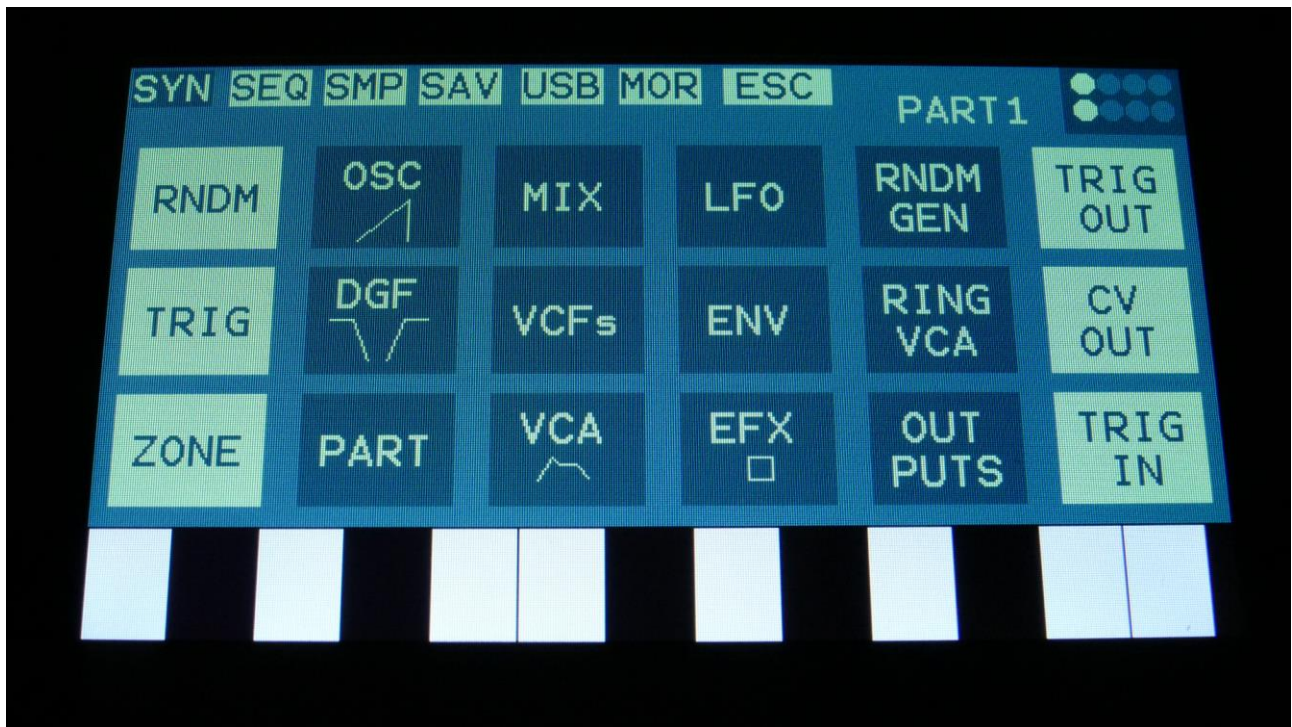

On this page, touch TRIG.

Now you will enter this page:

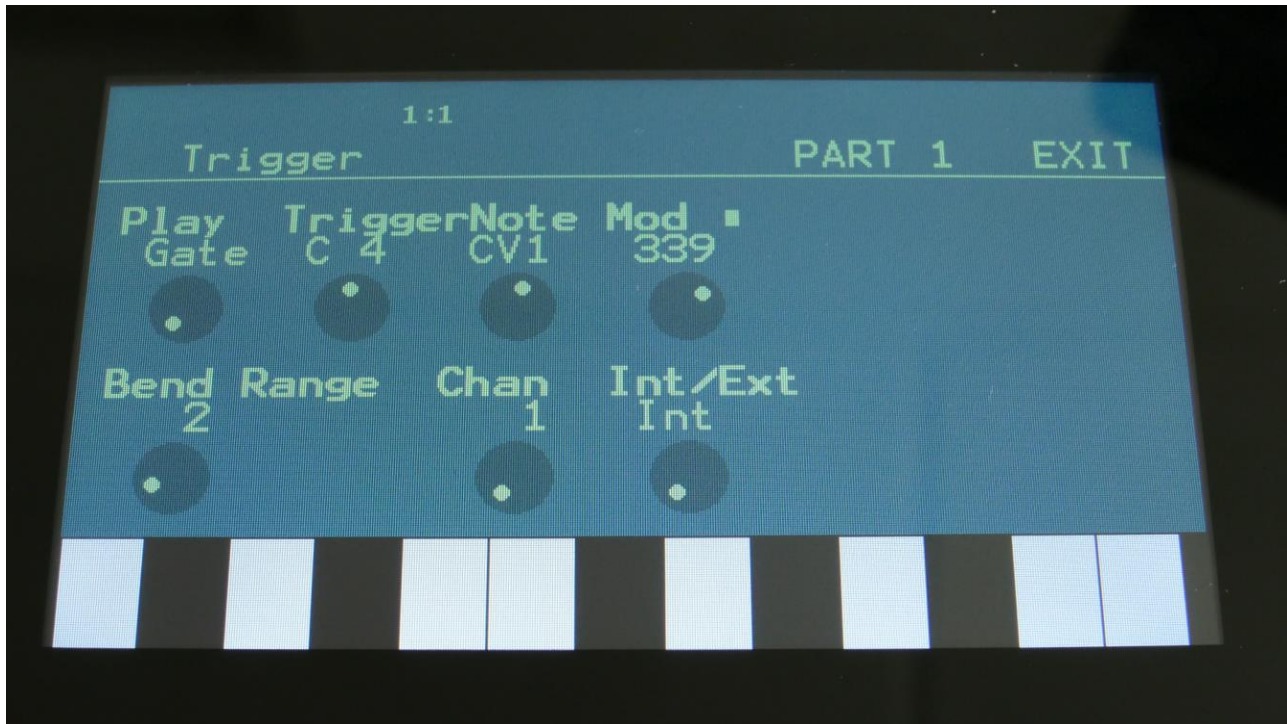

Select the part, that you would like to set up as internal or external, by holding down the Steps/part button, while pushing the step button, that has the desired part number.

Set the Int/Ext parameter to Int (Internal) or Ext (External).

If you set the part to external, set the Chan parameter to a MIDI channel that matches the MIDI gear, that you would like to control.

Set other tracks up, if desired.

The Controller Tracks

Urano has 16 controller tracks. Each of these only have one subtrack: The controller track values. Each track can be on up to 128 steps long, and a Smooth function can be turned on, that will automatically create values between the steps, from one step value to another, for smooth transitions between them. Resolution can be set from 1/64 to 1/2.

Step values are indicated by dark blue bars. The step values can be recorded in real and step time, adjusted by the Edit Knobs, and directly by touching the screen. The transition between each step can be either stepped or smooth. The controller tracks appear as modulation and audio sources, but they can also transmit MIDI CC's and pitch bend directly, both internally and externally. Program changes can also be transmitted. Templates can be used, for faster setting of the values.


Via the controller tracks, it is possible to realtime record MIDI CC's, pitch bends and knob movements.

Templates are available, for quick modification of the controller track values.

Controller track Step Values

From the sequencer start page, touch Controller Track 1 to 8, to access these controller tracks, or touch Controller Track 9 to 16, to access these tracks.

To access a specific track, push and hold the Steps/Part button, while pressing one of the step buttons.

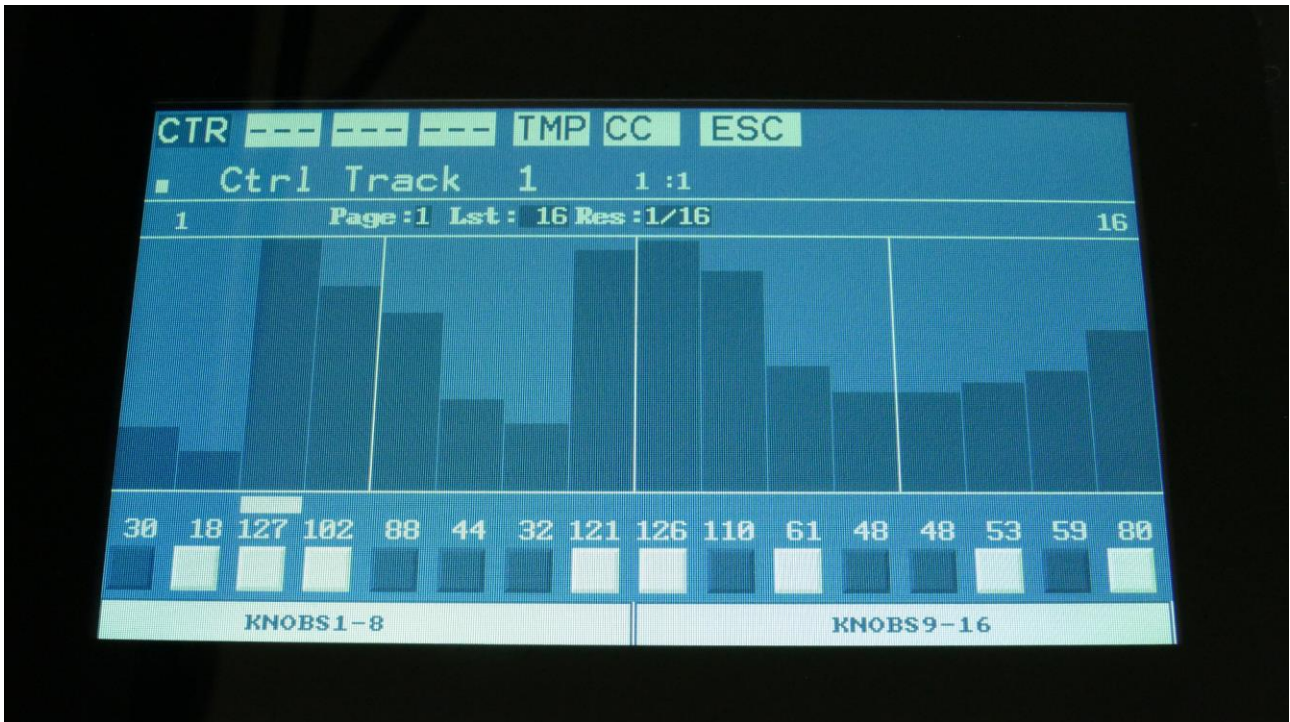

This will be the first page, you will enter, showing the controller values, that will be outputted for each sequencer step, when the sequencer is playing back.

At most of this screen, you will see the value grid. Right above this, to the left and to the right, the first and last step numbers, of the steps that is currently shown in the value grid, are indicated.

Between these numbers, a few settable parameters is shown.

In the top left side, a small VU-meter is shown, that show the value currently being outputted by the track.

Here, when neither KNOBS1-8 or KNOBS9-16 are dark blue:

Edit Knob 1: Has no function.

Edit Knob 2: Selects the bar to be viewed. 4 bars can be viewed, showing each 16 steps, for a total of 64 steps. The bar number is shown just above the values field (marked **Page**), and the first and the last step number viewed, is shown just above the values field, to the right and the left.

Edit Knob 3: Sets the last step that will be played back on this track, before it loops back, and plays the track again. Range: 1 to 128 steps. Value is shown as **Lst**.

Edit Knob 4: Sets the track resolution. Values: 1/64, 1/48, 1/32, 1/24, 1/16, 1/12, 1/8, 1/6, 1/4, 1/2. Value is shown as **Res**.

Touching “ESC” will exit you to the Sequencer Start page.

The controller values for each step is shown right below the value grid. Smooth can be switched on (dark blue) and off (white) for each step, by touching the 16 boxes right below the values. If the Smooth parameter on the CC page is set to any other value than Off, the step smooth on/off values will be ignored, and all steps will smoothly slide to the next step.

Controller values for each step can be changed, simply by touching the value grid.


Values can also be changed, using edit knob 1 to 8. In the bottom of the page, touch the field named “Knobs 1-8”, to edit the first 8 steps, using the edit knobs, or touch the field named “Knobs 9-16”, to edit the last 8 steps, using edit knob 1 to 8.

If touching this field one more time, it will change to “All”. Now it is possible to adjust the offset of all the track values, using Edit Knob 1.

Controller Tracks Templates

Templates are available to make it easier to create ramps on a track and to randomize things.

When on the Controller track step values page, touch TMP on the top navigation bar, to enter the templates page.

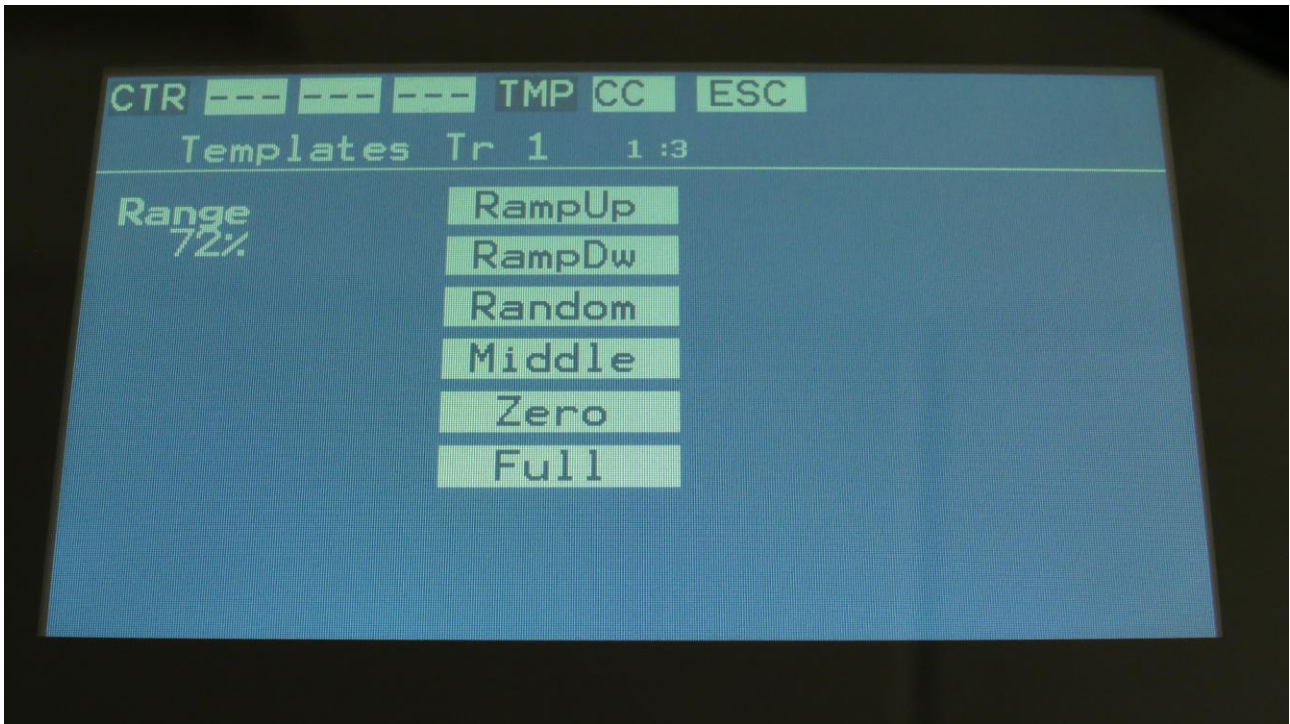

First turn Edit Knob 1, to set the range. This will set, how much the template routine will affect the values, that are already on the selected subtrack. When this is set to 100%, the template function will be absolute. Then touch any of the template boxes in the right side of the screen.

The templates work from step 1 to the last step that is set. Values after the last step are not affected.

Available templates:

- RampUp**: Ramp Up. Will lower values on steps, that are placed before last step divided by 2, and raise values on steps, placed after last step divided by 2.
- RampDw**: Ramp Down. Will raise values on steps, that are placed before last step divided by 2, and lower values on steps, placed after last step divided by 2.
- Random**: Will randomize all steps between step 1 and last step, to a degree set by the range parameter.
- Middle**: Will move any values closer to the middle value.

-Zero: Will lower any values.

-Full: Will raise any values.

Controller Tracks CC page

Touch CC in the top navigation bar, to enter this page.



The parameters of this page:

CC: Off, 1(Morph), 2(SeqMrp), 3, 4(Knob1), 5(Knob2), 6, 7(Knob8), 8(Knob3), 9(Knob4), 10(Knob5), 11(Knob6), 12(Knob7), 13 to 15, 16 (Y-Mod), 17 to 122, CV IN 1 to 4, Pitch Bend.

Setting this to any other value than "Off", will make the selected controller track output MIDI CC values or pitch bend values to MIDI out or internally, as set on the CCout parameter. When a number is set, this is the CC number that will be outputted. If any Urano Edit Knob are assigned to this CC, the knob name will be written in parenthesis. If set to Pitch Bend, this is what will be outputted. The CC/Pitch Bend set here, are also the event that the track will realtime/step record. Controller track realtime and step recording are explained a little bit later.

Chan: 1 to 16. Sets the MIDI channel, that the selected MIDI CC will be transmitted to, when CCout is set to External, or the internal Part number, that the CC's are sent to, when CCout is set to Internal.

CCout: Ext, Int. Sets if the controller track CC's/Pitch Bend's should be transmitted to an external MIDI device via MIDI Out (Ext), or to an internal Synth Part (Int). Regardless of this setting, the controller track are always available as internal modulation sources.


Start: 1 to 128. Sets the track start step. This will be the step, the track starts at, when hitting the Start/Stop button, or when entering this preset from another preset, while the sequencer is running.

PrCh: Off, 1 to 128. When setting the PrCh parameter to any value between 1 and 128, a program change message will be transmitted on MIDI out, on the MIDI channel selected by the Chan parameter, every time this preset is selected. The CCout parameter has no effect on this. Each of the 32 controller tracks can transmit its own program change.

Smooth: Off, On. When this is set to On, extra controller values will be added between the controller value steps, to ensure smooth transition between these.

Clear Controller Track

From the track CC page, touch the **“Clear Track”** button, to enter this page:

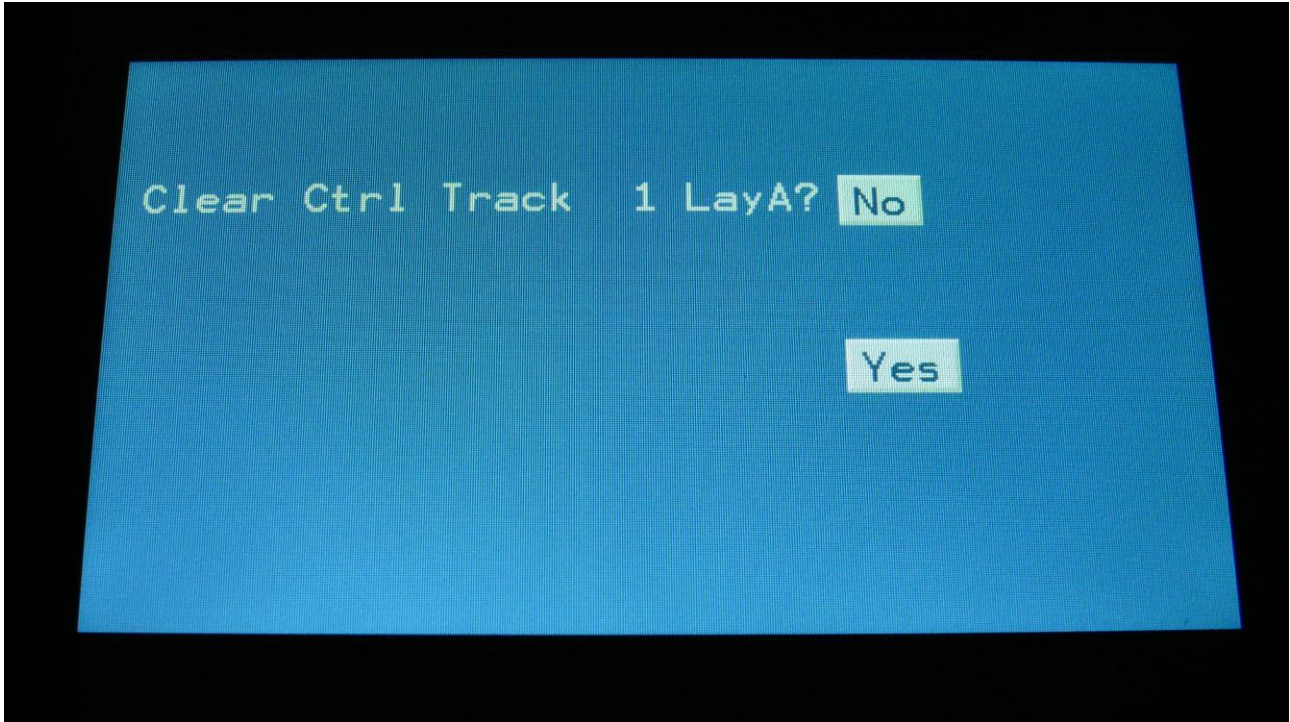

Touching “Yes” from here, will clear all step on’s of the currently selected controller track, on the selected Morph Layer (morph layer is selected by the Morph function button)..

If you would not wish to do this, touch “No”, to exit to the track main page.

Double Controller Track

Touch the “Double” touch button, to double the length of the track. All events from the original track, is copied to the new half. Useful if you need some extra variation in a track.

PLEASE NOTE: The controller track lengths cannot exceed 128 steps.

Controller Tracks Realtime Recording

MIDI CC's, Pitch Bend, CV Inputs and knob movements can be realtime recorded on the 16 controller tracks.

To do this, on the controller track CC page, set it to the event type, that you would like to record, using the CC parameter.



The CC parameter can be set to any MIDI CC between 1 and 122.

In the top position, you will find CV In 1 to 4 and Pitch Bend, and at position 16 (CC16), you will find the touch screen keyboard Y-position.

The MIDI CC used for knob movement recording are named like this:

- 1(Morph)
- 2(SeqMrp)
- 4(Knob1)
- 5(Knob2)
- 7(Knob8)
- 8(Knob3)
- 9(Knob4)
- 10(Knob5)
- 11(Knob6)

12(Knob7)

For knob movement recording, you should select one of these.

Set the track to the desired MIDI channel, using the Chan parameter. If the track is set to internal operation, the channel number is the part number, that the track will output to.

Set CCoout to Int (internal) or Ext (external), depending on, if you like the controller track to control Urano itself, or some external MIDI gear.

Now, if you would like to tweak the Edit Knobs, navigate back to the Preset Select (main) page, and make sure, that the Edit Knobs are controlling the right parameters.

Now start the sequencer.

Start sequencer recording, by pushing and holding the Func/Mute button, while pressing the Play button.

Now, when you start tweaking an Edit Knob, it will start recording this controller track. It will record the track for the number of steps, that the track is set up to. Then it will stop the recording of the track, and switch it to Smooth mode, and play back will start.

Knob tracks set to pitch bend, can be recorded by playing with the pitch bender on a MIDI device connected to Urano MIDI in. Knob tweaks can also be performed with external MIDI controllers.

CV Inputs Recording

The 4 CV inputs can also be recorded to the sequencer controller tracks, just like MIDI CC's and knob movements.

To do this, simply select CV In 1 to 4 to be the CC on a controller track, and follow the procedure for controller track realtime recording.

Controller Tracks Step Recording


It is also possible to step record controller events.

To initiate step recording:

- Set the controller track in realtime recording mode, as described in a previous chapter.
- Start the sequencer playback, if desired. Step recording is possible no matter if the sequencer is running or not.
- Push and release the Steps/Part button, so that it lights up, and puts the 8 step buttons in step mode.
- Push the step button, that has the position for the step, that you would like to record. This will now flash.
- Set the Knob/MIDI Controller to the value, you would like this step to hold.
- Select another step to record.

Clear Sequence

From the Sequencer Start page, touch the Clear field. Urano will now ask:

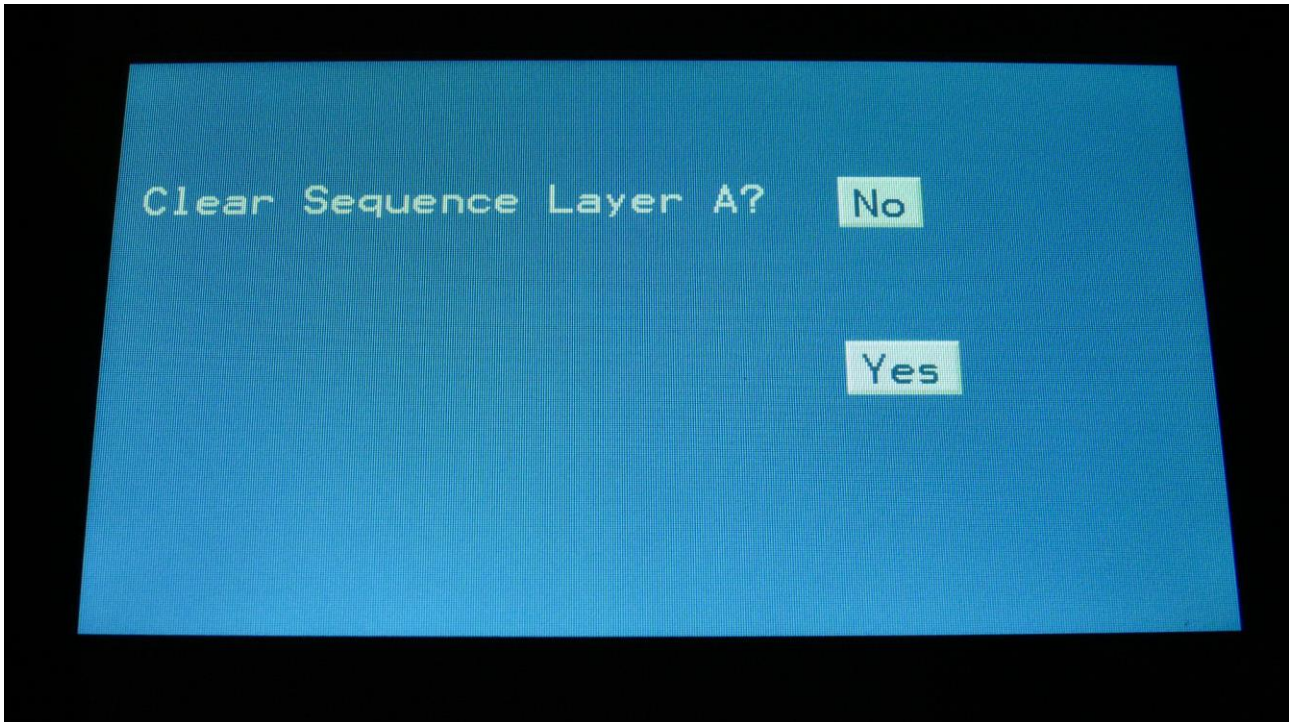


If you touch the “Yes” button here, Urano will clear all tracks on the selected Morph Layer (select Morph Layer with the Morph function button) of the current preset, and reset all values.

If you do not wish to do that, touch “No”.

Swing All

From the Sequencer Start page, touch the SWING field, to enter the Swing All page.

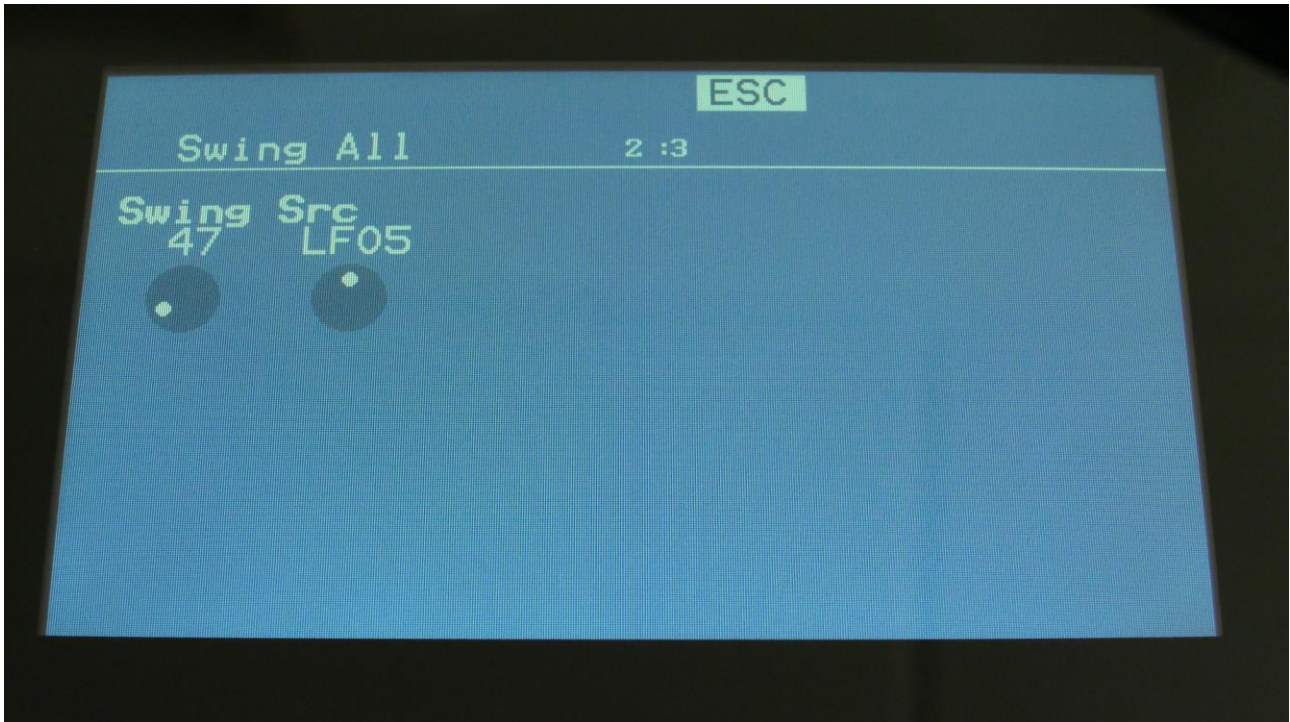

Swing All will let you add modulated swing to all 8 note tracks at the same time. For creating traditional swing, you should modulate with a controller track, and program the swing pattern on this, but on Urano, any modulation source can be used for swing, so there are quite a lot of possibilities to deform a sequence with this.

For separate swing on each track, please use the track modulation.

Set the amount of swing with the **Swing** parameter, and select the swing modulation source, using the **Src** parameter. Any Urano audio/modulation source can be selected.

Synth and Sequencer Morphing

On Urano it is possible to morph between 2 layers of parameters, layer A and B, by turning the Morph knob for the synth parameters, and the Seq Morph knob for the sequencer parameters. The Morph knob transmits and receives MIDI CC 1 (The Mod Wheel) via MIDI in and out, and the Seq Morph knob transmits and receives MIDI CC2.

To access the parameters of the second layers, on any synth and sequencer page, hit the Morph function button (Func/Mute>Step button 3 (Morph)), so it lights up. Now the parameters of layer B will be shown on the screen, and you can edit these, using Edit Knob 1 to 8, just like the layer A parameters.

All continuously adjustable parameters can be morphed. Switches are not morphed, except for the note tracks steps on/off.

In the MOR section under MORPH, it is possible to set static Morph knob values, and to modulate the morph knobs.


TIP: In order to get a fast start point for morph layer B, you can copy morph layer A to B quickly, by pushing the function buttons Copy (step button 5) and then Morph (step button 3).

All morph settings are stored within each Preset. Remember to save the Preset, to not lose any great sounds.


Mor> preset parameters/Setup



From the Preset Select page, touch the EDIT field in the upper right corner.

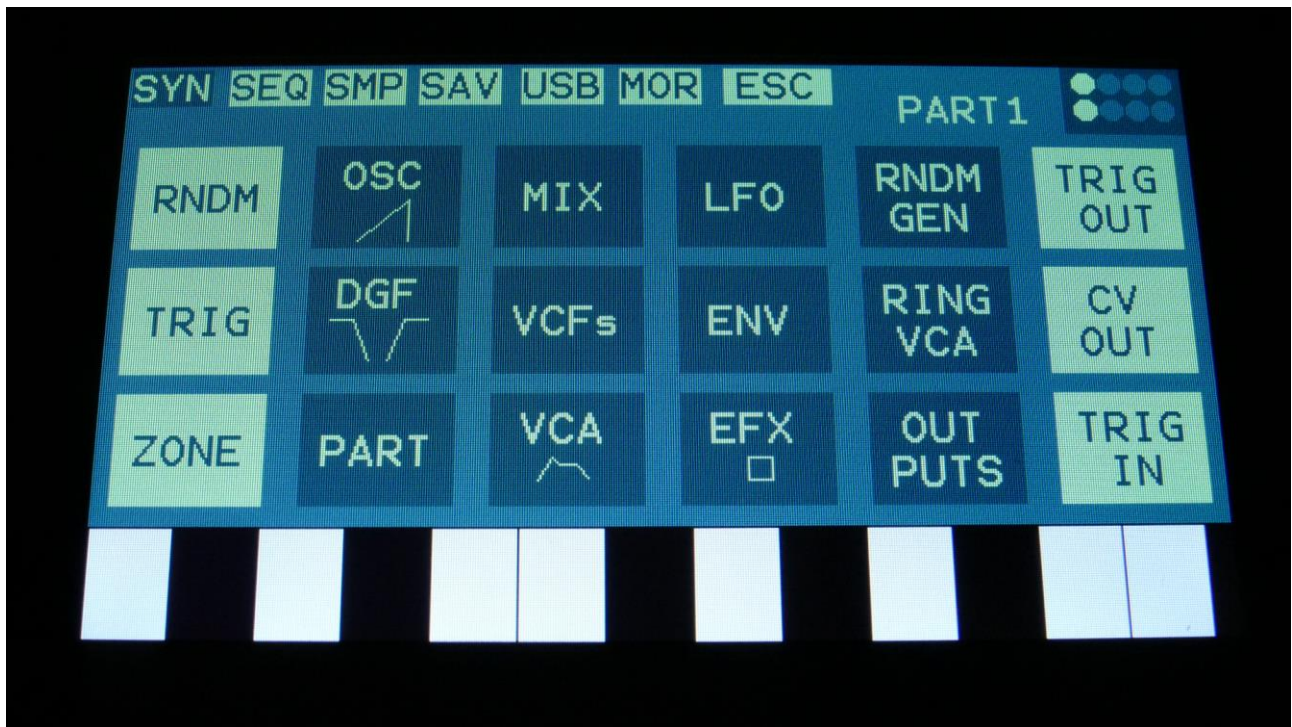

On the navigation bar at the top of this screen, touch MOR.

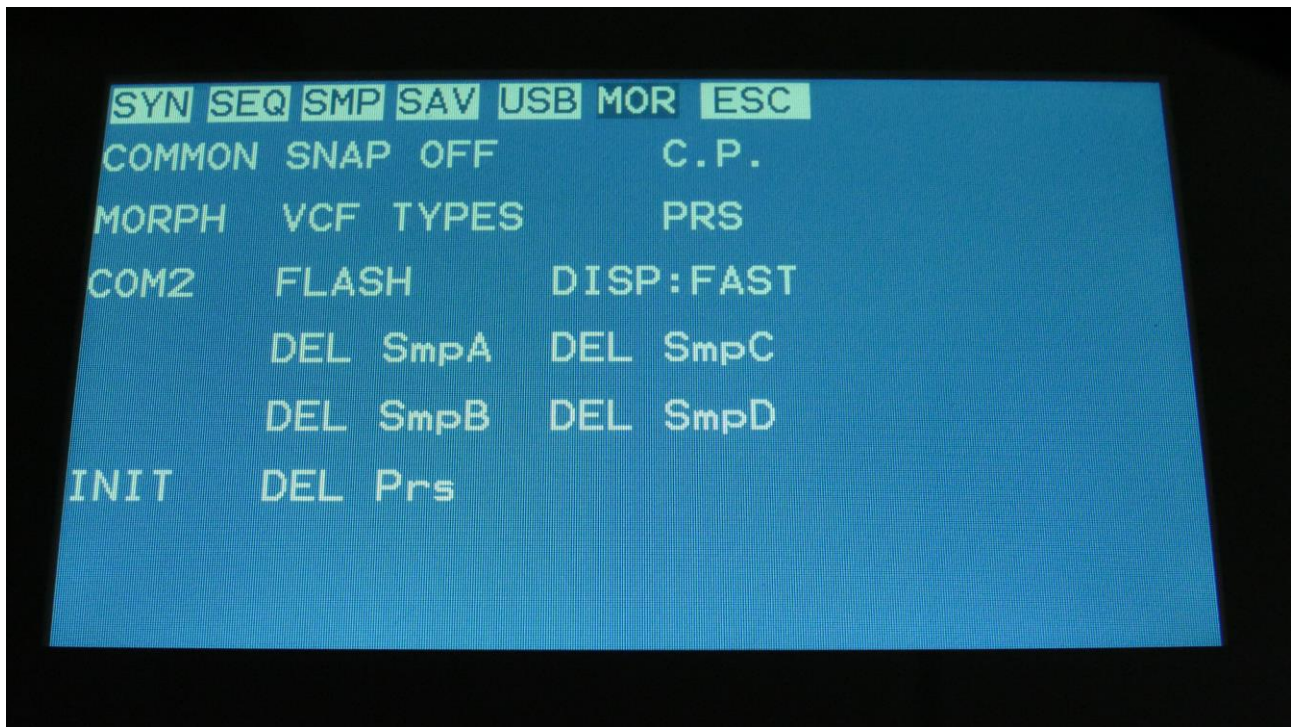

This will get you to the MOR page. Here you can set up all the basic Urano things, like global MIDI channel, morphing, set up FilterBoard types, check and erase the Urano memory, initialize the preset and change to song mode.

On the following pages, each section of the MOR page is described.

Common Settings

On this page, you can adjust the display contrast and MIDI settings and check the sample memory.

From MOR page, touch COMMON to enter this page:



The following parameters can be adjusted on this page, using edit knob 1 to 8:

Contr: Adjusts the display contrast. This setting is automatically saved, and will be remembered after a power off.

Chan: The Urano global MIDI channel. All MIDI data to Urano will be received on this channel, if the Mode parameter is set to Sel (Explained in a moment). MIDI CC's from the Edit/Quick Edit Knobs and the Morph knob will be transmitted on this channel, if the Mode parameter is set to Sel. This setting is automatically saved, and will be remembered after a power off.

Sync: Sequencer synchronization. This setting is automatically saved, and will be remembered after a power off. Settings:

-**Int:** Urano's sequencer will be clocked internally at the rate set by the "Tempo" parameter in each preset.

-**Ext:** Urano's sequencer will be clocked externally, by MIDI clock events applied to MIDI in. Sequencer play and stop can also be controlled externally.

ClkOut: Settings: Off, On. Selects whether or not Urano will re-transmit MIDI clock and start/stop events to MIDI out. Even if Urano is syncing to an external MIDI clock source, it will re-transmit this, if this parameter is on. This setting is automatically saved, and will be remembered after a power off.

Prgr: On/Off. When switched on, Urano will receive MIDI program and bank changes. Bank change is MIDI CC 32.

Mode: Urano MIDI input mode. This setting is automatically saved, and will be remembered after a power off. Can be set to:

-**Sel:** The selected synth part is controlled on the Urano base MIDI channel.

-**Omni:** The selected synth part is controlled on any MIDI channel.

-**OmTh:** Omni Thru. The selected synth part is controlled on any MIDI channel. MIDI events are channelized to MIDI out on the MIDI channel selected on the Synth Part TRIG page.

-**Mult:** Multi timbral. All 16 parts works in multi timbral mode, and is controlled by the MIDI channel/key range set on each parts ZONE page.

-**MuTh:** Multi timbral/Thru. All 16 parts works in multi timbral mode, and is controlled by the MIDI channel/key range set on each parts ZONE page. MIDI events are channelized to MIDI out on the MIDI channel selected on the Synth Part TRIG page.

#Smp: Shows how many samples that are held in sample bank A, B, C and D.

#Used: Shows in percent how much of the sample memory of each sample bank is occupied by samplings.


In the bottom of this screen, the currently installed firmware version number is shown, and the serial number for your Urano.

Morph Setup

On the Morph Setup page, it is possible to set a permanent morph value, that will override the Morph knob, if you wish to always have a preset playing back in a certain morph position.

It is also possible to modulate the morph knobs, using any audio/modulation source.

From MOR page, touch MORPH to enter this page:

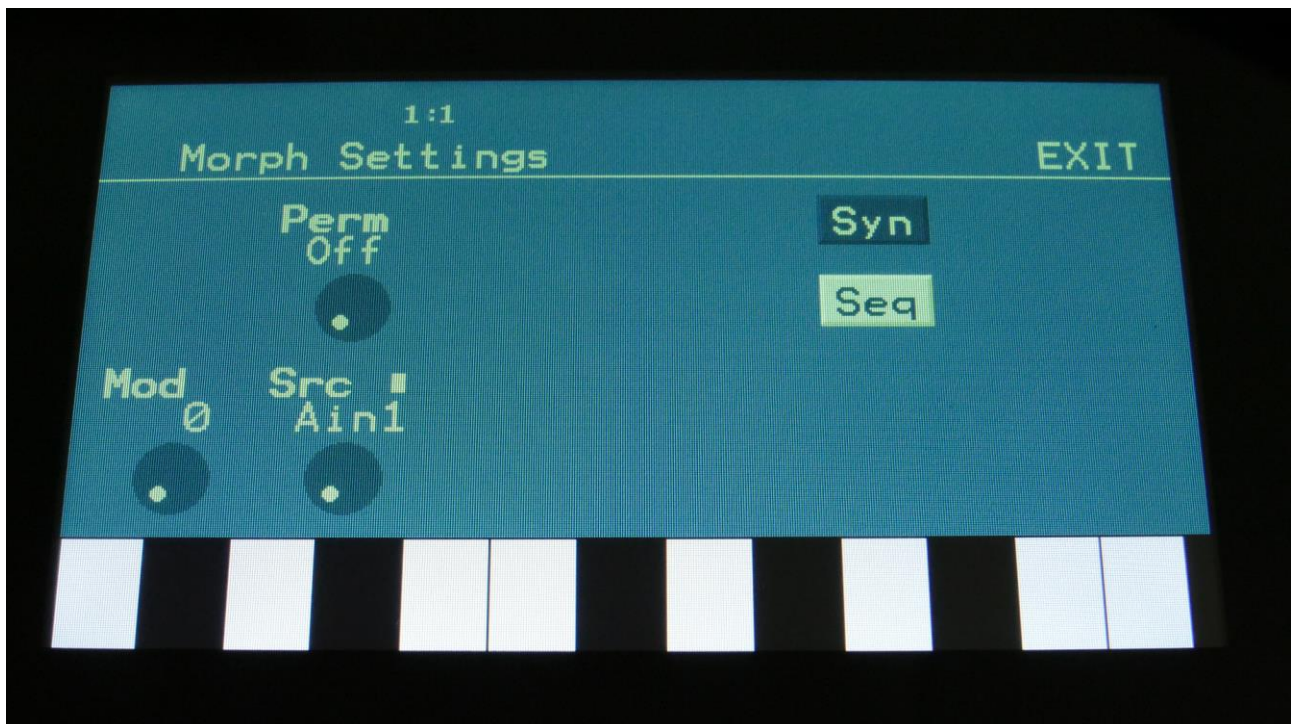

This is the settings for the Morph knob, that affect the Synth Parts, LFO's and effect processors. Touch the Syn touch button, to access this page.

Parameters on this page:


Perm: Morph knob permanent value. Will override the value of the Morph knob, and keep morph on the permanent value plus modulation. Range: Off, 1 to 511.

Mod: Morph knob modulation amount. 0 to 511.

Src: Morph modulation source. Any available audio/modulation source can be selected.

Sequencer Morph Knob Setup

Touch the Seq touch button, to enter this page.

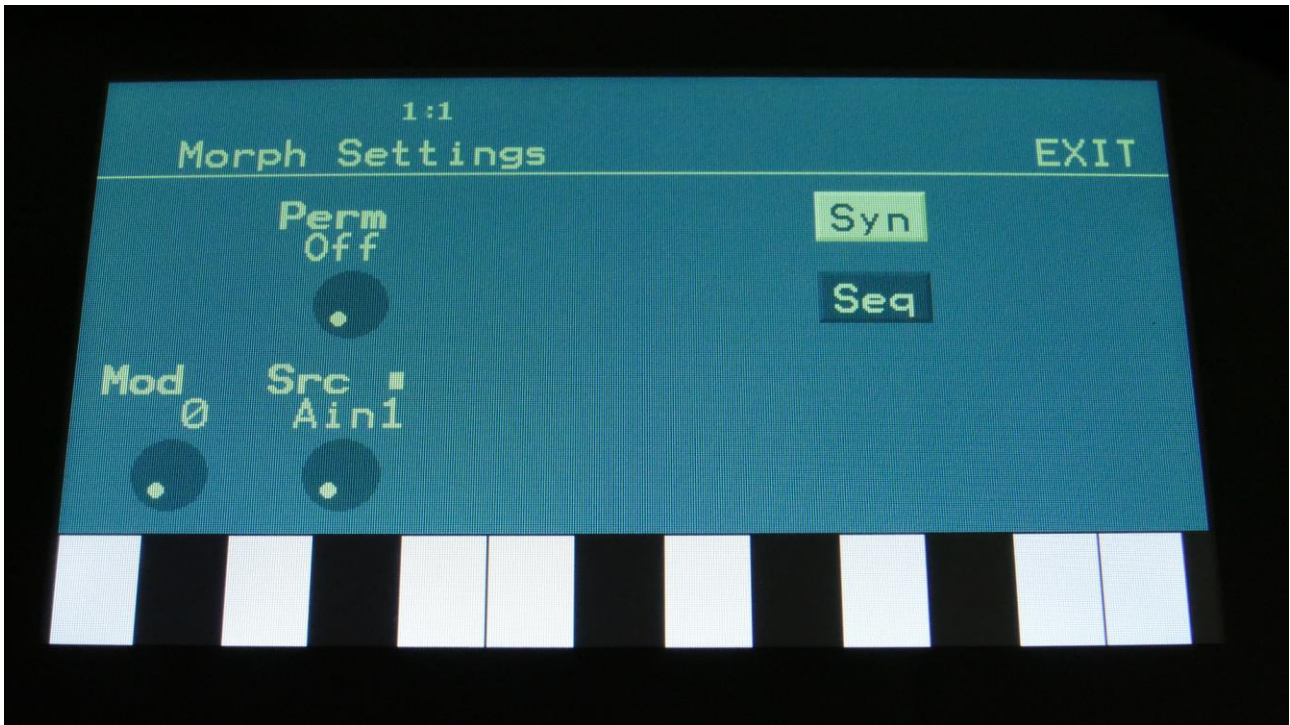

This is the settings for the Seq Morph knob, that affect the Sequencer.

Parameters on this page:


Perm: Seq Morph knob permanent value. Will override the value of the Seq Morph knob, and keep morph on the permanent value plus modulation. Range: Off, 1 to 511.

Mod: Seq Morph knob modulation amount. 0 to 511.

Src: Seq Morph modulation source. Any available audio/modulation source can be selected. This might though lead to unexpected results, if you select any of the sequencer controller tracks as the modulation source.

Common Settings 2 (COM2)

On this page you can set if the part select and part mute buttons should latch or not, and a few other things.

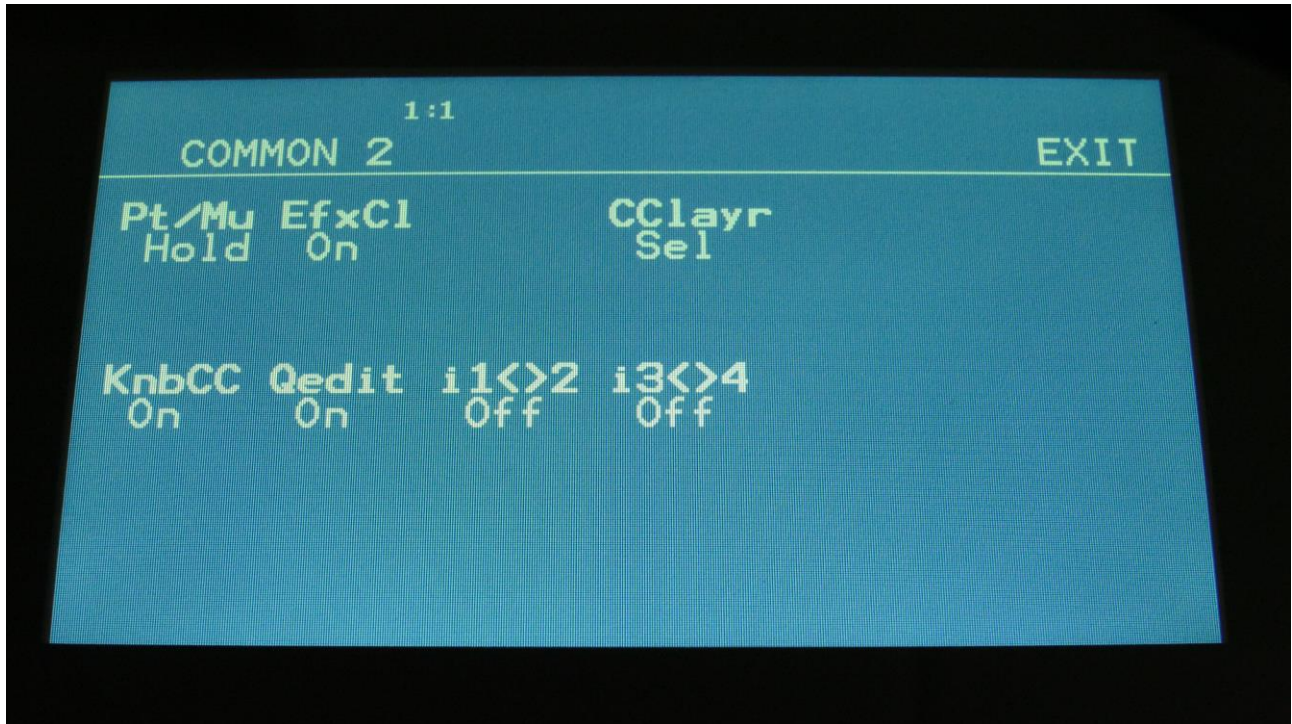

Here you can, by rotating Edit Knob 1 (**Pt/Mu**), set the **Part/Mute** button to:

-Hold: You will have to hold the Func/Mute or Steps/Part buttons, while pushing a step button, to select or mute a part.

-Latch: When pushing and releasing either the Func/Mute or the Steps/Part buttons 2 times, the button will start to flash, and you can select or mute parts, by pushing the step buttons. It is still possible to select and mute parts, by holding any of these buttons.

EfxCL: Effects buffer clear. When Urano is shifting from one preset to the next, the effect RAM buffers are cleared, to avoid any fractures of the sounds from the previous preset, to sound in the new preset. This will give a tiny break in the effect processing. If you would like to avoid this tiny break, or if you do like effects like delay and granulators to keep the sounds from a previous preset, when shifting to a new one, please set this parameter to “off”.

CClayr: CC control to Morph Layer. Sel, Both.

Sel: Only the Morph layer selected by the Morph Set button, will be affected by MIDI in and Sequencer CC control.

Both: Both Morph layers will be affected by MIDI in and Sequencer CC control, at the same time.

KnobCC: On, Off. When on, the 8 Edit Knobs and the 2 Morph knobs will transmit MIDI CC's to MIDI Out, when turned. When off, they will not transmit any MIDI CC's on MIDI out.

Qedit: Will switch the Quick Edit functionality of the Edit Knobs on or off. When this is set to off, the Edit Knobs can be assigned as modulation sources. When on, the Edit Knobs will not send their values to the modulation destinations.

i1<>2: When on, audio inputs 1 and 2 will be swapped.


I3<>4: When on, audio inputs 3 and 4 will be swapped.

Initialize Preset

If you would like to start out from scratch, with a completely clean preset, this is the function to use.

Please notice that the preset on the selected location are not immediately wiped out. It will not be overwritten until you save the new preset, so even though you have initialized it, it can still be recalled, if you should regret, by selecting another preset, and then select this one again, or by using the reload function.

From MOR page, touch INIT to enter this page:

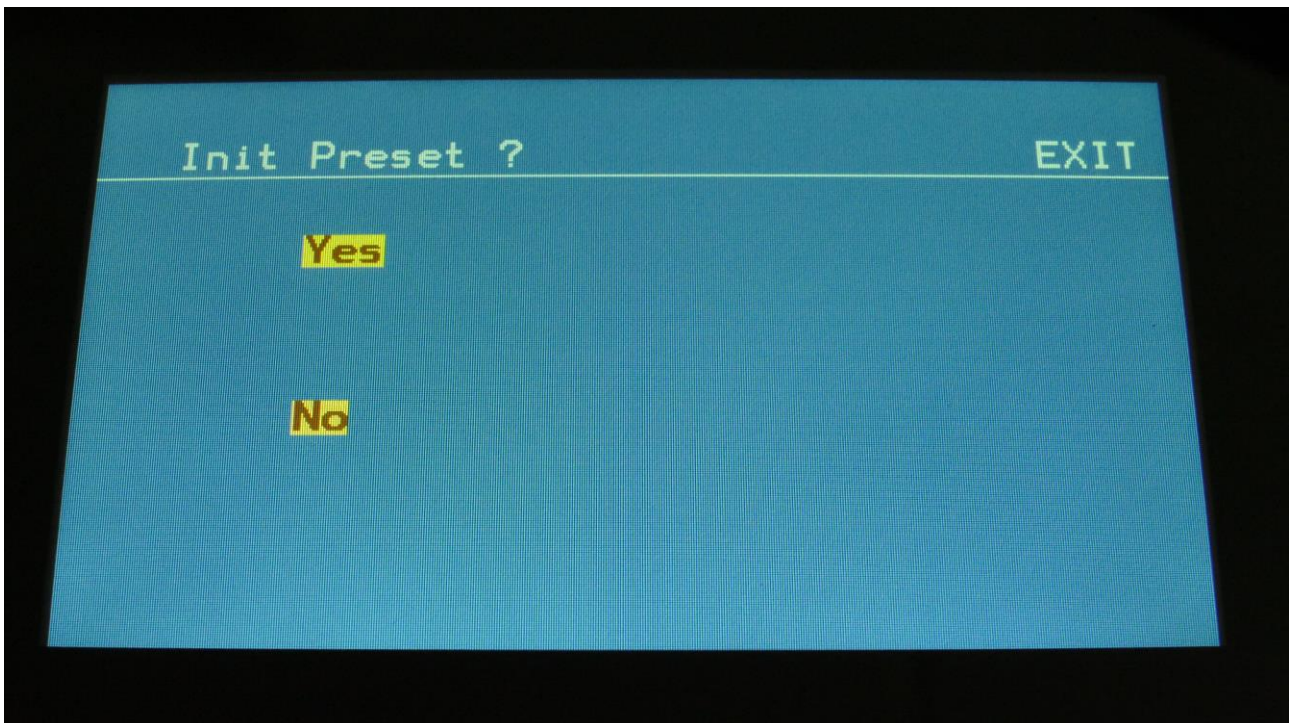


Urano will now ask you to confirm.

Press "Yes" to initialize the currently selected preset and return to the previous page, or press "No" just to exit, without initializing.

Parameter Snap Mode

A synth part parameters “Snap” mode are available. When this is set to “On”, any synth parameter value will not be changed, when turning a knob, until it passes the original value, that the parameter was set to. This will avoid “jumps” in the sound.

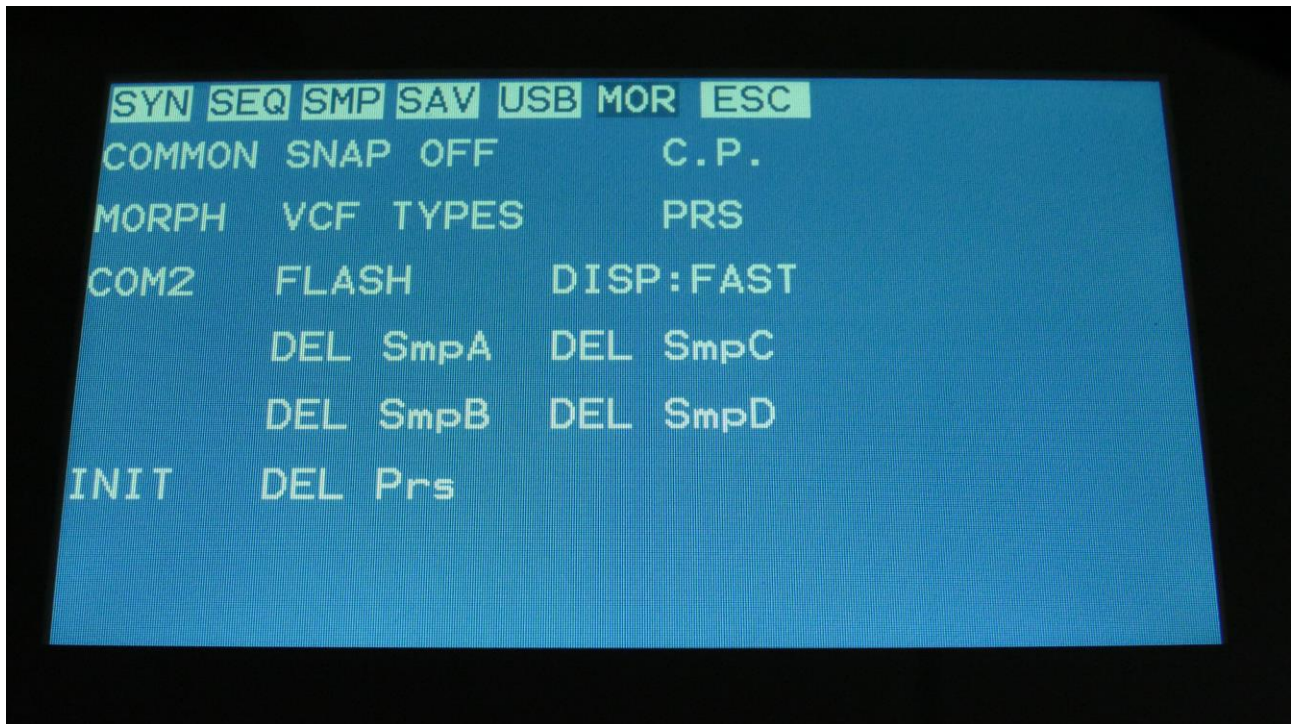


On the MOR page, touch the “SNAP OFF” text. The text will now change to “SNAP ON”, and the parameter snap feature will be turned on.

To turn it off, touch this text again.

Filter Boards Setup

To get the most out of the analog filters installed in your Urano, you should go to this page to set which filter types are installed, every time you change a filter. When you receive your Urano from Gotharman's this will be set up correctly, so you should only need to go here, when you swap the filter boards.

From MOR page, touch VCF TYPES to enter this page:

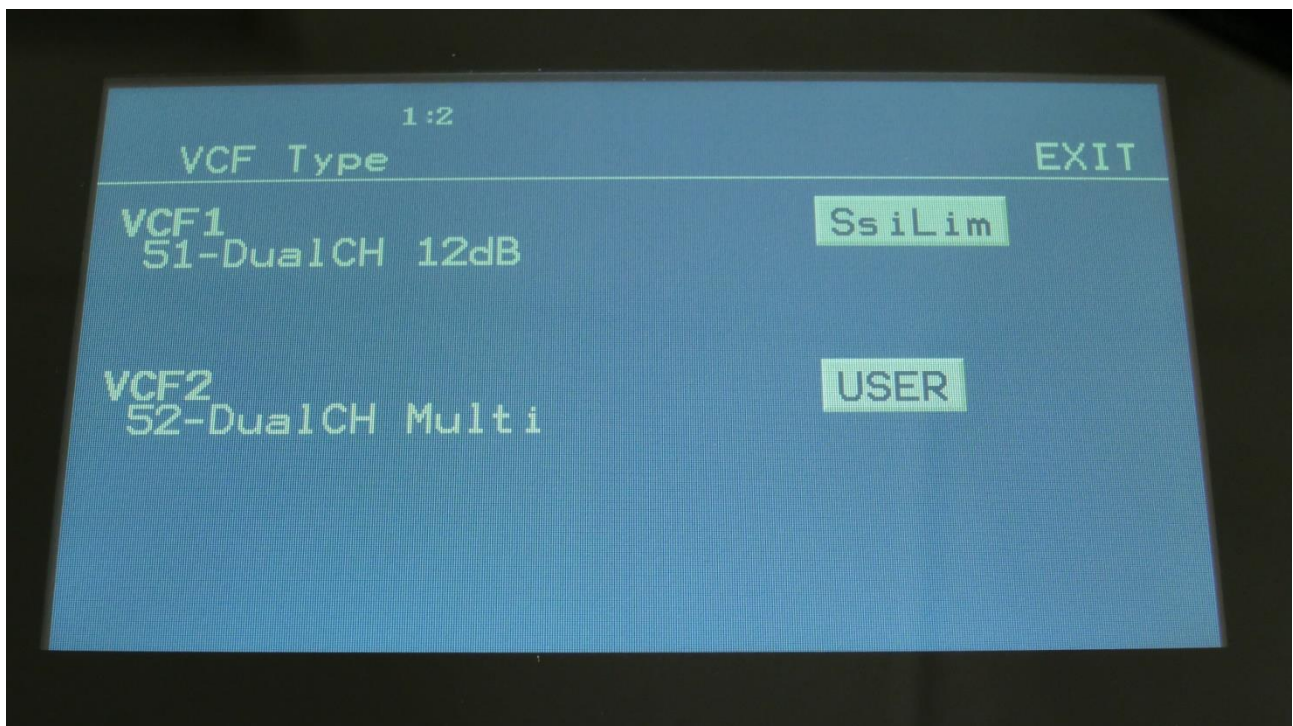

Turn Edit Knob 1 to select Filter Board 1 (**VCF1**), and Edit Knob 5 to select Filter Board 2 (**VCF2**).

Possible types (Explanation of each filter type in the Synth Modules section, analog filter boards chapter):

- 1: VCF1 – Single filter.
- 2: VCF2 –Dual filter.
- 3: VCF3 –Trippple filter
- 4: VCF4 –Gotharman's first filter.
- 5: VCF5 -MiniProphet filter.
- 6: VCF6 -SP filter.
- 7: VCF7 –Tubaz tube filter.
- 8: VCF8 – Dual band SSI filter.
- 9: VCF9 –Xtra distortion.

10: VCF10 –SSI2140.

11: VCF11 –Zaturn filter

12: VCF12 –Filter Bank

13: VCF13: –Diode Drive filter

14: VCF14 –Transistor Ladder filter

49: User filter DUA. A filter board, set up as two single filters, which can be defined by you or a third party.

50: User filter SNG. A filter board, set up as one dual filter, which can be defined by you or a third party.

51: VCF51-Dual Channel 12dB (pre-installed).

52: VCF52-Dual Channel Multi (pre-installed).


Urano comes with 2 dual line analog filter boards installed, to give it a total of 4 analog filters.

When any of the dual channel filters are installed, each of these will show as 2 separate filters, in the synth modules.

VCF8 cutoff limitation

With the Space filters on VCF8 (Dual Band SSI), it is possible to tweak the parameters to extremes. When the Space parameter is set to a low value, and the Cut off parameters is also turned down to a low value, the Space parameter, which is set as an offset to cut off, will enter an extreme setting, which will cause the filter to generate noise.

Therefore a touch switch (**SsiLim**) has been added to the VCF Types pages. When this is on (dark blue with cream colored text), the Space parameter on any installed VCF8's, will work in a limited range, and will not be able to create deformed noise.

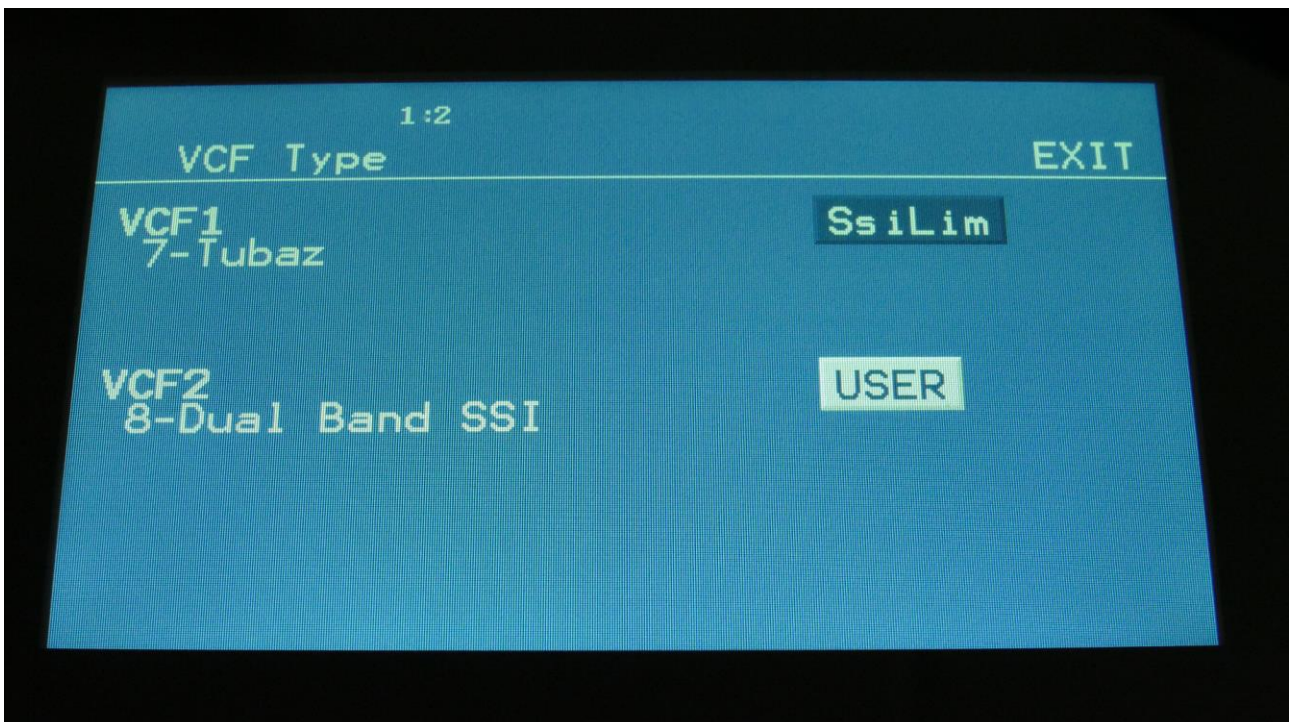

On the picture, the limitation is on. Make sure to keep it off (grey), to get the extra noise.

The User Filter

In this section it will be explained, how to define parameters for your own filter board design, and how to import filter board parameters, created by yourself or a third party.


For the information needed to design your own filter board, please refer to the Filterboard Specs, that are available for download at www.gotharman.dk

It is possible to name each parameter and to set, if each parameter should work in inverted mode. This can save you from having to add inverter circuits to your design.


It is also possible to export and import the parameters as a file to a USB stick, so that you can share it with other users, if you decide to sell filter boards of your own design.

Setting up the user filter

Go to the MOR>VCF TYPES page.

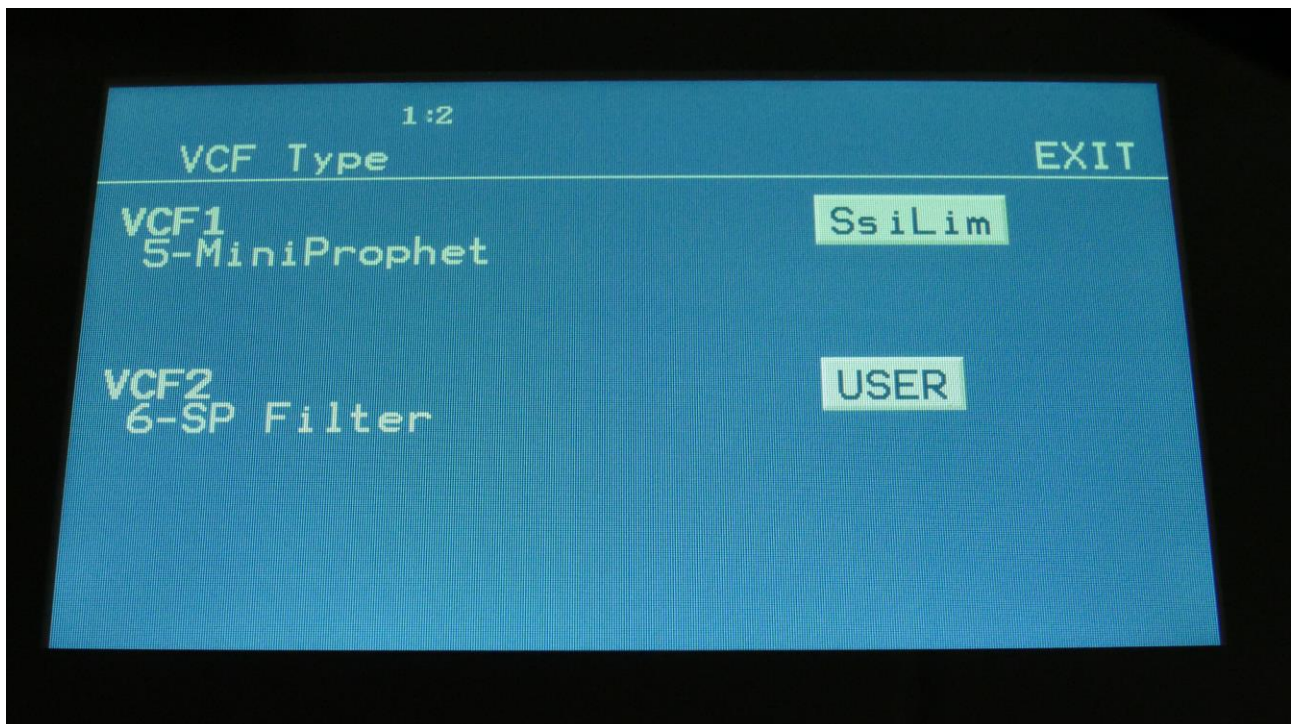

Touch the “USER” button to enter the User filter pages.

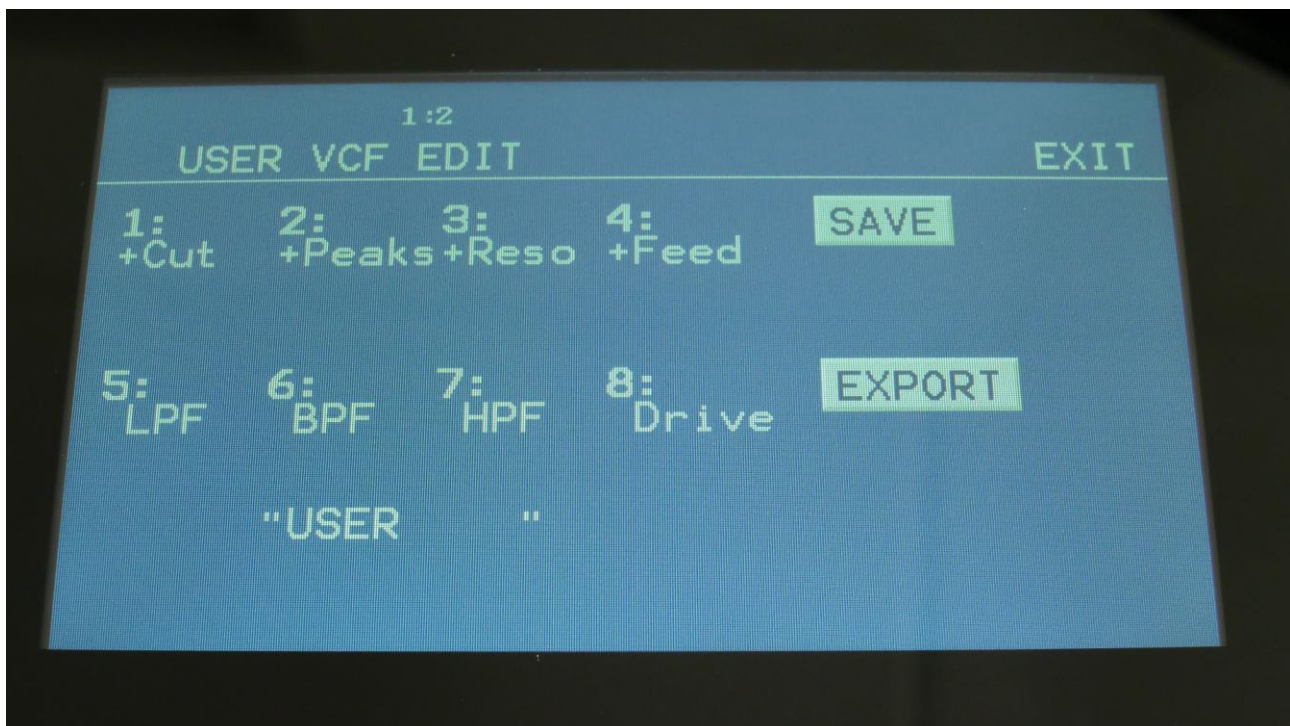

On this page you will see an overview of the parameter names, for the User filter.

In the top of this page, you will find the 4 main parameters, numbered 1 to 4. These are the ones, that generates the 4 CV voltages. Turning Edit Knob 1 to 4, will set each of these parameters to work as normal or inverted, indicated by a + or a – just before the parameter name.


Parameter **1** will control the voltage sent to the “**Cut**” CV output, parameter **2** will control the voltage sent to the “**Peaks**” CV output, parameter **3** will control the voltage sent to the “**Reso**” CV output, and parameter **4** will control the voltage sent to the “**Feed**” CV output.

The VCF modulation sources will be named in the same way as these main parameters.

The lower row of parameters, numbered **5 to 8**, shows the parameter names for the 3 **digital switches** (5 to 7), and for the filter output **1 and 2 output balance** parameter (8).


In the bottom of this page, you will find the name of your filter, which initially is “USER ”.

To set the name for a parameter, simply touch the parameter name. The touch keyboard will now pop up.

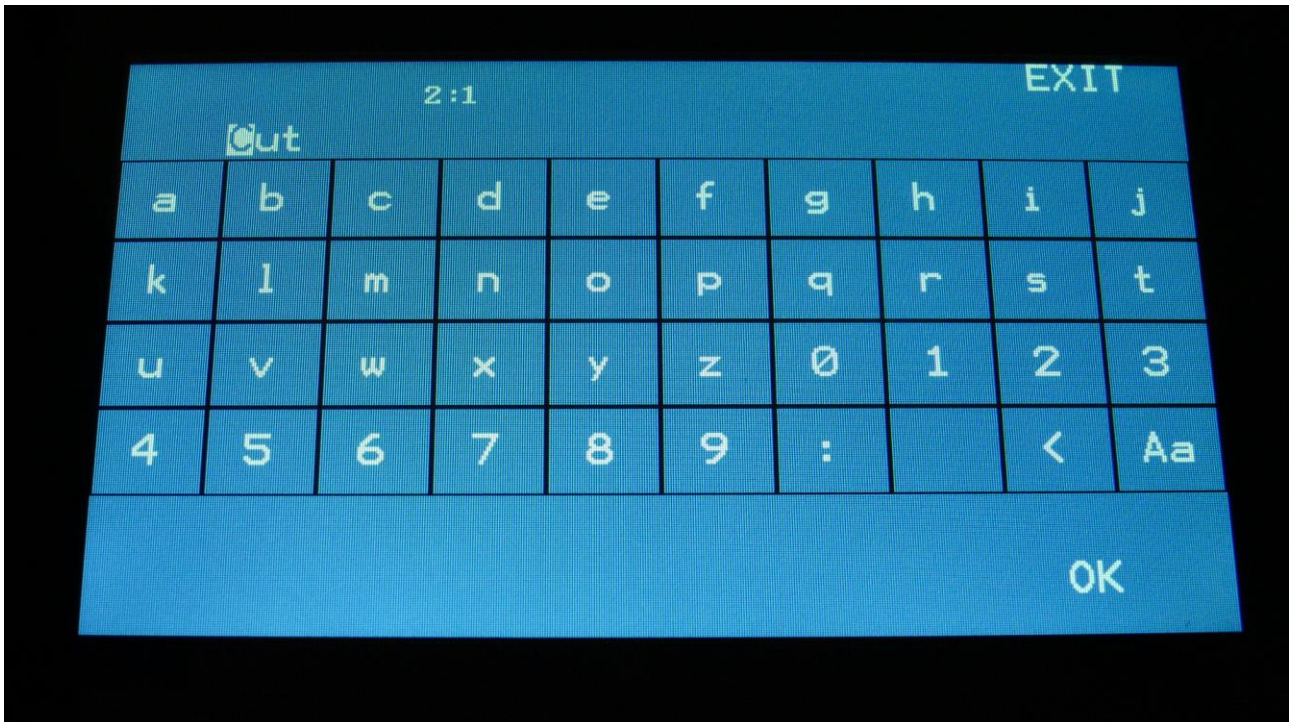

Punch in the name you find practical for this parameter, and touch OK, to return to the User filter page. The name of each parameter can be 5 characters long.

Saving the User filter parameters

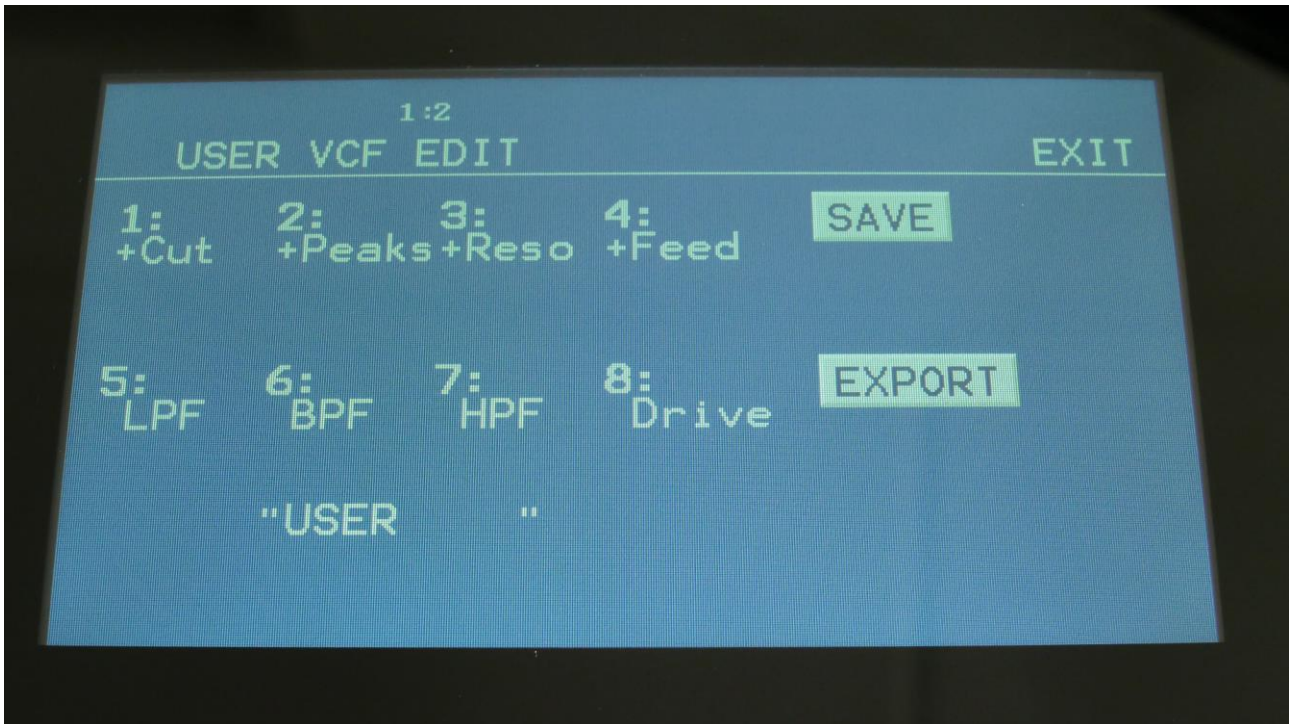


When you are done naming the parameters, and setting the normal/inverted switches, touch the SAVE button, to save the parameters. And don't worry if everything is perfect at this point or not. You can, at any time, return to the User filter setup page, and change the names and/or normal/inverted settings.

The touch keyboard will now pop up.



Punch in the name of your filter. This name can be up to 8 characters long. Touch OK to save, or EXIT to quit without saving.

You are now back on the User filter page, and the name has changed.

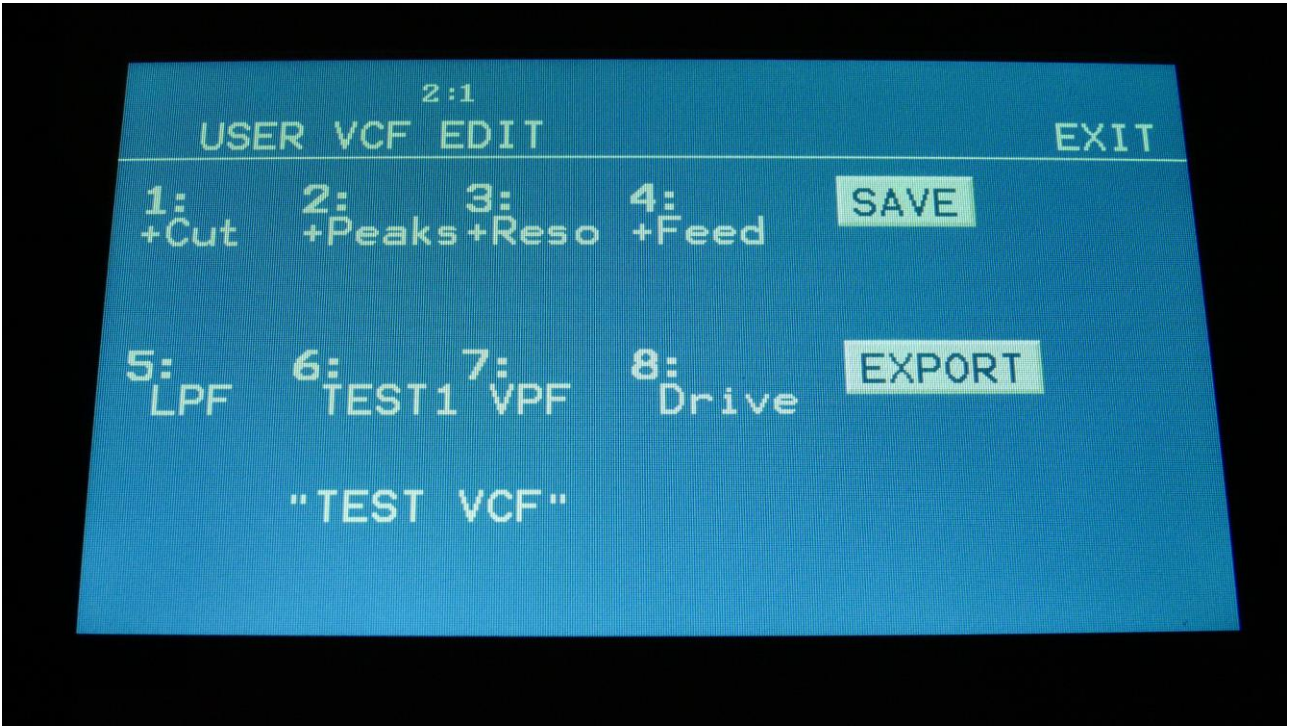

Exporting the User filter parameters to USB stick

It is possible to enter the USB export page directly from the User filter page, by touching the EXPORT button. It is also possible to enter this page, in the same way as you usually enter the USB pages.

An extra touch button has been added on the USB Export page, "VCF".



Touching the VCF touch button, will immediately export the saved User filter parameters to the currently selected folder of the connected USB drive. The file will be named the same as the user filter, with .VCF added as the ending. When the export is done, it will return to the main USB page.

Please notice, that if you enter the USB Export page directly from the User filter page, it will be located in the root directory of the connected USB drive, so you might want to hit Exit, and select the proper folder, before you export the file.


Importing User filter parameters from USB stick

On the USB pages, simply select a .VCF file, and touch Import. The User filter file will now be imported and saved. If your Urano already contained saved User filter parameters, these will be overwritten, so if you plan to use this, remember to export it first.

The VCF files can only be imported as single files. They can't be imported together with multiple files.

FLASH Memory Check

From MOR page, touch FLASH to enter this page:

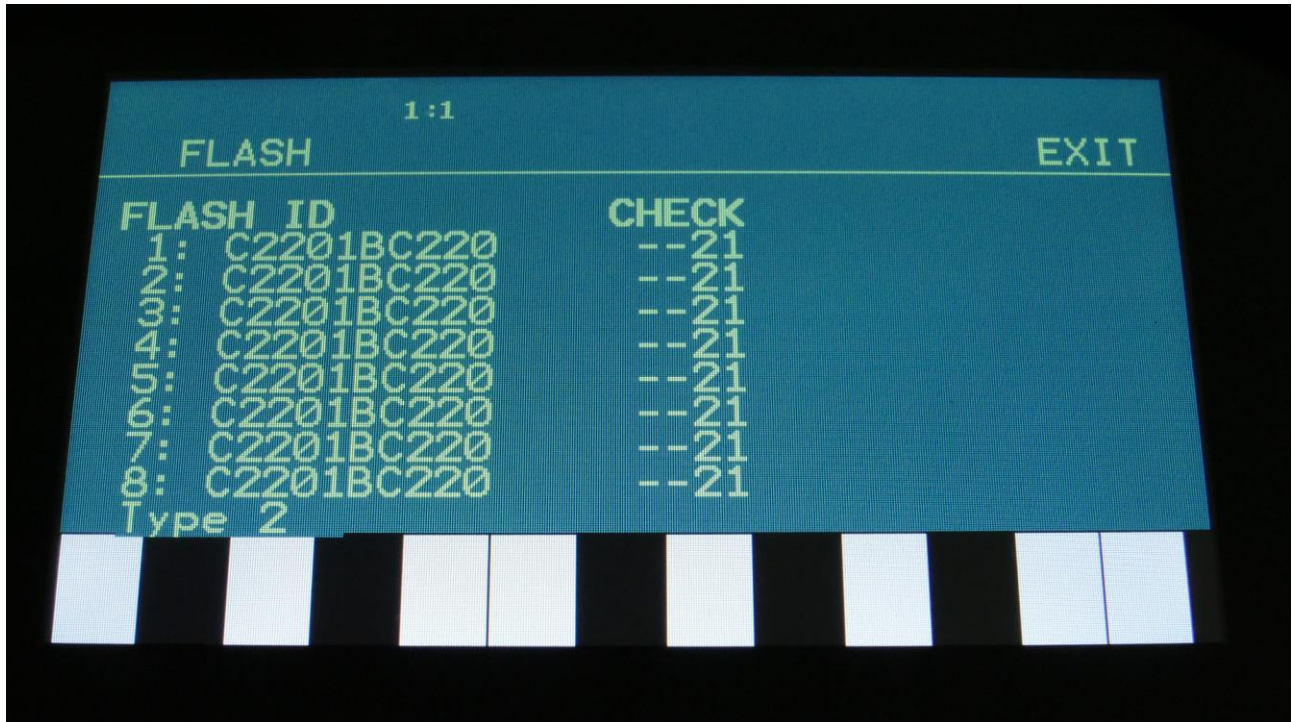

On the 193 min. model, this page should look exactly like on the picture. On models with less sample memory, the numbers will slightly differ, and it might say Type 3 in the bottom.


If you should ever experience any issues with missing samples or presets, please take a picture of this screen, and email it to Gotharman's.

Delete a Sample Bank

It is possible to completely erase the sample banks. Please think about it, before you do that, and back up your samplings as described in the USB section later in this manual, since if you don't have a backup, it will not be possible to recover your samplings again.

From MOR page, touch DEL SmpA, to erase sample bank A, or touch any of the 3 other choices, to erase the respective sample bank.

Urano will now ask:

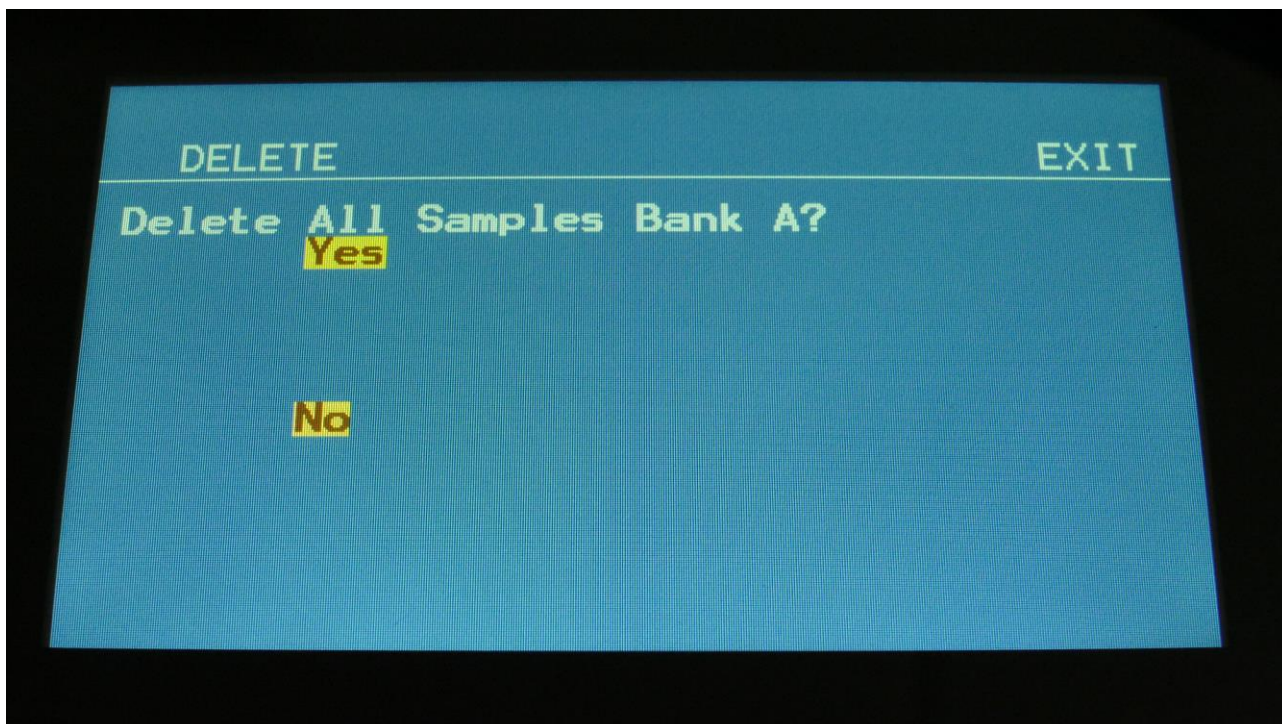

If you are really sure, that you absolutely have to do this, touch "Yes" to start the erase. The sample bank will now be completely wiped out. While it is being erased, Urano's 16 step buttons will run a sequence. When the step buttons shuts off, the erase has been done, and Urano will return to the MOR page.


If you don't want to do this anyway, touch "No" to exit.

Delete all Presets and Songs

It is possible to completely erase all presets and songs. To do that, if you are really sure, that you would like to, from the MOR page, touch DEL Prs.

Before you do this, please back up your presets as described in the USB section later in this manual, since if you don't have a backup, it will not be possible to recover your presets again.

Urano will now ask:

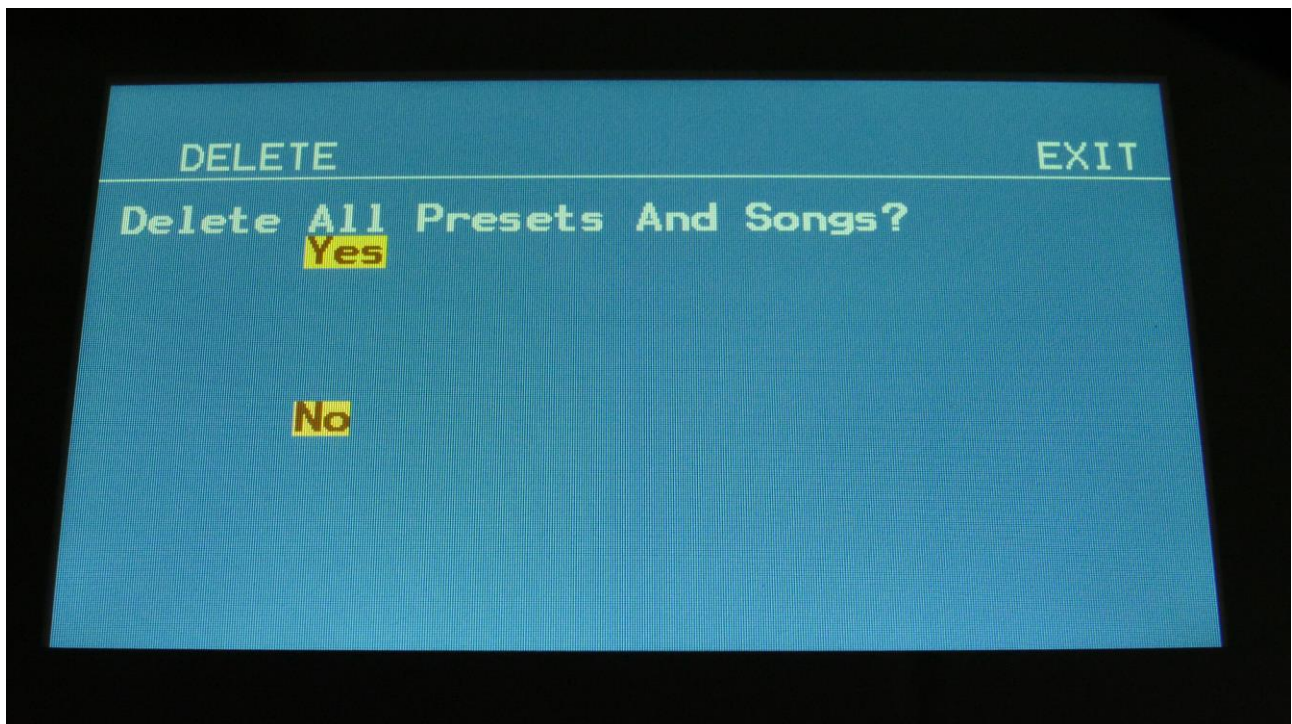


If you are really sure, that you absolutely have to do this, touch "Yes" to start the erase. All presets and songs will now be completely wiped out. While these are being erased, Urano's 16 step buttons will run a sequence. When the step buttons shuts off, the erase has been done, and Urano will return to the MOR page.

If you don't want to do this anyway, touch "No" to exit.

C.P.

From MOR page, touch C.P. to enter this page:

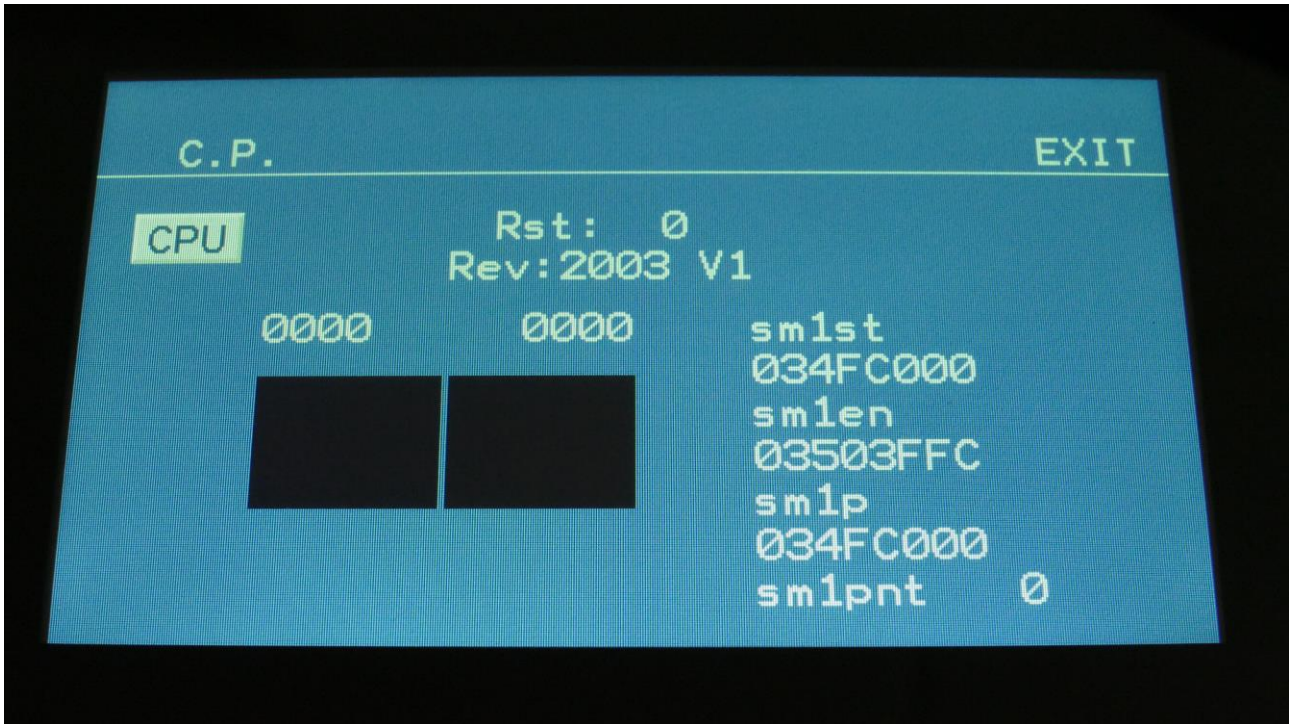

This is a service page, and does not really have any practical user functionality, except for the “CPU” touch button. If you touch this, so that it turn dark blue, Urano will show how much CPU power is used, on the Preset Select page.


Preset/Song Mode

Touch this to toggle between preset mode and song mode. Song mode is described later in this manual.

Display Update Rate

The display has been set to the maximum possible update rate. I have been testing this as much as possible, and did not discover any display freezes.

If you should discover any display freezes, go to the MOR page:

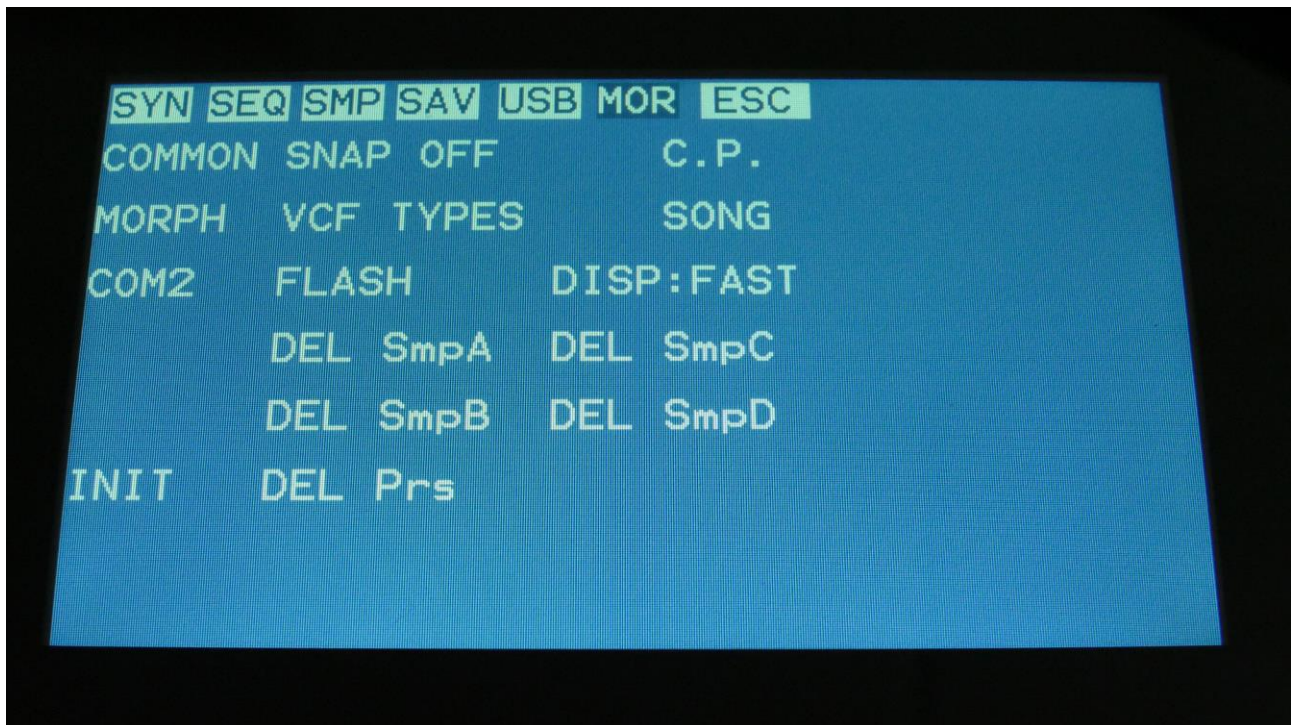

Touch the text: “DISP:FAST”. It will now change to “DISP:SLOW” and go back to the slower display mode, as before.

Please report any display freezes to: info@gotharman.dk .


Save Preset

When you have created a new preset, it should be saved for later recall. If you do not save your presets, they will be lost forever, as soon as you select another preset, or turn off your Urano.

A preset that is saved on Urano contains all the data previously described in this manual:

- All sequencer data
- All synthesizer modules settings
- All effects settings
- All CV in/out settings


From the Preset Select screen, touch the EDIT field, to enter the Synth Modules page:

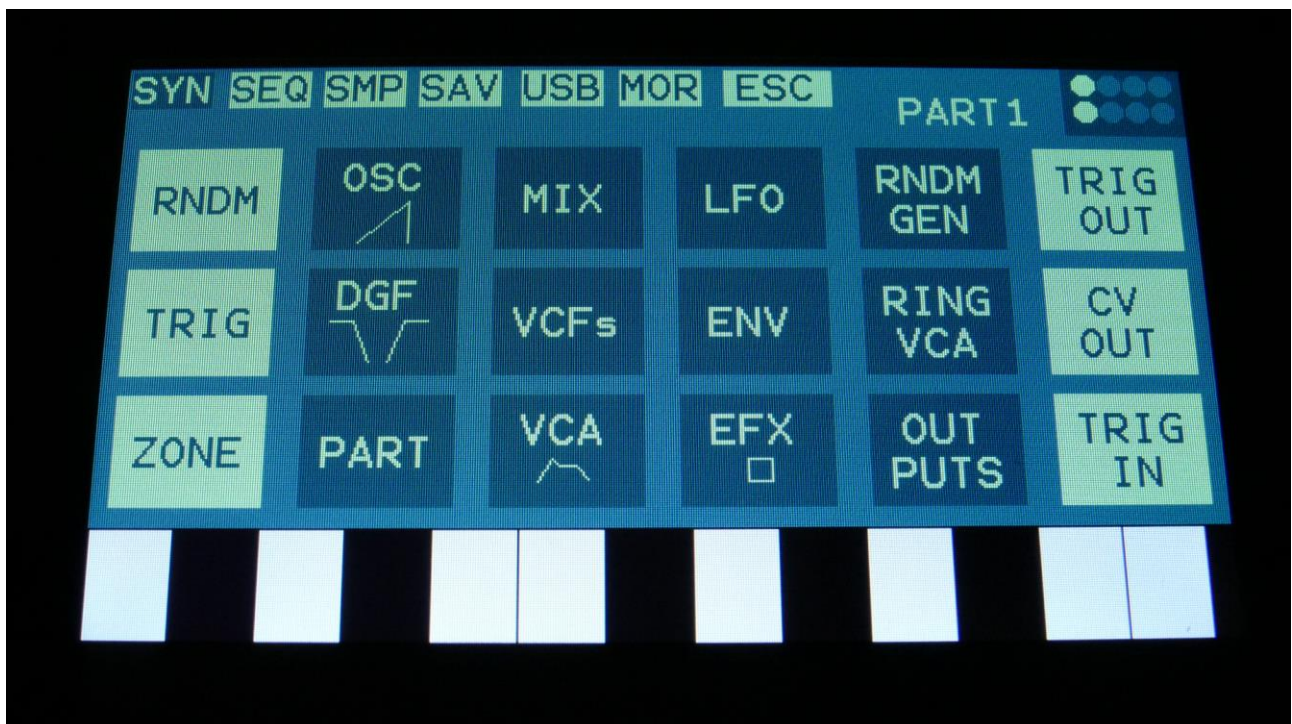

On the navigation bar at the top of this page, touch SAV.

OR: Hit the Func/mute button, so it lights up, and hit step button 7, marked "Save".


You should now enter this page:

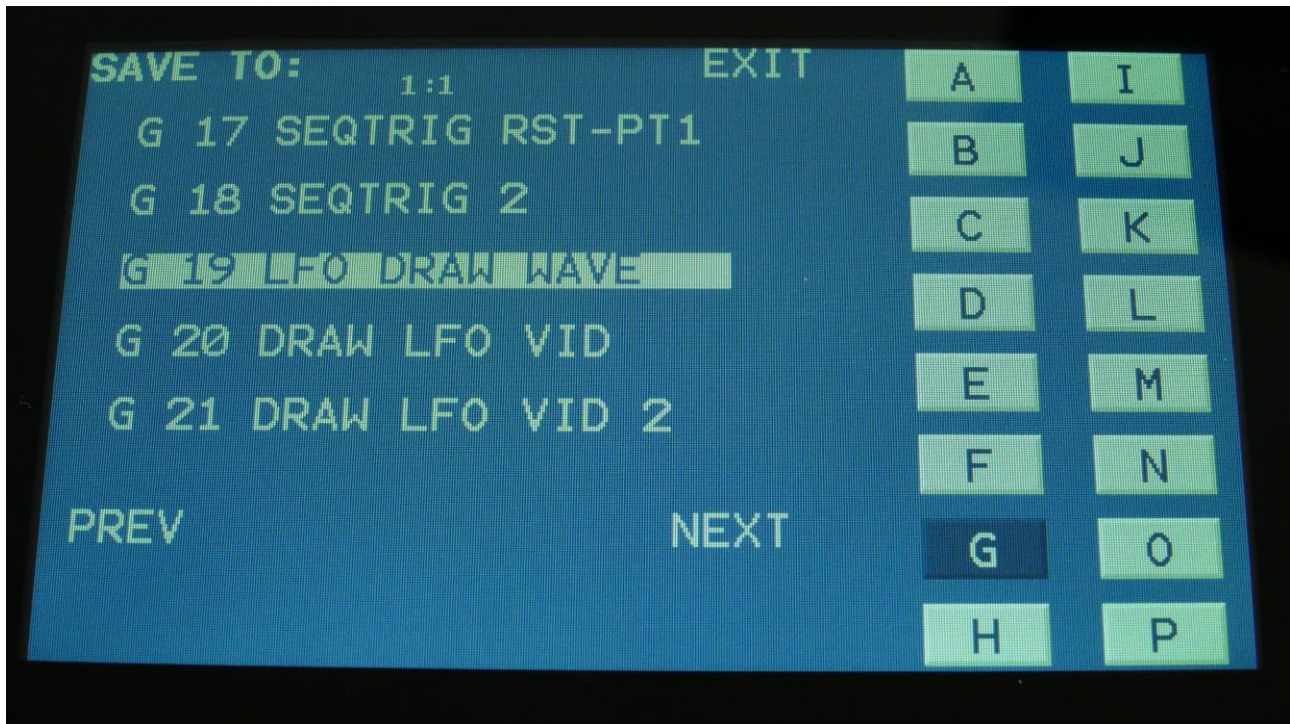


Touch the preset location that you would like to save your new preset to. If it is not shown, touch PREV and NEXT and/or the bank select buttons to reach it.

Preset number and name is shown for presets that are already saved. If you save your new preset on such a location, the old preset will be overwritten. On preset locations, where a preset has not yet been saved, the name will be shown as "<empty>".

When you touch the preset location, that you would like to save your preset to, you will enter this page:

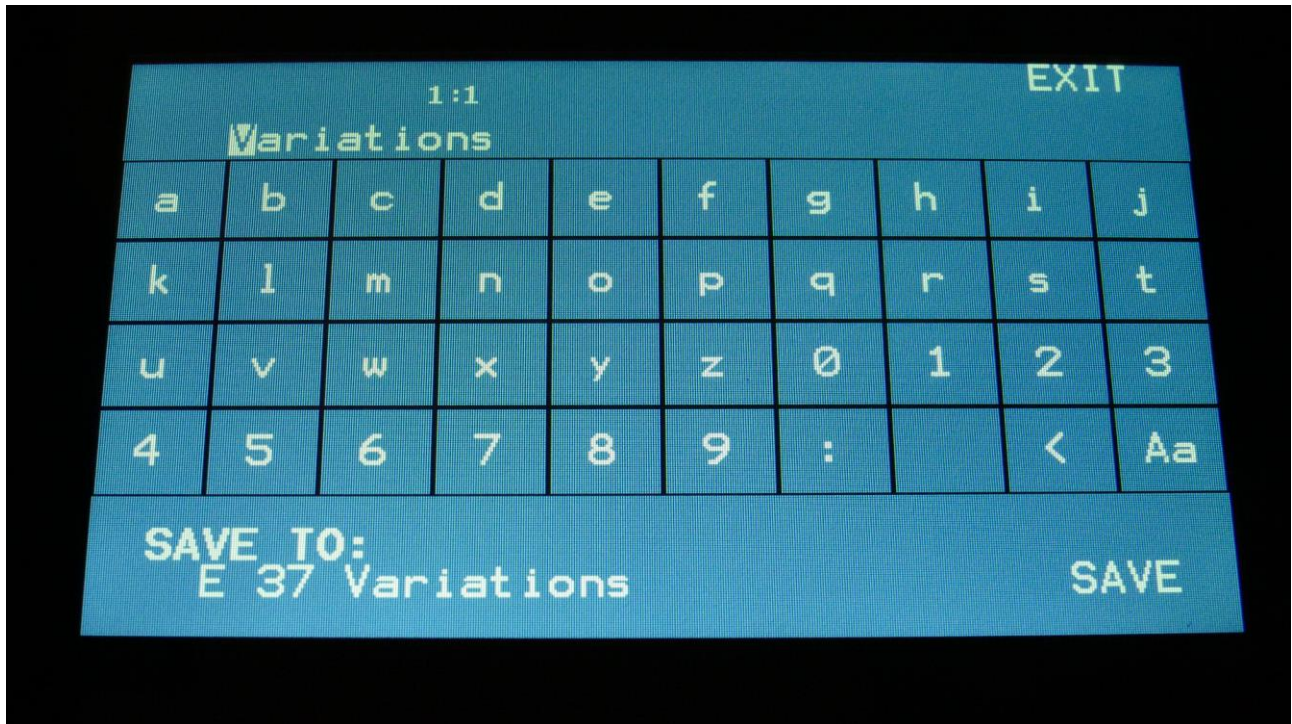

Type in the name for your preset. This can be up to 16 characters long.
“Aa” will switch between uppercase/lowercase letters, and numbers/signs:

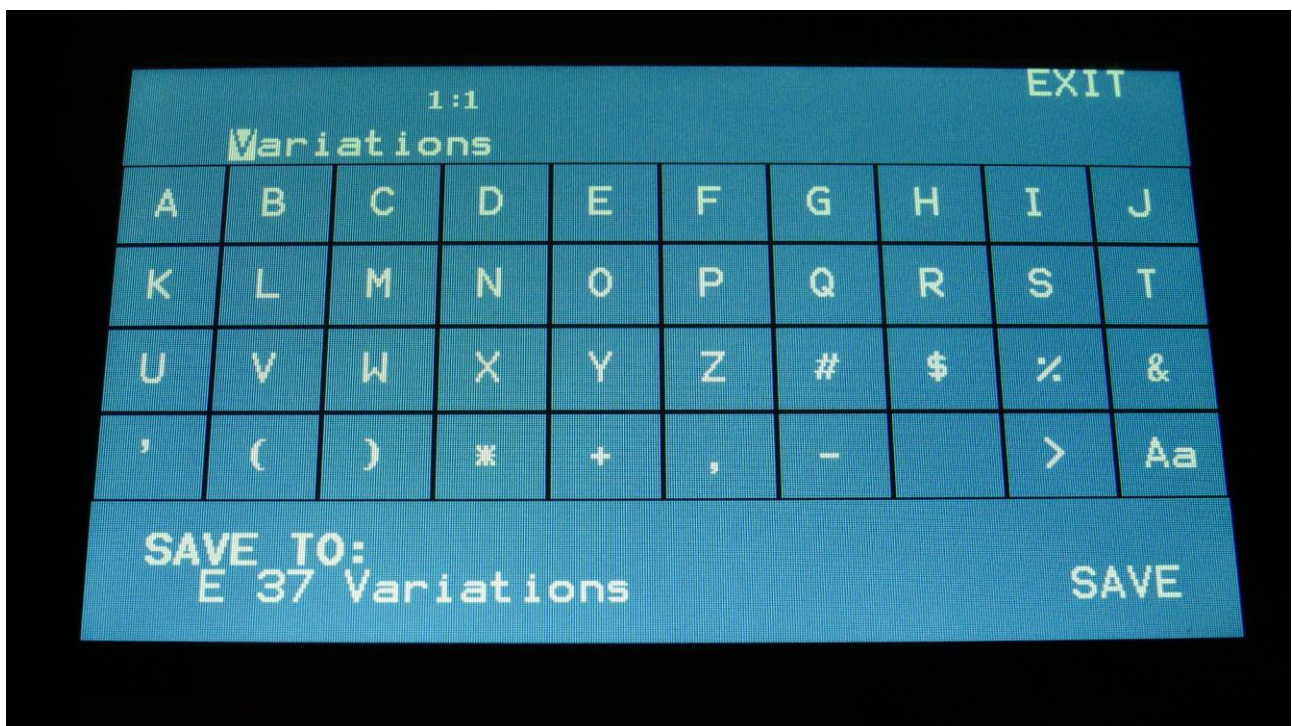

“<” will move the cursor back, for correcting characters, “>” will skip characters.

Touch SAVE when you are done. Your preset will now be saved, and Urano will exit from the save pages.

Song Mode

It is possible to arrange chained playback of Presets in 1024 Song locations.

Each Song can have up to 128 steps. For each Song step a Preset can be selected, it can be set how many times track one of the preset should play back, until it advances to the next song step, and tracks can be muted/unmuted.

If the last step of the Song is set to "End", playback will stop, when the Song has played back the last preset. If the last step of a Song is set to "Loop", it will jump back to step 1, and continue playback, after the last preset has played.


Songs can be realtime recorded, simply by hitting the "Rec" button on the song main page, then the "Play" button, and then play back the presets that you want in your song.

Songs can also be recorded/edited by putting the Preset numbers and number of times to play back, into a list.

Any presets can be used in any songs.

In song mode you still have access to edit all preset synth parameters, in the currently playing preset, but you can't immediately save any changes you make, since in song mode, you can only save the song.

By setting the CONT function on the Seq Main/Last Step page, it is also possible to set if the song should start playing back from the beginning, or if it should continue from where it was stopped, when you hit the Play button, to start playback.

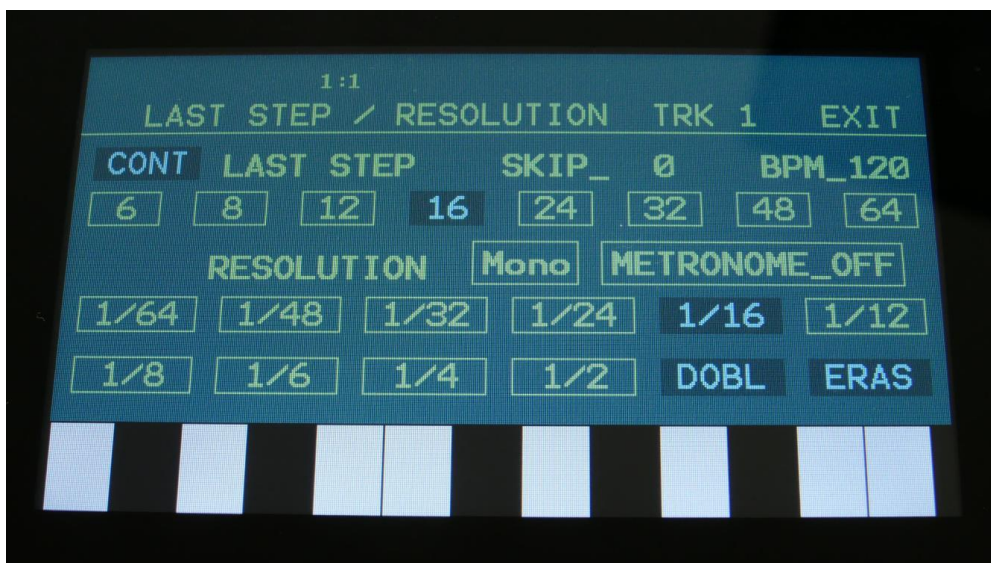


Accessing Song Mode


If you would like to make a new song from scratch, it can be a good idea to select the preset you would like to have on the first song step, from the preset select page, before you enters song mode. This is not something you have to do, I have just experienced, when testing this, that it makes things a bit easier. When you select a non-recorded empty song, the last selected preset will automatically be placed on song step 1.



From the Preset Select page, hit the EDIT field.

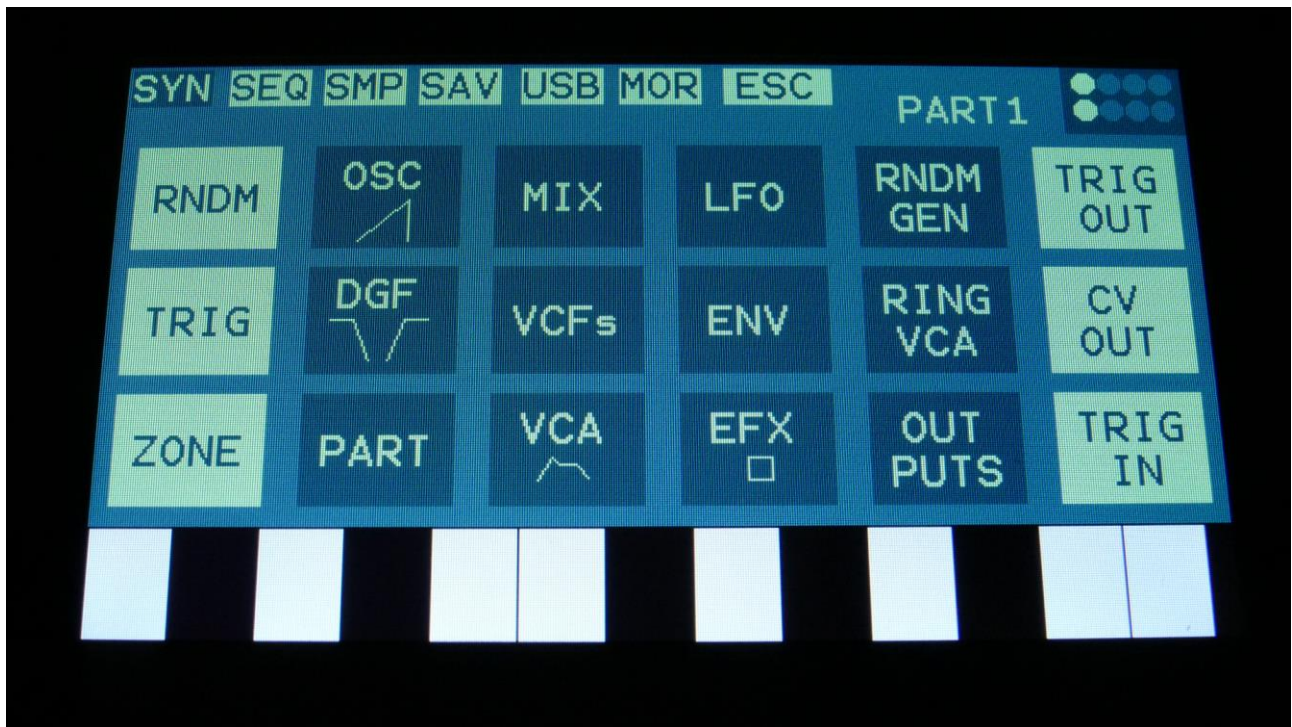


On the navigation bar at the top of the screen, touch MOR.

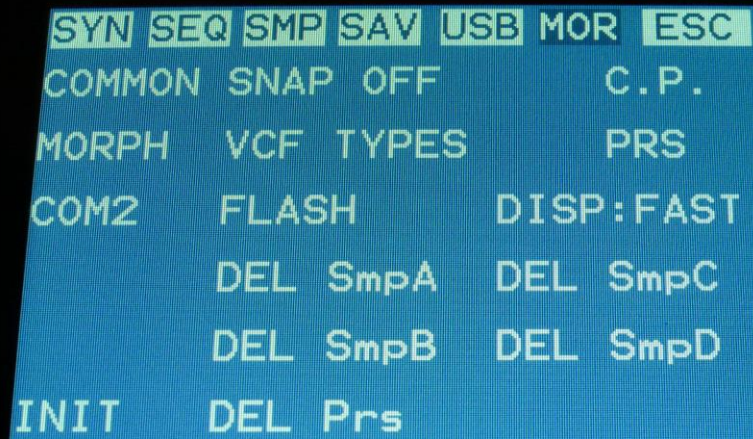

```
SYN SEQ SMP SAV USB MOR ESC
COMMON SNAP OFF C.P.
MORPH VCF TYPES PRS
COM2 FLASH DISP:FAST
      DEL SmpA DEL SmpC
      DEL SmpB DEL SmpD
INIT  DEL Prs
```

In the far right row, you will find the text PRS. Please touch this, after making sure, that the sequencer is stopped.

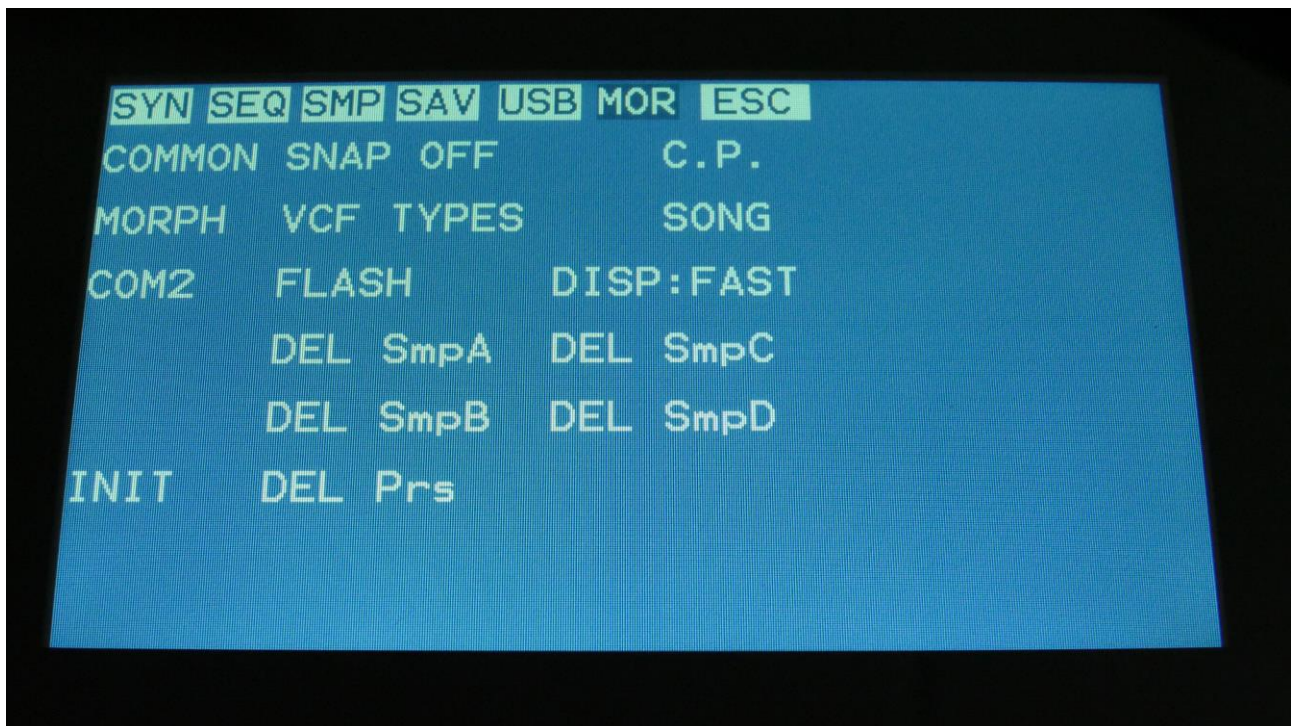

Now PRS turns into SONG, and Urano are in song mode. If you would like to go back to preset mode, just touch SONG.

The Song Edit Page

To enter the Song Edit page, just touch SEQ on the navigation bar at the top of the MOR page:



On the Song Edit page, you have an overview of the programmed song steps, and the possibility of editing these.

By touching any of the song steps, you can select this step for editing. The selected step is shown, boxed in white. The little yellow square between the step number and the preset name, is showing what song step is currently being played back.

For each song step, the song step number is shown, the preset number and name, and the number of times track 1 will play back (under the X).

To edit a song step, turn edit knob 1 to select <End>, preset bank A to P, or <Loop>. <End> will make song playback stop, when it reaches that step, <Loop> will make it jump back to song step 1, and start all over again.

Turn edit knob 2 to select the preset number, and edit knob 3 to select the number of times, you want track 1 to play back, for that step.

Push and hold the Func/Mute button, to mute/unmute tracks on the selected song step, via the step buttons. Only tracks that are unmuted in the preset itself, can be muted by the song sequencer.

8 song steps are shown at a time. Touch the arrows to select the previous or next 8 song steps. The total number of song steps is 128.

Touch EXIT to exit from the Song Edit page, and touch REC to start song realtime recording. This will be explained very soon.

The Song Select Page



When you, in song mode, exit from the Edit Groups pages, you will exit to the Song Select page, instead of the Preset Select page. This reads out "Song" just above the song number and name, instead of the "Preset", to make sure that you know where you are.

On the top of the Song Select page, you might have noticed, that the sequencer position ruler has gained an extra digit. The first digit of this now shows the song step number, that is currently being played back. The 2 other digits is still showing the bar and the beat of the preset, that is currently playing back.

Other changes to this, compared to the Preset Select page, are that the field in the upper left corner, that was used to select preset with, now has been renamed to SONG, and is used to select song with. It is only possible to select another song, while the sequencer is stopped.

Besides from these changes, everything is the same as in preset mode. You can still edit the synth module parameters of the currently playing preset.

Selecting a song:

Make sure that the sequencer is stopped.

Touch the “SONG” field. A list of 5 songs near the currently selected song, will now appear:




Touch “PREV” or “NEXT” to view the previous or next 5 songs, and/or the bank buttons to select a specific bank, and finally touch the song name of the song you would like to select. 1024 songs can be selected, from A01 to P64.

Urano will now jump back to the main Song Select screen, and show the name of the newly selected song.


When Urano is turned off, it will remember which song was selected, and start up with this, when turned on again. It will also remember if it was in preset or song mode, and start up in the same mode.

Song Realtime Recording

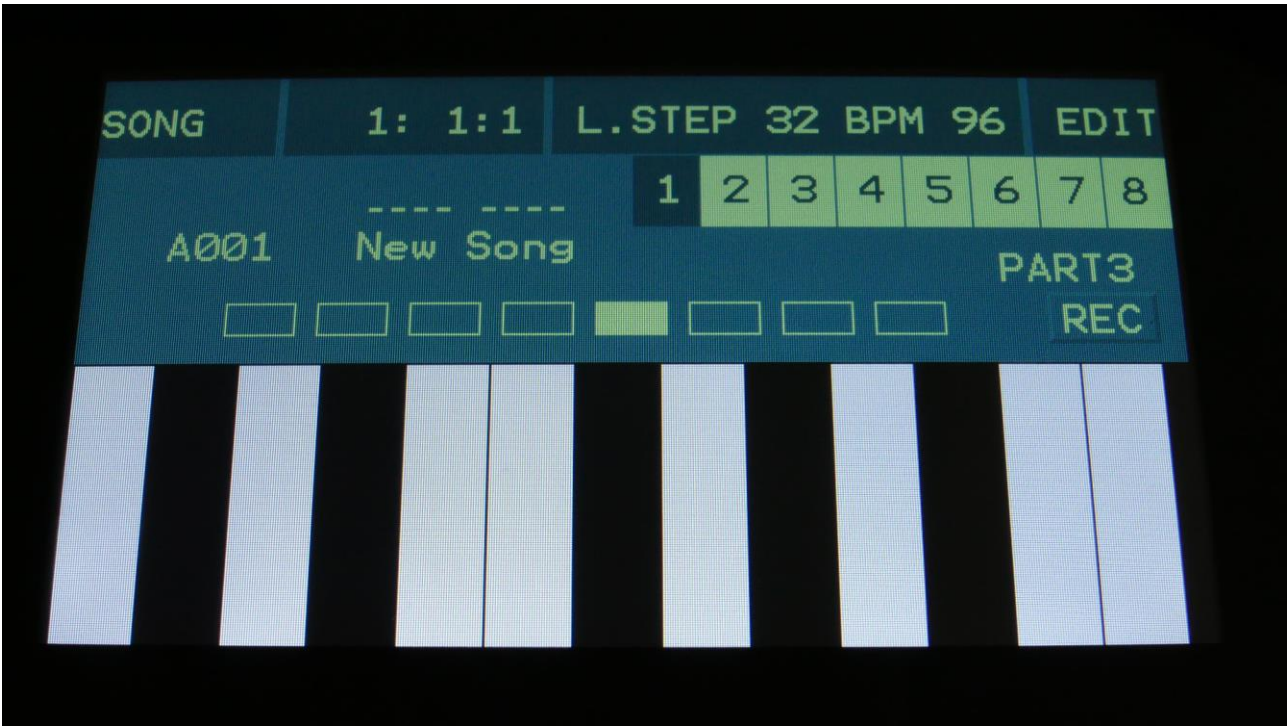


On the Song Select page, select the song you would like to record. 1024 songs are available, from A00 to P64.

Now go to the song edit page.

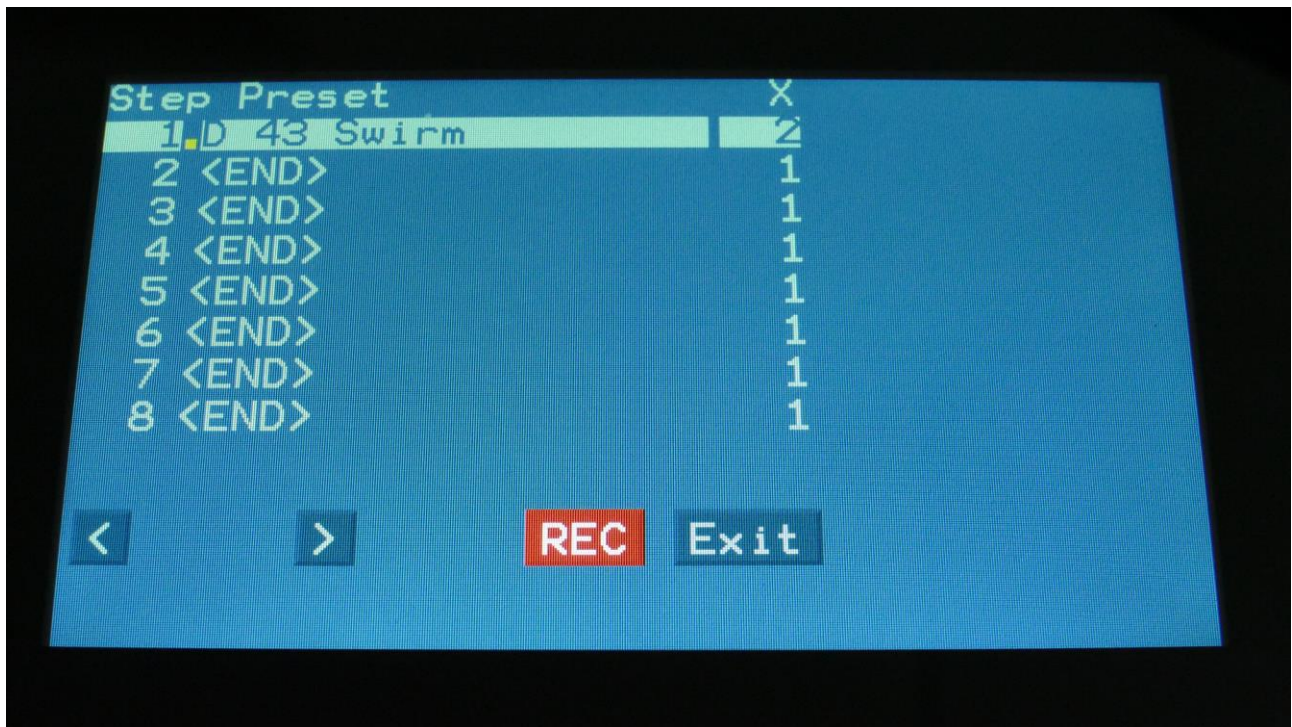

Make sure that the sequencer is stopped, and push the **“REC”** button, so it turns red.

Now exit to the Preset/Song select screen.

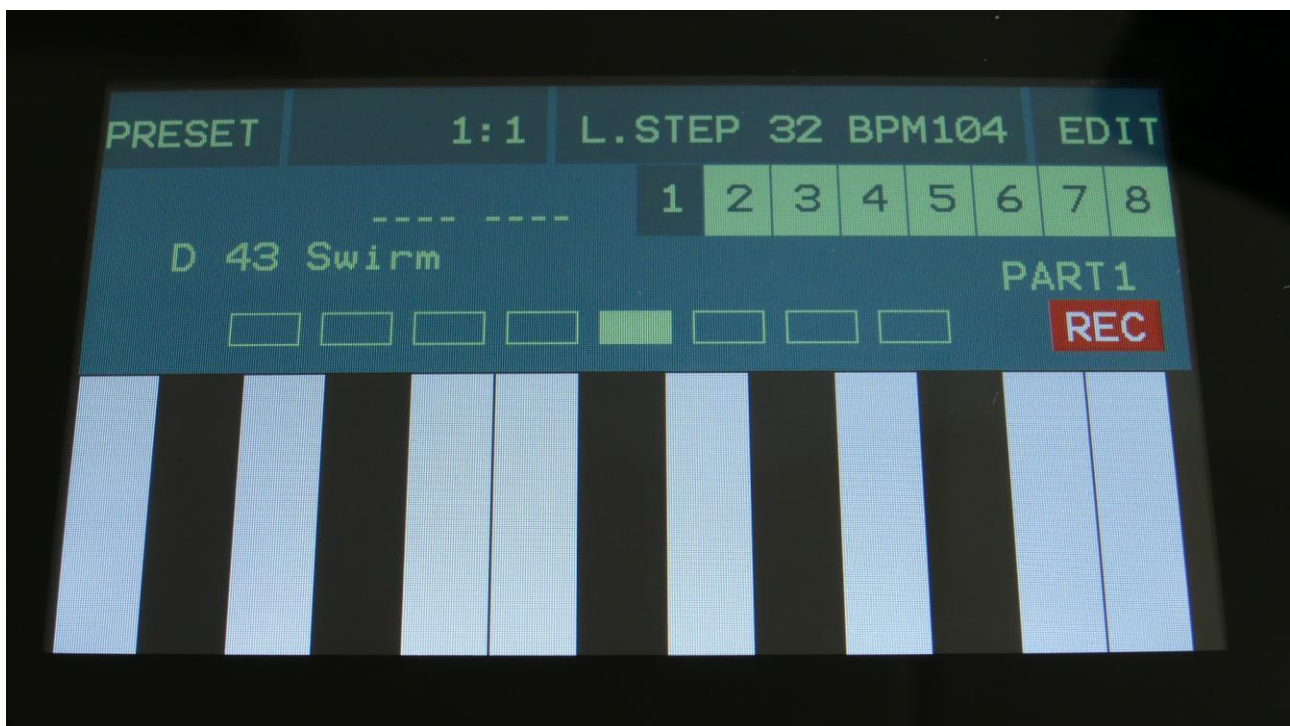

Urano will now show the Preset select page. The REC indicator on the preset select page, has now turned red, indicating that Urano is in recording mode. Song realtime recording can also be switched on or off, by touching the REC indicator.

If you selected an empty song, the last preset you selected, before you jumped to song mode, will be shown. If you selected a song that was already recorded, the preset on the selected step of this song will be shown.

Now, if the shown preset is the preset you would like to have on step 1 of your song, you can proceed recording your song, by pressing the Play button.

If you would like another preset on step 1 of your song, please select this, using the preset select field, and then push the Play button, to start the recording of the song.

The preset you selected will now start to play back.

From here you can now select other presets, at the time you want these to play back in your song.


Preset changes will only be registered and recorded, when track 1 of the currently playing preset reaches its end and starts over. When the changes has been registered, the song step number in the position ruler will increment by one.

While any preset is playing back, it is possible to mute/unmute the sequence tracks. Push and hold the Func/Mute button, and switch tracks on or off, using the step buttons.

To advance to the next song step, to have other tracks of the same preset muted/unmuted, simply reload the preset, by pushing and holding the Morph Set button, while pressing the Play button.

When you are done changing presets, and you think that your song is ready, hit the Play button to stop song recording.

Go back to the song edit page, and touch the REC button, so it turns grey again, to exit from song realtime recording, or simply exit to the preset/song select page, and touch the REC indicator.

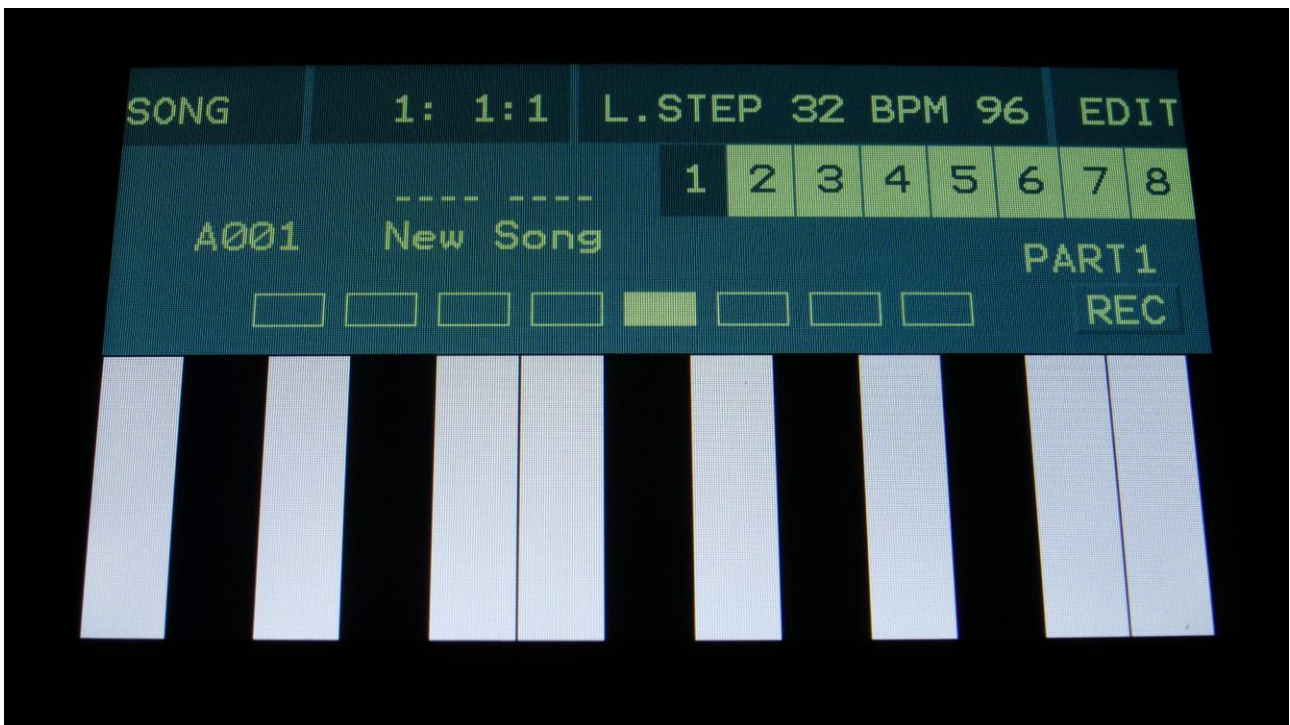


To listen to the song you have just created, just hit the Play button.

If there are anything you would like to edit, go to the Song Edit page, as described earlier.

If you would like to keep your work, you should save your new song.


Save Song

Urano songs are not saved within the presets, so they must be saved separately. To do so, when in song mode, from the song select page, touch the EDIT field to enter the Synth Modules page:

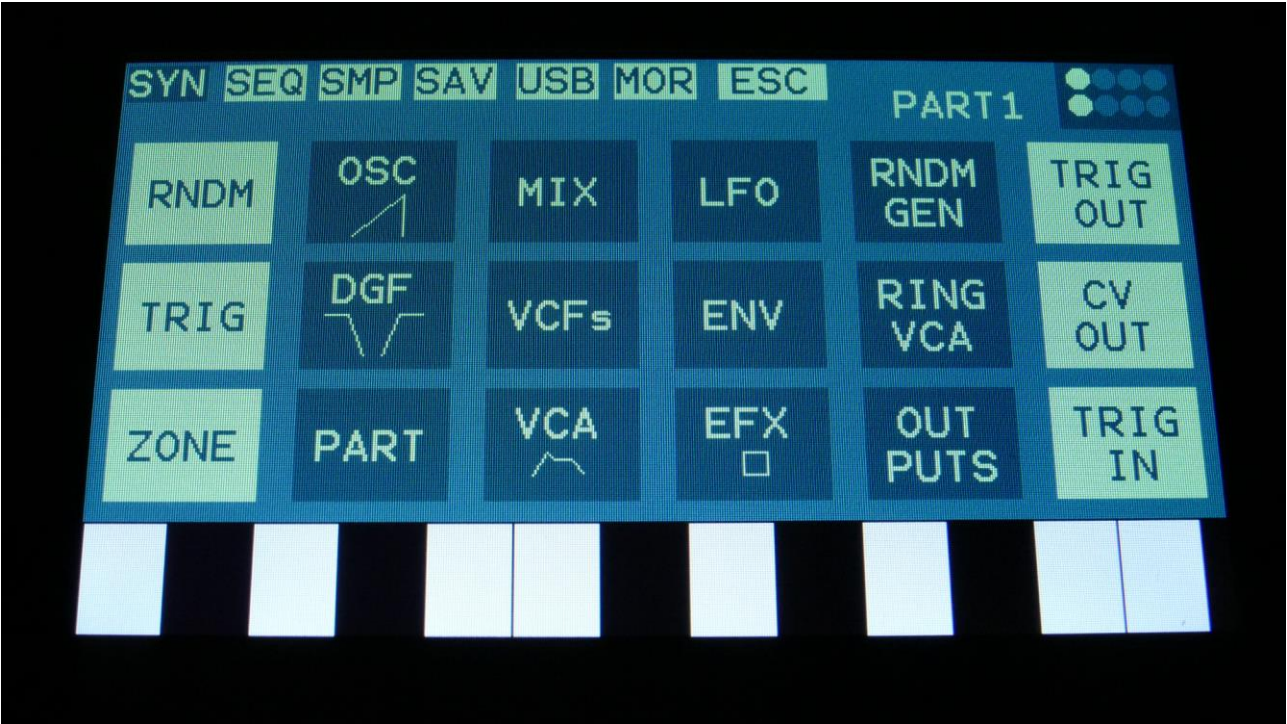

Touch SAV.


You should now enter this page:

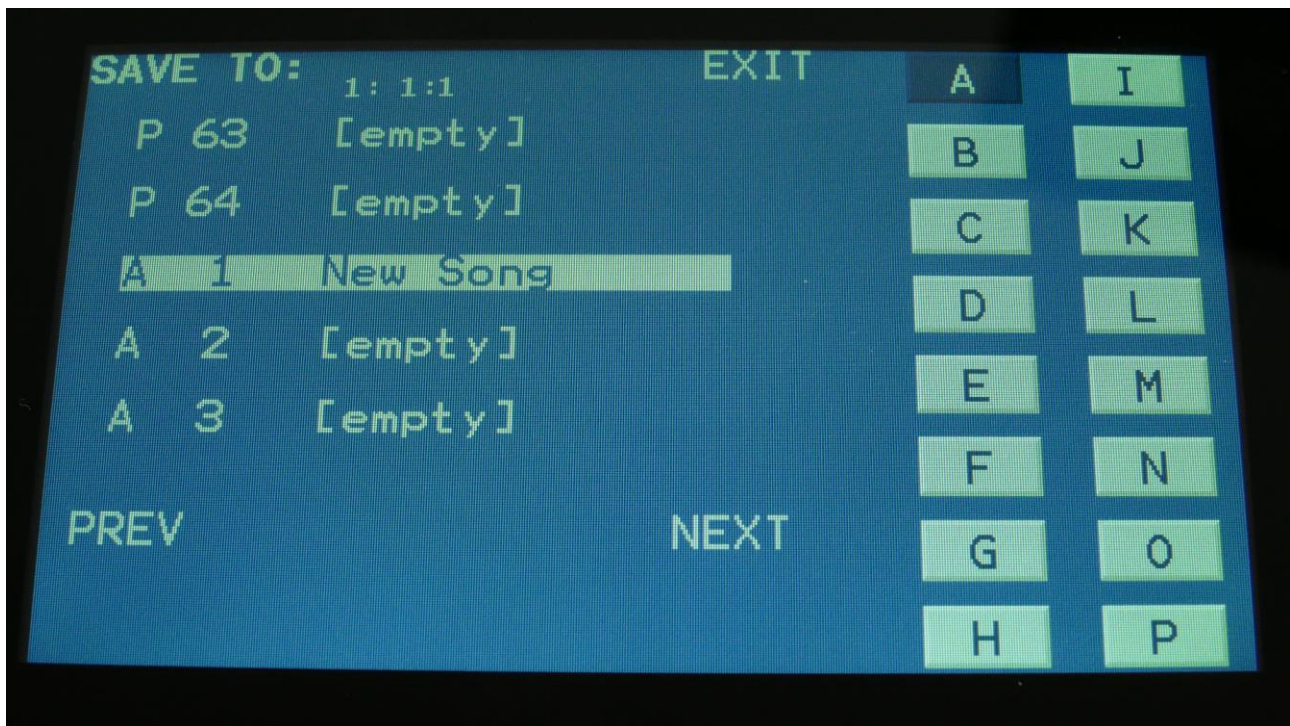

Touch the song location that you would like to save your new song to. If it is not shown, touch PREV and NEXT and/or the bank select buttons to reach it.


Song number and name is shown for songs that are already saved. If you save your new song on such a location, the old song will be overwritten. On song locations, where a song has not yet been saved, the name will be shown as "<empty>".

When you touch the song location, that you would like to save your song to, you will enter this page:

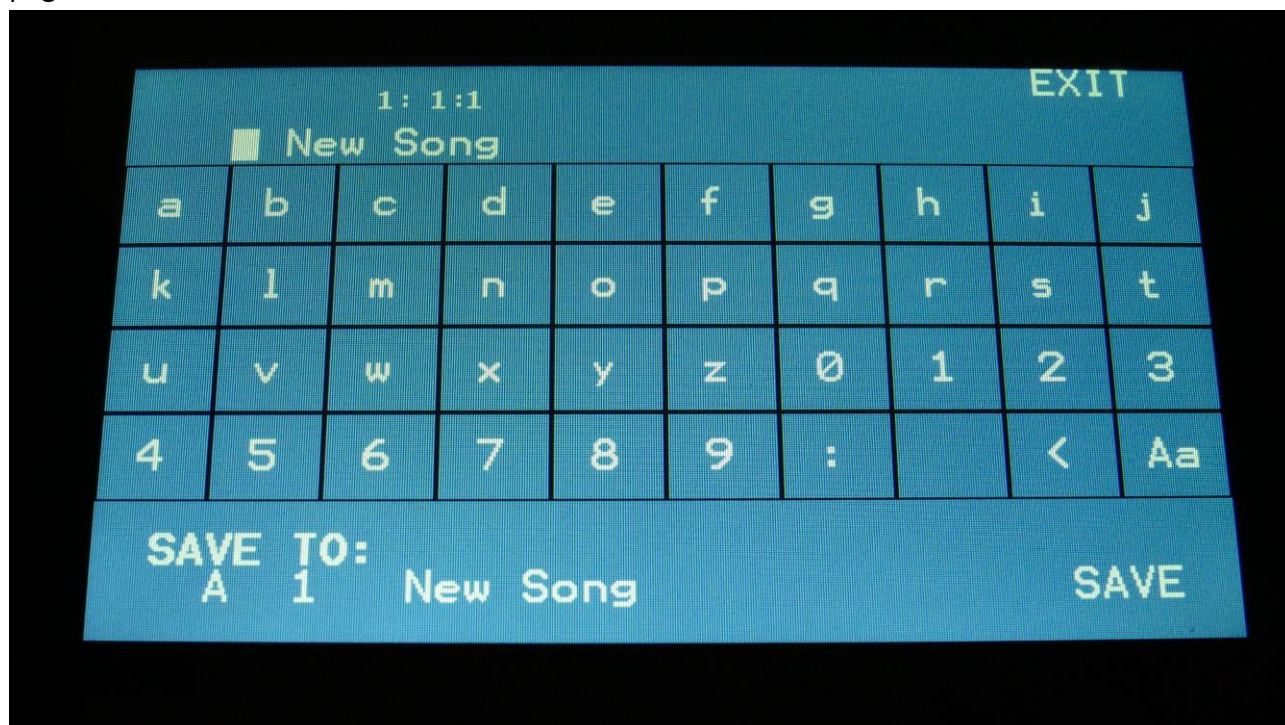

Type in the name for your song. This can be up to 16 characters long.

"Aa" will switch between uppercase/lowercase letters, and numbers/signs:

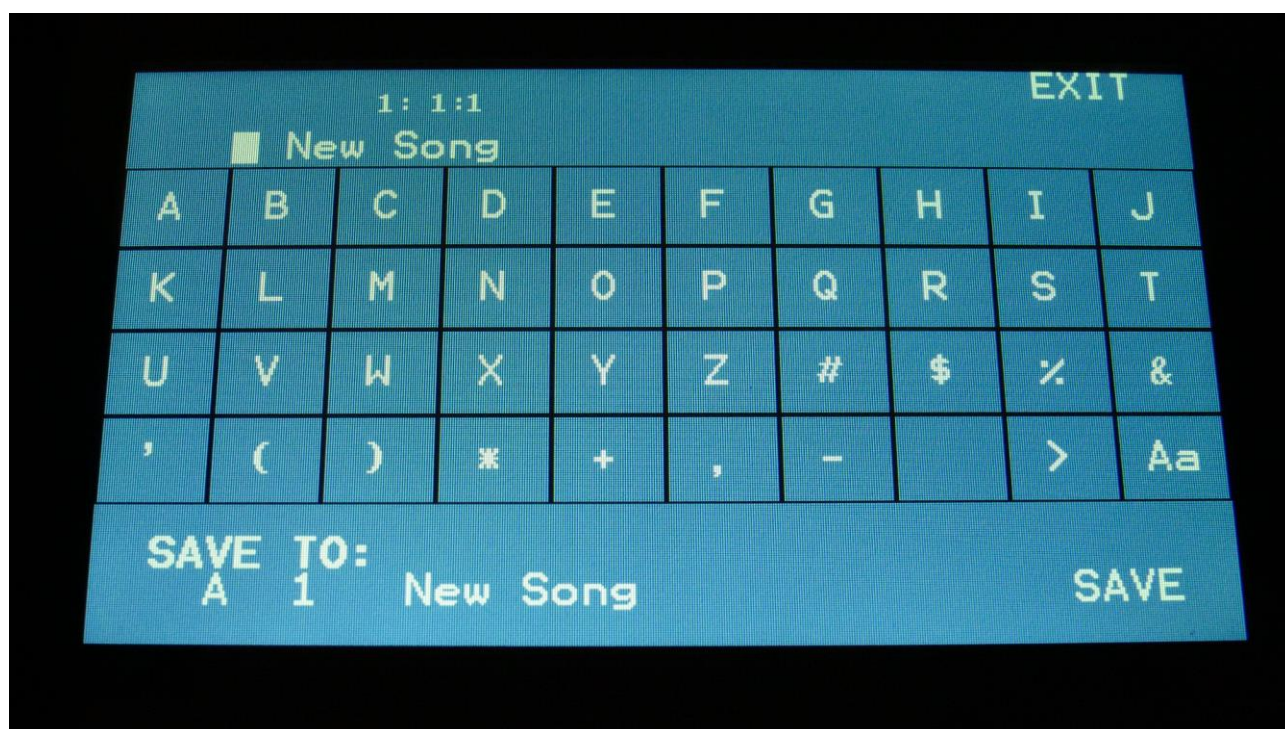


"<" will move the cursor back, for correcting characters, ">" will skip characters.

Touch SAVE when you are done. Your song will now be saved, and Urano will exit from the save pages.


Initializing a Song

If you would just like to start all over with an empty song, it is possible to initialize it.

To do so, in song mode, access the MOR page:

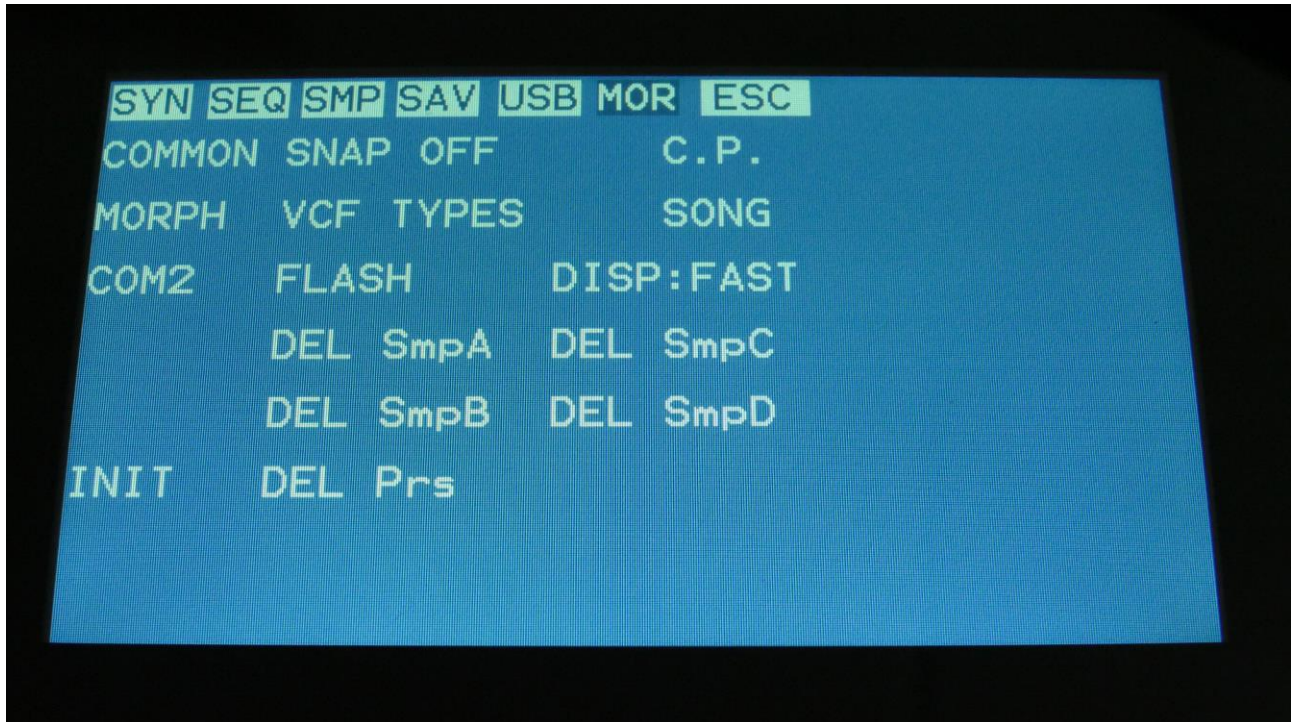

From here, touch INIT.

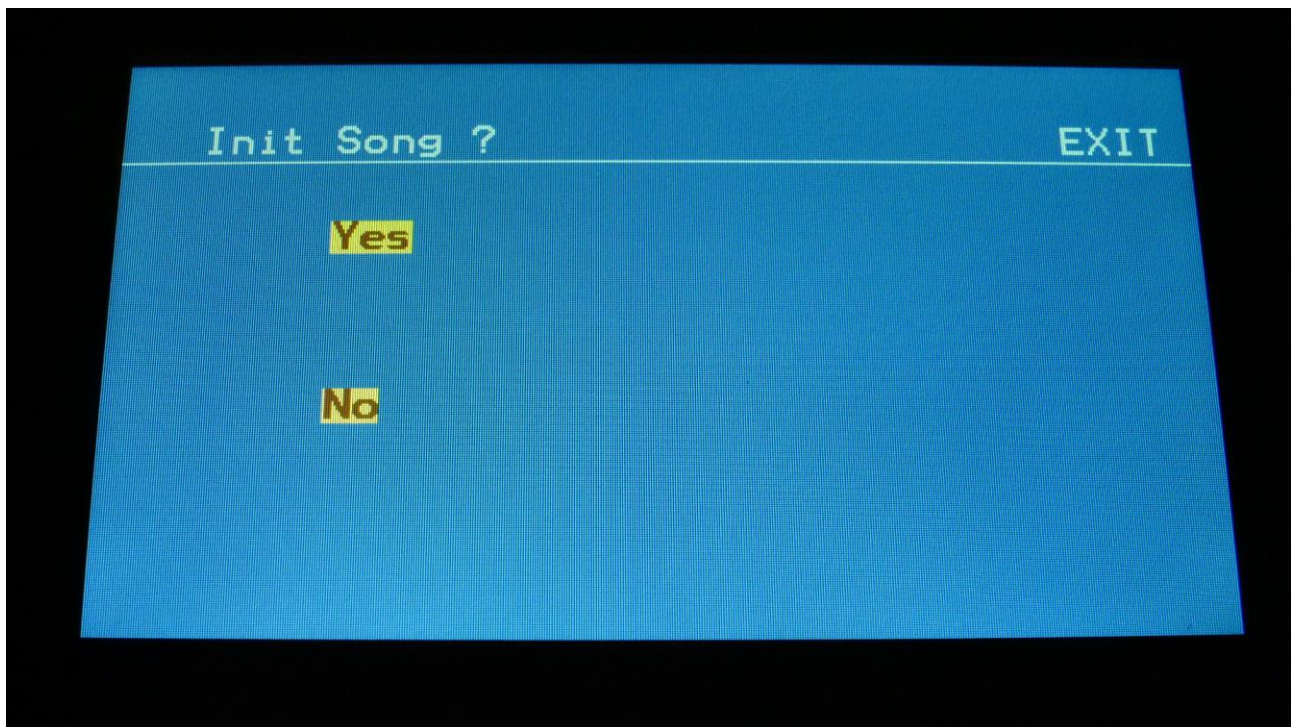

Urano will now ask you to confirm.

Press "Yes" to initialize the currently selected song and return to the previous page, or press "No" just to exit, without initializing.

Please notice, that when initializing a song, this is only done in Urano's temporary song RAM, NOT on the FLASH memory, so if you did this by mistake, or you regretted doing it, you can always recall the song, by selecting another song, and select this again. Then nothing will be lost. It is not until you save the song, that permanent changes is done.

Copy/Paste

On Urano it is possible to copy morph layer A, B or the parameter setting at the position of the Morph knob. It is possible to copy one or two layers of the whole preset or of one single part.


Whatever is held in the copy buffer can then be pasted to another preset.

If you, for instance, copy a whole preset, and then goes to a specific filter page to just paste the filter settings, you will be able to select which filter the settings should be copied from.

Copy: Pushing this function button, will make Urano copy the settings of the complete currently selected preset, except if you are located on the Part Overview page. It is then possible to Paste the settings of separate modules, using the Paste button.


When you are located on the Part Overview page, only the parameter settings for the modules used by the currently selected part are copied. In order to paste these copied settings to another preset, you must enter the desired preset, enter the Part Overview page, and then push the Paste function button. The module settings held in the copy buffer is then pasted to the exact same modules, that were used by the copied part.

Paste: When you are located at a page, for which the copy buffer is holding settings for, the paste function button will light up. If you are located on the synth module or sequencer pages, a page will pop up, asking where to paste from and too. If you are located on the Part Overview page, the copied part will be pasted. If you are located at any other pages, the whole copied preset will just be pasted to the currently selected one.

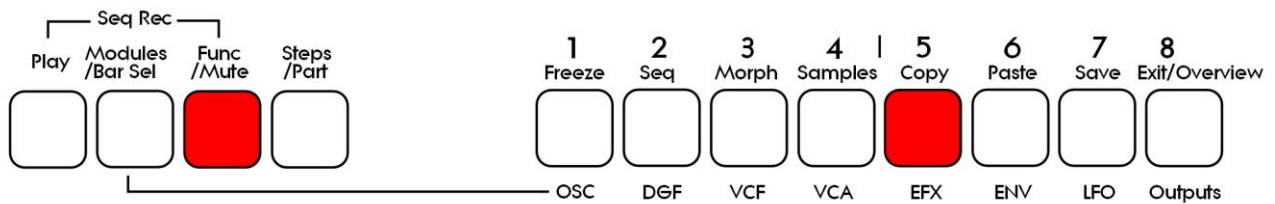

When you are located at the right page, push and release the Func/Mute button, so that it lights up, to enter the function buttons. Now hit step button 5 (Copy).

The display will now show some instructions:

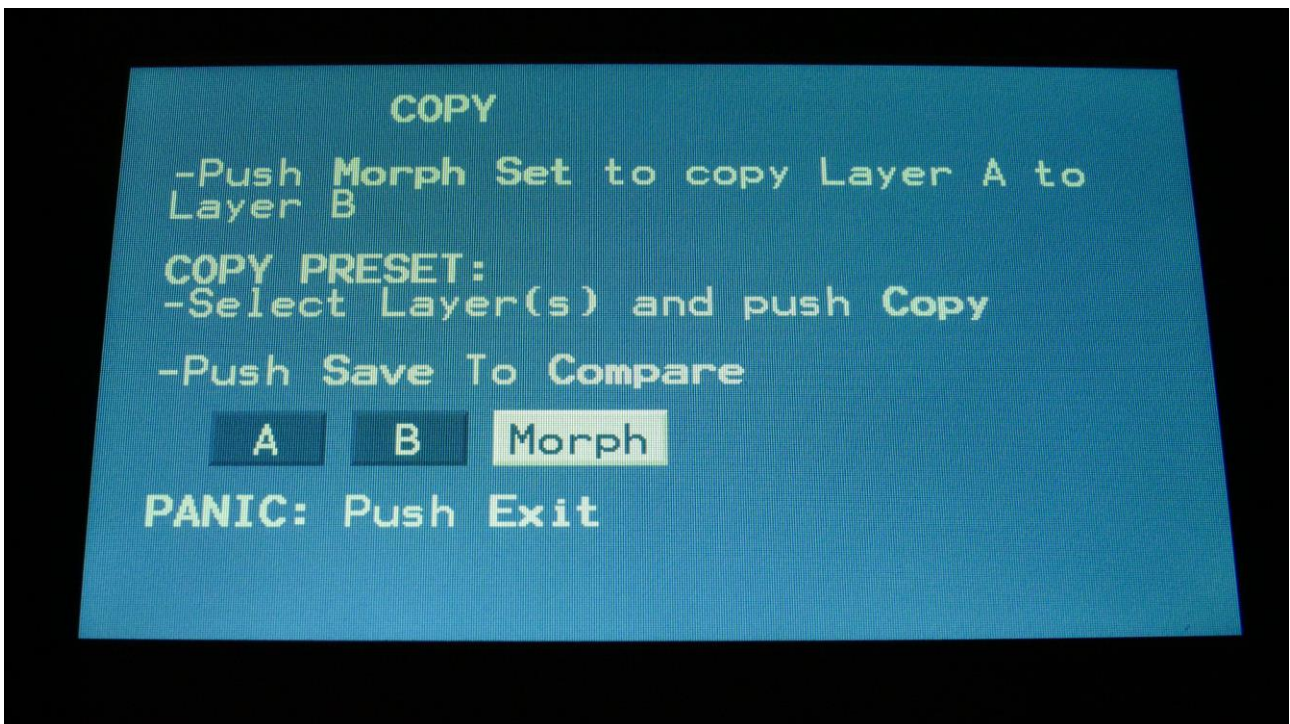

It will tell you how to copy layer A to layer B, and right below this, it will tell you, what it will copy. In the example, the copy function was entered from the preset select page, and Urano tells you, that it will copy the whole preset.


If you had entered the copy page from the Part Overview page, it would have said "COPY PART 1" instead.

Now select/deselect the desired layers, by touching the "A", "B" and "Morph" touch buttons. If a layer button is dark blue, it means that this layer will be copied, if it is white, the layer will not be copied. It is only possible to copy either layer B or the morphed layer. It is not possible to copy both of these at the same time. Layer A can be switched on or off independently of the B/Morph selection. If 2 layers are copied, Urano will also paste to 2 layers. If only one layer is copied, Urano will paste to the layer selected by the Morph Set button.


To copy, hit step button 5 (Copy) again.

Now, when the function buttons are active (the Func/Mute button lights up), every time you enter a page, where the copy buffer holds something, that can be pasted, step button 6 (Paste) will light up.

To paste something, navigate to the desired page, where you would like to paste the settings. Make sure that step button 6 (Paste) lights up. Hit step button 6 (Paste).

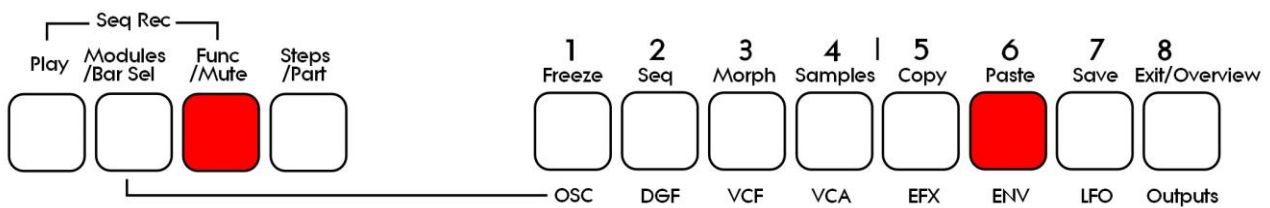

If you are located on any of the Synth Modules pages, a page will pop up, asking which module number to copy from (i.e. Oscillator 1 to 8). Select the desired module number and hit the Paste button again, to paste.

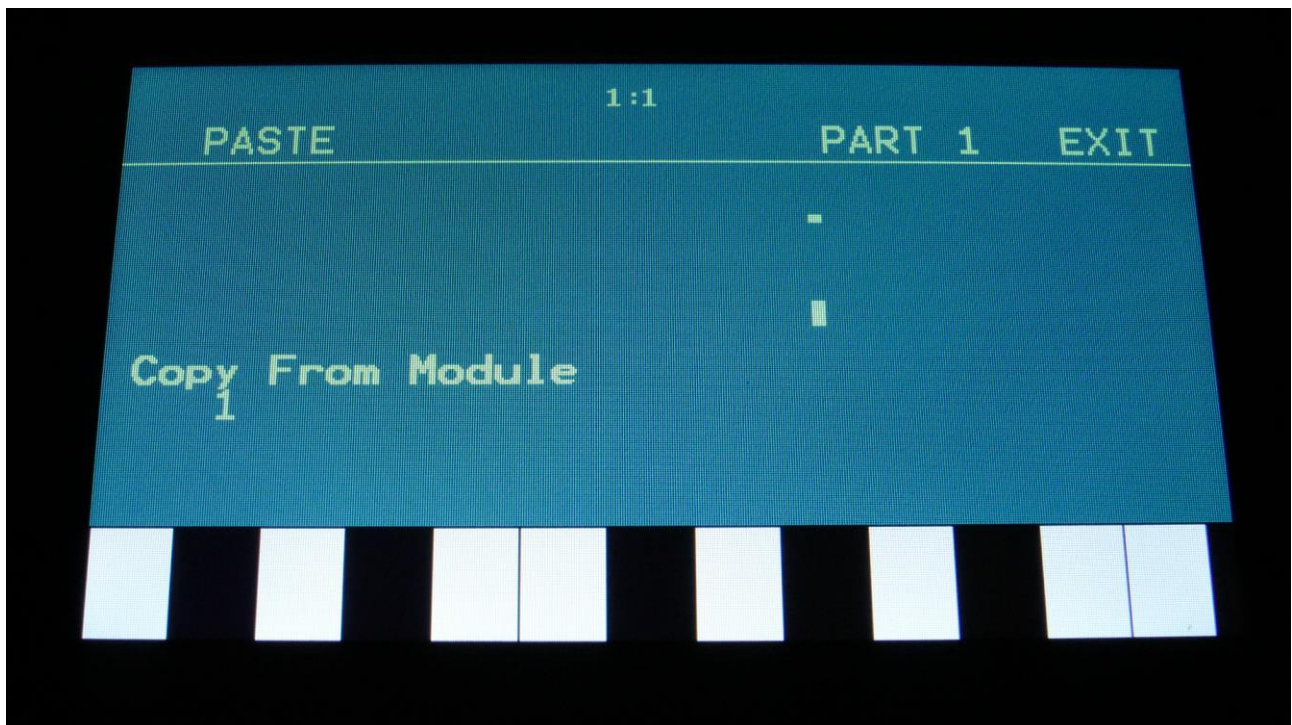


When pasting on the Part Overview page, the part which is held in the copy buffer, will just copy all modules held to the exact same module numbers, as they were copied from.

Sequencer Steps Copy/Paste

It is possible to copy/paste a specific range of steps, from any location of a sequencer track, to any location of any track.


From any page, push the Copy function button (step button 5), to copy the whole preset.

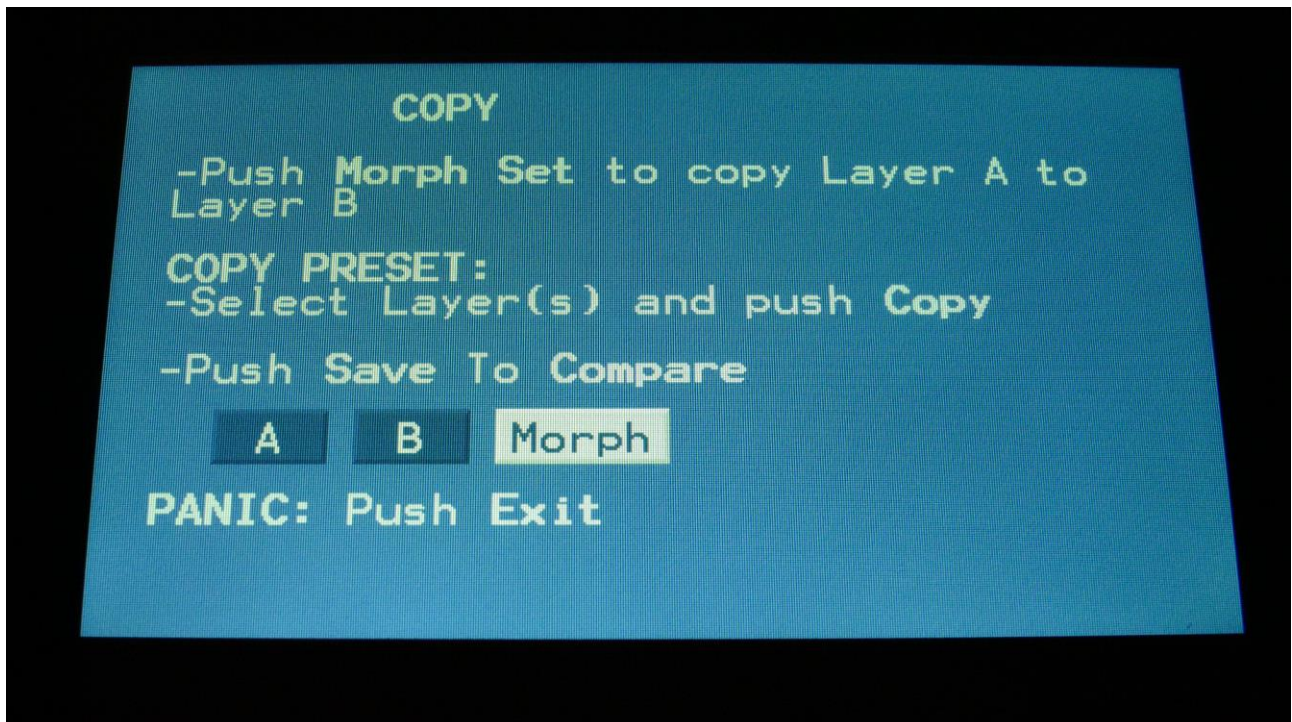

As usual, simply hit the Copy button again, to copy.

Now enter the destination sequencer track. It is possible to paste steps from the same track or from another track.

When you have navigated to the destination track, simply hit the Paste button, and this screen will pop up:

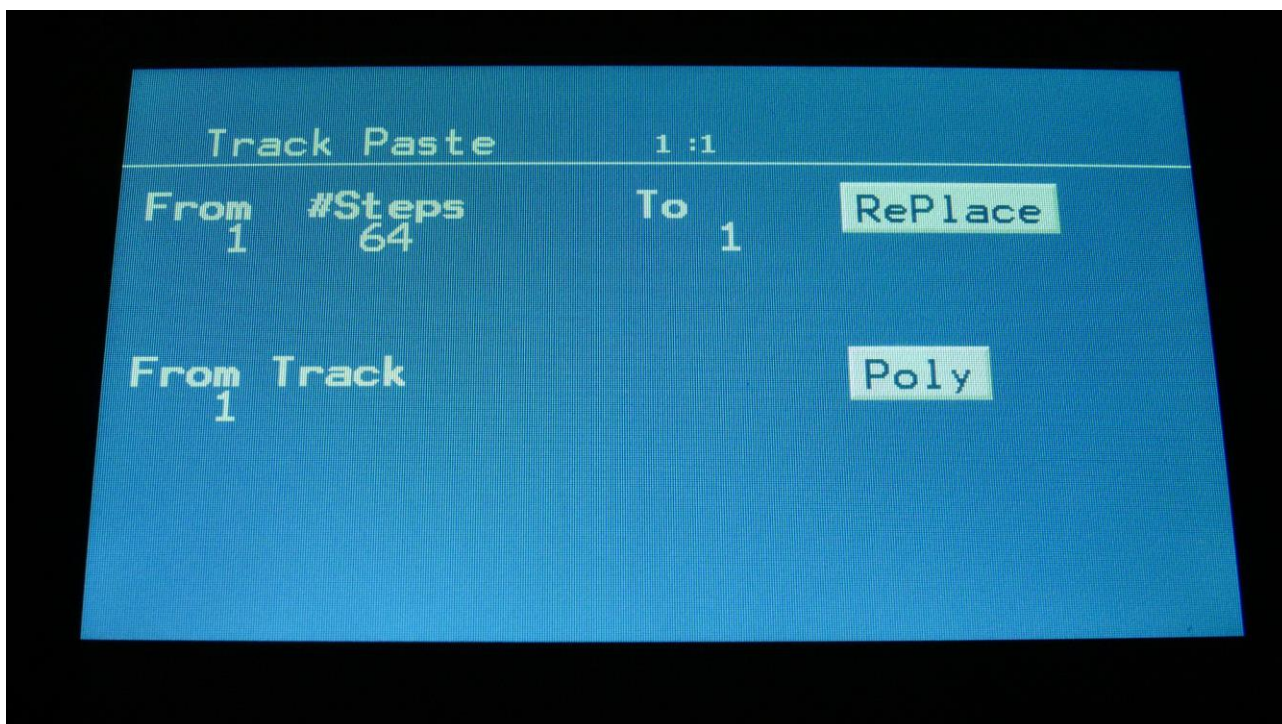

You can now set the following parameters:

From: The first step of the source track, that you would like to copy from. Range 1 to 64 on note tracks and 1 to 128 on controller tracks.

#Steps: The number of steps, that you would like to copy. Range 1 to 64 on note tracks and 1 to 128 on controller tracks.

#To: The step on the destination track, that you would like to paste the selected range of steps to. Range 1 to 64 on note tracks and 1 to 128 on controller tracks.

From Track: Select the source track.

Additional options, on note tracks only:

Clear Dest Steps: If you copy from or paste to a polyphonic track, or "Poly" (explained below) is on, switching this function on, will make Urano clear all steps, which position is inside the range of the steps to be pasted, before the pasting.

If this function is off, and “Poly” is on, the steps will be placed on top of each other, without any steps being cleared. A sort of “overdub” pasting.

If you copy from and paste to a monophonic track, and “poly” is off, steps will be overwritten anyway, so it doesn’t really matter, if this function is on or off.

Poly: With this switched off, both the source and destination tracks will be treated as monophonic tracks, with a linear position track, going from position 1 to position 64, and steps will be copied 1 to 1 on the step locations, without altering the position track.

With this switched on, the destination track will be treated as a polyphonic track, and steps will only be pasted to steps, that are already off. The position track will be altered.

If “Clear Dest Steps” is off, no steps will be overwritten.

When entering the Track Paste Page, Urano will analyze both the source and destination tracks, and if any of these are polyphonic tracks, it will automatically switch Poly on. If both tracks are monophonic tracks, it will switch Poly off. You should only change this setting to deform things...

When you have done your settings, simply hit the Paste button again, and your steps has been copied.

Sample Record and Edit

Mono wav samplings can be recorded, imported, edited and played back by the oscillator modules. Stereo samplings can also be imported, but only the left channel will play back. Chop points can be imported or generated automatically and manually. A wavetable editor is also included in the Sample Edit section. Wavetables can be assembled from samplings. The wavetable oscillators can also play back samplings directly, but assembling them from samplings will give more control over each single wave.


To get samples into Urano, for using them in the synth modules samplers, you can either import .wav files from a USB drive, or record your own samples from Urano's audio inputs or outputs. This section will describe the latter. For how to import .wav files, please see the USB section of this manual.

Urano has up to 4 banks of FLASH memory for storing samples, Bank A, B, C and D. The 18 min. and 43 min. models only has Bank A. Bank A holds up to 43 minutes of mono samplings, maximum 2048 samplings, Bank B, C and D each holds up to 50 minutes of mono samplings, each maximum 2048 samplings – A total maximum of 8192 samplings/193 minutes. One sampling can maximum be 50 minutes long.


All samples that are imported or recorded, stays in Urano's FLASH memory, even after a power off. Since they are played back directly from the FLASH memory, there are no loading times. All Urano's samplings are immediately available, right after power on, and can be selected in the synth modules oscillator section, just like synth waveforms.

Recording a sampling

From the Preset Select screen, touch the EDIT field, to enter the Synth Modules page:

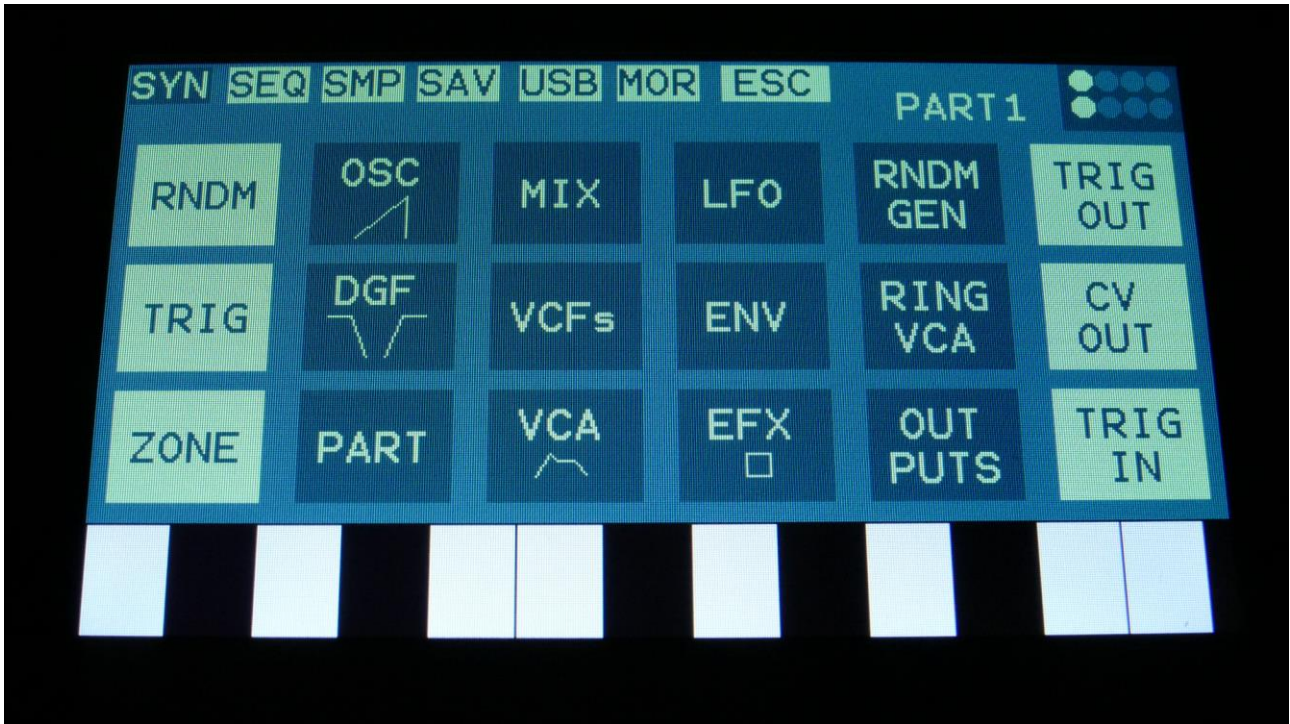


Touch SMP at the top navigation bar.

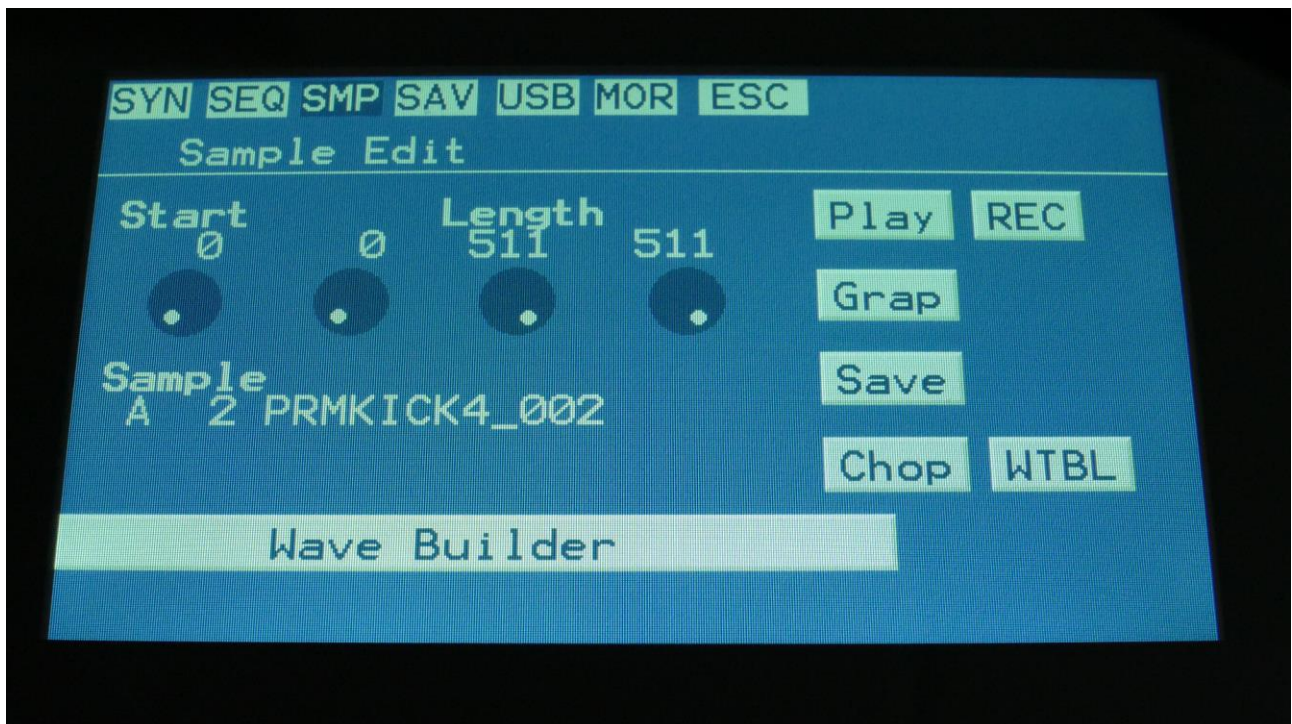

You will now enter the Sample Edit page.

Touch the REC touch button, to enter the Sample Rec page.

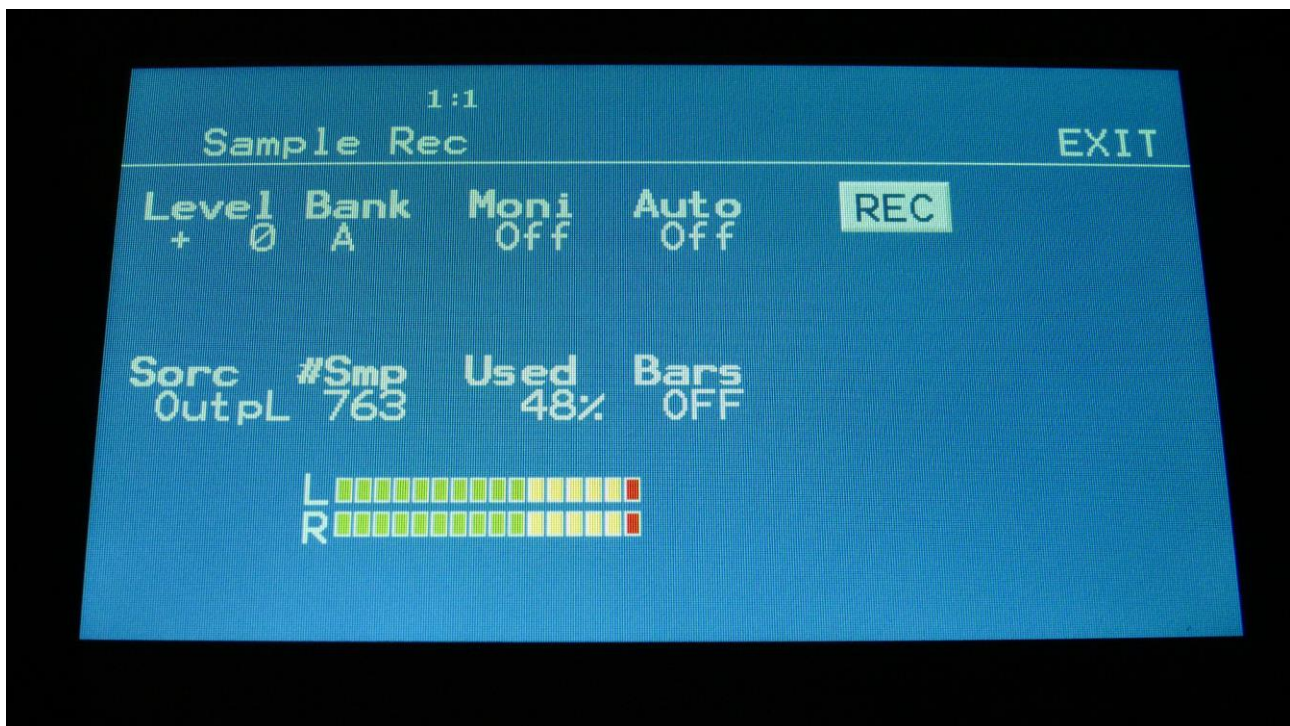

OR, from any page:

-Push and release the Func/Mute button, so it is lighting up.

-Push step button 4, marked "Samples".

This will also get you to this page, just much faster.

If you can already hear the source, that you would like to record, leave the Moni parameter Off. If you have the record source connected directly to any of Urano's audio inputs, and can't hear it now, switch the Moni parameter to On.

Select the record source, by setting the Src parameter.

Choices are:

InpL : Left audio input mono

InpR : Right audio input mono

OutpL : Left audio output mono

OutpR : Right audio output mono

Inp 3 : Audio input 3 mono

Inp 4 : Audio input 4 mono

Outp3 : Audio output 3 mono

Outp4 : Audio output 4 mono

Now select the sample bank, that you would like to record to, setting the Bank parameter to bank A, B, C or D.

When choosing a bank, the **#Smp** parameter will show how many sampling that the selected bank already holds, and the **Used** parameter will show how many percent of the sample bank, that are already in use.

For optimal results, set the level parameter to +0, and adjust the level of the record source, so that the 2 VU-meters in the bottom of the screen does not get red.

You should only adjust the level parameter, to other values than +0, if it is not possible to adjust the level directly on the source.

When you are ready to record the sampling, touch the "REC" button in the lower left corner. If you have the **Auto** parameter set to anything else than Off, it will now write: "Waiting for trigger", until a signal that is loud enough to trigger the auto offset applied.


If the **Auto** parameter is turned fully up, it will show the value **Seq**. If **Auto** set to **Seq**, the sequencer must be started, in order to start sample recording, when it is waiting for a trigger.

Otherwise Urano will now start to record the new sampling:



When you are finished recording your sample, touch the "STOP" button.

Urano will now jump to this screen:

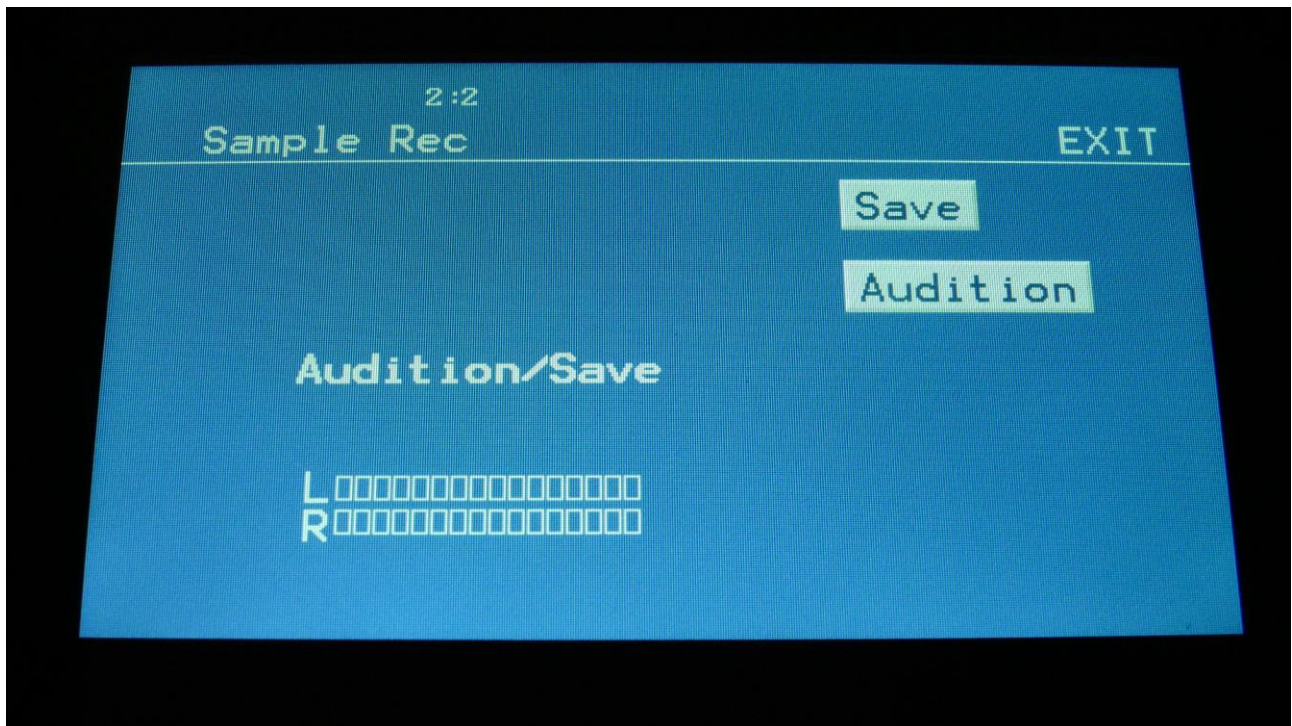


To audition the sample you have just recorded, touch the "Audition" button.

To name and save the sample, touch the "Save" button.

If you decide not to keep this sample, touch EXIT, and the new sample will be erased. While it is erasing the sample buffer, a sequence will run on the step buttons. Please wait for this to finish.

If you touch the "Save" button, Urano will jump to this page:

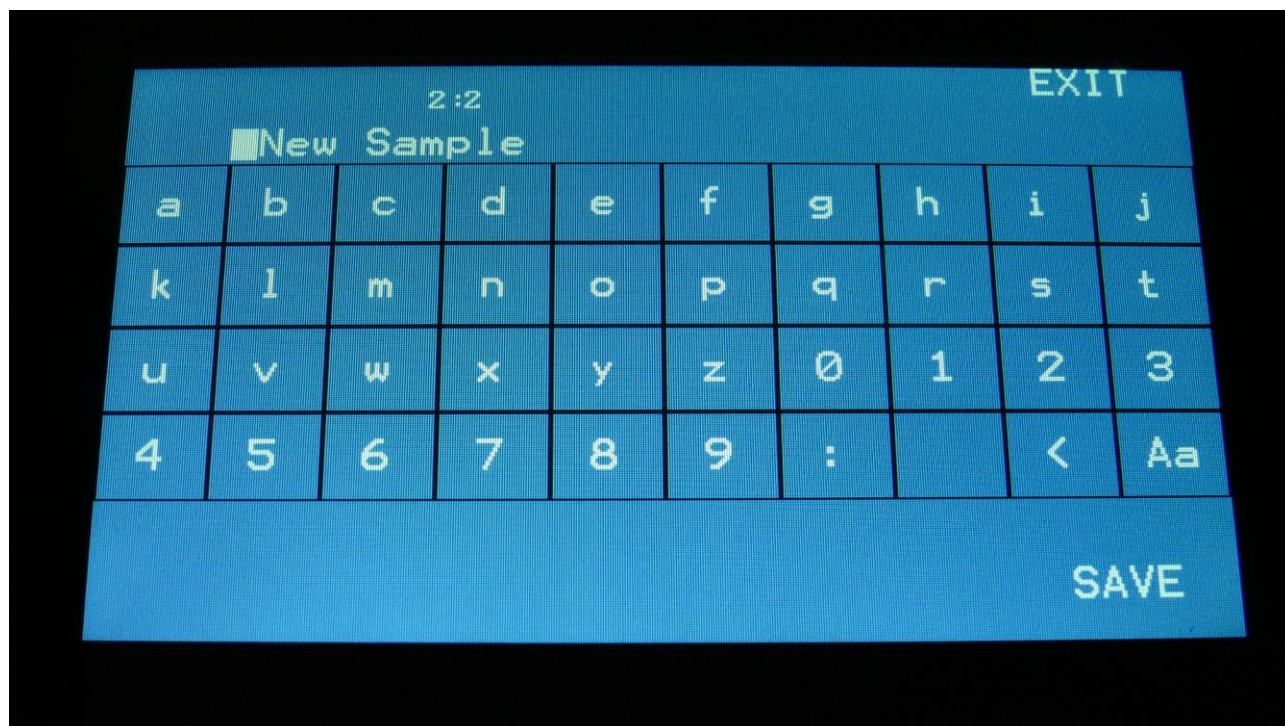

Type in the name for your sampling. This can be up to 16 characters long.

"Aa" will switch between uppercase/lowercase letters, and numbers/signs:




"<" will move the cursor back, for correcting characters, ">" will skip characters.

Touch SAVE, to save the new sample, and return to the Sample Rec page.

Edit A Sampling

From the Main Synth page, touch SMP at the top navigation bar., to enter this page:

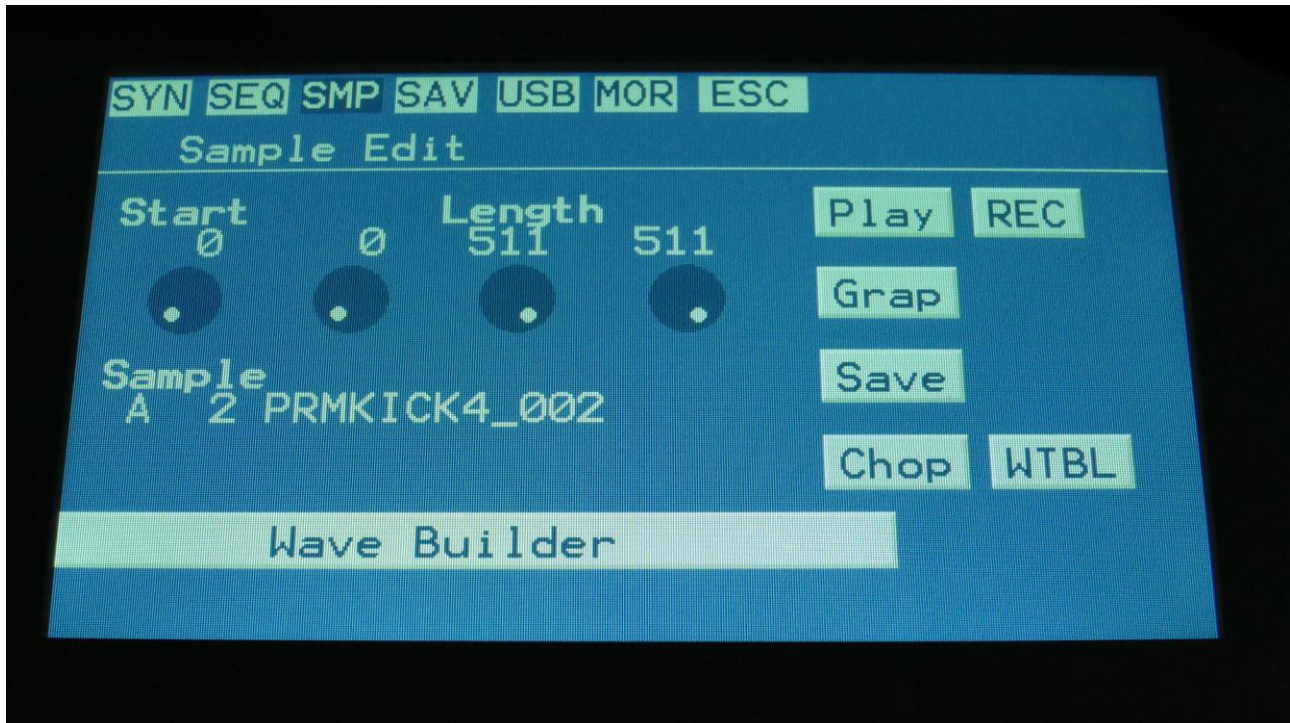

OR: Hit the Func/Mute button, so it lights up, hit step button 4 "Samples", and hit step button 8 "Exit/Overview".

On this page you can audition samples from the FLASH memory, adjust the samples start and end points, enter the sample chops editor, the graphical sample editor and the wavetable editor.

To audition the samples that your Urano holds, touch the **Sample** name, and the Sample Select screen will appear:



Touch A, B, C or D to select sample bank A, B, C and D, touch PREV and NEXT to view the previous or next 16 samplings. Touch the -128 and +128 buttons to skip 8 pages at a time.

To select a sampling, touch the sample name. To audition it, touch the Play touchbar in the bottom of this page.

When you have found the right sampling, touch OK to return to the Sample Edit page.

The Play touchbar on the sample select page re-triggers the sampling every time it is touched. If you should wish to start and stop sample playback, every time you hit play, exit to the Sample Edit page, and touch the Play button there.

Adjusting the start and end points of a sample

If a sample has silence at the start and/or end of it, or if there are parts of a sample you do not intend to use, it might be necessary to adjust the start and end points of it.

To do this, select the sample you would like to adjust.

Adjust the start point by turning edit knob 1, fine adjust by turning edit knob 2.

Adjust the end point by turning edit knob 3, fine adjust by turning edit knob 4.

Audition by touching the PLAY button.

When you are satisfied with the result, touch the SAVE button.

Urano will now write "Saving..." on the display.

Instead of searching manually for the sample start point, it is possible to use the Chop function for this. This is described in the "Sample Chops" section, that starts on the next page.

Sample Chops

On Urano it is possible to add chop points to a sampling, in order to make it play back a certain portion of the sampling at a time. Sample chops are generated in the Sample Edit section, to be used by the samplers in the Synth section.

This function could be used for the classical separating single drum hits from a beat, or to find the startpoint of a sampling in a fast way, if the chop function is set up for peak detection.

The chop function of Urano isn't though limited to this. On Urano it is also possible to make the chop function find "wave chops". This function will pick out single wave cycles of the sampling, and create chop points for these. In the samplers of the synth modules, it is then possible to select these wave cycles, loop them, and switch between other wave cycles of the sampling. This can also be used as a super easy way for looping a sampling.

All chop points are non-destructive to the sampling. Only the positions of the chop points are stored, nothing is changed on the sampling itself. Chop points can, at any time, be moved, deleted and inserted.


Up to 64 chop points can be created for each sampling.

Another way to create chop point, are to use the "Import Samplings From Dir As Chop Points", described in the USB section of this manual.

If you have already created chop points on a sampling, in a computer program that uses cue points, like FL Studio, or any other gear that generates cue points, Urano will import these as chop/loop points. When you exports Urano samplings via USB, any generated chop points will also be exported as cue points, for use in other gear or computer programs.

Remember to save the chop points. Else they will be lost!

To create and/or edit sample chop points, from the Sample Edit page, touch the **Chop** touchbutton, to enter this page:

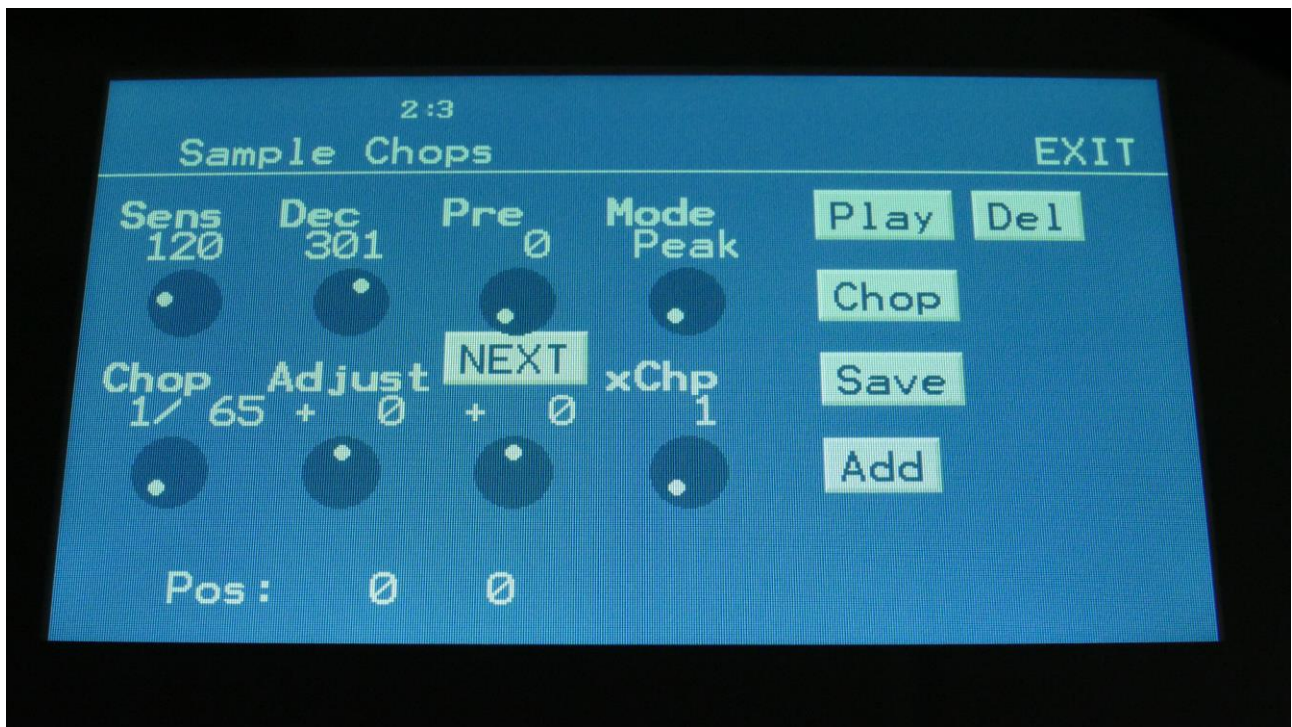

The parameters of this page:

Sens: Adjust how loud the level of the sample audio should be, before it detects a chop point. If it creates too many chop points, turn this parameter up a bit. If it creates too little or no chop points, lower this parameter.

Dec: Chop envelope decay. This adjusts the decay time of the chop detection envelope in a reverse manner. The lower the value, the slower the decay. If the sounds is recorded with very little or no silence between them, like in a beat, this needs to be set to a high value. If there's a good gap of silence between the sounds, set it to a low value.

Pre: If there are loud clicks in the start of many of the chop points, especially on low frequency sounds, turning up this parameter will make LD3 set the chop points a little bit earlier, than it usually would. This will remove these clicks.

Mode: Different modes are available, for generating non-destructive chop points:

Peak: It will generate the chop points from peak detection, according to the settings of the Sens and Dec parameters.

Wave: It will generate the chop points from zero point detection, according to the settings of the Sens and Dec parameters. When auditioning chops in this mode, the playback will be looped.

A number between 2 and 64: It will divide the sample length by the selected number, and generate equally sized chop points from that, regardless of the settings of the Sens and Dec parameters.

Chop: Select a chop number for auditioning. Total number of chops is shown right after the /.

Adjust: (2 parameters). For adjusting the selected chop forward (positive values) or backwards (negative values).

xChp: Number of chops in each chop point. Turning this up, before generating chops, will make each chop contain a number of chops. Especially usefull, when using the wave chop function for making sample loop points.

Generating Sample Chop Points

On the Sample Chops page, adjust the Sens, Dec, Pre and xChp parameters as desired, and switch wave mode on if desired.

Touch the **Chop** button.

Urano will now look for chop points, in the selected sampling, while putting out "Searching For Chop Points..." on the display.

When it is done, it will jump back to the Sample Chops screen:



By adjusting the Chop parameter, it is now possible to select and audition the chop points that Urano has found.

Select a chop point by the Chop parameter. Audition the chop points by hitting the “Play” button. If some chop points are not exactly where you would like them to be, adjust them with the 2 Adjust parameters (coarse and fine). If some chop points shouldn’t be there, delete them by hitting the “Del” button.

It is also possible to adjust the end point of the chop point. Simply touch the **NEXT** button. Now, while auditioning the selected chop point, you can adjust the next chop point, which is also the end point for the selected chop point, using the Adjust parameters.

To add chop points, first touch the “Play” button, to make the sample/chop point play back. While the sampling is playing back, hit the “Add” button when it is playing back the point, where you would like to add a chop point.

In the bottom of the screen, it shows the position of the selected chop, in the values that the **Sample Start** parameters would have to be adjusted to, to select this point of the sampling. So if you don’t want to use the chop points anyway, but just wants the sample playback to start at this point, you can exit to the Sample Edit page, and set the Sample Start point to this value.

When you are satisfied with the chop points, remember to hit the “Save” button to keep them. The chop points are saved together with the sample data, and are also imported/exported via USB as cue points.


Wave Chop System

This system can take any of the samplings held in your Urano, and chop it up in, up to 64, single cycle waves.

If you already have a library of single cycle waves in .wav format, you can use the “Import Samples From Dir As Chops” function, to import the single cycle waves into one sampling with wave-chops.


When you have a sampling with the wavechops added, it is possible, in real time, to select which single cycle should play back, in the samplers in the synth section, using the “Chop” parameter. It is also possible to select single cycle waves, using any modulation source.

How to wave chop a sampling:

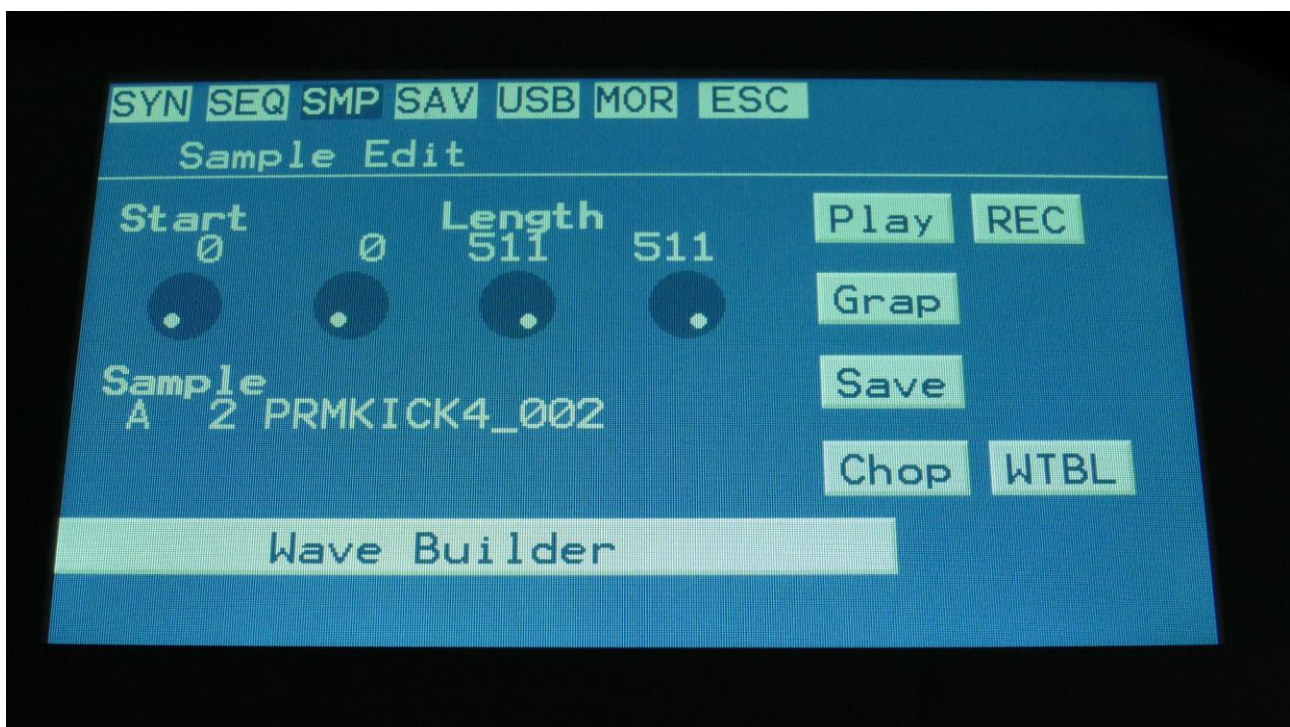

On the sample Edit page, select the sampling, you would like to wave chop, and touch “Chop”.

That will get you to the Chop page:

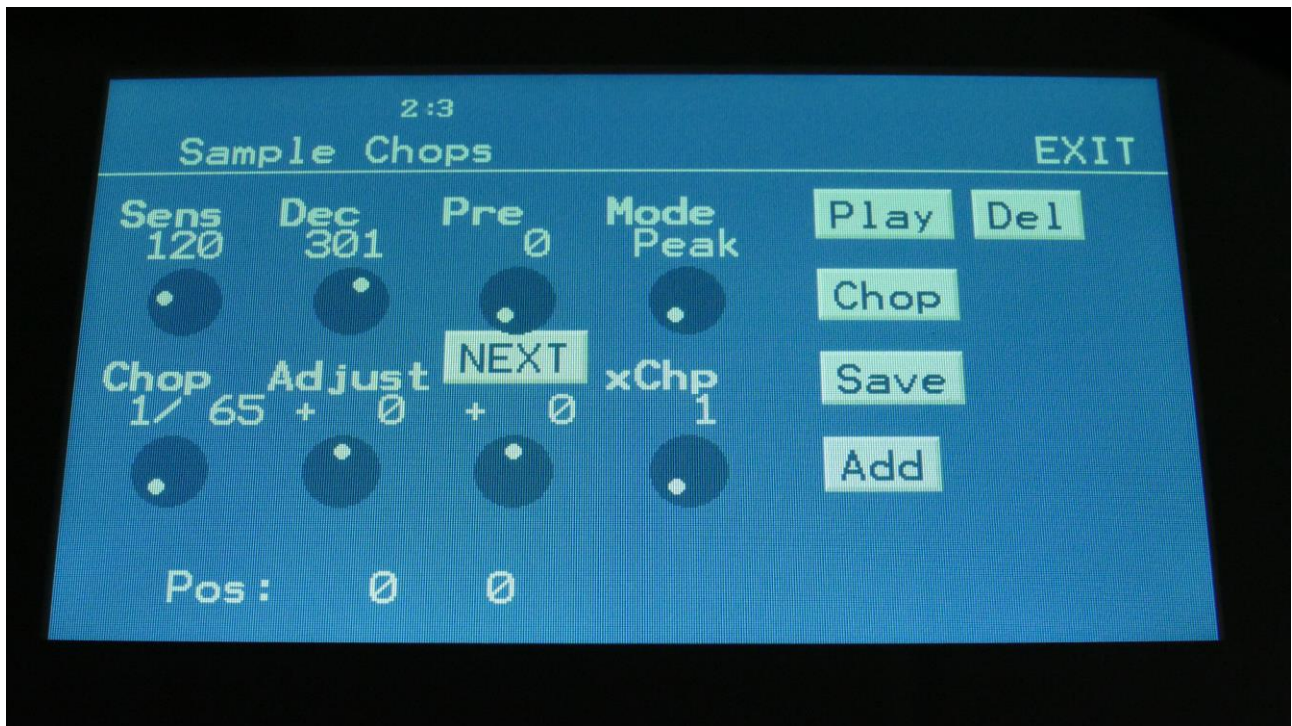

Set the Mode parameter to Wave.

When in Wave chop mode, the Dec parameter functions in the opposite way, as when in normal chop mode. The lower the value, the faster the decay.

A good startpoint for wave chopping is to set Dec to 1 and Sens to 128. If the wave chops gets too long (very few chop points), try first to adjust Sens down. If this makes things worse, adjust it up. On simple waveforms, Sens should, in most cases, have a low value. On more complex waveforms, Sens should have a higher value.


If you wish your wavechops to be larger than single cycles, you can either turn Dec or xChp up.

The Pre parameter should be kept at zero.

When you have it set in Wave mode, and adjusted the settings, touch the "Chop" button.

Urano will now put out “Generating Chop Points...” on the display

When it has found some chop points, it will return to the Chop page:

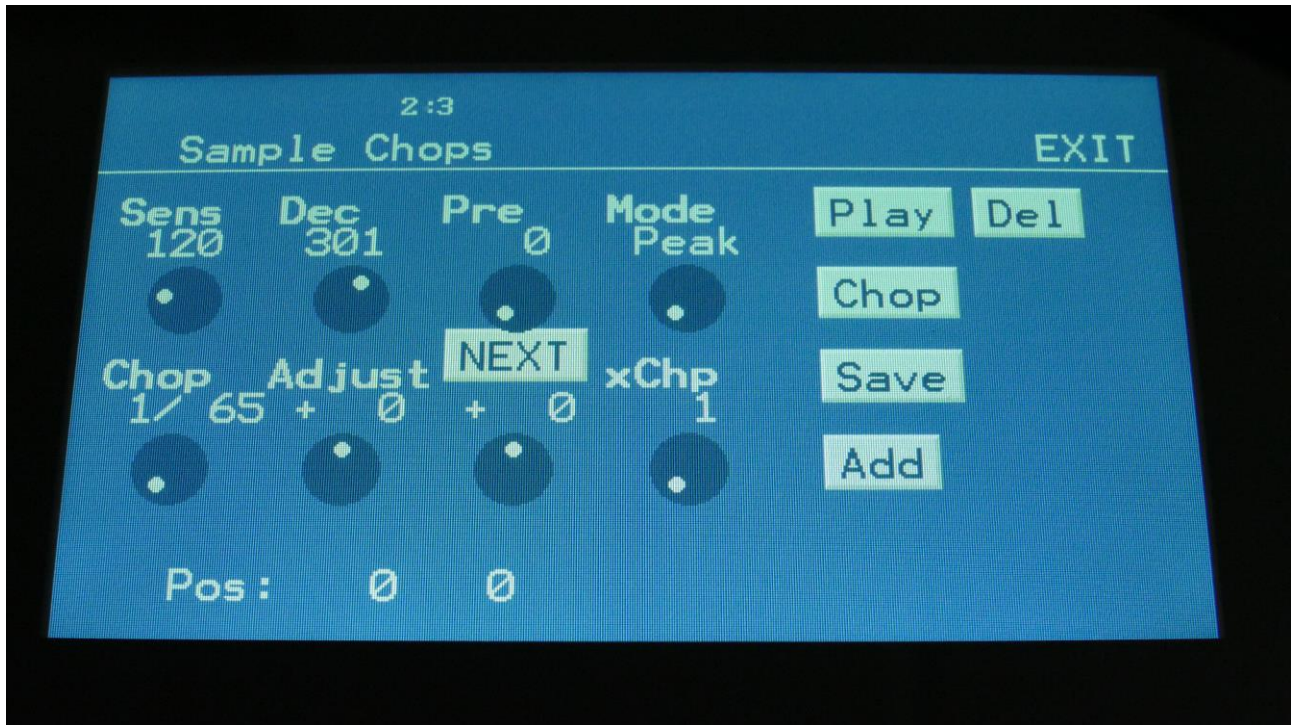


Now touch the play button, and select chops by adjusting the Chop parameter, to audition the result.

If you are not satisfied with the result, re-adjust Sens, and hit Chop again.

When you have found a result, that you are satisfied with, please remember to touch the “Save” button.


To use the wave chops for something, now exit Sample Edit, and go to an Oscillator module page.

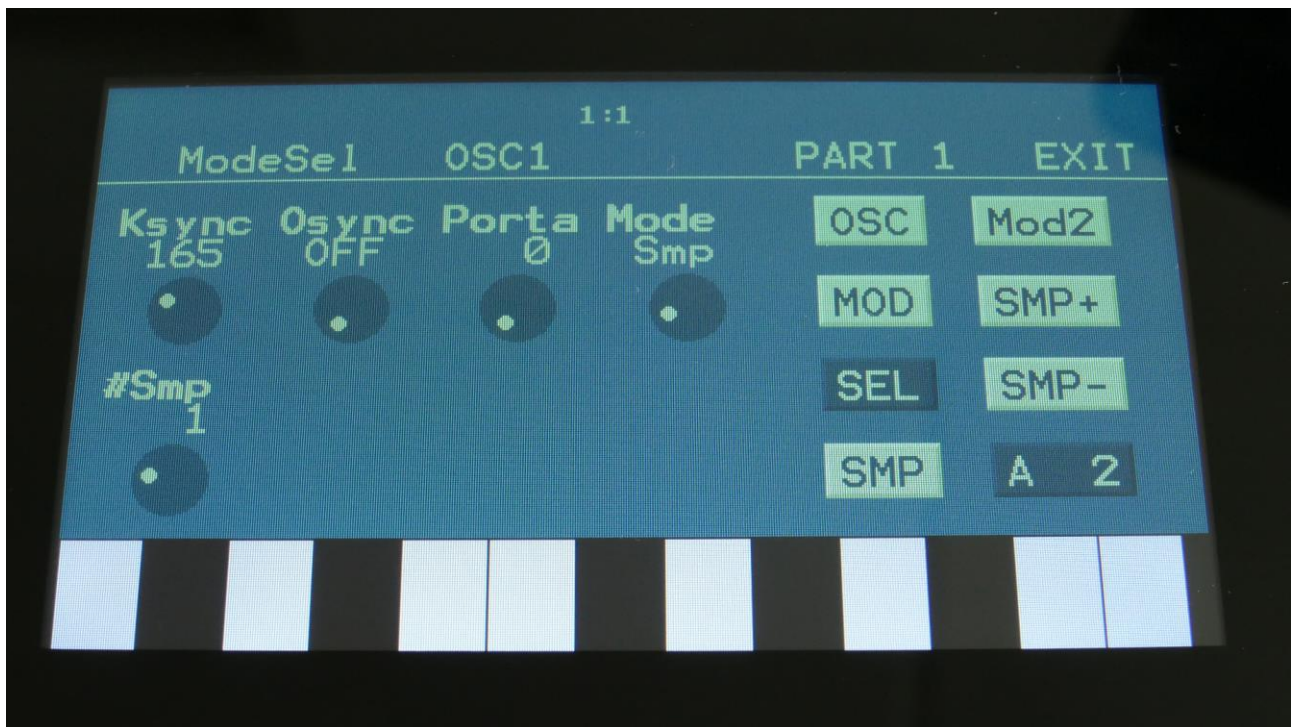


Set the Oscillator in sampler mode, and touch the SMP touch button to select the sampling, that you just wave chopped (or any other sampling that you have wave chopped).



Touch the sample slot 1 name, to open the sample select page.

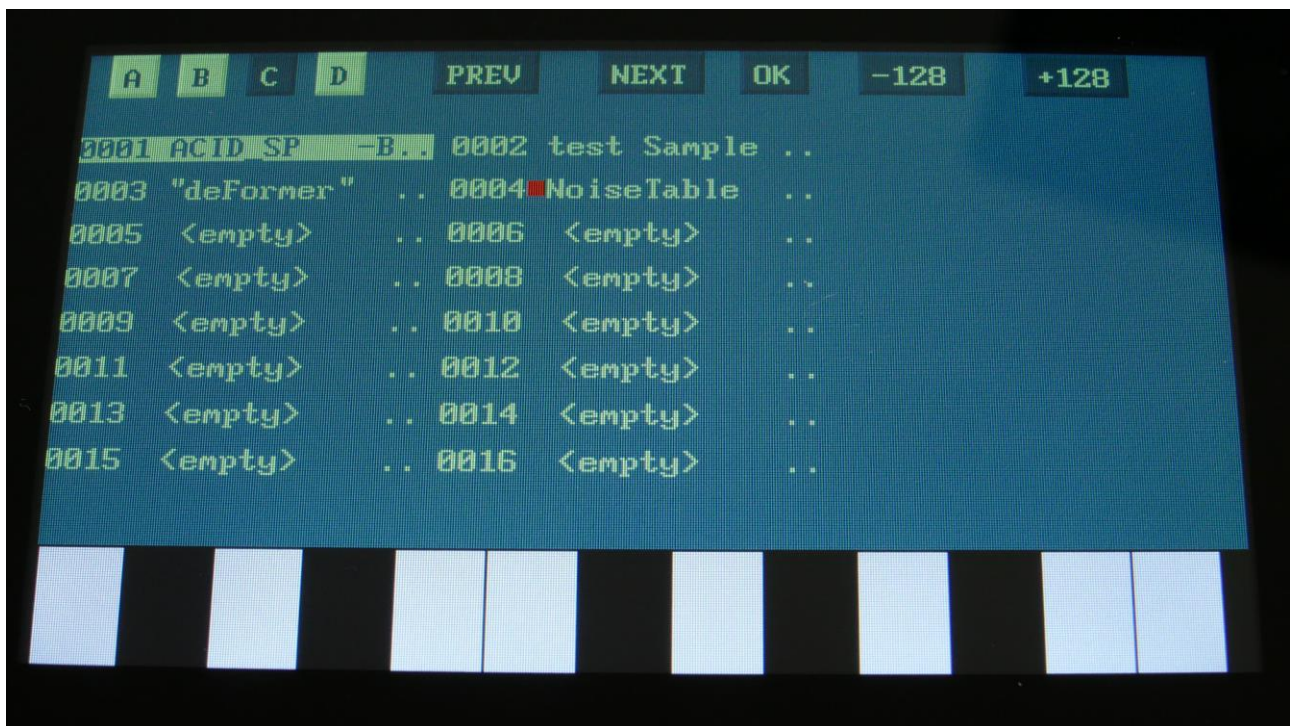


Select the sampling, touch OK, and touch the OSC touchbutton.

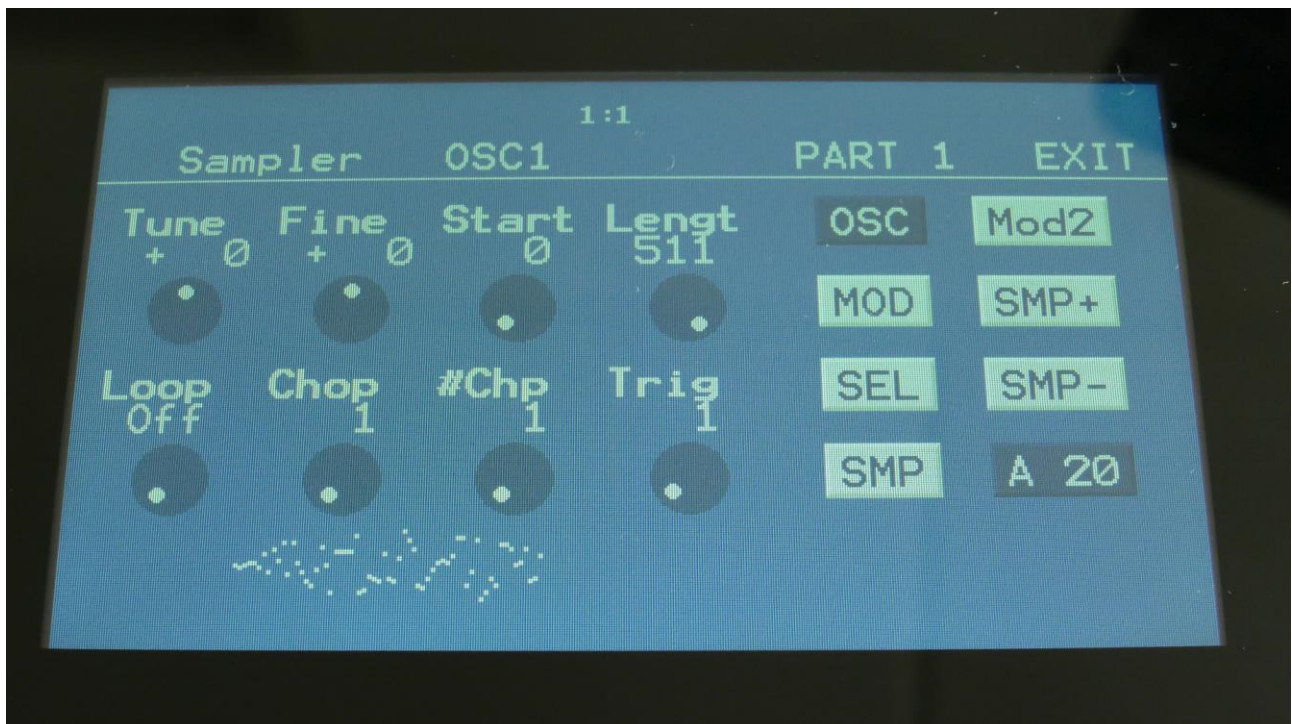

Set Loop mode to On, and adjust the Chop parameter, to select the single cycle waves. If you would like more single cycle waves to play back inside the loop, turn the #Chp parameter up.

Modulating the Chop parameter

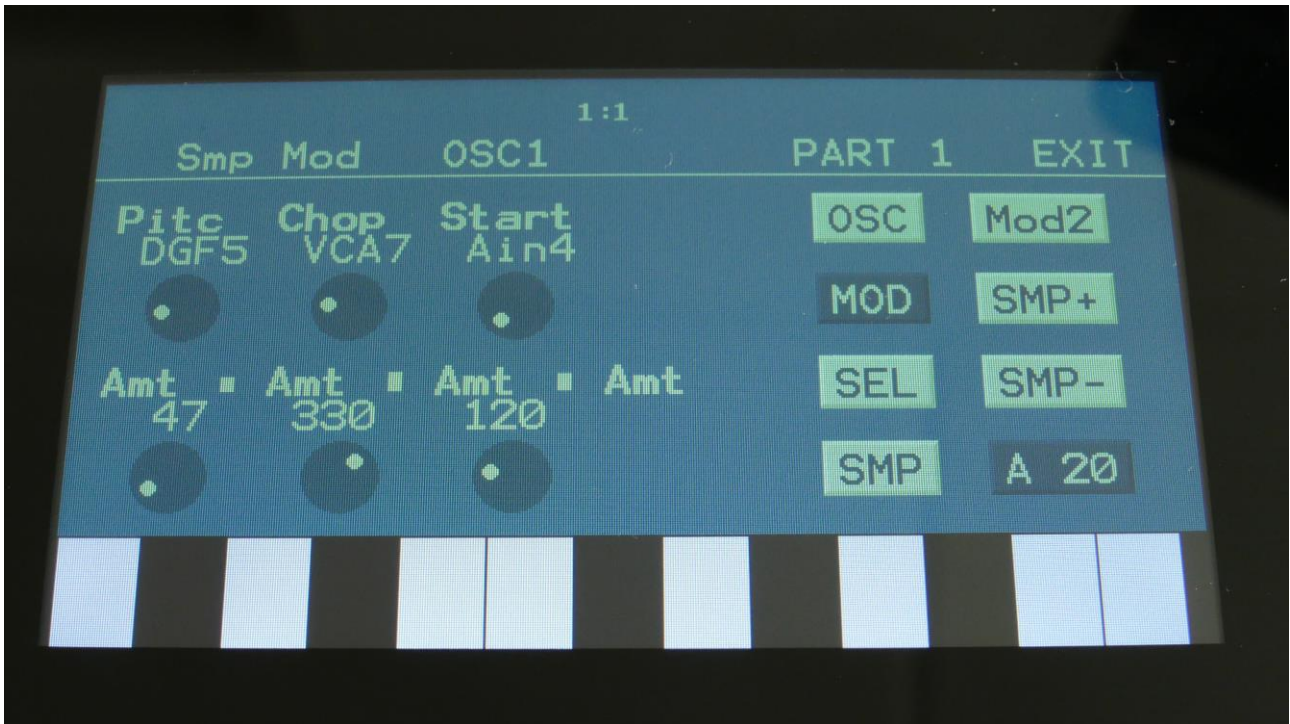

Unlike most other parameters in Urano, only positive modulation are applied to the Chop parameter.


So the Chop parameter selects the lowest possible chop to be played back.

Deleting last recorded sampling

On the Sample Select page, it is possible to delete the last recorded sampling in sample Bank A, B, C or D. On the sample select page, select the sample bank, from which you would like to delete a sampling.



Touch DEL.

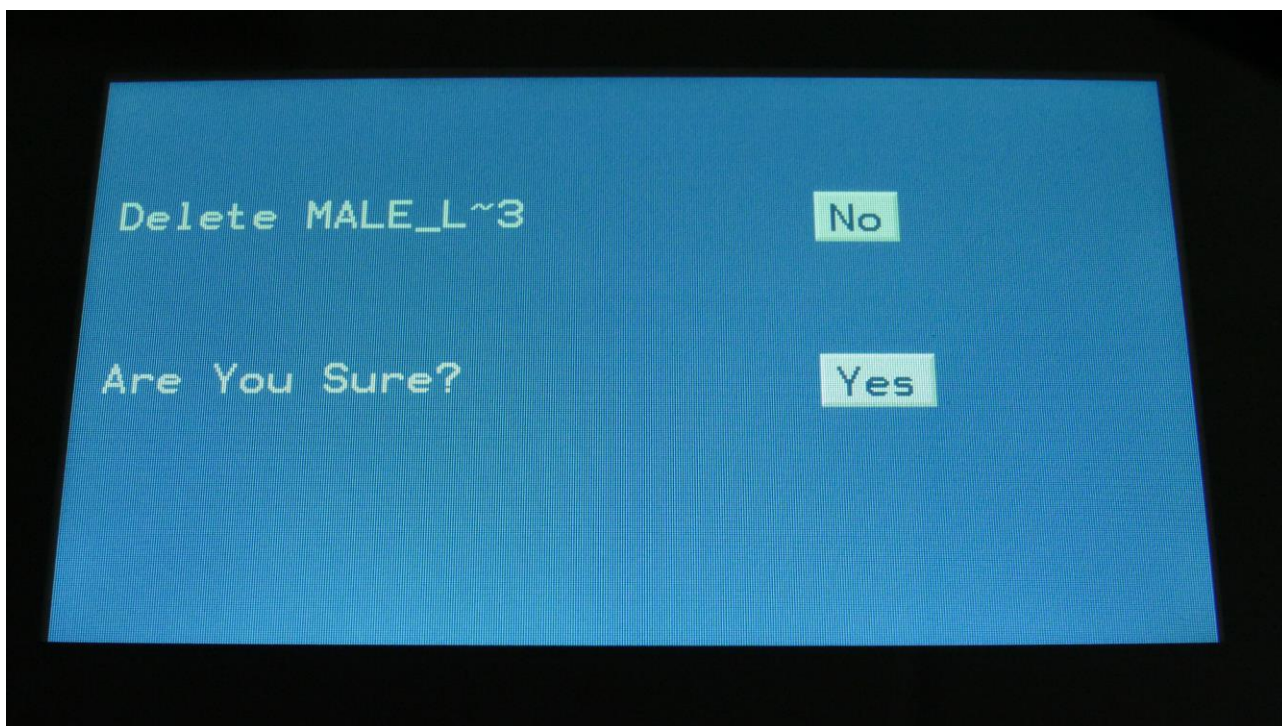

To delete the sample, touch "Yes".

If you regret, touch "No", to return to the Sample Edit page.

If you decided to delete the sampling, Urano will now run a light sequence on the step buttons 1-8, while it is deleting the sampling. Since this is FLASH memory, it might take some time.

DO NOT TURN URANO OFF, WHILE IT IS DELETING A SAMPLING. THIS WILL MAKE THE FLASH MEMORY MALFUNCTION.

Deleting other samplings, than the last recorded one


Because of some security features of the flash memory used in Urano, it is only possible to directly delete the last recorded sampling in each bank.

By using its USB functions (explained in the next chapter of this manual), it is though possible to delete other samplings.

To delete another sampling:

- Connect a USB drive, that you have tested to be working (try to import some samplings from it), to the Urano USB port.
- Create a new directory.
- Export all your samplings of the bank, where the sampling(s) you want to delete is located, to the USB drive, inside the new directory.
- Enter the directory, on the USB drive, and select the sampling(s), that you want to delete.
- Push "MD/del" on the USB page.
- Push "Del".
- Confirm.
- Leave the USB pages, go to the "MOR" section, and delete the whole sample bank.
- Go back to the USB page, and select the directory, holding your samplings.
- Push "Import", and then "Re-Load".
- Urano will now put your samplings back on the right place, except for the sampling(s), that you deleted.

Graphical sample editing

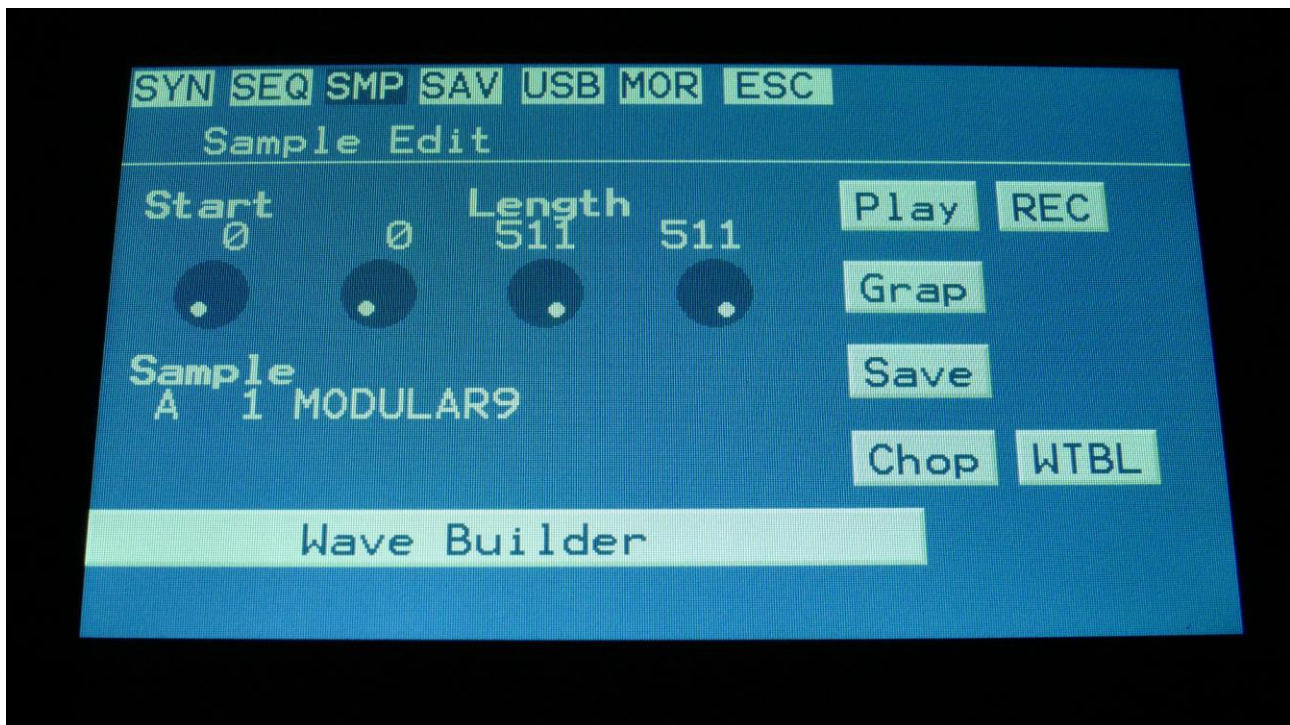

On the Sample Edit page, touch the “Grap” button to enter the graphical sample edit pages.


On the graphical sample edit pages you can add and remove chop/loop points, select a portion of a sampling, to be saved as a new sampling, and assemble wavetables.

It has also been made easier, to set loop points in long samplings, by making it possible, to save the selected end point as a chop/loop point.



On this page, you will see a graphical presentation of the selected sampling. Chop points are indicated as vertical brown lines, and the sample zero point is indicated as a horizontal white line.


Sample Start Point

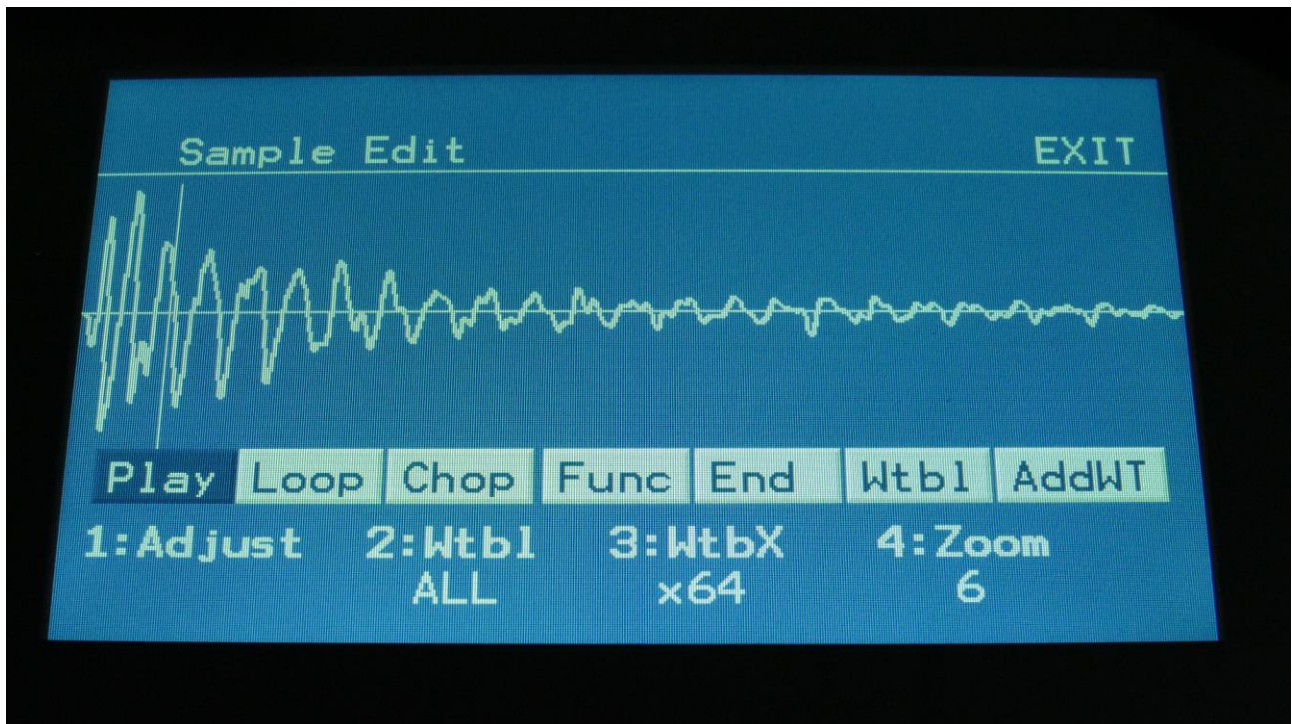

By touching anywhere on the screen, or by rotating Edit Knob 1, you can select a start point. This is indicated by a vertical white line.

By rotating Edit Knob 4, you can zoom in and out.

Sample End Point

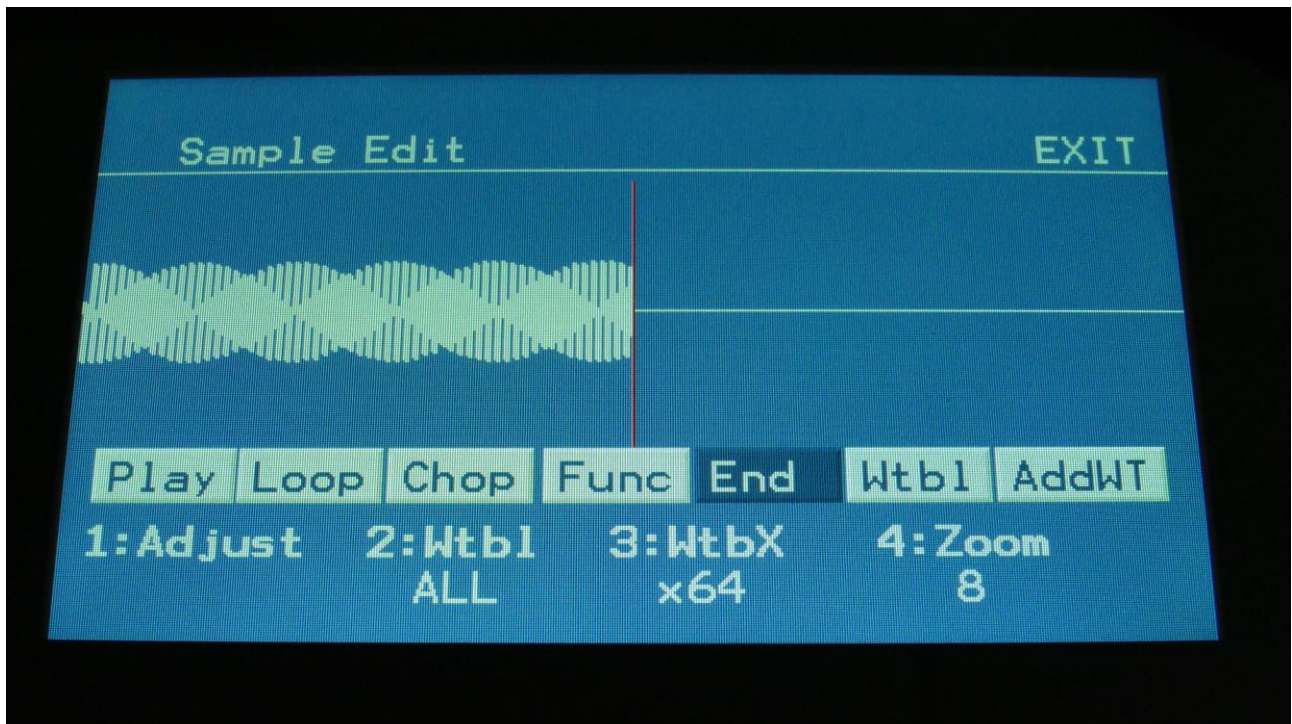


By touching the End touch button, so that it turns dark blue, the screen will now be focused on the end point, which is indicated as a vertical red line. When you touch the screen now, the red line will move, indicating that the end point is selected. It is also possible to change the end point, by rotating Edit Knob 1.

If you touch the Play touch button, the sample will play back from the start point to the endpoint, and then stop.

If you touch the Loop button, so that this turns dark blue, and then touch the Play button, the sample will play back from the start point to the end point, and then loop back to the start point, and play back the selected piece again, until Play or Loop is touched again, so that any of these turns white.

Selecting and edit chop points

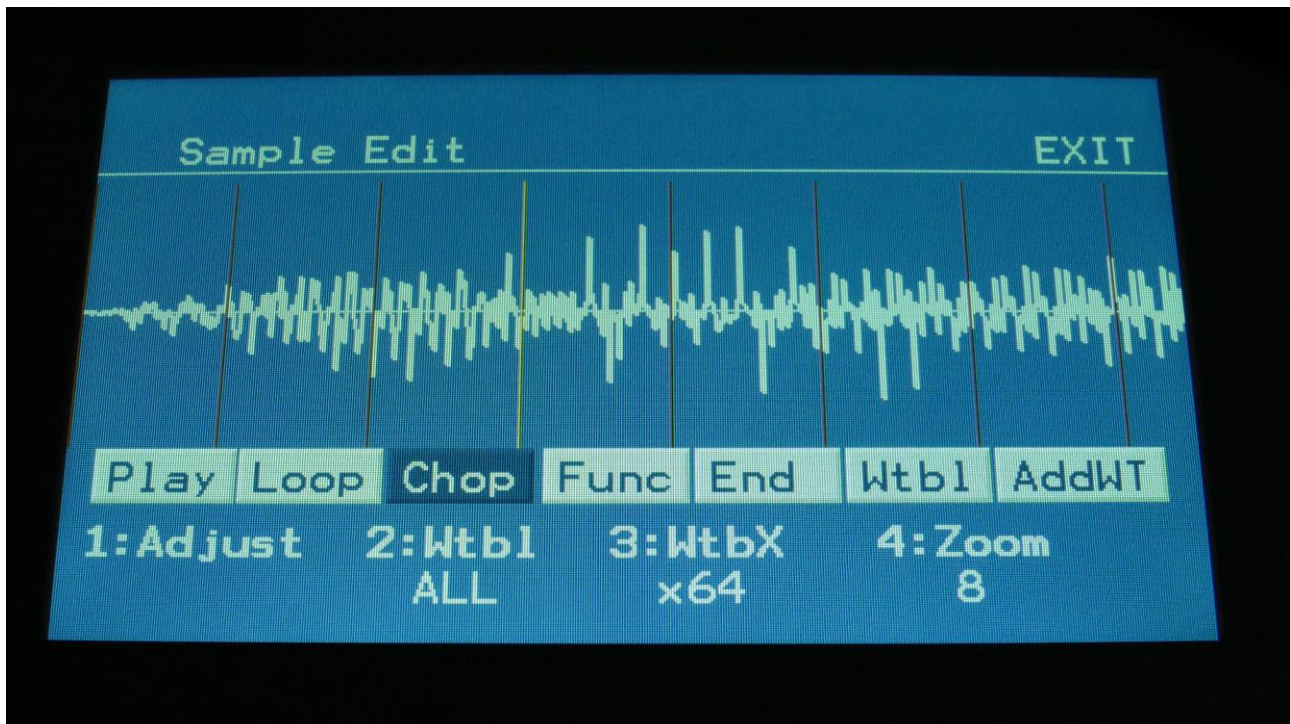

Touch the Chop touch button, so that this turns dark blue.

Now, when you touch the screen, you will select a chop point. The line indicating the chop point will turn yellow, when it is selected.

Rotate Edit Knob 1 to adjust the chop point. Rotate Edit Knob 4 to zoom in and out.

If you touch the Play touch button, the sample will play back from the selected chop point to the next chop point, and then stop.


If you touch the Loop button, so that it turns dark blue, and then touch the Play button, the sample will play back from the selected chop point to the next chop point, and then loop back to the selected chop point, and play back the selected piece again, until Play or Loop is touched again, so that any of these turns white.

By touching the End touch button, so that it turns dark blue, it is possible to adjust the next chop point, which is also the end point of the selected chop, by rotating Edit Knob 1.

Adding a chop point


Make sure that the Chop touch button is white.

Set the start point, where you want the chop point to be, either by touching the screen, or by rotating Edit Knob 1.

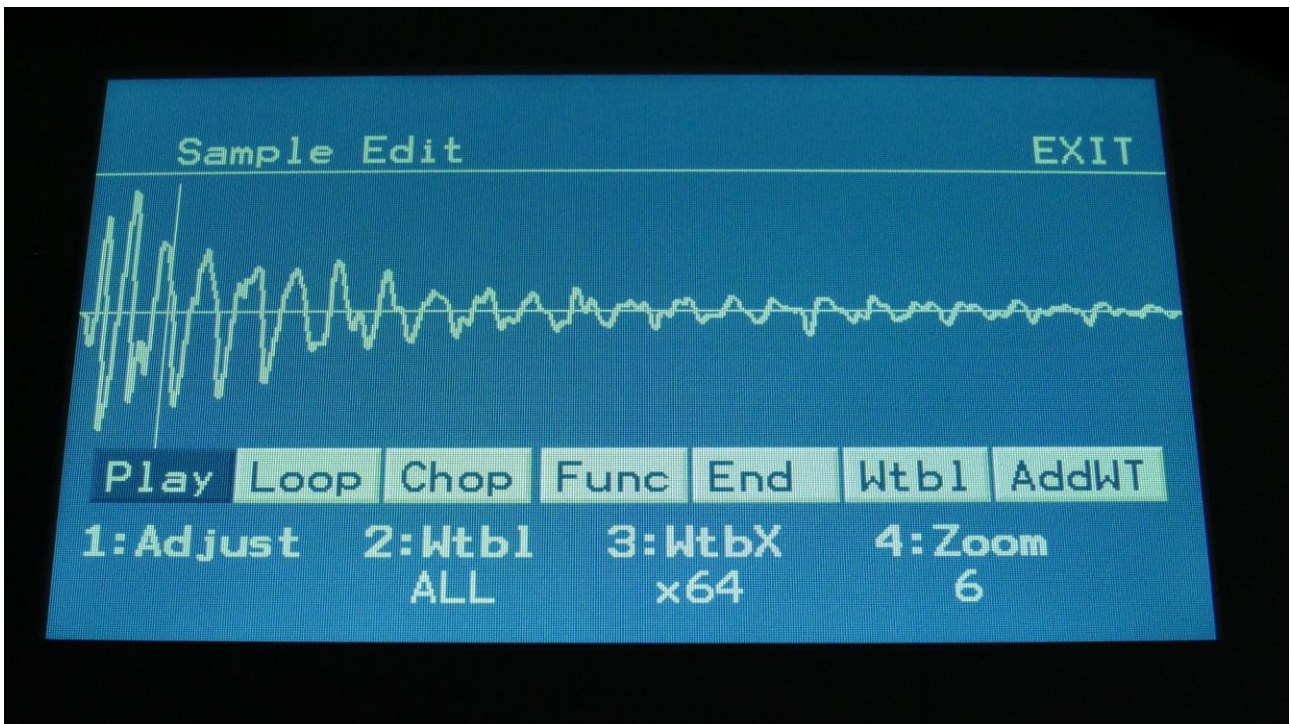

Touch the Func touch button.

Now you will enter the graphical function page:

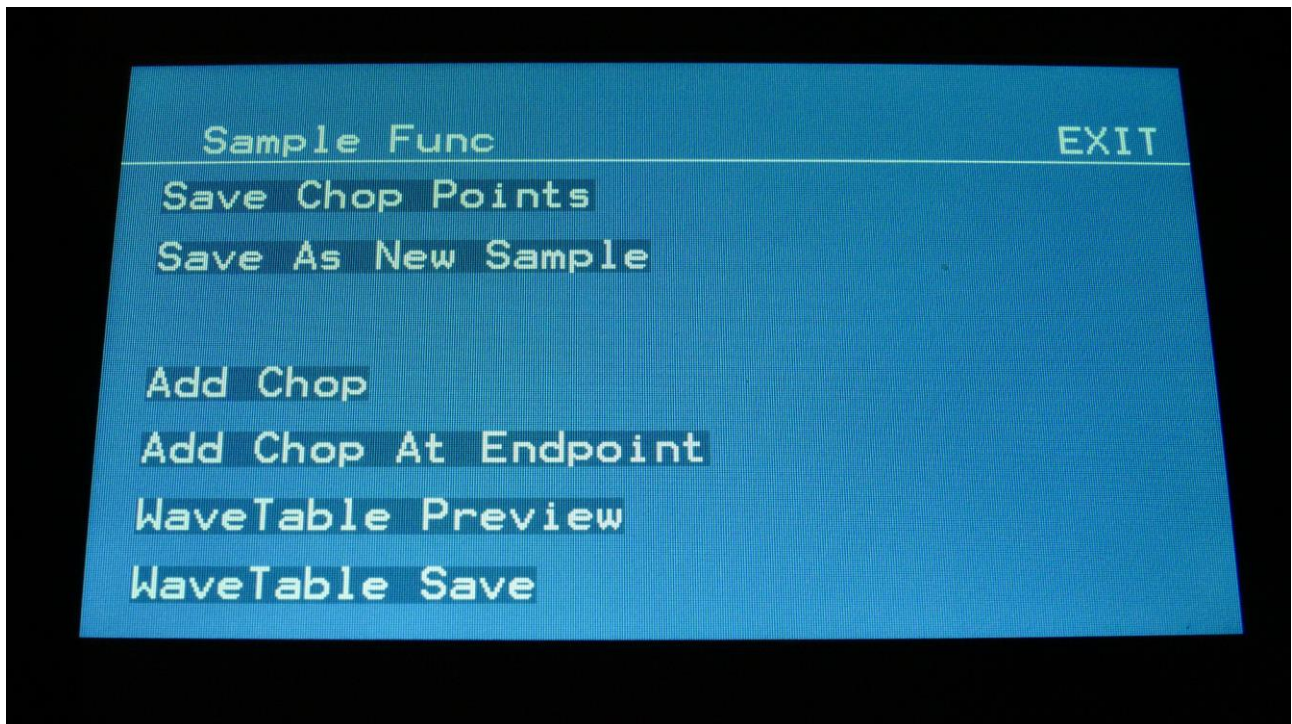

Touch “Add Chop”. Urano will now jump back to the graphical edit page, and a chop point will be added at the selected start point.


Adding a chop point at the selected end point

If you wish to create a loop, for instance for use with the sustained loop feature, you will adjust the start and endpoints, until the loop sounds as intended.

Then you will save the start point as a chop point.

In order to make the loop work, you will though also need to save the selected end point as a chop point.

To do this, you must enter the graphical function page again:

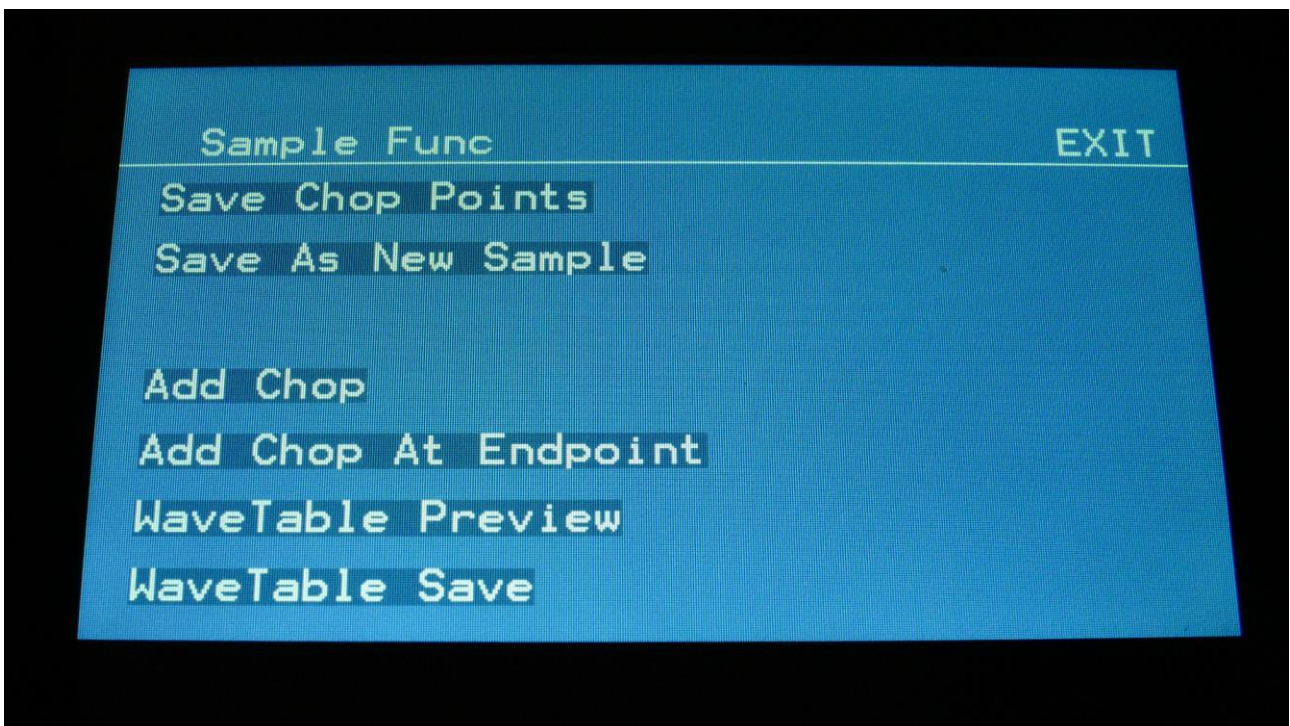


Touch "Add Chop At Endpoint". Urano will now jump back to the graphical edit page, and a chop point will be added at the selected end point.

Delete a chop point



Make sure that the Chop touch button is dark blue, and that you have selected the chop point, which you want to delete.

Touch the Func touch button, to enter the graphical functions page.

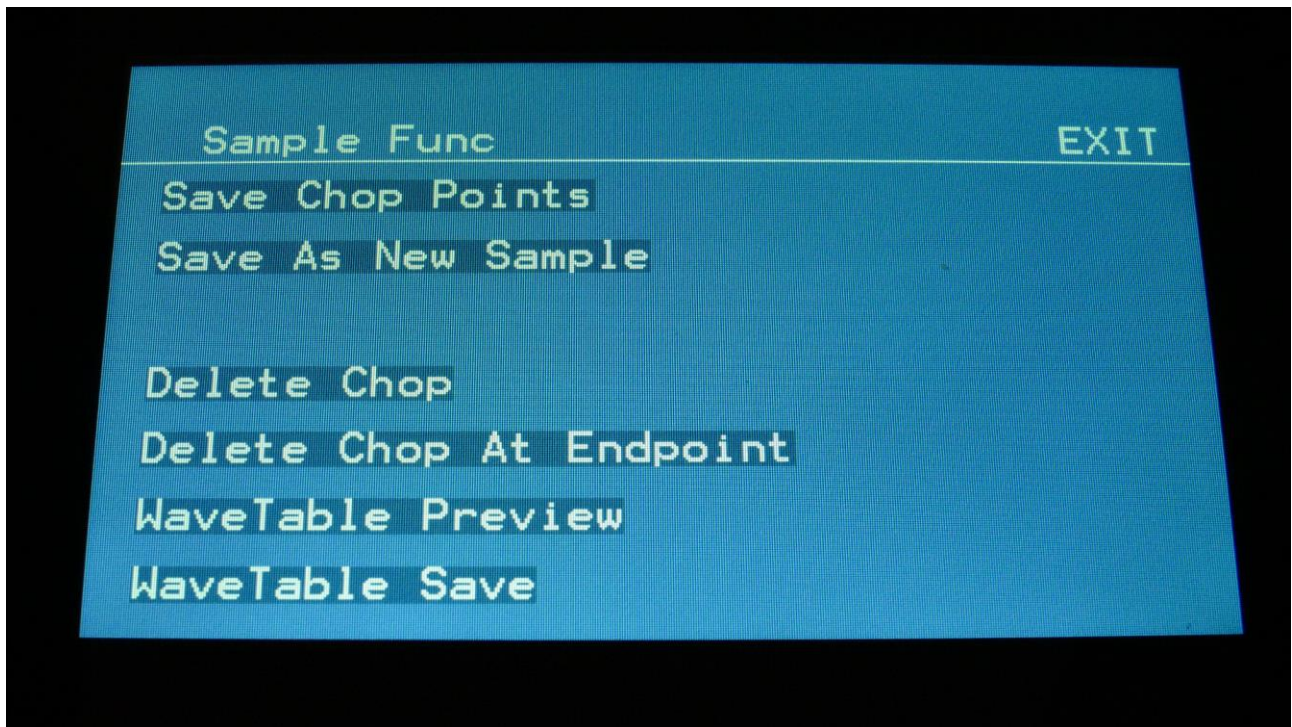


Now touch "Delete Chop". Urano will now jump back to the graphical edit page, and the previously selected chop point will have been removed.

To delete the next chop point, follow the same procedure, but touch "Delete Chop At Endpoint" on the functions page instead.

Saving the chop points

After you have edited, added and deleted chop points, you must save these changes, in order to keep them.


This is also done from the graphical functions page.

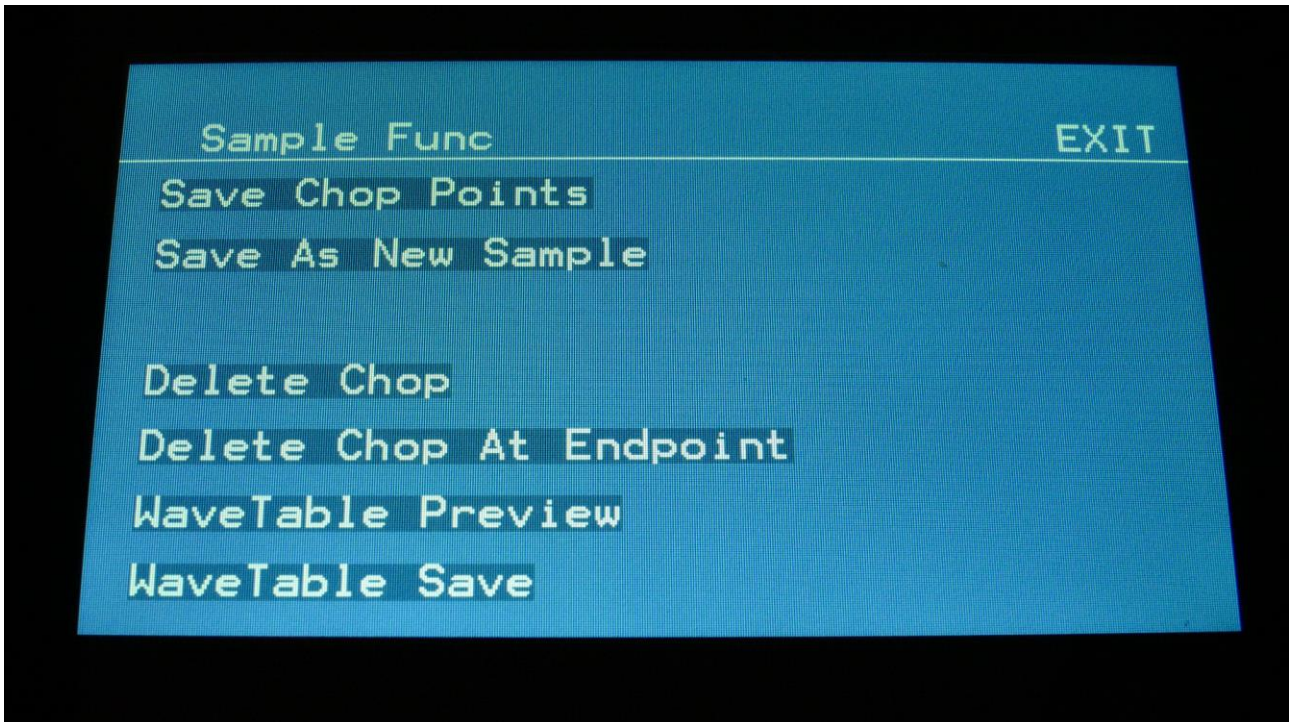

Simply touch "Save Chop Points". Urano will now save your edits, and return to the graphical edit page.


Creating a new sampling from a portion of the selected sampling

If you want to completely remove unused start and/or end portions of a sampling, use a portion of the sampling for a loop, or just wants to copy the whole sampling to another sample bank, you can use this function.

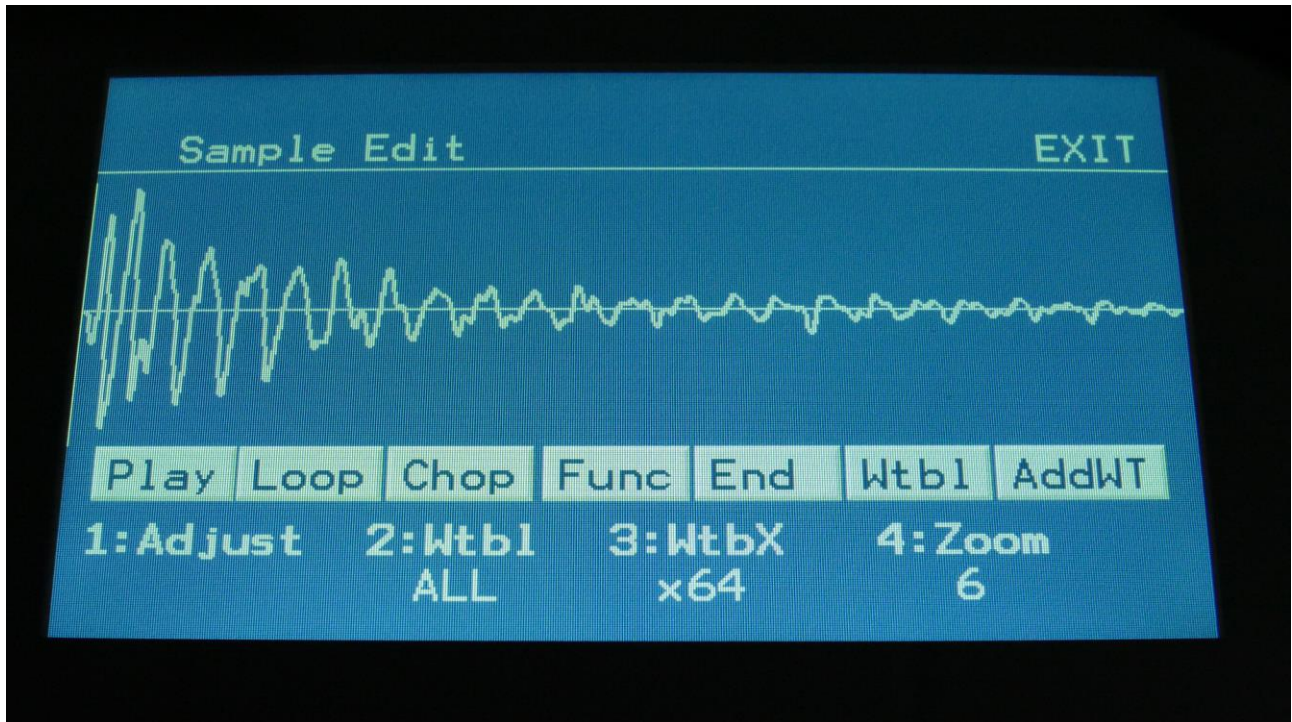


First, set the start and the end points, of the portion of the sampling, that you would like to copy, OR select a chop, it this is what you would like to copy.

Go to the functions page.

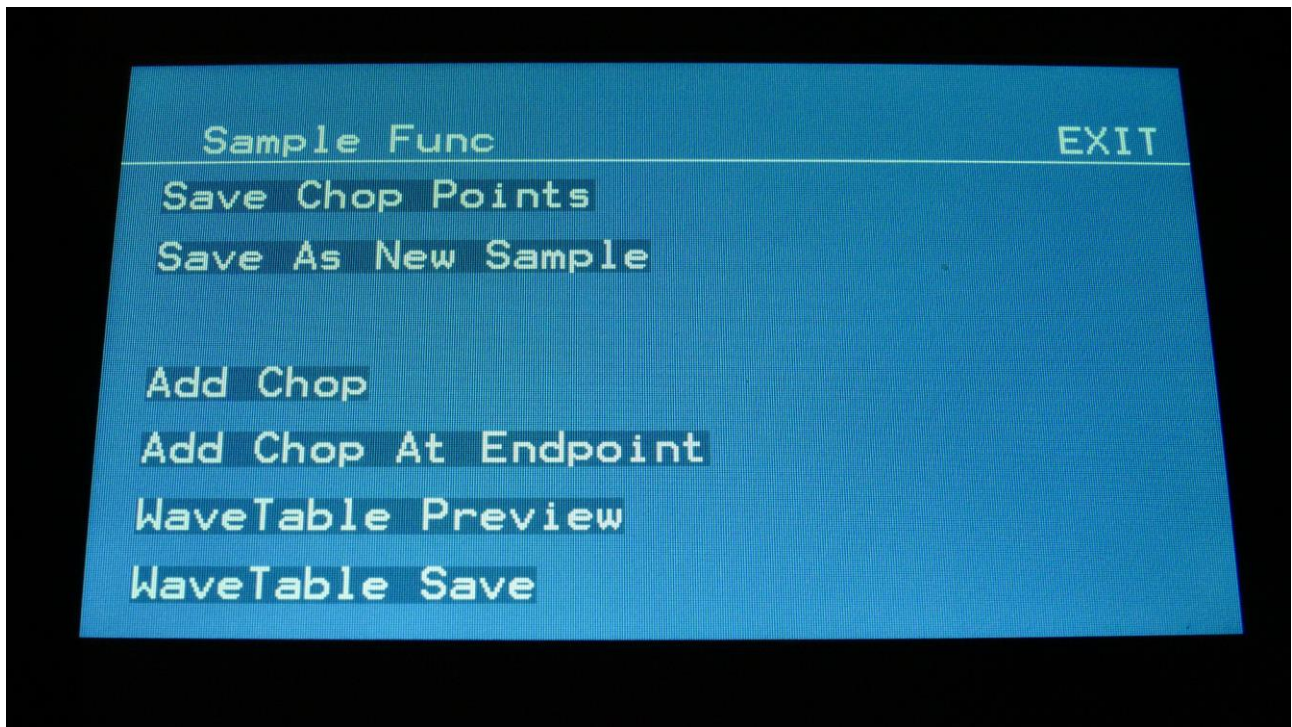


Touch "Save As New Sample". A new page will now open. Select the sample bank, that you would like to copy the sampling/portion of the sampling to, by touching the A, B, C or D touch button.

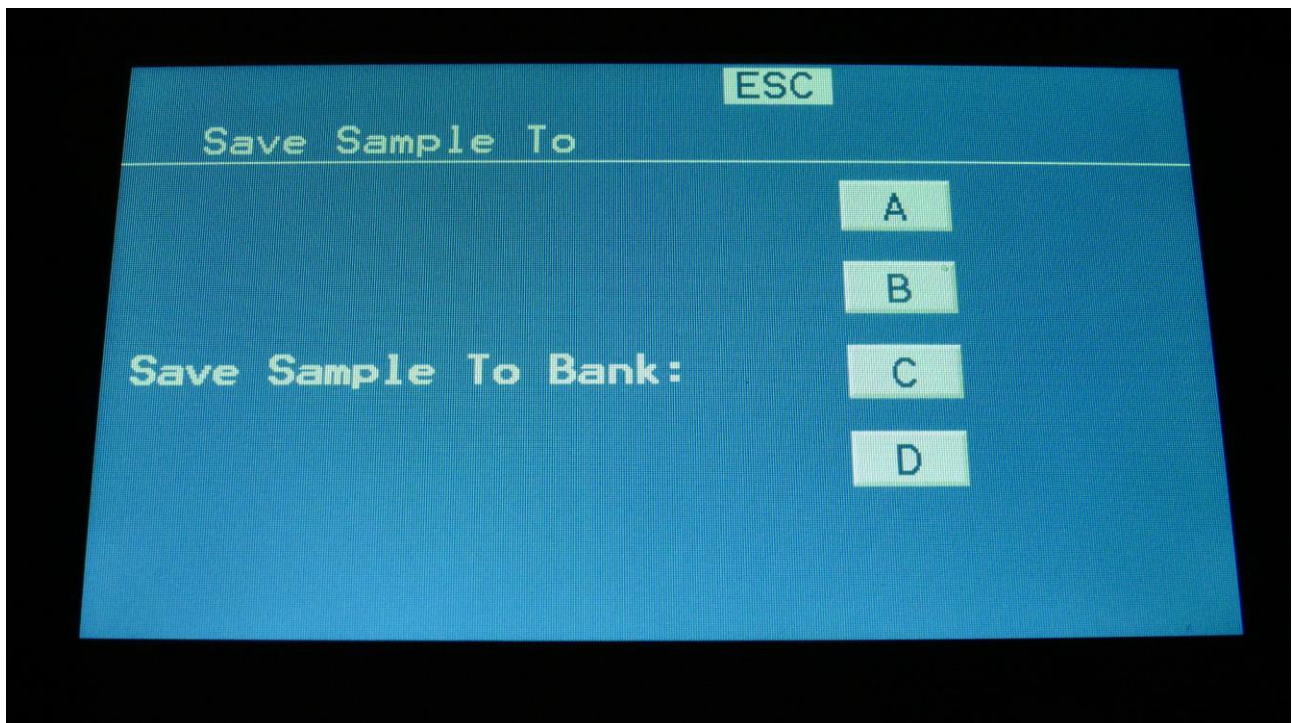

Urano will write "Saving Sample..." for some time, and then it will jump back to the functions page.

Assembling a Wavetable

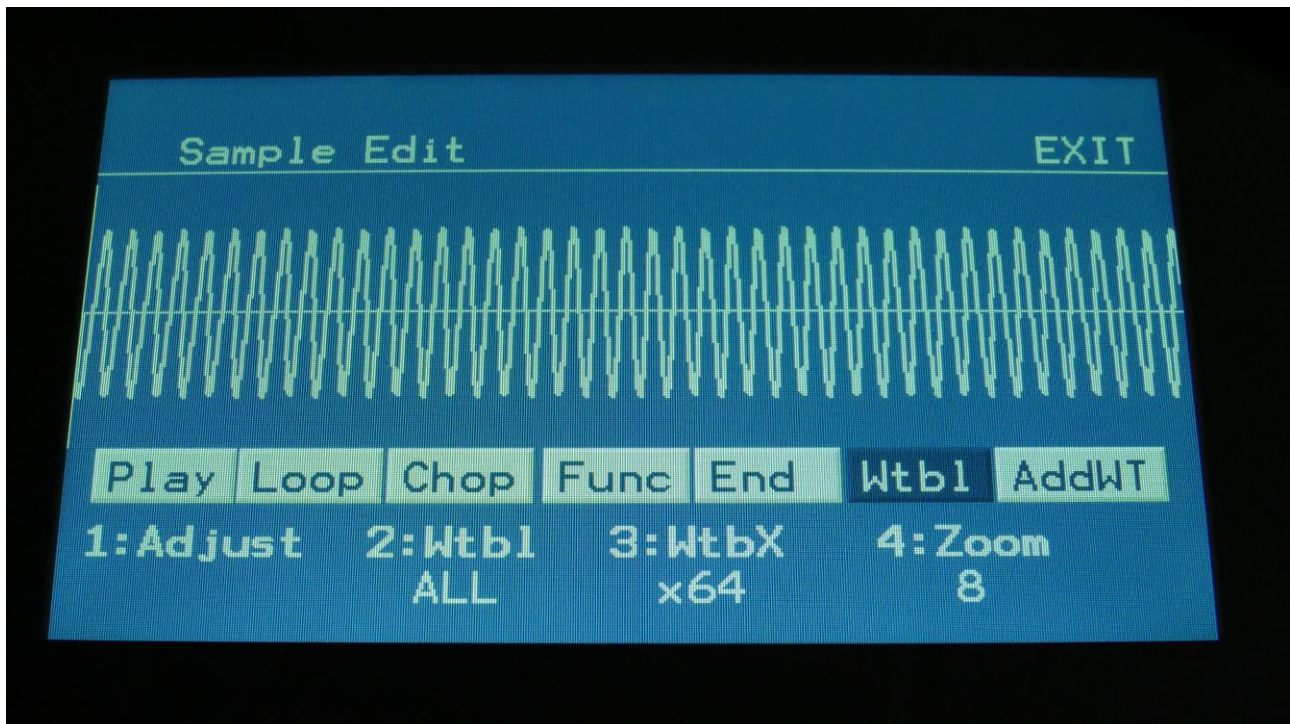

On the graphical sample edit page, with the sample, which you would like to build a wavetable from, selected, touch the **Wtbl** button, so that this turns dark blue. Urano will now create one wave for a table, consisting of 512 sample points, equally spaced between the selected start and end points. As soon as **Wtbl** mode is switched on, the currently generated wave will be audible.

Set if you would like your wavetable to have 8 or 64 waveframes, by the **WtbX** parameter (**Edit Knob 3**).


Select the wave, that you currently wants to generate by setting the **Wtbl** parameter (**Edit Knob 2**) between 1 and 8 or 1 and 64.

The **Wtbl** parameter **All** mode, will make it generate all 8 or 64 waves at one time, from the selected sample start point. The sample end point has no effect in this mode. In **All** mode, the wavetable will always play back in preview mode. Preview mode is explained on the next page.

Now, zoom in and out, and trim the sample start and end points, until you hear a result, that you like. Then select the wave number location on which you would like the current wave placed on, by setting the **Wtbl** parameter, and touch the **AddWT** touchbutton. The screen will update, to show that the wave was added.


Do the same procedure for each wave, until you have added all 8 or 64 waves to your new wavetable.

When you have assembled a wavetable, touch the Func button.

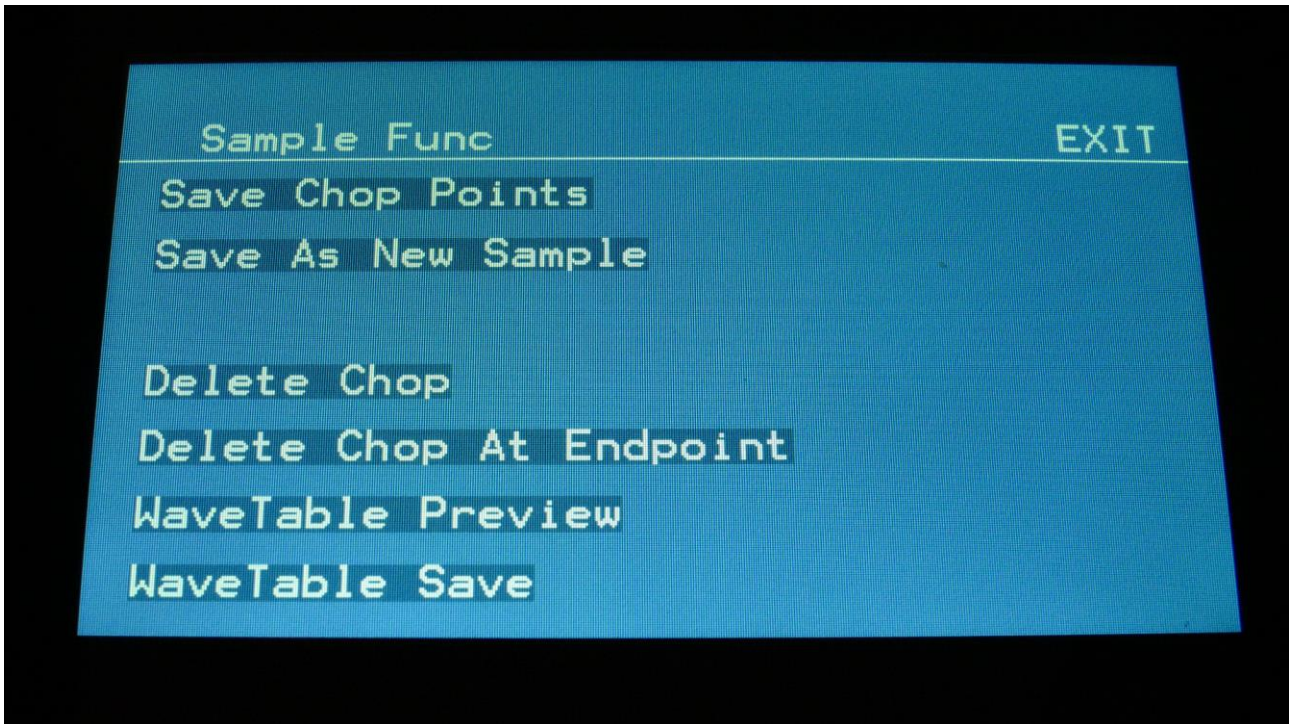


Touch **WaveTable Preview**, so that this turns white. Now you will hear your wavetable playing back. Adjust **Edit Knobs 1 and 2**, to scan through the waves (**Edit Knob 2** is only active at 64 waves).

When you are satisfied with the result, touch WaveTable Save, to save your new wavetable. Now this page will appear:

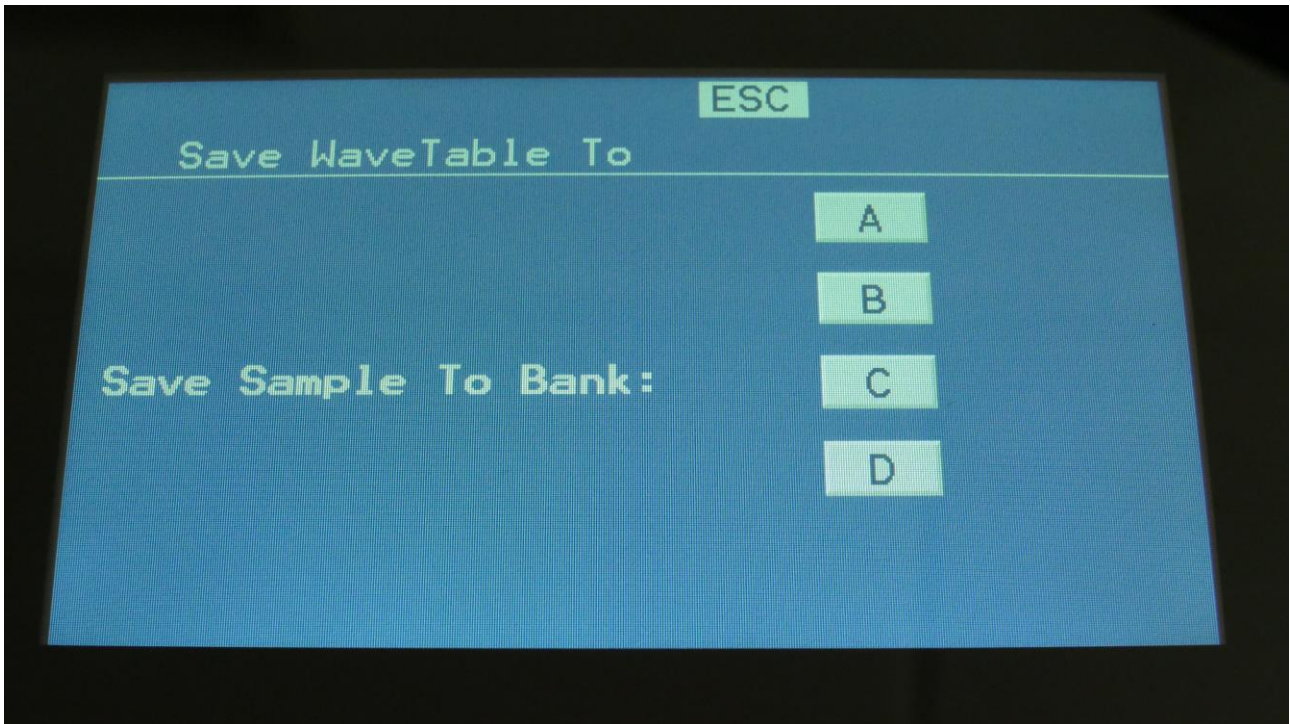

Select the sample bank, on which you would like to save the wavetable to, by touching the A, B, C or D field. 18 min. and 43 min. Urano's only has Bank A. Now the naming page will show:

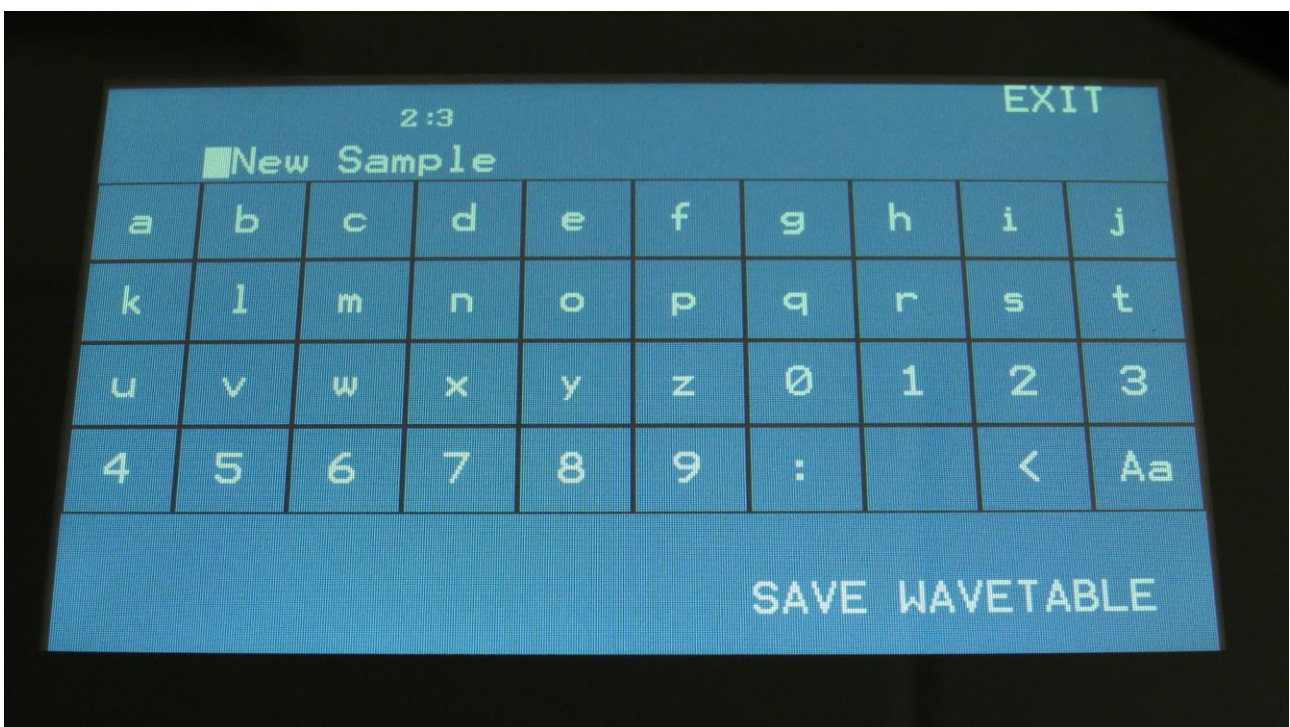

Type in the name of your wavetable, and touch SAVE WAVETABLE. The “Aa” button will switch between uppercase/lowercase letters, and numbers/signs.

WaveBuilder

The Urano WaveBuilder lets you combine up to 8 samplings, to create a wave sequence from these.


Whole samplings, parts of the samplings or chop points from the samplings, can be used to build a new wave sequence.

The wave sequence is saved as a new sampling, and a chop point is inserted, at the start point of each of the 8 waves, for easy selection of each partial, using the chop parameter.

WaveBuilder also lets you copy a sampling from one sample bank to another. Just select the sampling in WaveBuilder, set start to 0 and length to 511, and save it to the new bank.


The WaveBuilder always outputs to the L and R outputs

Enter WaveBuilder:

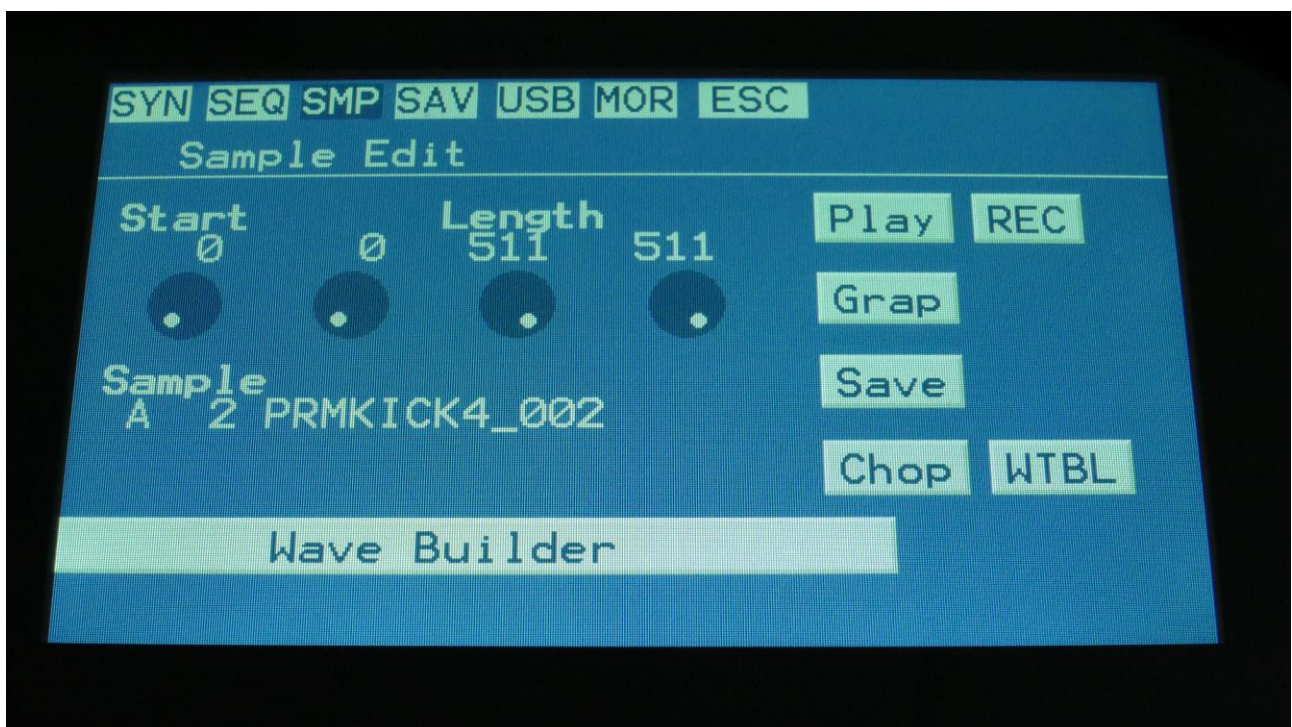

From the Sample Edit page, touch Wave Builder in the bottom of the page.

You will now enter this page:

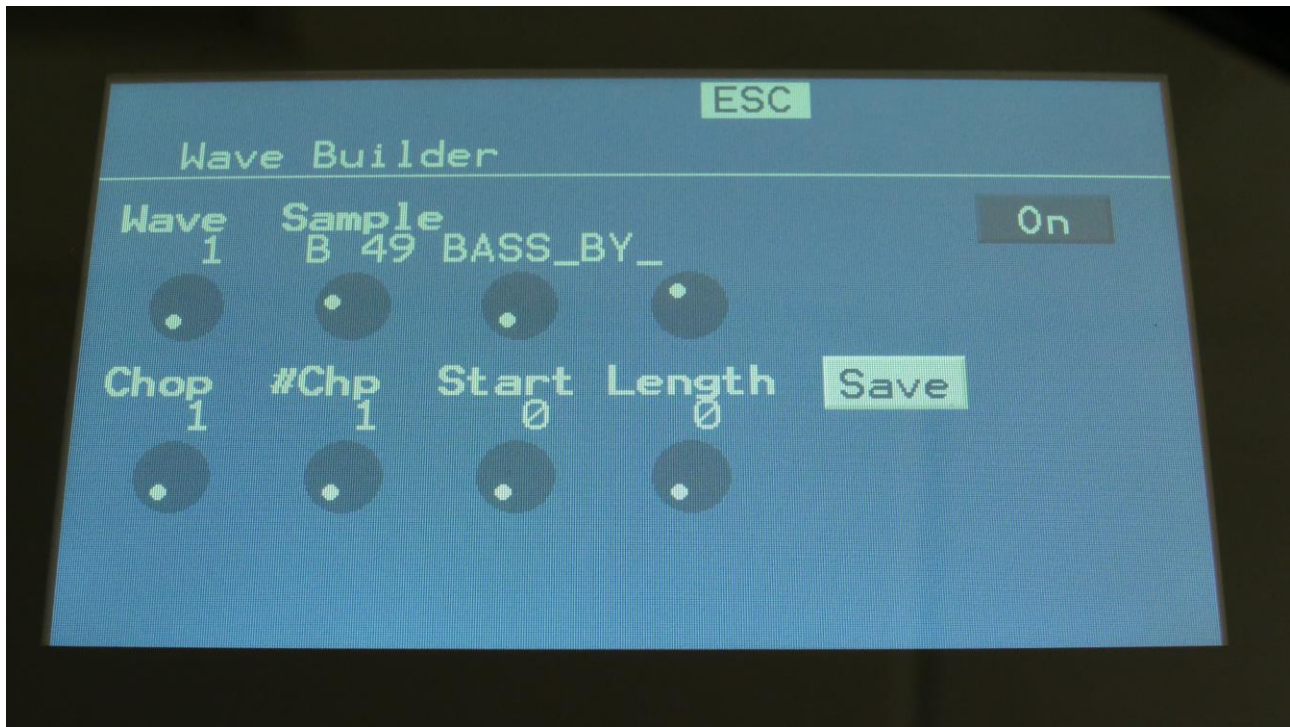

Wave: 1 to 8. Selects wave 1 to 8 of the wave sequence to be generated.

Sample: A0 to D2048. Selects the sampling for the selected wave. Edit knob 2 selects the sample bank (A to D), edit knob 3 selects the 100's in the sample number, and edit knob 4 select the 10's and the 1's in the number.

Chop: 1 to 64. Selects the chop point of the selected sampling, to be included in the wave sequence, if the selected sampling holds any chops.

#Chp: 1 to 64. Selects the number of chops to play back, from the selected chop.


Start: 0 to 511. Sets the start point of the sampling, of the range, that should be included in the wave sequence. If the selected sampling holds chop points, the start point will be inside the selected chop range.

Length: 0 to 511. Sets the length of the sample range, that should be included in the wave sequence. If the selected sampling holds chop points, the maximum length will be inside the selected chop range.

On/Off touch button: Each of the 8 waves can be separately switched on or off. As soon as at least one wave is on, WaveBuilder will start playing back the sequence of the waves. Any waves that are switched off, or has their length set to zero, will be skipped from the wave sequence.

Save touch button: As soon as you have selected samplings and chops, and adjusted the start and lengths, and you are satisfied with the result, you should touch this button, to save the new wave sequence.

This will get you to this page:

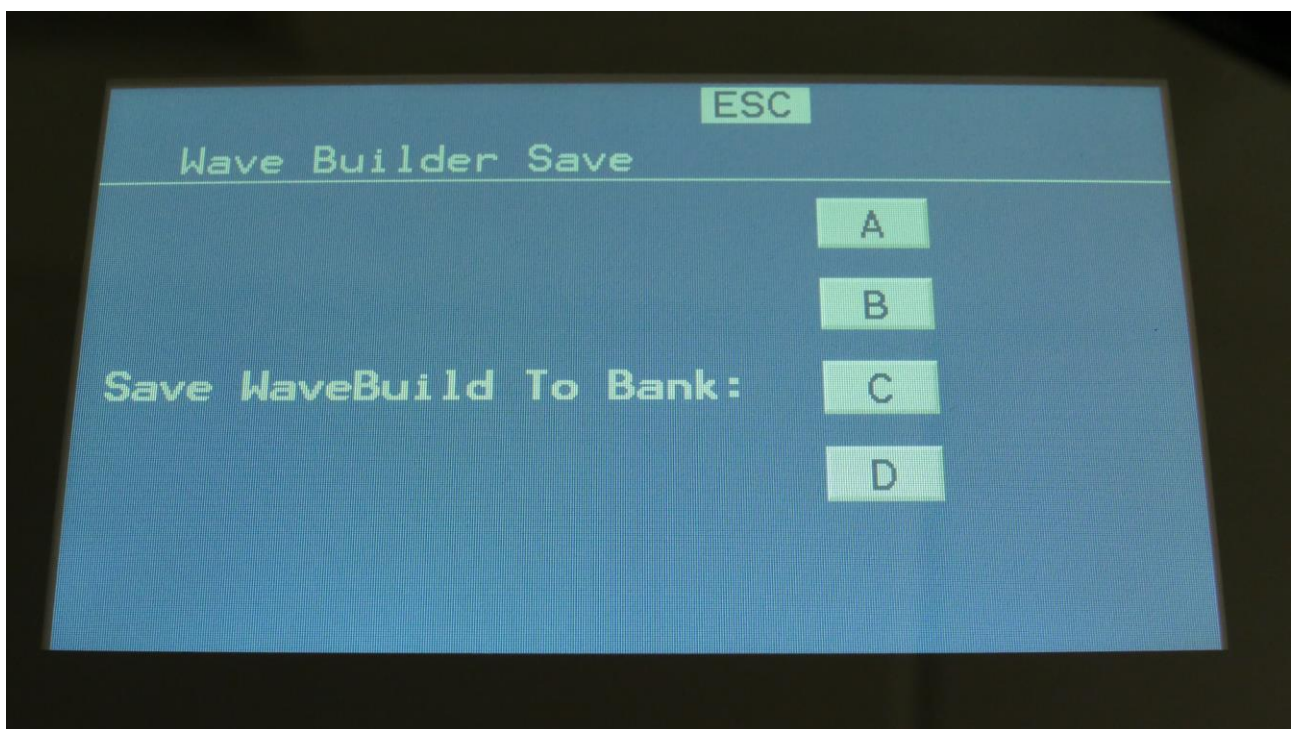


Now touch A, B, C or D, to save the wave sequence to the corresponding sample bank. The 18 min. and 43 min. models only has Bank A.


WaveTable Editor

In the wavetable editor, you can load an existing wavetable or sampling, and edit or even completely redraw each wave. You can edit each single cycle wave, by drawing with your finger on the touch screen. Two different draw modes are currently available: Nrm (normal) or Art (Artistic). In Nrm mode, the waveform drawing simply follows your finger, and you can draw any shapes easily. In Art mode, urano will generate artistic waveform patterns, as you draw. The patterns will vary after how high you place your finger on the screen, and if you draw forwards or backwards. It is possible to copy and paste single cycle waves. It is also possible to audition the single cycle wave, as well as testing the whole wavetable, directly on this page. When saving a wavetable, it is possible to name it and select the destination sample bank. It is saved as a wav file.

To load a sampling or a wavetable for editing, simply select this on the Sample Edit page.

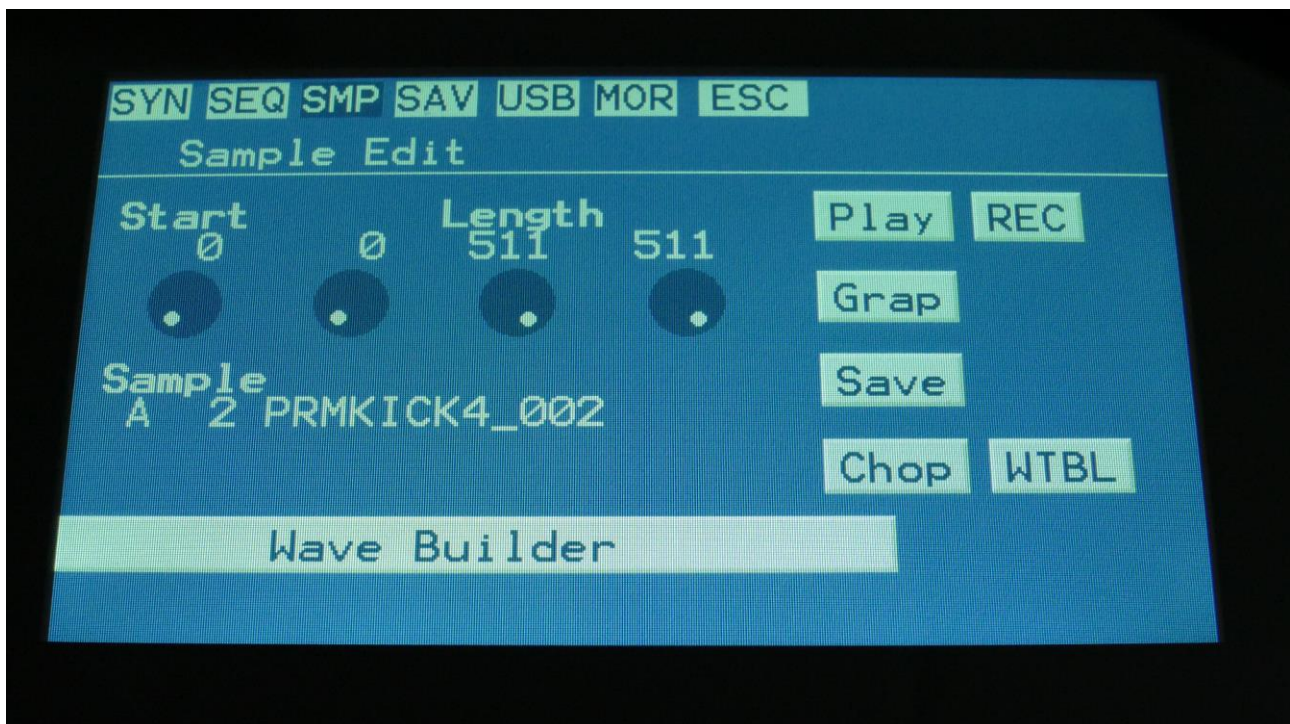


Then touch the WTBL button, to enter the wavetable editor.

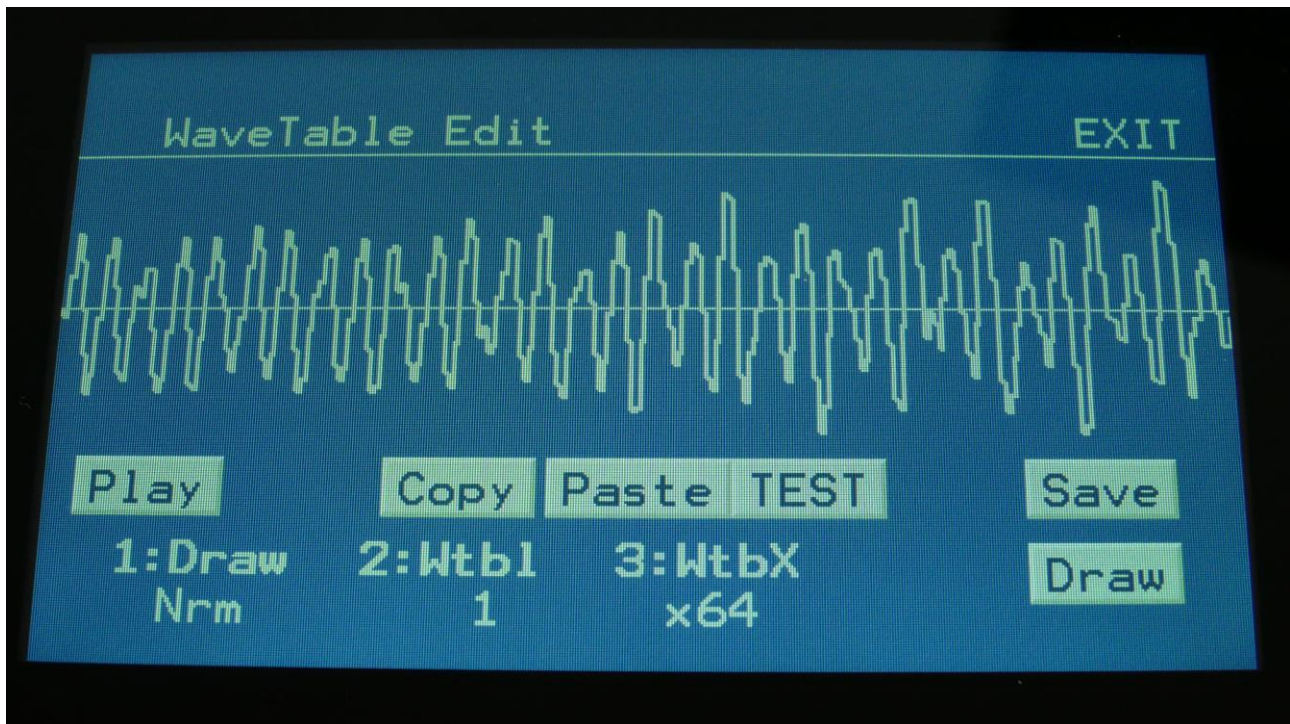

Here you can view and edit the wavetable one wave at a time. With **Edit Knob 2** you can select wave 1 to 8 or 1 to 64, depending on the wavetable mode. With **Edit Knob 3**, you can select the desired mode: **x8** (8 waves) or **x64** (64 waves).

You can edit each wave, simply by drawing with your finger on the touch screen. 2 different draw modes are available: **Nrm** and **Art**. The 2 modes can be selected by **Edit Knob 1**. **Nrm (Normal mode)** will simply follow your finger moves. **Art (Artistic mode)** will draw complex patterns. How the pattern will look like, depends on some factors: Whether you move your finger forwards or backward, and on how high in the wave field your finger are placed. Most of the time, it is though quite unpredictable.


In order to draw your new Waves, without getting interrupted by accidentally hitting the Exit touch button, or other touch buttons, it is possible to activate the “Draw” touch button.

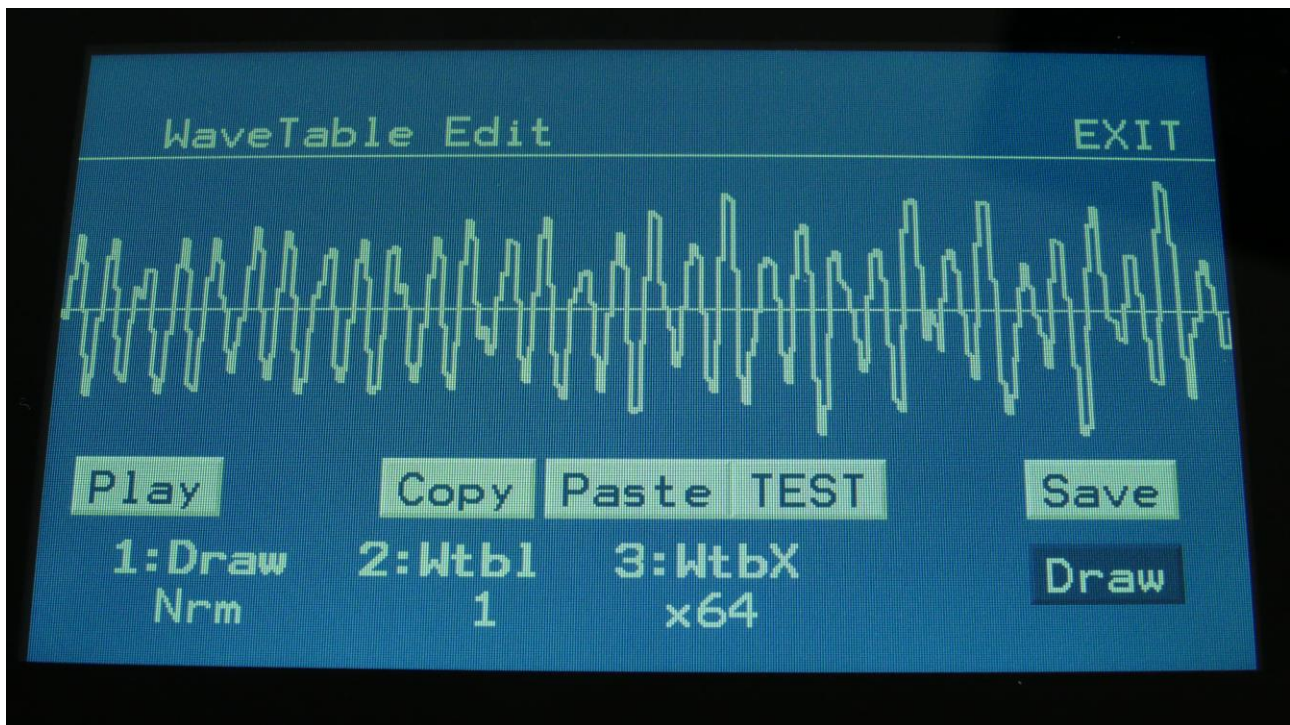

When this is dark blue, all other touch buttons are de-activated, and you can focus on your drawing.

To activate all touch buttons again, touch the Draw button, so that it turns white.


To **audition** the currently selected wave, touch the **Play** button, so that this turns dark blue.

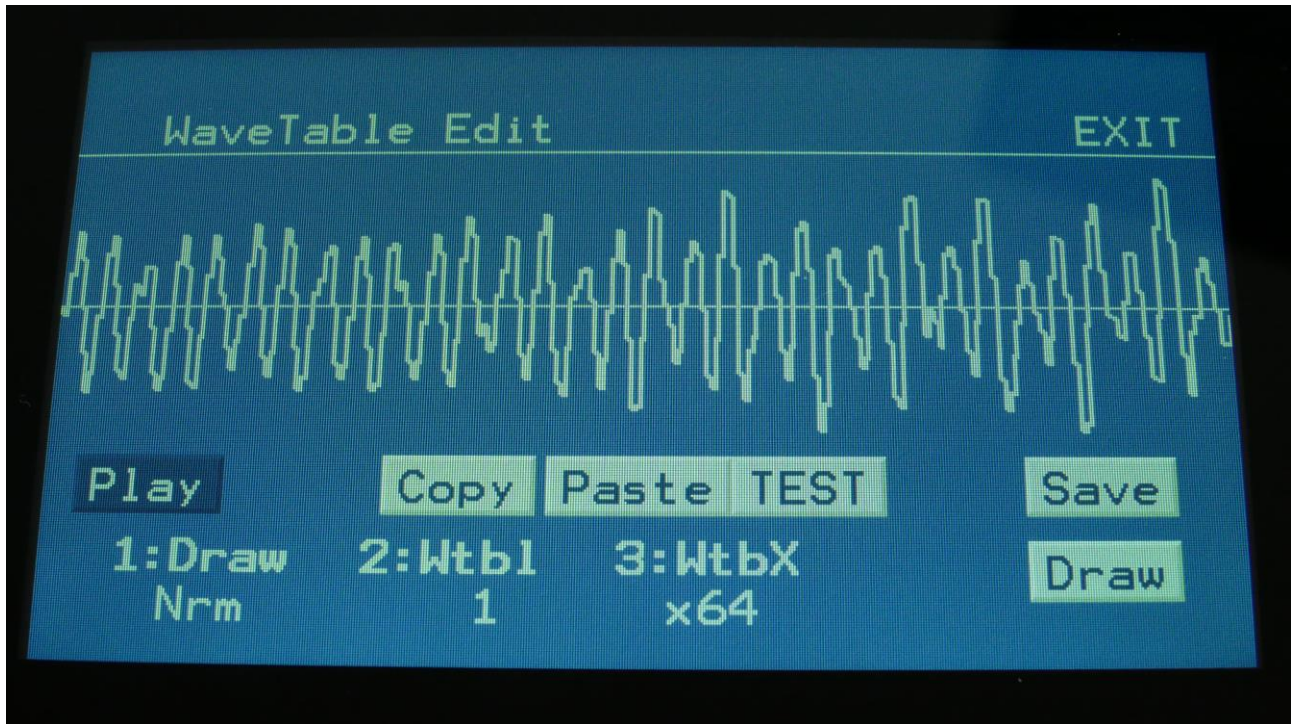

You can keep this turned on, while you are drawing. The output sound will change, according to the wave.

If you want to use a wave as a base for another wave, a **copy/paste** system has been included. Select the wave you want to copy, and touch the **Copy** button. Then select the destination wave location, using **Edit Knob 2**, and touch the **Paste** button.


At any time under this process, it is also possible to test the wavetable. Touch the TEST button, so that this turns dark blue.

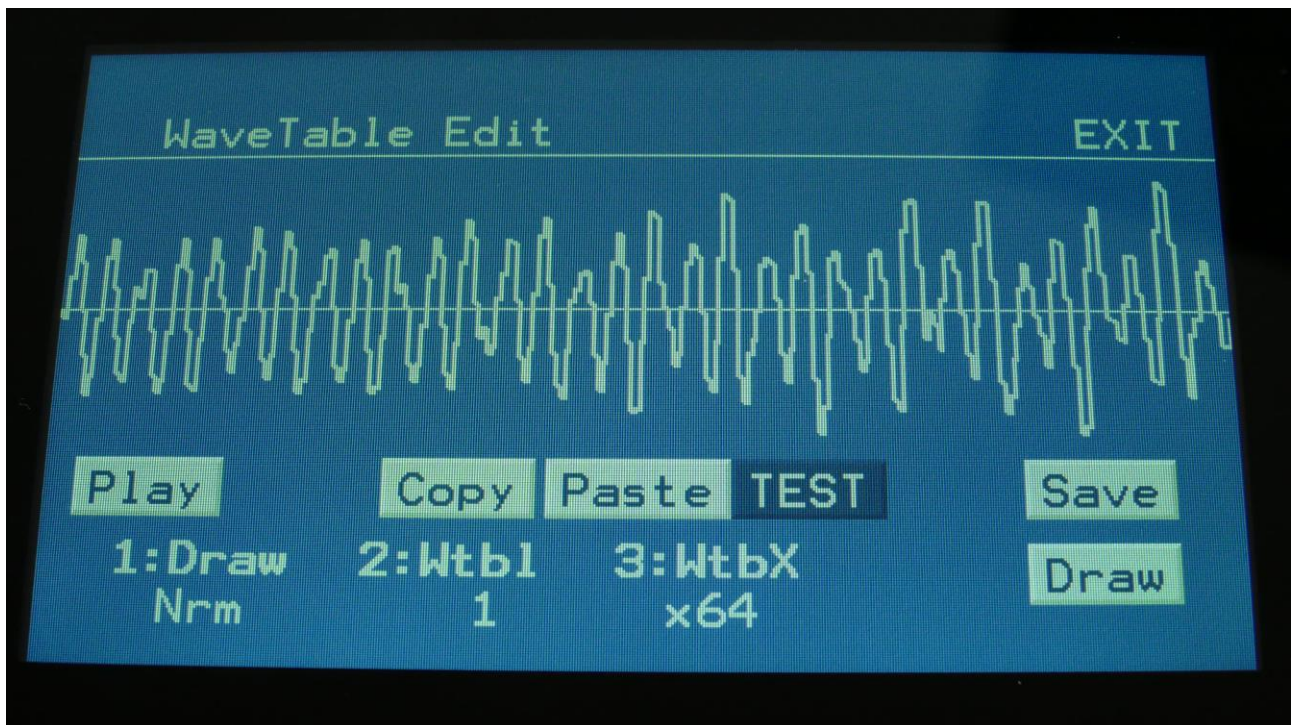

You will now hear the wavetable play back. Turn Edit Knob 1 and 2, to hear how the wavetable changes.


When you are satisfied with your new wavetable, you should save it to keep it.

Touch the Save button. You will now enter the name page.

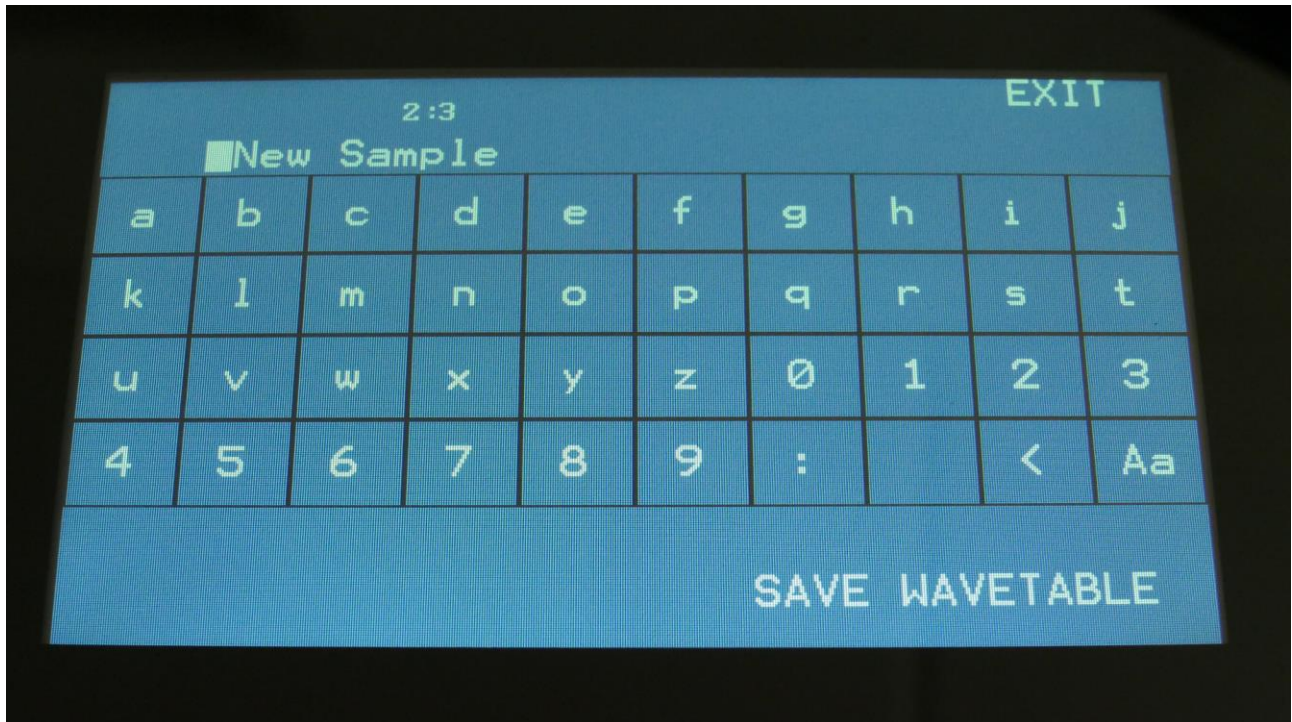

Type in the desired name for your wavetable. The Aa button will shift between upper and lower case characters. When you are done, touch SAVE WAVETABLE.

You will now enter this page:

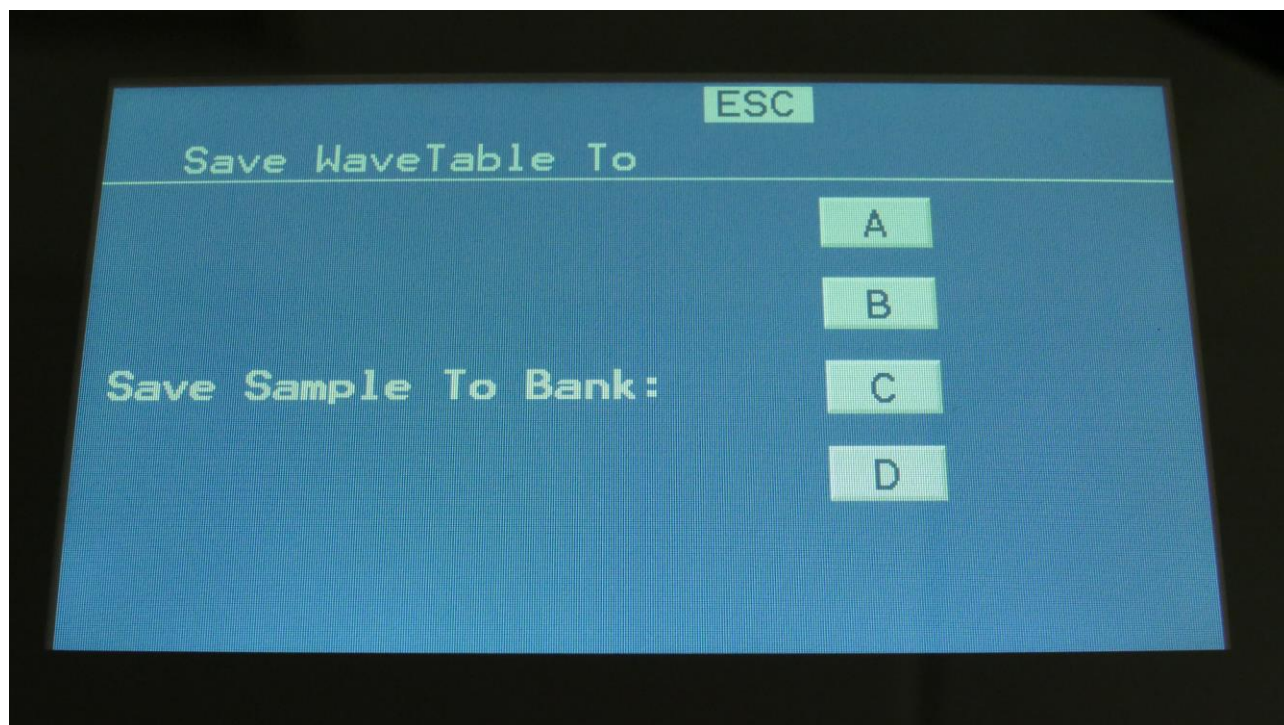

Now touch the letter A to D, which corresponds to the sample bank, where you want to save your new wavetable. The 18 min. and 43 min. models only have Bank A available.

USB


The USB pages lets you access the files and directories of a USB drive, attached to Urano's USB connector.

You can import and export samples as .wav files, import and export presets and songs, import and export user filter parameters, update the Urano firmware, and make new directories.

USB drives used with Urano should be:

- Maximum 32 GB
- FAT formatted

From the Preset Select screen, touch the EDIT field, to enter the Main Modules page:

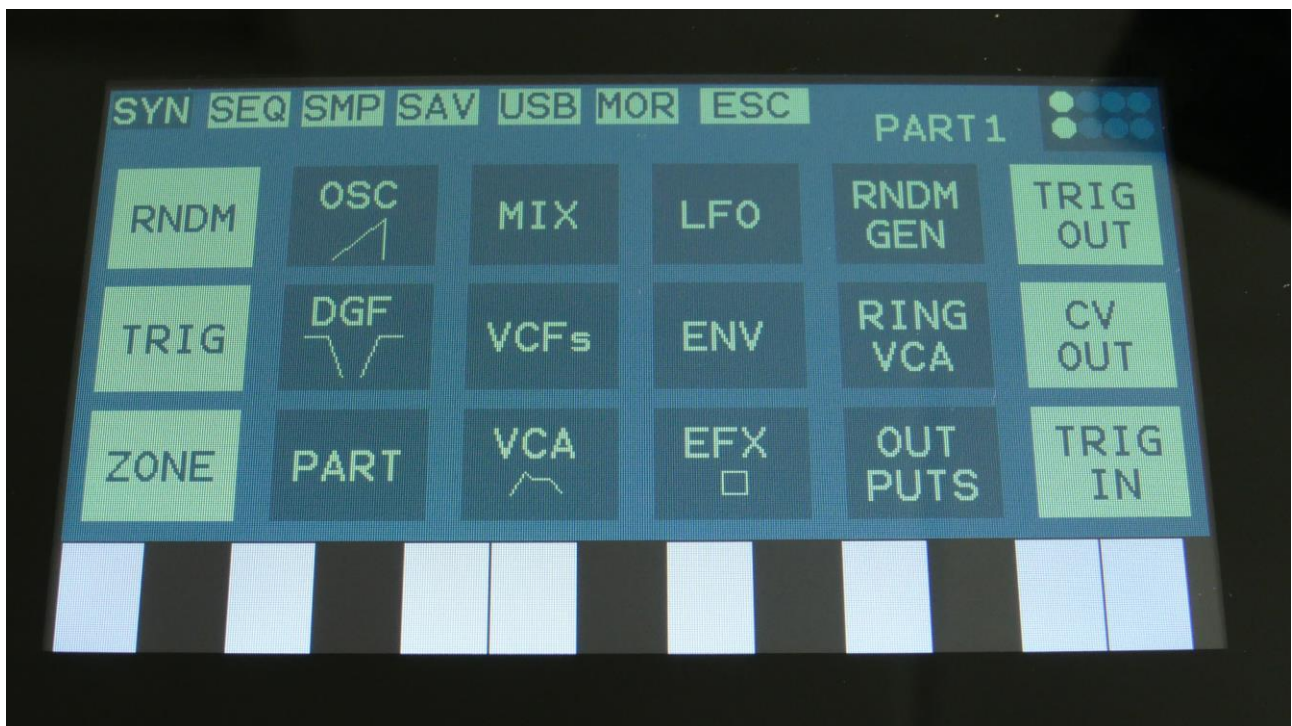

Touch USB on the navigation bar at the top of the screen.



On this first page that you will enter, the root directory of the connected drive is shown. You can see that it is the root directory, by the "D:" in the top of the page. If you have accessed a directory, the name of this will replace "D:".

If you do not see the root directory of the drive, make sure that it is connected properly, and that it has the right specs, as described in the start of this section.

The names you see on the screen, are the names of the files and directories on the drive. File names are in black, and directory names are in purple. The currently selected file has a white box around it. To select a file, simply touch it.

Urano will show 7 files/directories at a time. By pushing the arrows, you can select the previous/next 7 files.

USB Sample Preview



Wav samples can be previewed directly from a USB drive.

Select the sampling, that you would like to preview, by touching the sample name, and touch the PREW touch button. This will first show LOAD, then PREW again, while playing back the first 6 seconds of the sampling.

Open a directory (or folder)

To open a directory, to see what's inside, or to import single files or sub-directories, simply select the directory you would like to open, by touching it, and then touch the "Open" button.

Urano will now open the directory, and show the first 7 files in it. The "D:" in the top of the screen, will now be replaced by the opened directory's name.



Importing files

Files that can be imported to Urano are:

- Samplings with the ending .WAV, including Urano generated chop points, and cue points generated by other gear/computer programs.
- Little deFormer samplings with the ending .LDS, including chop points.
- Presets with the ending .URP
- Songs with the ending .URO
- User filter parameters with the ending .VCF
- Sequencer data from LD3 and Tiny LD presets with the ending .XDP
- Sequencer data from SpazeDrum presets with the ending .SDP

Files that are shown, but can't be imported directly are:

- Update files with the ending .HEX

Files with any other ending will not be shown on Urano's screen, regardless of if they are present on the drive.

To import a single sampling or preset/song, select the .WAV/.LDS/.URP/.URO file you would like to import, by touching it.

Samples are imported to the sample bank selected on the Sample Edit page.

When importing a single preset or song, it is only loaded to the preset/song buffer, and you will have to save it manually, to keep it.


Samples that were exported from a Gotharman instrument, can be imported either with the "LD" name (the imprinted sample name shown for the sampling on the sample pages), or the file name. To select this, see the next sub chapter of this manual "Importing Multiple Files".

Touch the "Import" button. Urano will now import the selected file, and show the progress on a progress bar:



Importing multiple files

To import multiple files at one time, select a directory, by touching it. Touch the "Import" button. Urano will now ask:

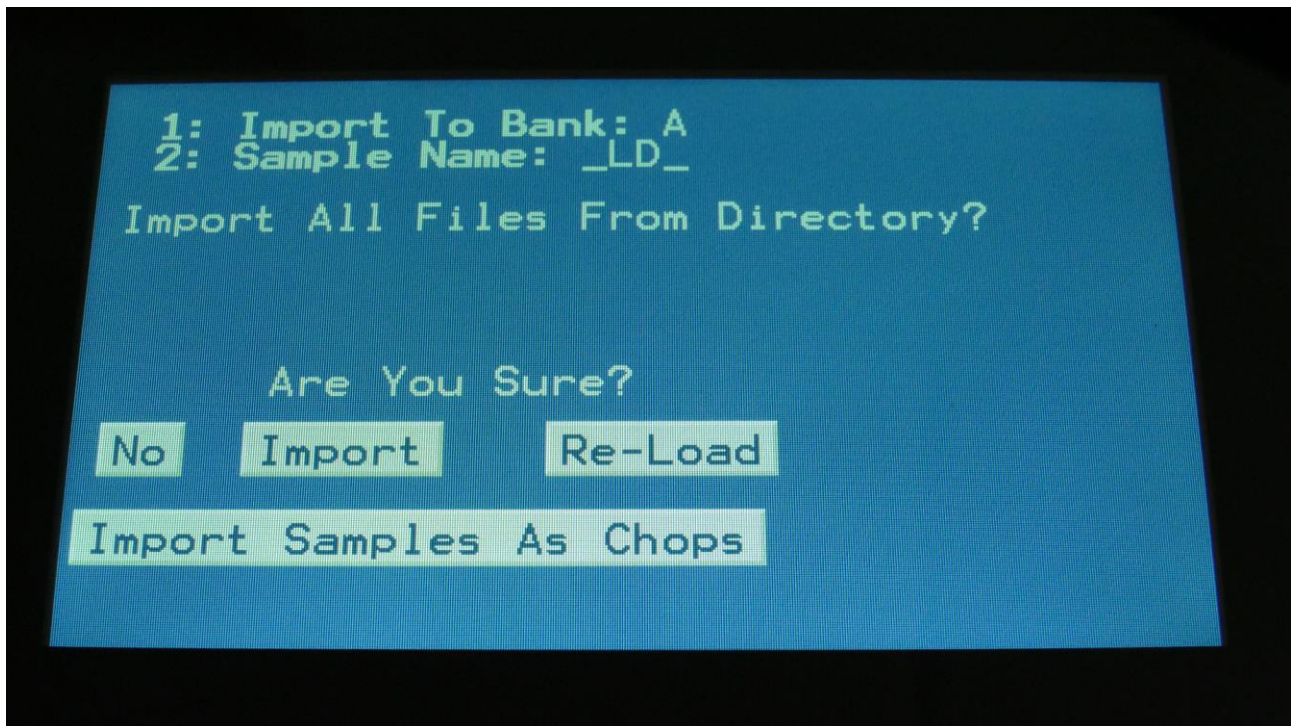

Touch "Import" to continue, or "No" to exit.

If you touched Import, Urano will now import all samples, presets and songs, that the selected directory holds. It will though not import files from any sub-directories.

Samples are imported to the sample bank selected by Edit Knob 1, that is shown in the top of the screen. Presets are imported to the selected preset and forwards, so make sure that you have not selected a preset that you planned to keep, before using this function. Songs are also imported to the selected song and forwards, so make sure that you have not selected a song that you planned to keep, before using this function.

Samples that were exported from a Gotharman instrument, can be imported either with the "LD" name (the imprinted sample name shown for the sampling on the sample pages), or the file name. To select this, turn Edit Knob 2, to select either "_LD_" or "File". This setting will be valid until you turn your Urano off, or gets back here to change the setting. The setting is valid both when importing multiple samples, and when importing single samples.

Please note that User filter parameters can't be imported as multiple files.


Reload multiple files

A reload function is also available. This will only import presets, songs and samples that has been exported from Urano, or that has been renamed to fit the Urano export standard –samples must be named: A0001.WAV, A0002.WAV.....A0220.WAV, B0001.WAV, B0002.WAV.....B0256.WAV, presets and songs must be named: A01.URP, A02.URP....A64.URP, B01.URP, B02.URP.....P64.URP .

This function will import presets and songs to the same locations as they were originally stored to.

Reload will also import samples to the exact same location, as they were placed when exporting. This will make sure, that samples used in your presets, will always be placed in the right locations. Sample locations that are already occupied, will be skipped by Reload, so make sure to erase sample bank A and B, if you want a complete reload.

To Reload multiple files, select a directory, by touching it. Touch the "Import" button. Urano will now ask:

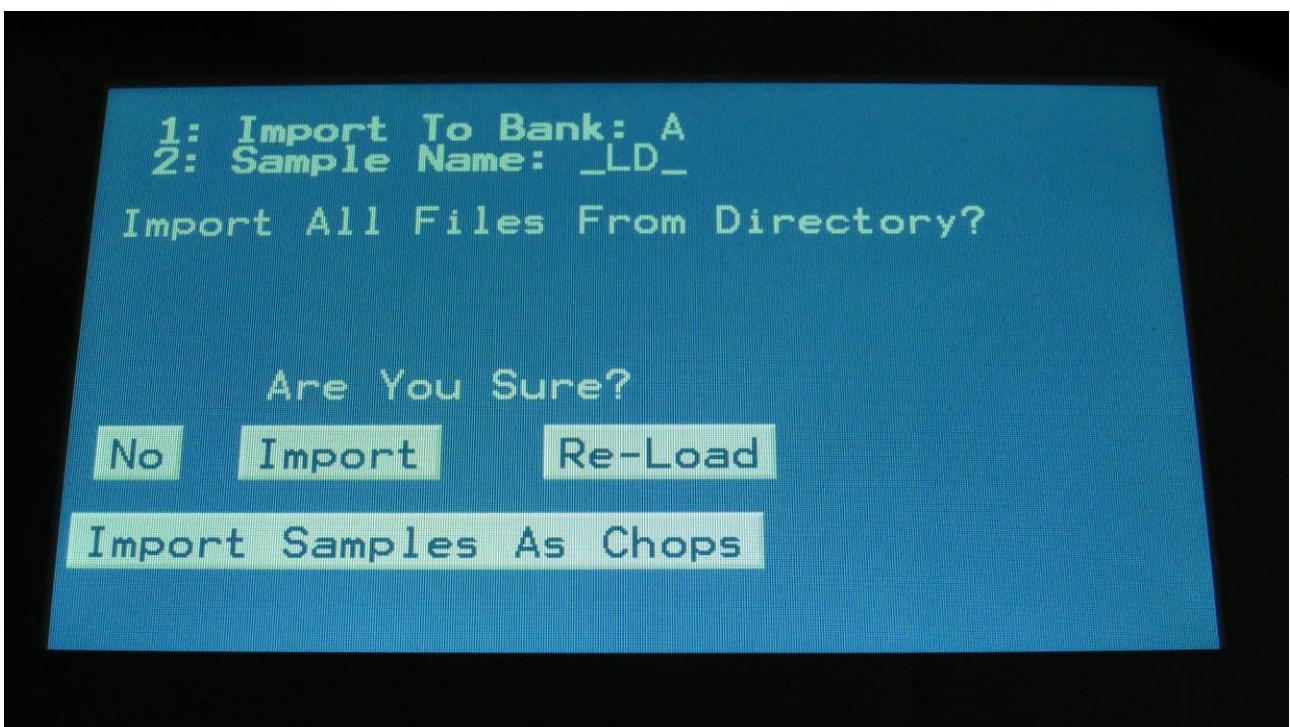

Touch "Re-Load" to continue, or "No" to exit.

If you touched Re-Load, Urano will now import all samples, presets and songs, that the selected directory holds, and that are correctly named. It will though not import files from any sub-directories.

Reload does also have other functions:

-On Urano itself, it is only possible to erase the last recorded sampling of bank A, B, C and D. By exporting all your samplings to a USB drive, and then delete sample bank A, B, C and D on Urano, delete the sample wav files you want to erase on the USB drive, from Urano itself or on a computer, and reload all the samples. Samples that are erased, will just be left blank.

-If you would like to import a number of wav files in a specific order, or in a specific sample bank, you can rename the samples on a computer to: A0001.WAV, A0002.WAV.....A0220.WAV, B0001.WAV, B0002.WAV.....B0256.WAV, and then import them using Reload.

-If you would like to rearrange the order of samples and/or presets, you can rename the files and reload them. Presets are named: A01.URP, A02.URP....A64.URP, B01.URP, B02.URP.....P64.URP .

Import Multiple Samplings From Directory As one sampling with Chop points

This function will make it easier than ever, to make your Urano hold more than 8.192 samplings, in an easy way! Without splicing samples on a computer!

On your computer:


Make a directory (or folder) on a Urano compatible USB drive. Name the directory with the name, that you want the sampling to have. Copy any single samplings you would like this sampling to contain, into the directory. Max 64 samplings.

Create multiple such directories, if desired.

Unmount the USB drive from your computer, and insert it in the Urano USB port.

Enter the USB menu, select the directory you just created, and push “Import”.

This screen will now show:

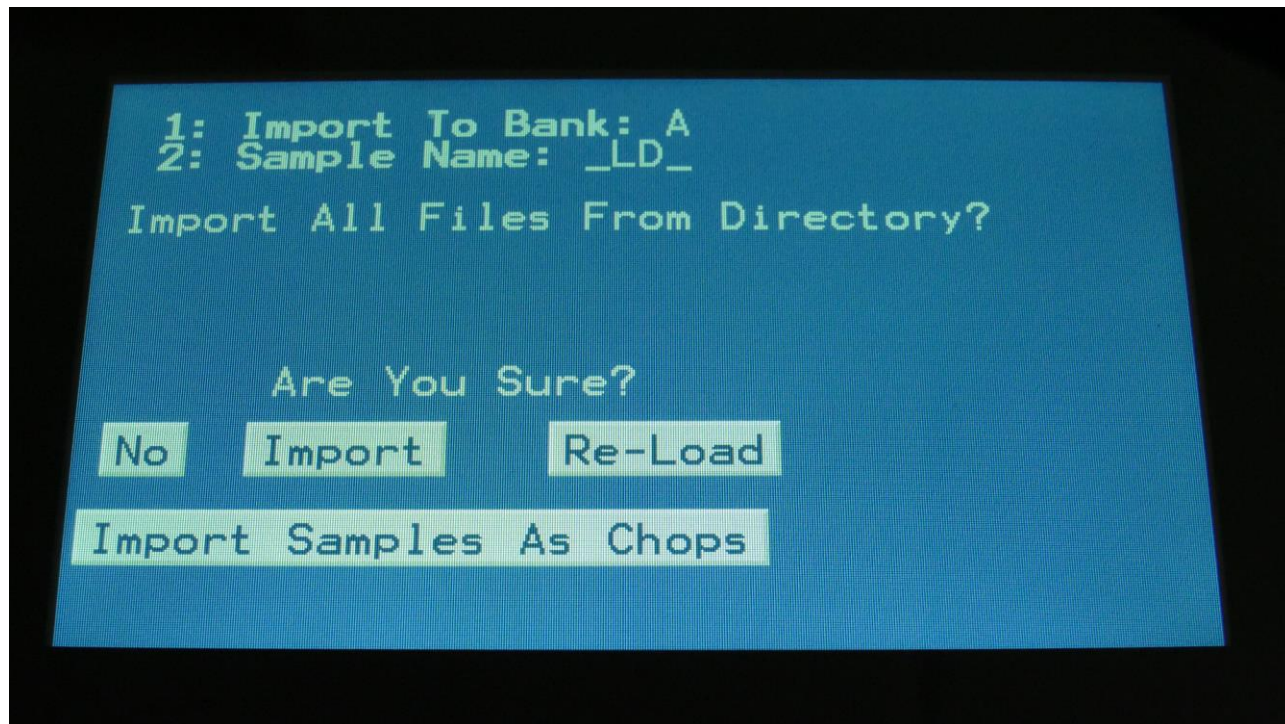

Touch “Import Samples As Chops”.

Urano will now create one sampling from all of the samplings in the selected directory, and insert a chop point at the start point of each sampling.

Samples are imported to the sample bank selected by Edit Knob 1, that is shown in the top of the screen.

After the import is done, go to the sample edit page, select the sampling you just imported (named from the directory name), and enter the Chop edit page. You will now be able to hear each of the samplings, by selecting chops.

On the synth sampler pages, the procedure is the same. Select the sampling, and select the chop point. Modulate the chop point selection, to create great variation.


I have found this function especially useful, when working with acoustic drum samplings. There are many acoustic drum sample packs on the net, that has different variations of the same drum sound. Put all the variations of a sound in one directory, import as chops, and modulate the chop

selection with velocity, random or any other modulation source, to make some great dynamic acoustic drum beats.

Make a new directory

A new directory can be created in the root directory, or inside another directory.

To do this, touch the "MD/Del" button.

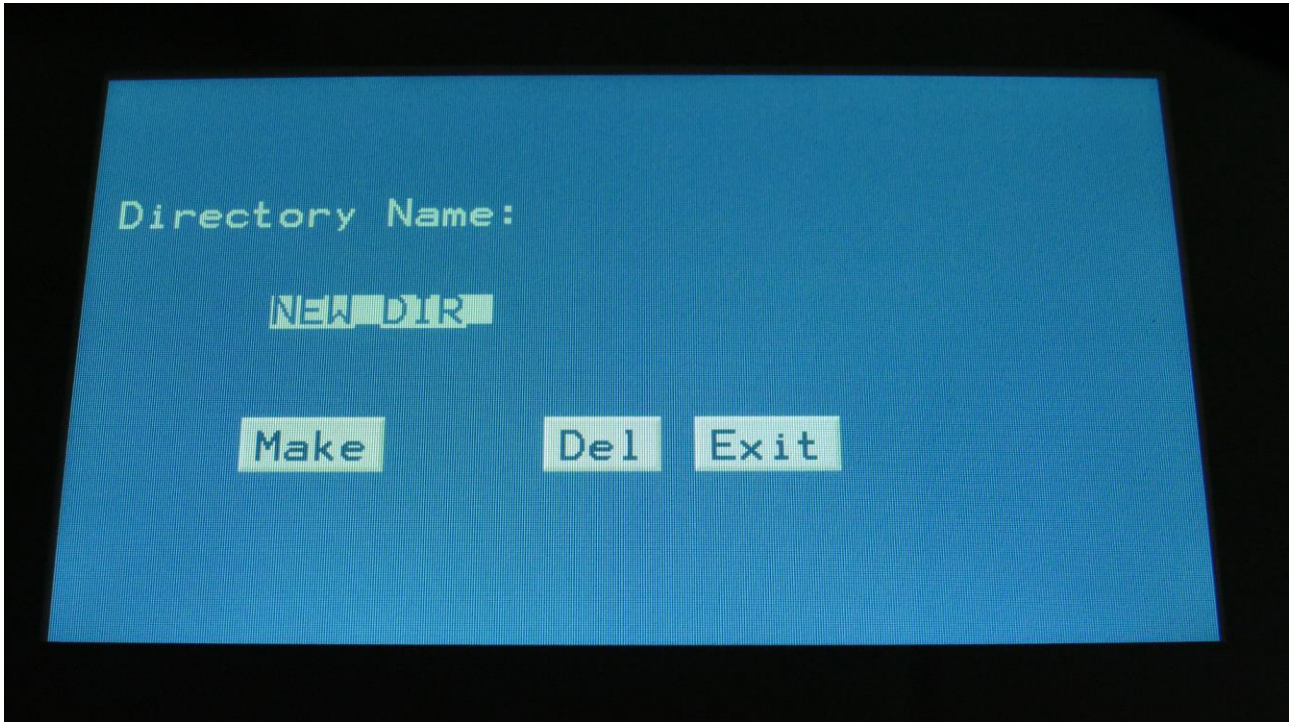


Turn the 8 edit knobs to select the 8 characters of the name for the new directory. When you are done with this, touch the "Make" button. The new directory will now be created.

You can, of course, also just touch "Exit", if you do not want to make a directory anyway.

Delete file from USB drive

It is possible to delete a file from the attached USB drive, directly from Urano.

To do this, select the file you would like to delete, and touch the "MD/Del" button.

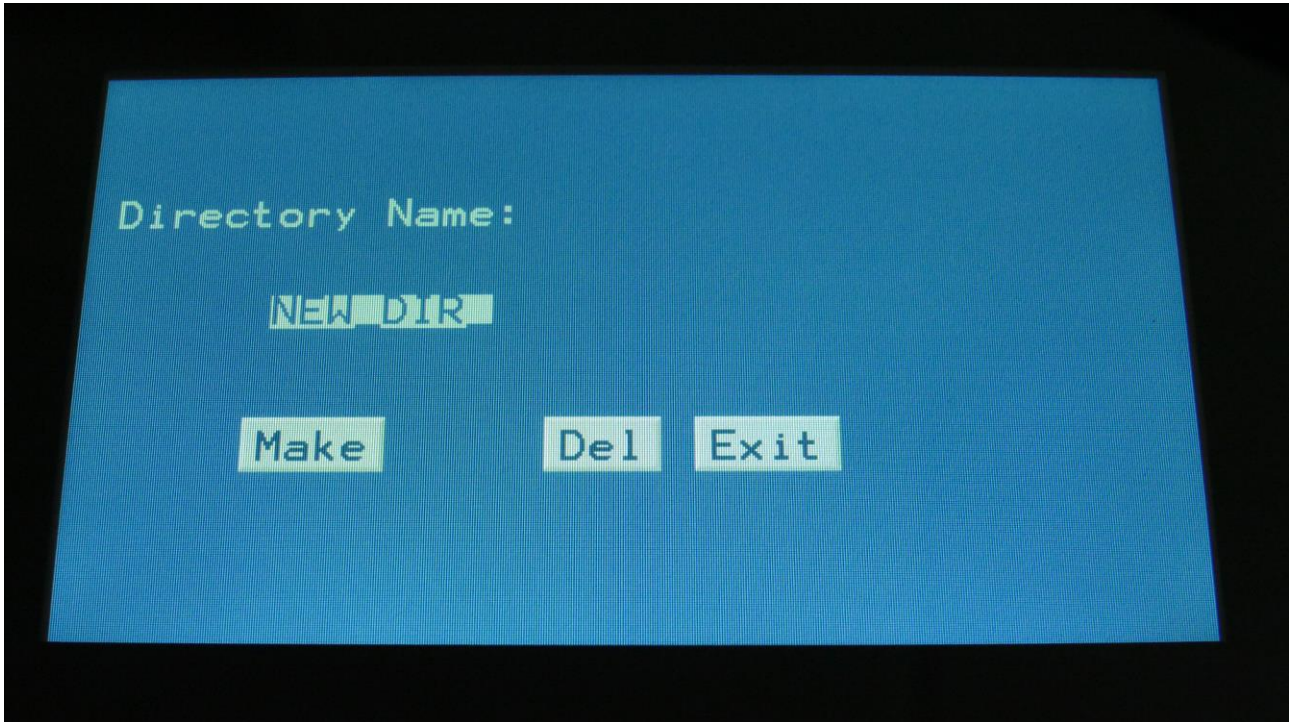


Now touch the "Del" button.

Export samples, presets, songs and User filter parameters to a USB drive

The samples, presets and songs held in Urano's FLASH memory can be exported to a USB drive, for back-up, or for use with other gear or computers. Urano exports samples as standard 16 bit, 44.1 KHz, native PCM .wav files, so they can be used with any other gear, that supports this format. Urano exports presets and songs in its own .urp/.uro format, so these can at writing moment only be used by Urano.

To enter the export page, touch the "Export" button:

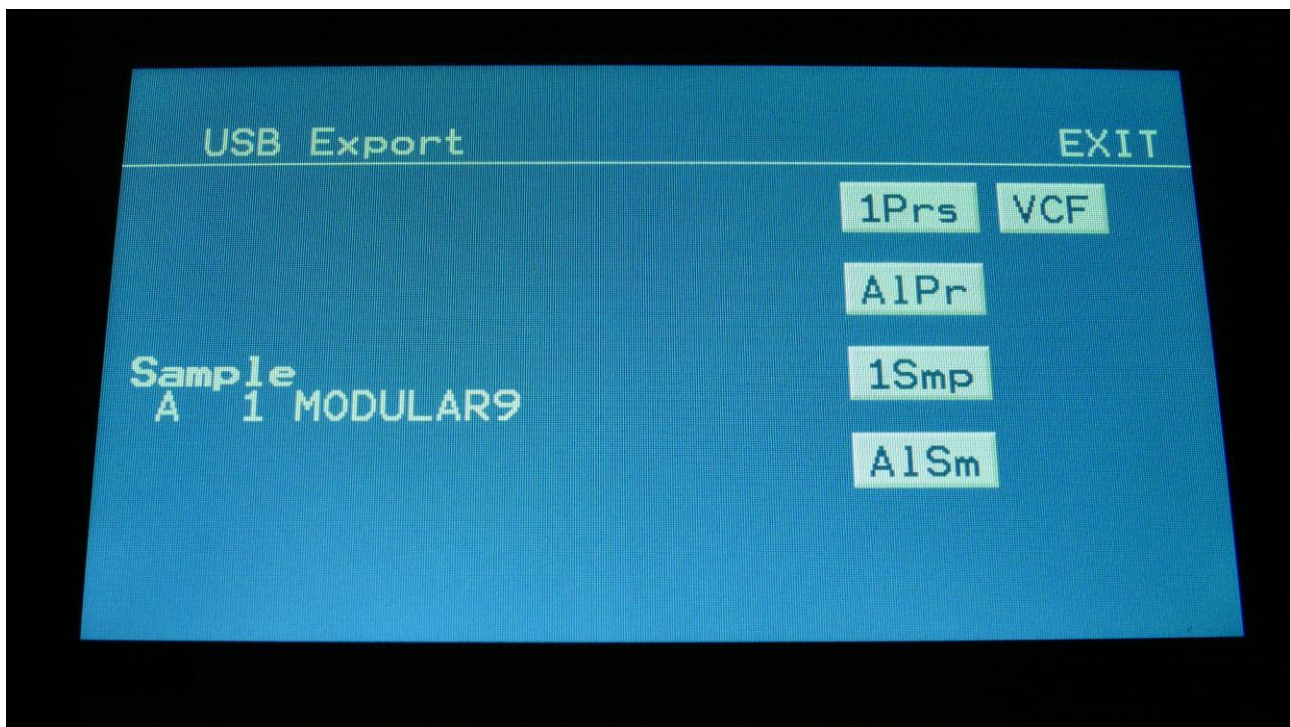

All exports are done to the currently open directory. There are 4 different possibilities for exporting:

"1Prs"

Export 1 preset (song). Touching this button will export the currently selected preset. If Urano are in song mode, it will export the selected song.

"AllPr"

Export All Presets/Songs . Touching this button will export all programmed presets. If Urano are in song mode, it will export all programmed songs.

"1Smp"

Export 1 Sample. Touching this button will export the selected sample. Turn Edit Knob 1 to select the sample bank of the sample to be exported, and turn Edit Knob 2 to select the “100’s” of the sample number, and Edit Knob 3 to select the 10’s and 1’s.

”AlSm”

Export All Samples. Touching this button will export all samples of the selected sample bank. The Sample Bank can be selected, by turning Edit Knob 1.

”VCF”

Exports the saved User filter parameters.

Updating the Urano firmware

Now and then updates will be available for Urano, that adds new functionality and fixes bugs. These will always be available for download at:

<http://www.gotharman.dk>

To update Urano, you must have a computer with an internet connection, and a Urano compatible USB drive ready. Please see www.gotharman.dk for a list of recommended USB drives. For something as important as an update, it is recommended to use a 16GB or 32GB drive, and to test it first by importing some samplings.


Then you should follow these steps:

1. Download the update file of the latest update, from the Urano Updates site, to your computer, and unzip it.
2. Connect the USB drive to your computer.
3. Make sure that the USB drive is FAT formatted.
4. Create a directory in the root directory of this USB drive, that is named "UPDATE".
If the USB drive already contains a directory called UPDATE, please delete all files inside this.
5. Copy the update file from your computer to the USB drive UPDATE directory. Make sure that no other files are present in this folder, and please don't rename the files.
6. Eject and remove the USB drive from your computer, and connect it to Urano 's USB connector.
7. Turn Urano on, if it isn't already turned on.
8. From the preset select screen, touch the EDIT field.
9. Touch USB.
10. Wait for Urano to register the USB drive, so all files and folders are presented on the screen.



11. Touch the "UPD" button.

12. Urano will now search for the "UPDATE" folder and a valid update file. If it finds both, it will ask: "Update Firmware?"

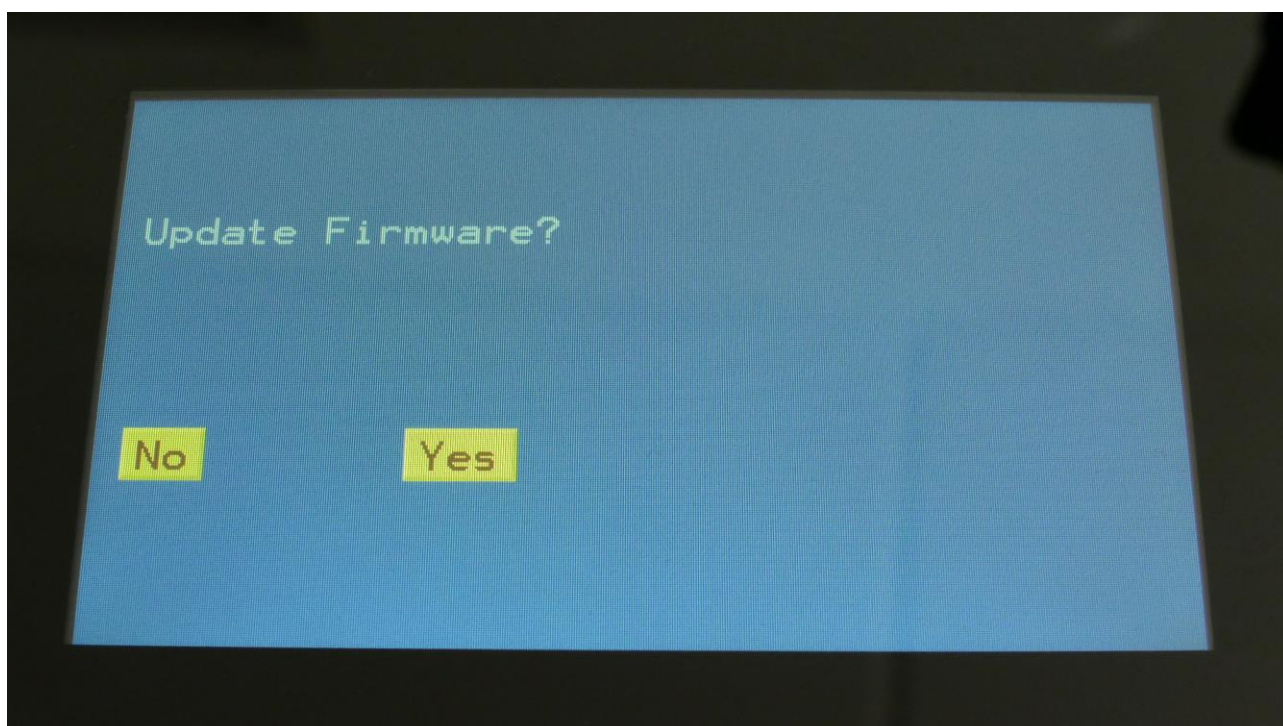


13. Touch "Yes" to proceed with updating, or "No" if you regret.


14. If you pushed Yes in step 13, Urano will now start to get the update file, and program its processor.

When it starts to program the processor, it will look like it halts for a couple of minutes. This is because it does halt, when erasing the program memory of a processor.


Erasing the program memory of the processor:

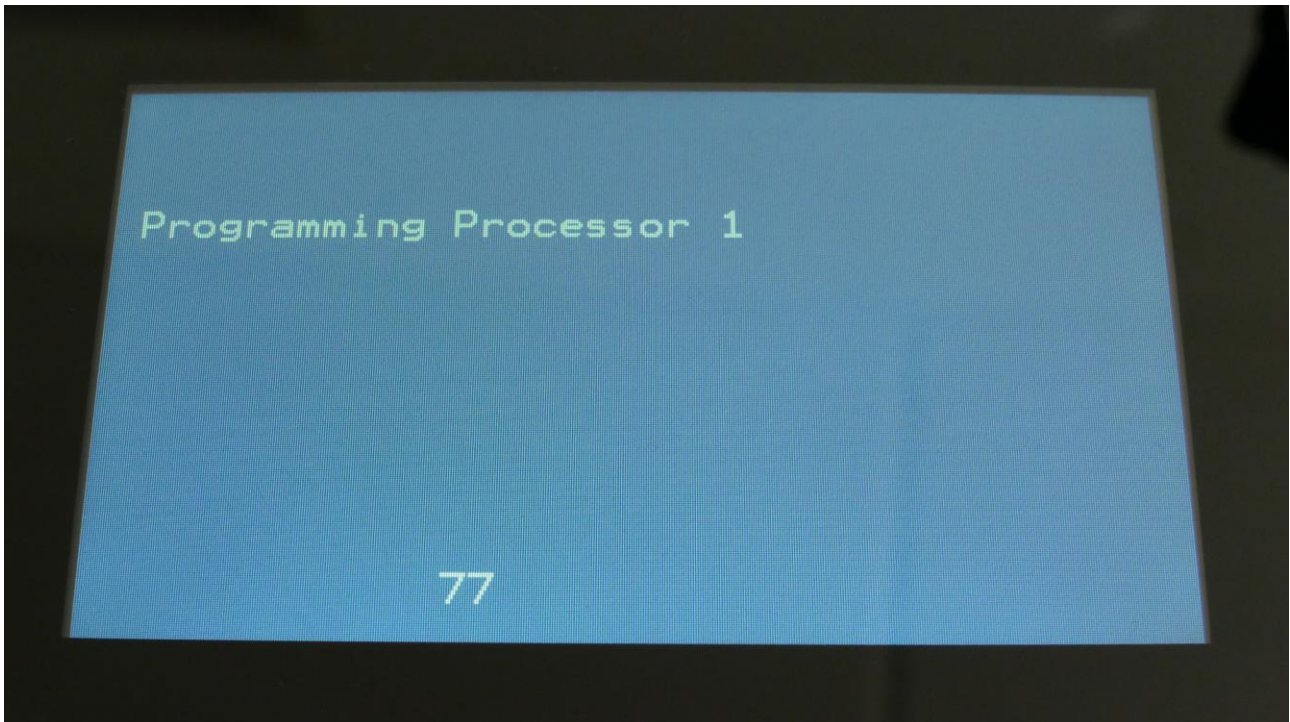

Programming processor (counter in the bottom counts up):

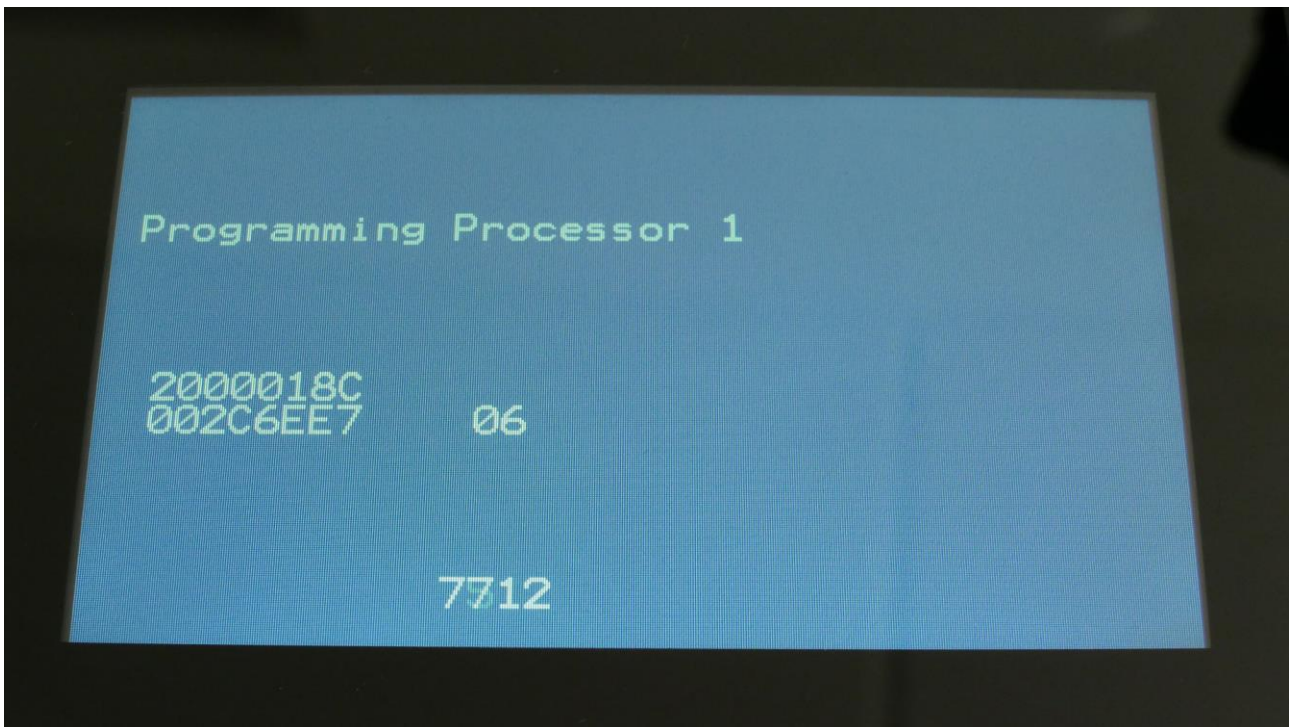

15. When programming is done, Urano will ask you to restart it. Please turn Urano off and then on again. Update is done!

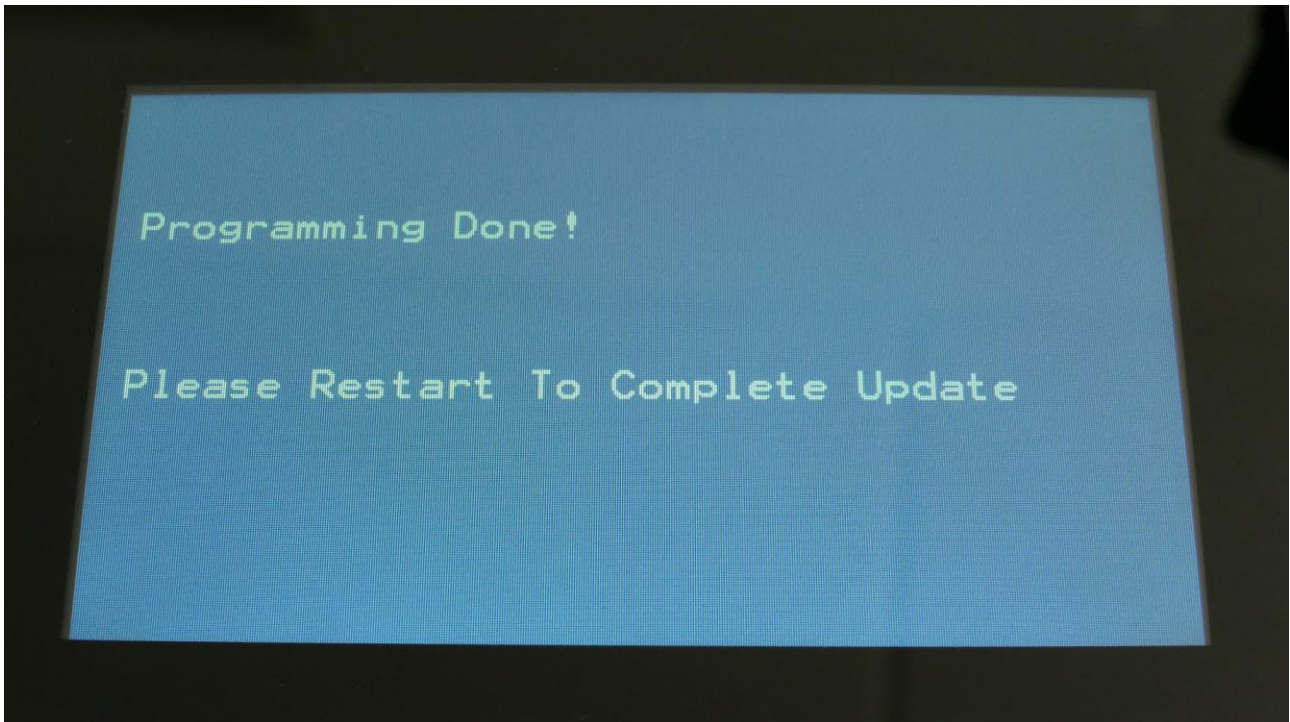

If something goes wrong:

- If the power should go off, while Urano is getting the update from the USB drive, and programming the processors, simply start over again from step 7.
- If the power should go off, while Urano is finalizing the update (3 LED's turn on and off), simply turn Urano on again, and it will now finalize the update.

MIDI Specs

Receives:

-Note on/off's on the LD3 global MIDI channel and on the individual part MIDI channels in Multi-timbral mode. These can trigger the parts and be recorded by the sequencer, when it is in realtime rec mode.

-MIDI CC 1, 2, 4, 5, 7, 8, 9, 10, 11 and 12 on the Urano global MIDI channel. All parameters that are set up to be controlled by Edit Knob 1 to 8, are also controlled by these MIDI CC's.

Morph Knob: CC1

Seq Morph Knob: CC2

Edit Knob 1: CC4

Edit Knob 2: CC5

Edit Knob 3: CC8

Edit Knob 4: CC9

Edit Knob 5: CC10

Edit Knob 6: CC11

Edit Knob 7: CC12

Edit Knob 8: CC7

CC16, touch screen keyboard Y-position on the global channel.

-Pitch Bend messages on the Urano global MIDI channel.

-MIDI clock and start/stop messages are received if the sequencer are in external sync mode.

-Program change and bank change (MIDI CC 32), if Prgr is switched on at the Common page.

Accepted bank changes:

0: Preset bank A and B.

1: Preset bank C and D.

2: Preset bank E and F.

3: Preset bank G and H.

4: Preset bank I and J.

5: Preset bank K and L.

6: Preset bank M and N.

7: Preset bank O and P.

Any other bank change messages will be ignored

Transmits:

- MIDI CC 1, 2, 4, 5, 7, 8, 9, 10, 11 and 12 on the Urano global MIDI channel, from the knobs on the Preset/Song Select screen, and on any other pages, that has no other Edit Knob functions.

CC16, touch screen keyboard Y-position on the global midi channel.

-Note on/off's on any MIDI channels from the sequencer/part system.

-MIDI CC's on any MIDI channel from the sequencer controller tracks.

Safe Boot Mode

If your Urano should ever refuse to start up, you should do this:

- Hold down trigger button 1, while turning your Urano on.
- Keep it pressed, until the main (preset select) screen appears.
- This will now look a bit different, saying SAFEMD instead of PRESET, in the upper left corner.
- In safe mode all audio are disabled. It is possible to switch preset and to update your Urano.
- Switch to the preset below the currently selected one. Turn your Urano off and on again, and see if it now boots up.
- If this does help: Please boot up in safe mode again, select the preset that caused the problem, export this to a USB drive, zip it, and send it via an email to info@gotharman.dk. Then I will inspect it.
- If this doesn't help: Get in touch with Gotharman's!

Setting the internal Trigger Out Voltage Jumper

It is possible to set the trigger outputs voltage to 5 or 12 volts. This is set by an internal jumper, so you will need to open up your Urano, to do this. This will be set to 5 volts as default, so you should only perform this operation, if you really need 12 volt triggers.


This chapter explains how.

You will need the following tools:

-A Torx T10 screwdriver

Before you open your Urano, insert the power supply in a wall socket, and touch the metal on the connector. This will unload you from any static electricity, that might damage the electronics.



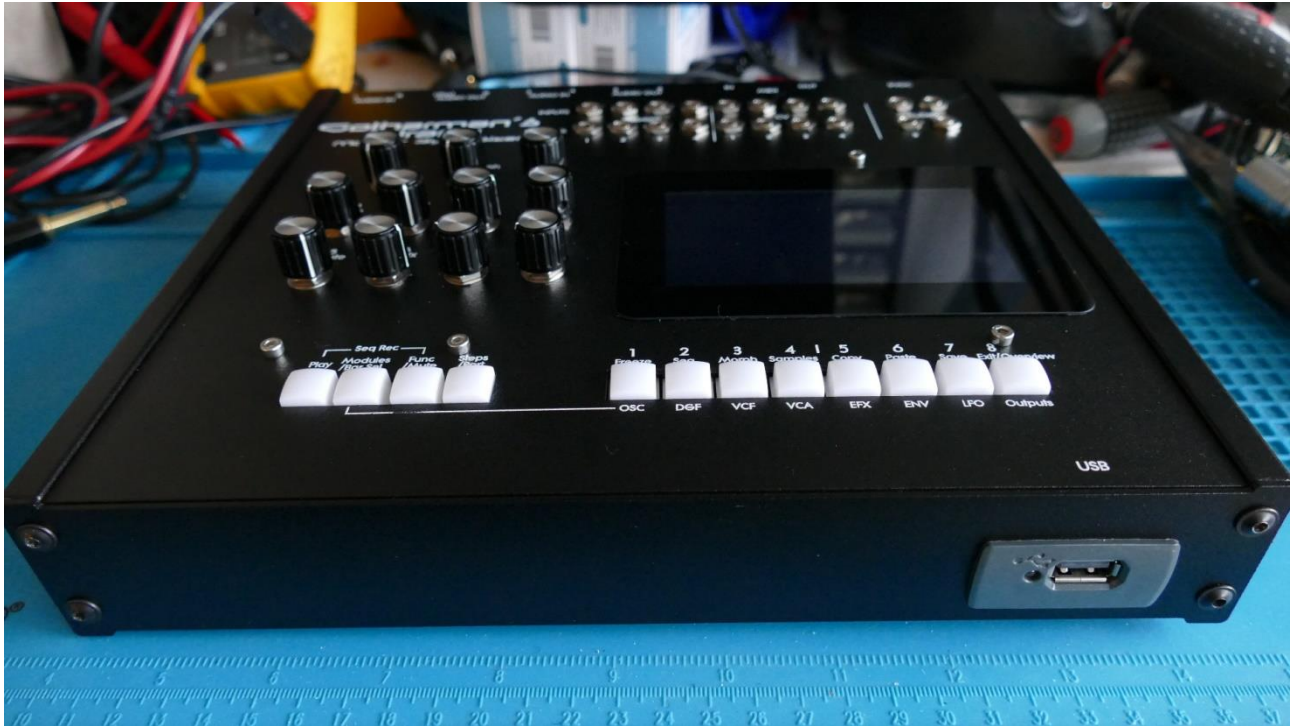


Place your Urano in front of you, so that it is placed like on the picture.




Remove the 4 hex screws, located on the front facing panel, using a T10 Torx. Place the screws in a safe place.




It should now look like this.

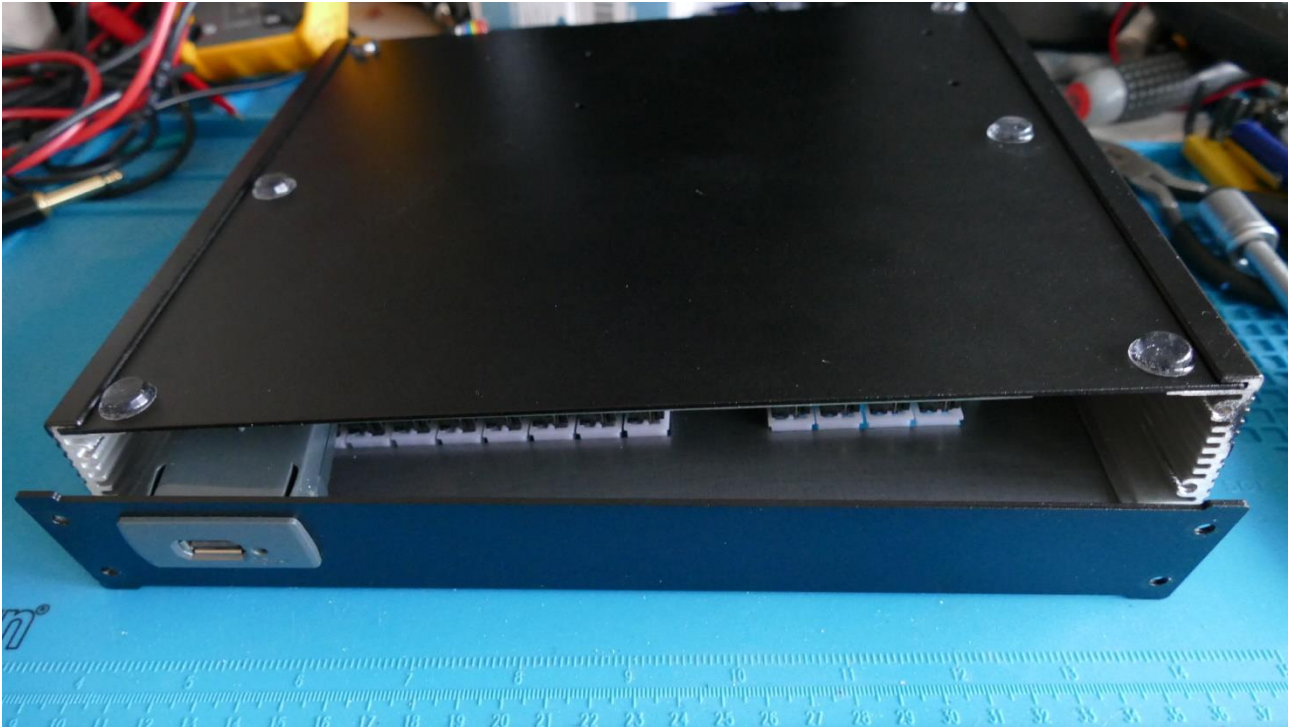


Flip your Urano around, so that the bottom is facing upwards.

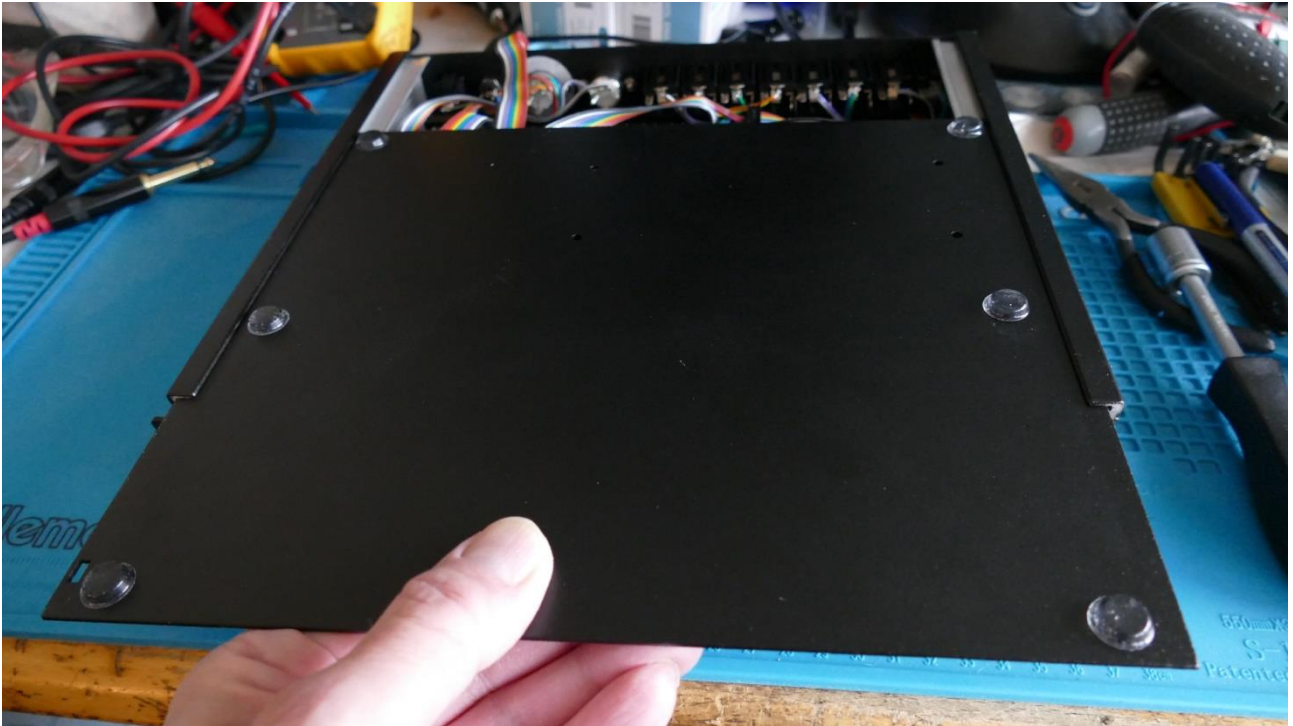


Grab the bottom panel, and slide it out very gently, and put it away.

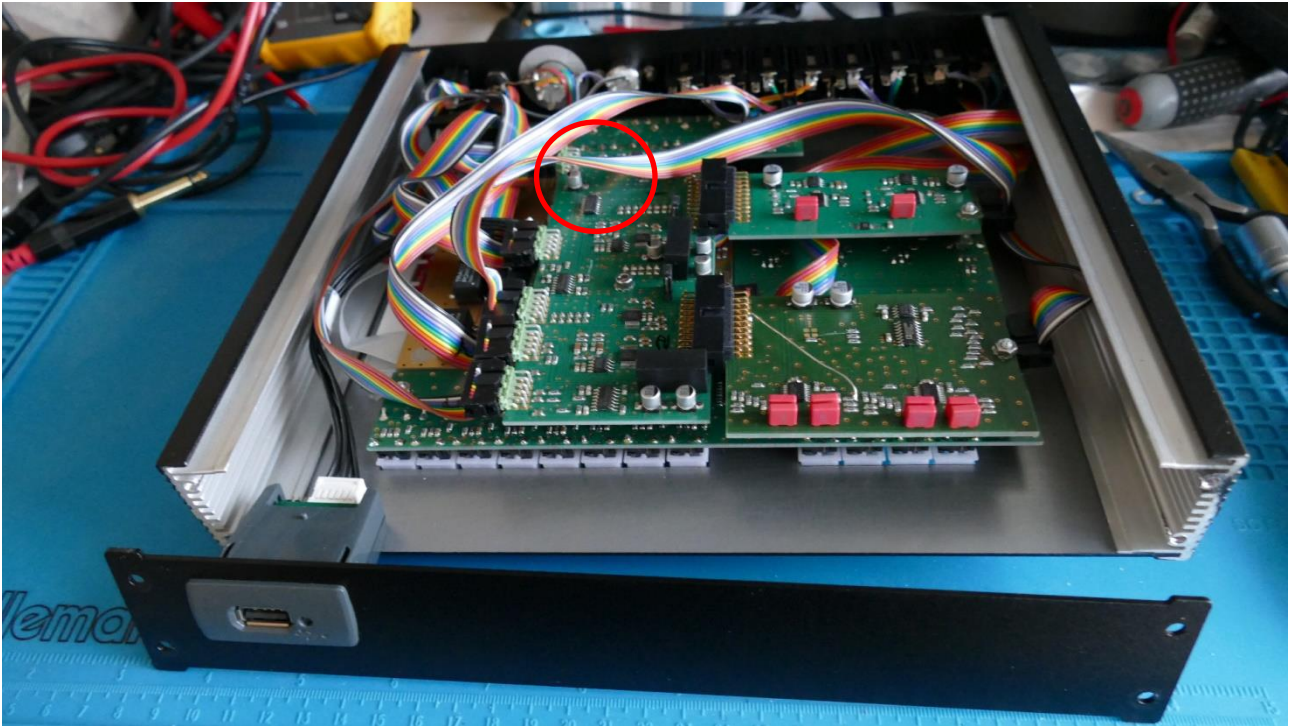

You have now successfully entered the inside of Urano! The trigger outputs voltage jumper is located inside the red circle.

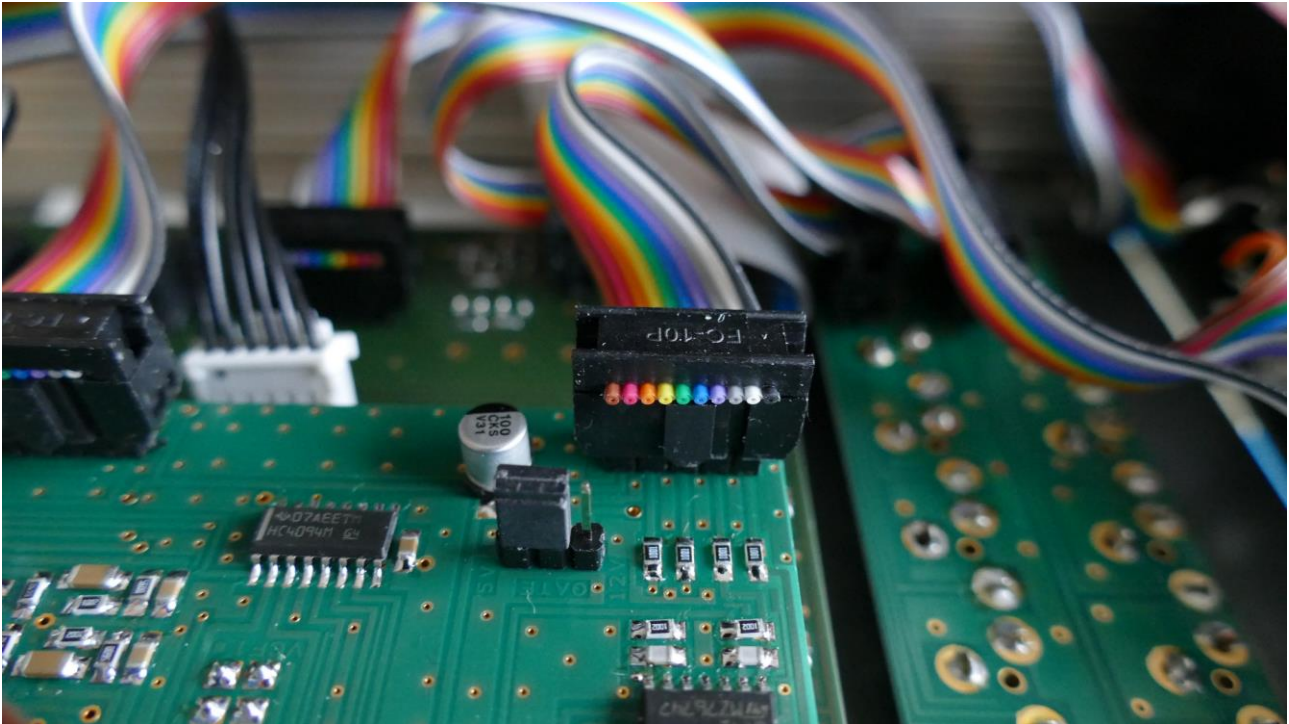

On this picture it is set to 5 volts. It will be in this setting, when leaving the Gotharman's factory.

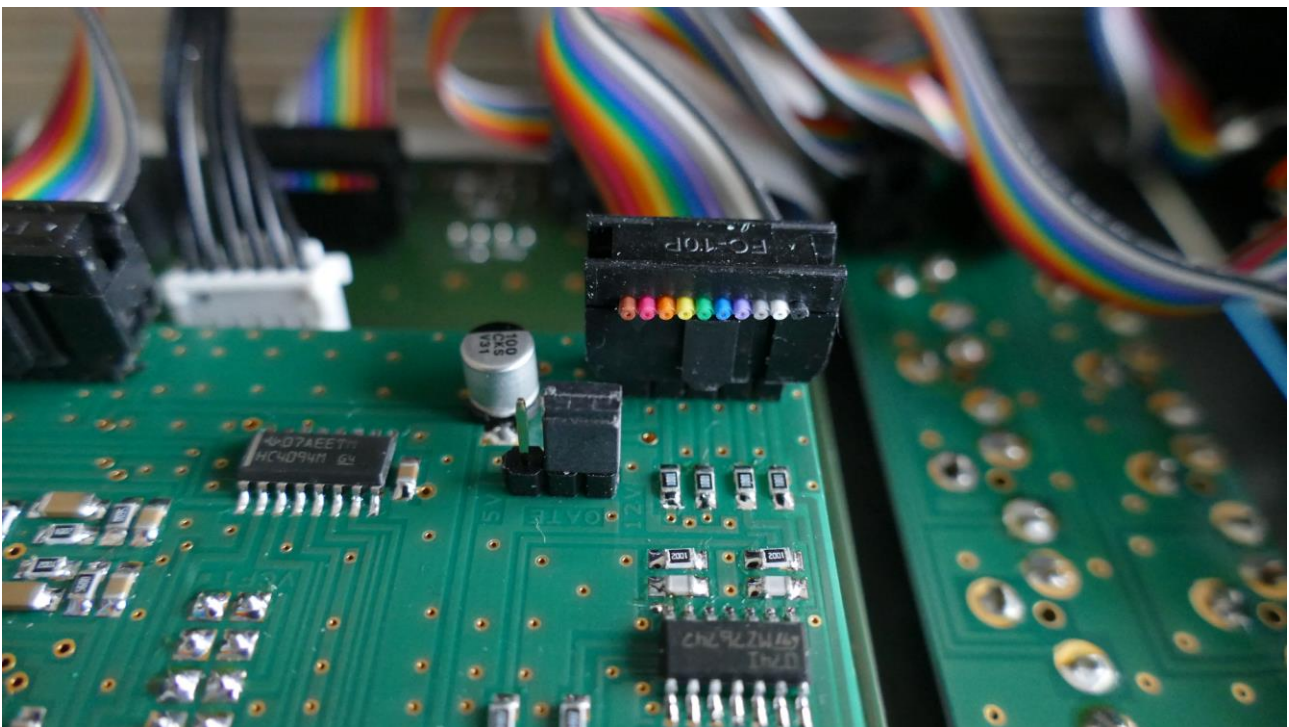

The setting for 12 volt trigger outputs.

Now it is time to put your Urano back together again.



Slide the bottom panel back in to place. Take care, that all cables are inside, and that they are not "ran over" by the panel.



Turn Urano over and mount the hex screws. You will need to hold the end panel in place, when you are mounting these screws.

Turn your Urano on and enjoy!

Installing/exchanging Analog FilterBoards


This chapter will describe how to install or exchange analog filter boards.

You will need the following tools:

- A Torx T10 screwdriver

- Something to remove a 3.5mm nut with. A 5.5mm wrench or anything else...

Before you open your Urano, insert the power supply in a wall socket, and touch the metal on the connector. This will unload you from any static electricity, that might damage the electronics.

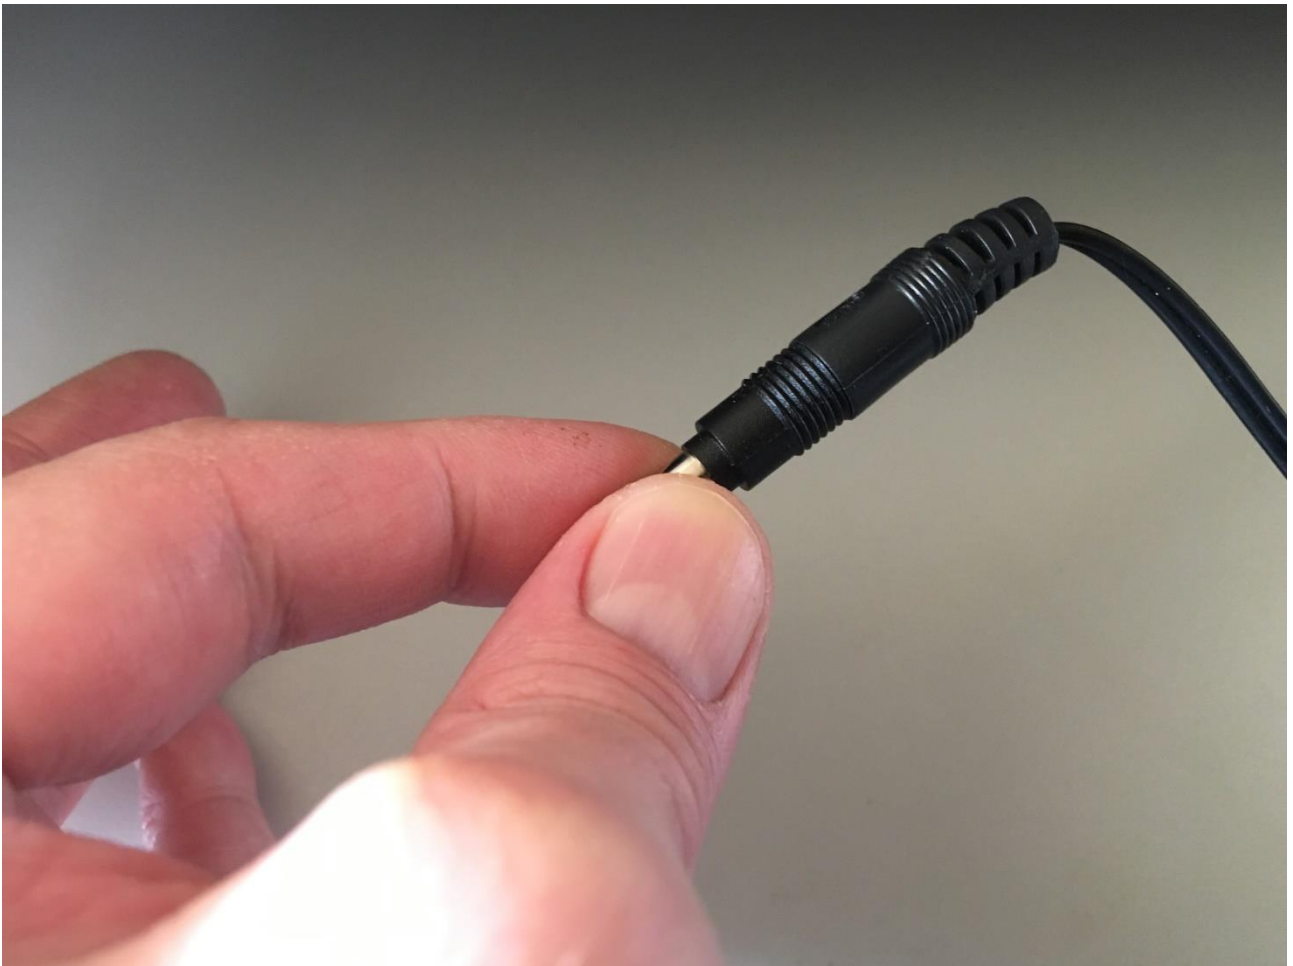




Place your Urano in front of you, so that it is placed like on the picture.



Remove the 4 hex screws, located on the front facing panel, using a T10 Torx. Place the screws in a safe place.




It should now look like this.

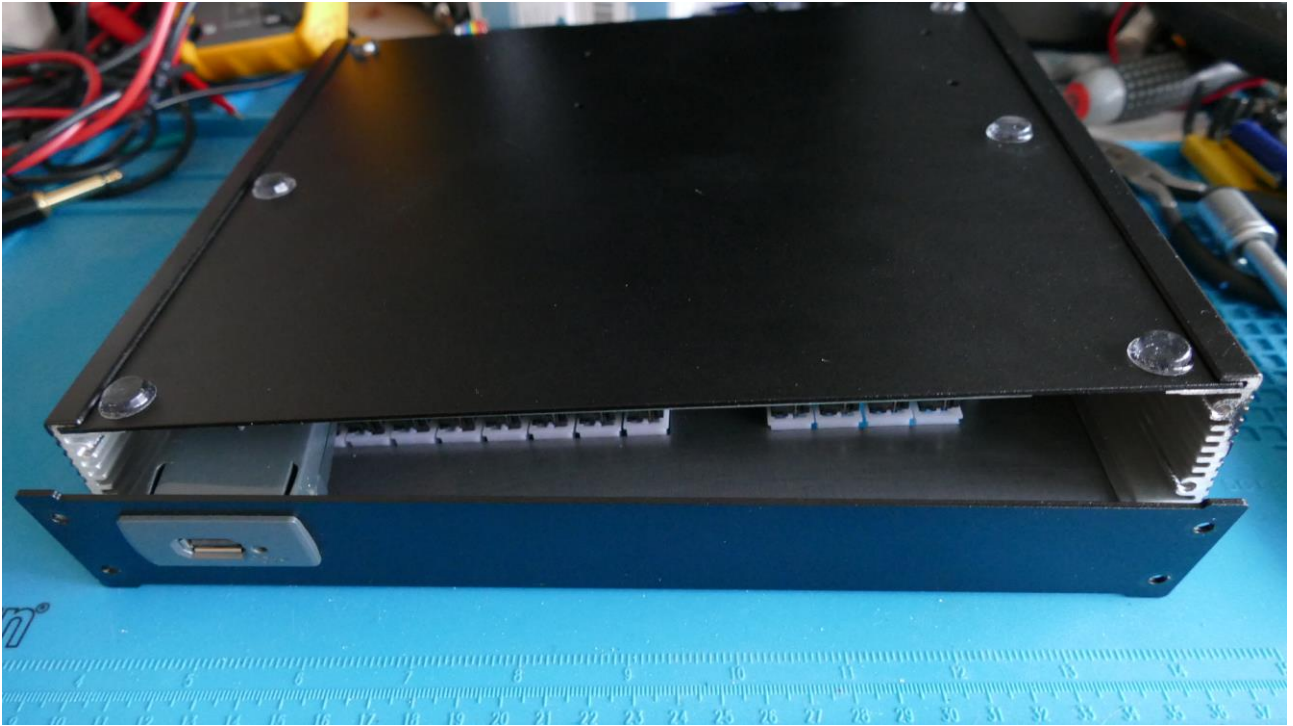


Flip your Urano around, so that the bottom is facing upwards.



Grab the bottom panel, and slide it out very gently, and put it away.

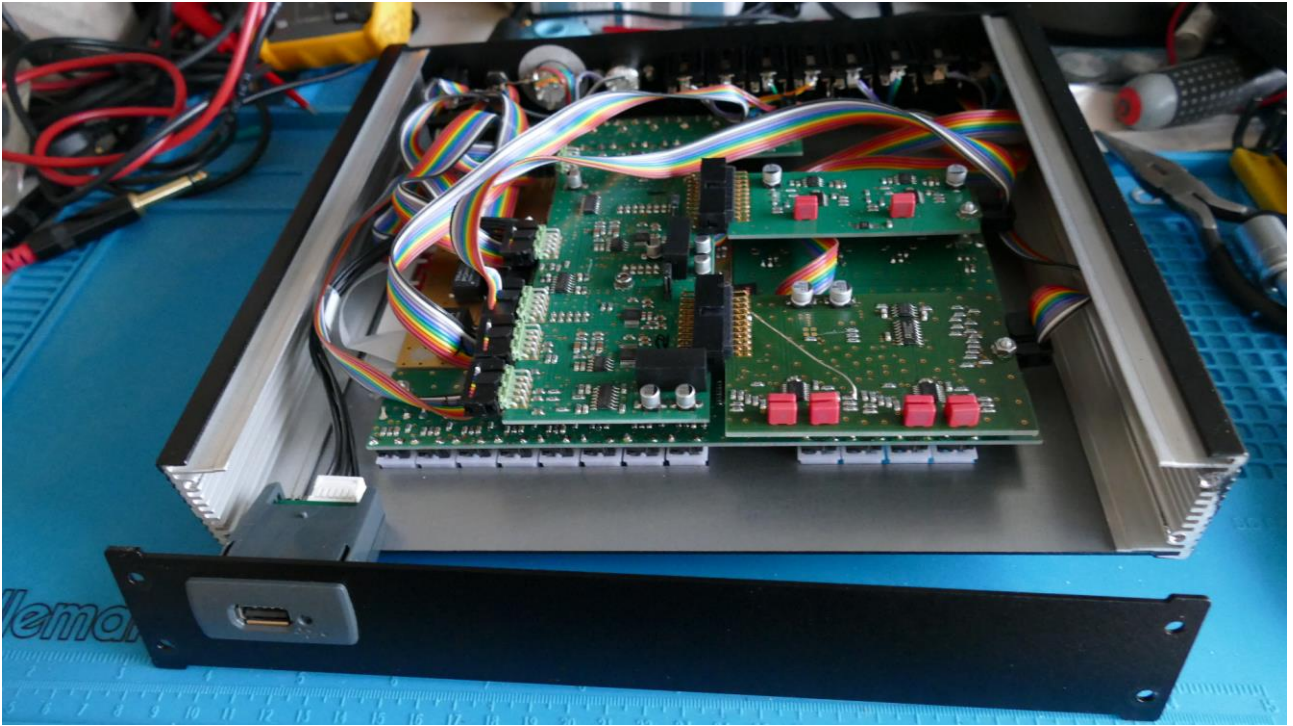


You have now successfully entered the inside of Urano!

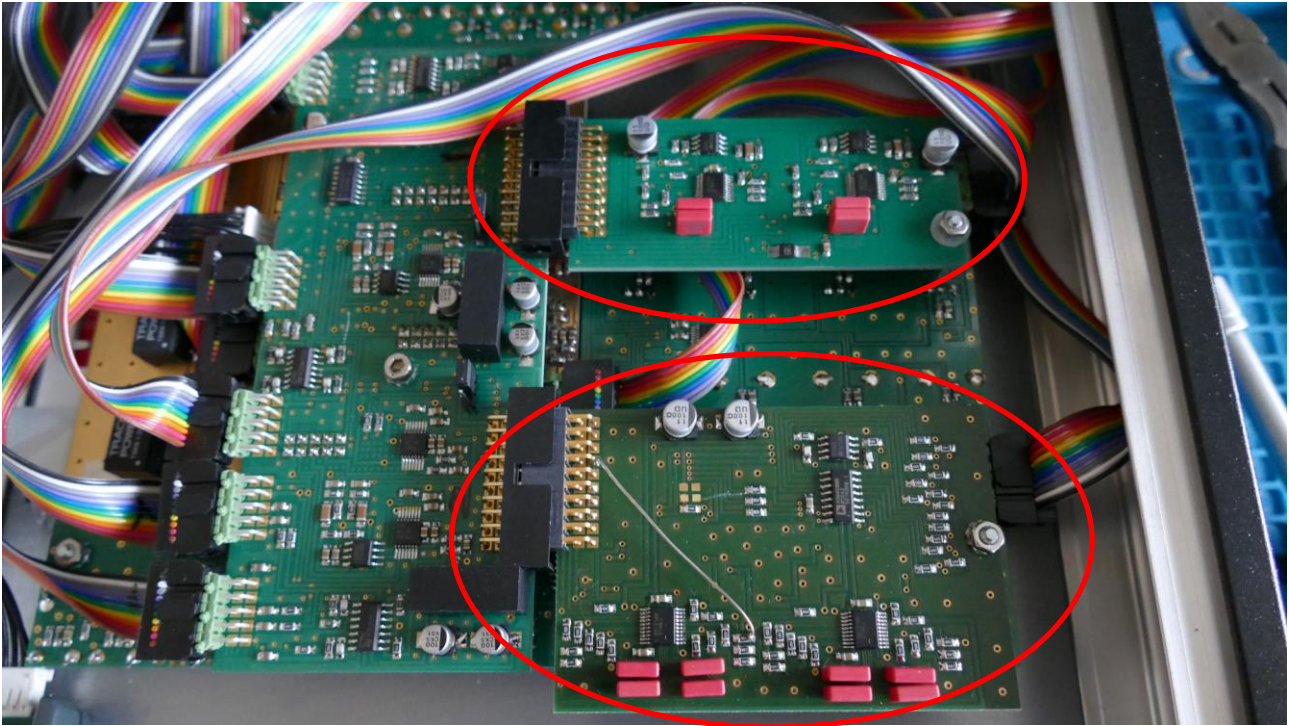

The location of the filter boards. The upper one is VCF1/3. The lower one is VCF2/4.

Remove the nut holding the filter board in place, on one or both of the filter boards.

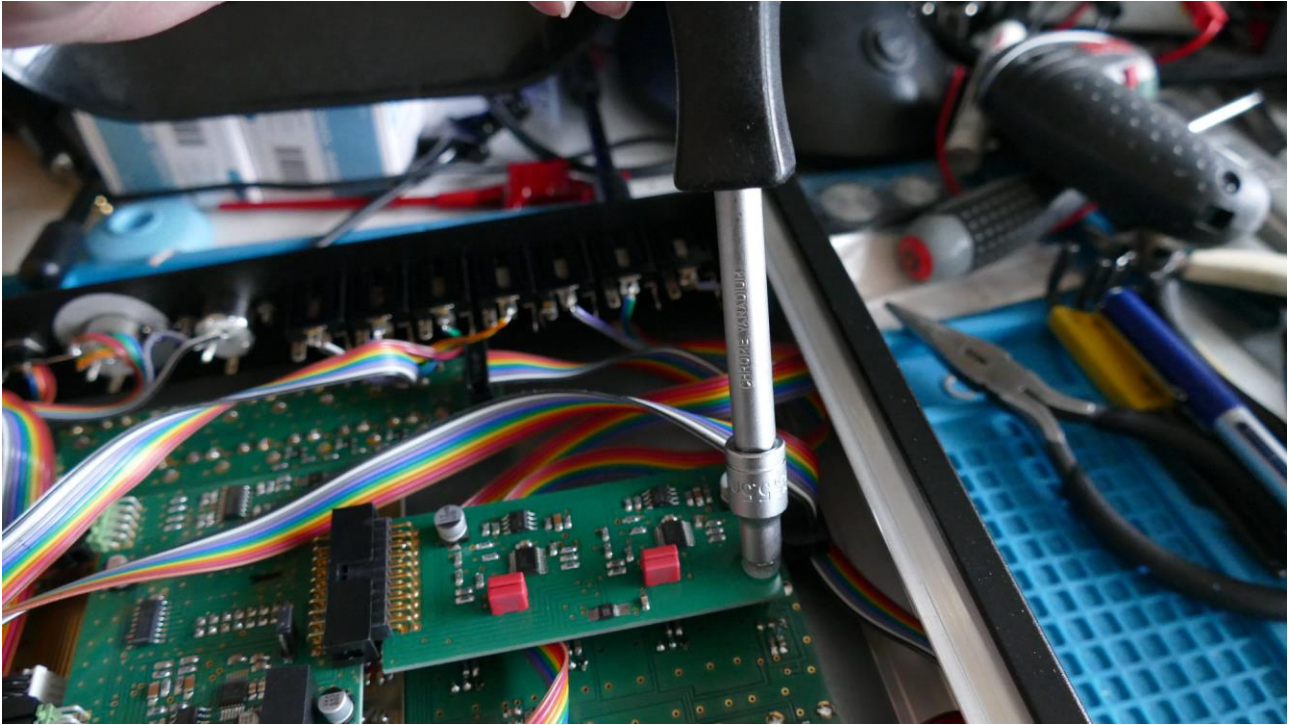



If your Urano does not yet have any filterboards installed, just remove the nut and the 3 washers.

Take care of not losing the nut and the washers.


Hold the filterboard on the sides as shown. Holding only on the sides of it, will minimize the risk of applying static electricity to the board, and damage it. **DO NOT TOUCH THE ELECTRONICS!**

Gently tweak the board out of its socket.

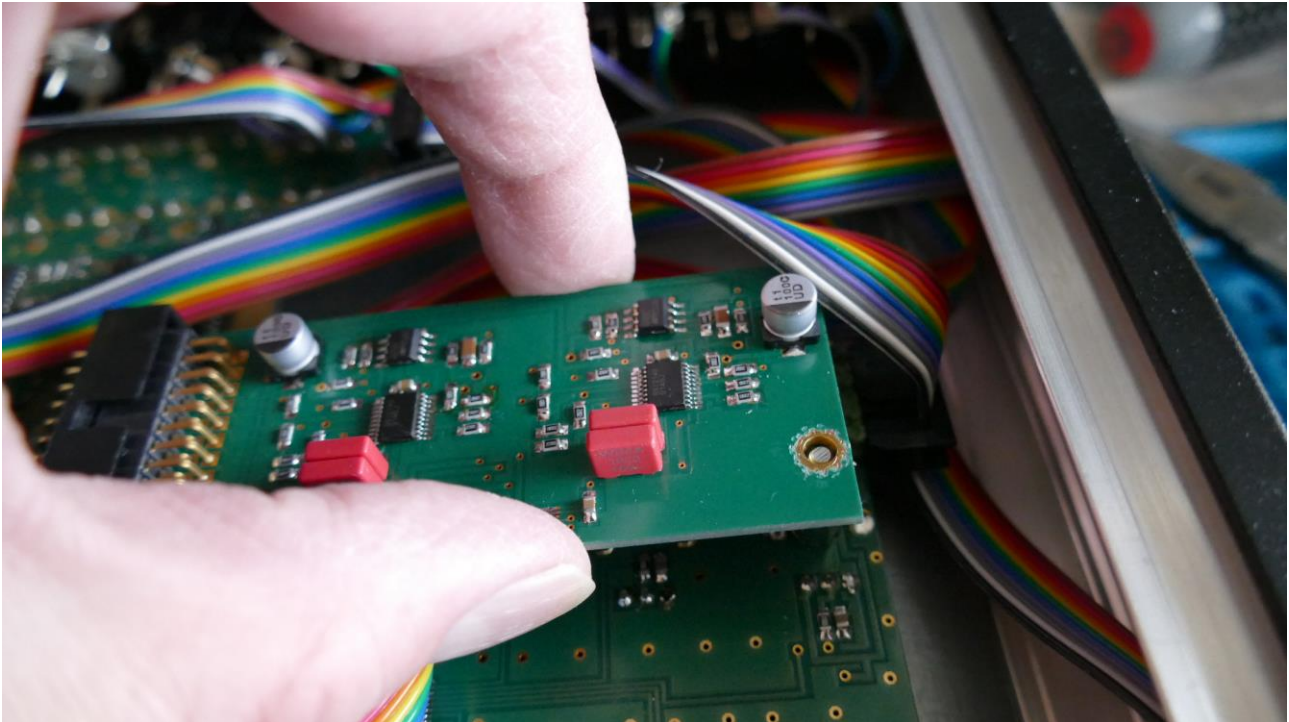


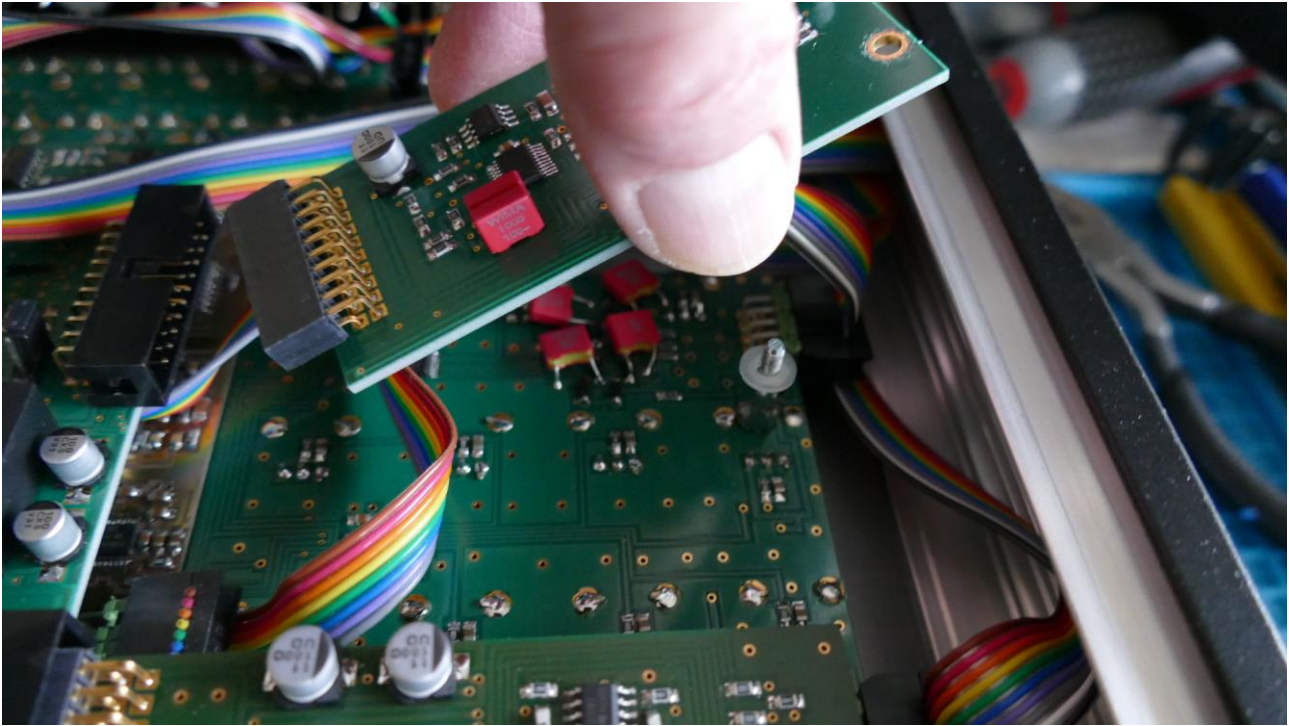


A plastic washer should be placed under the filter board.

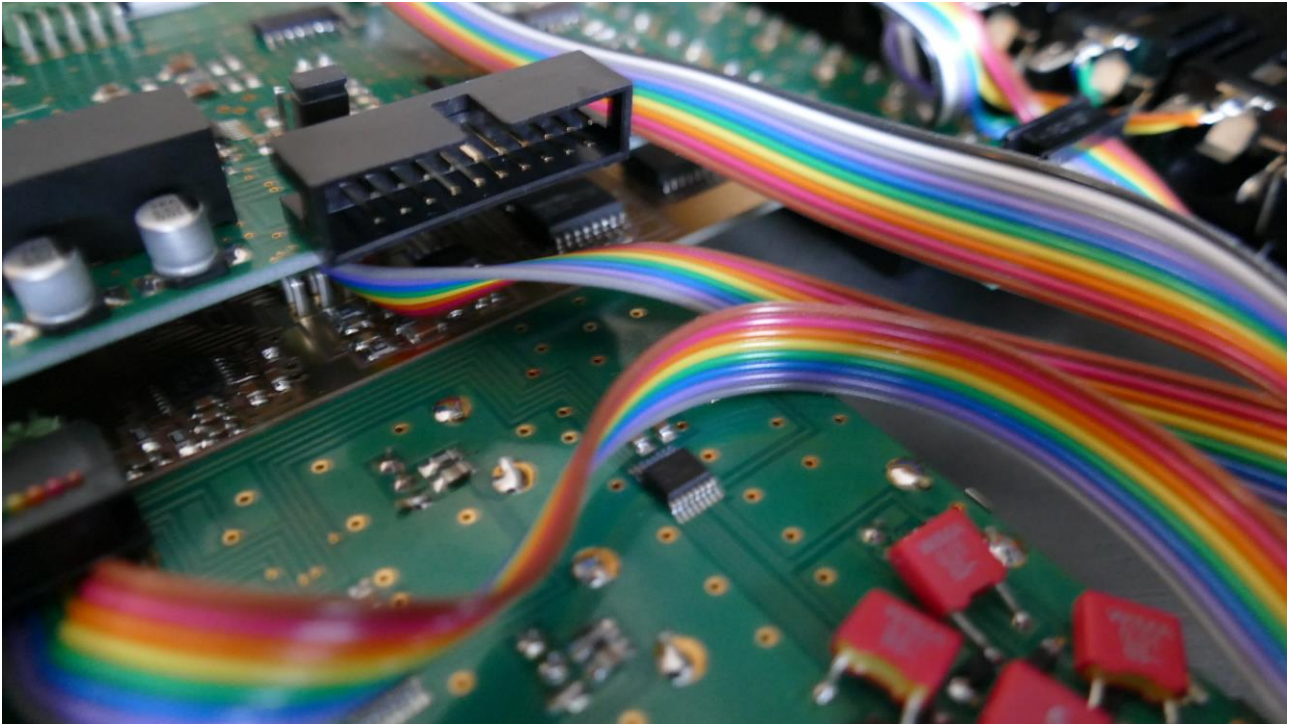


The filter board socket. The new filter board should be pushed into this, exactly in its middle.

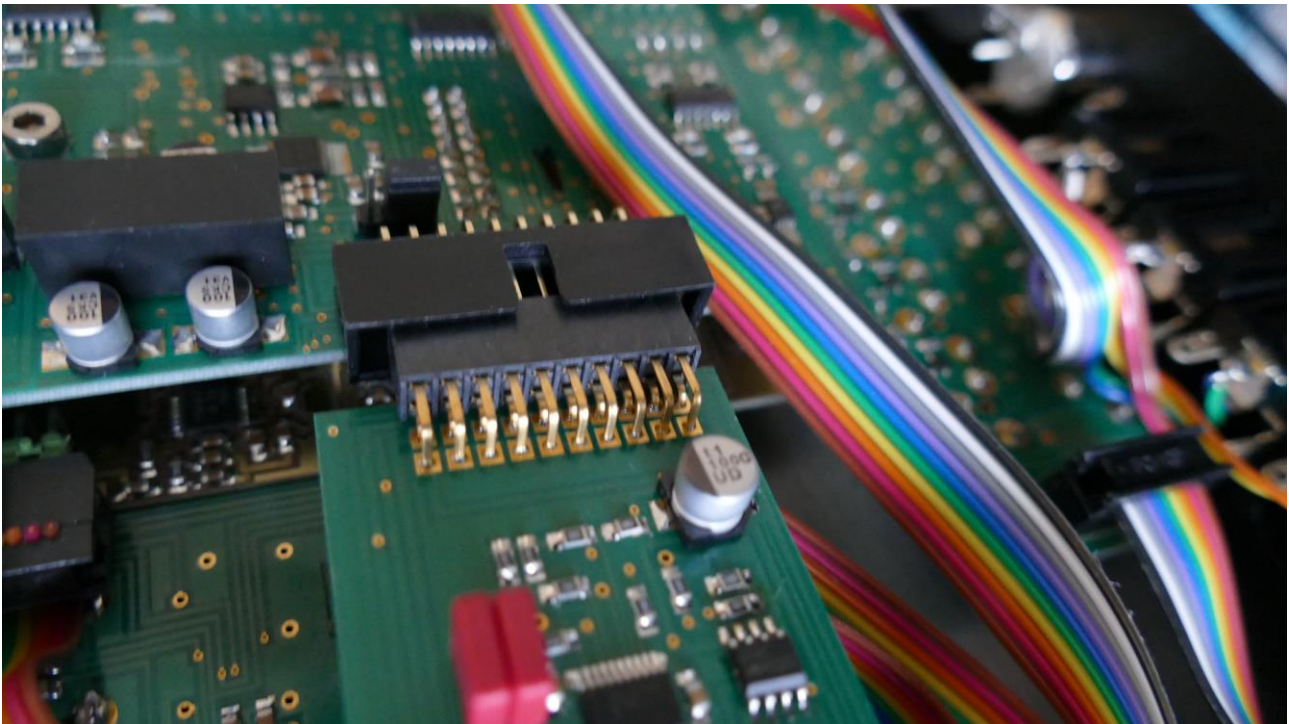

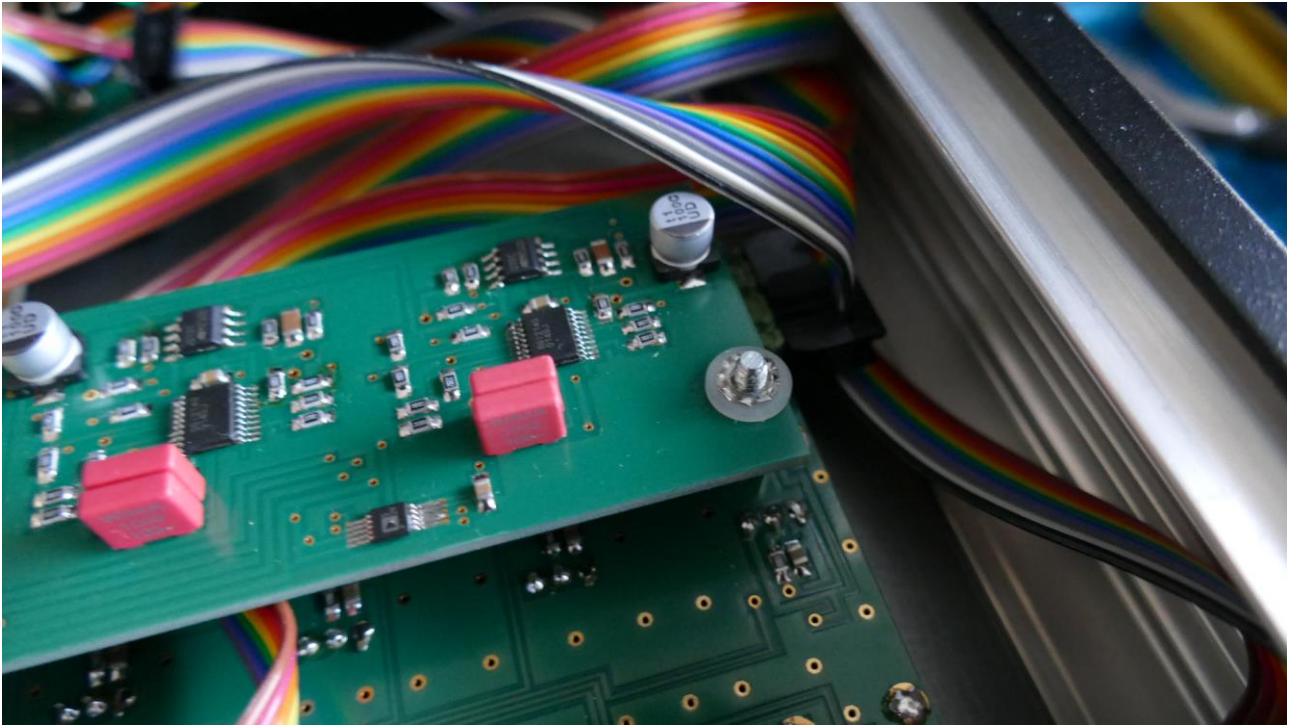


With the filter board placed, put the plastic washer back first, and then the wrinkled metal washer.

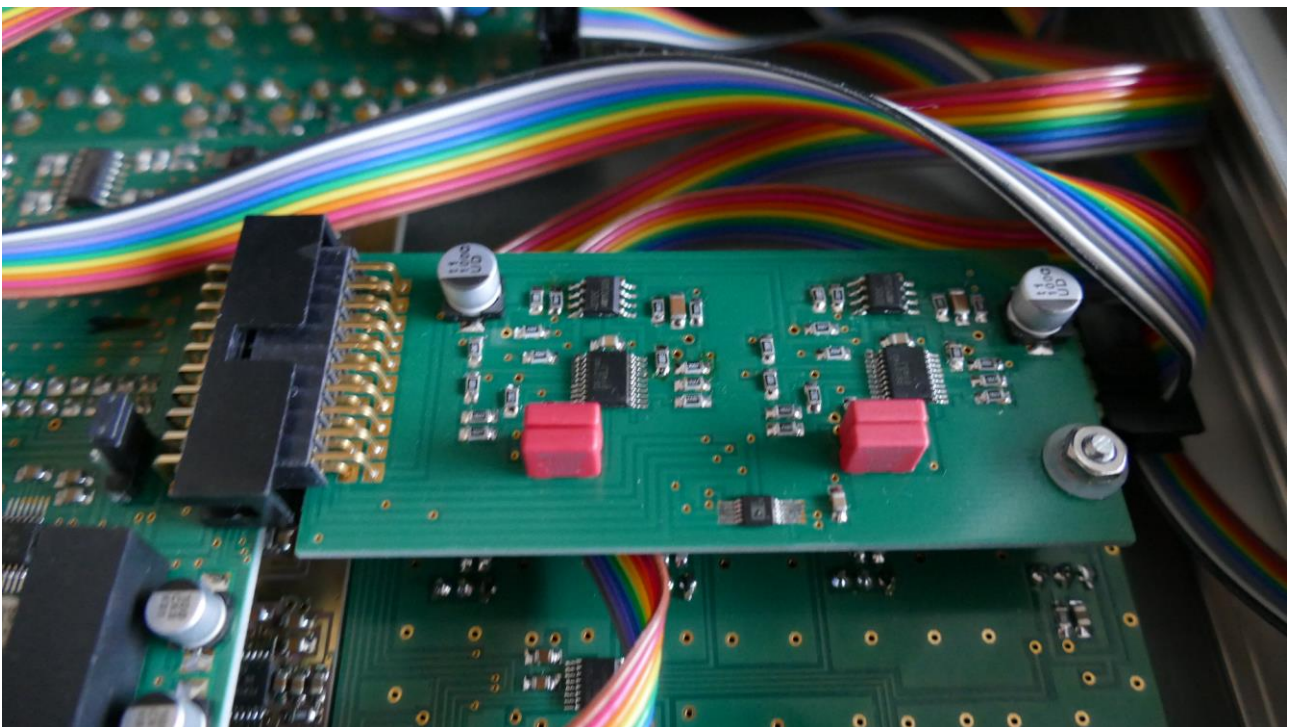


Put the nut back, and tighten it.

Setting the filter board jumpers

For each filter board Urano has a jumper, which needs to be set, according to if you installed single or a dual filter.

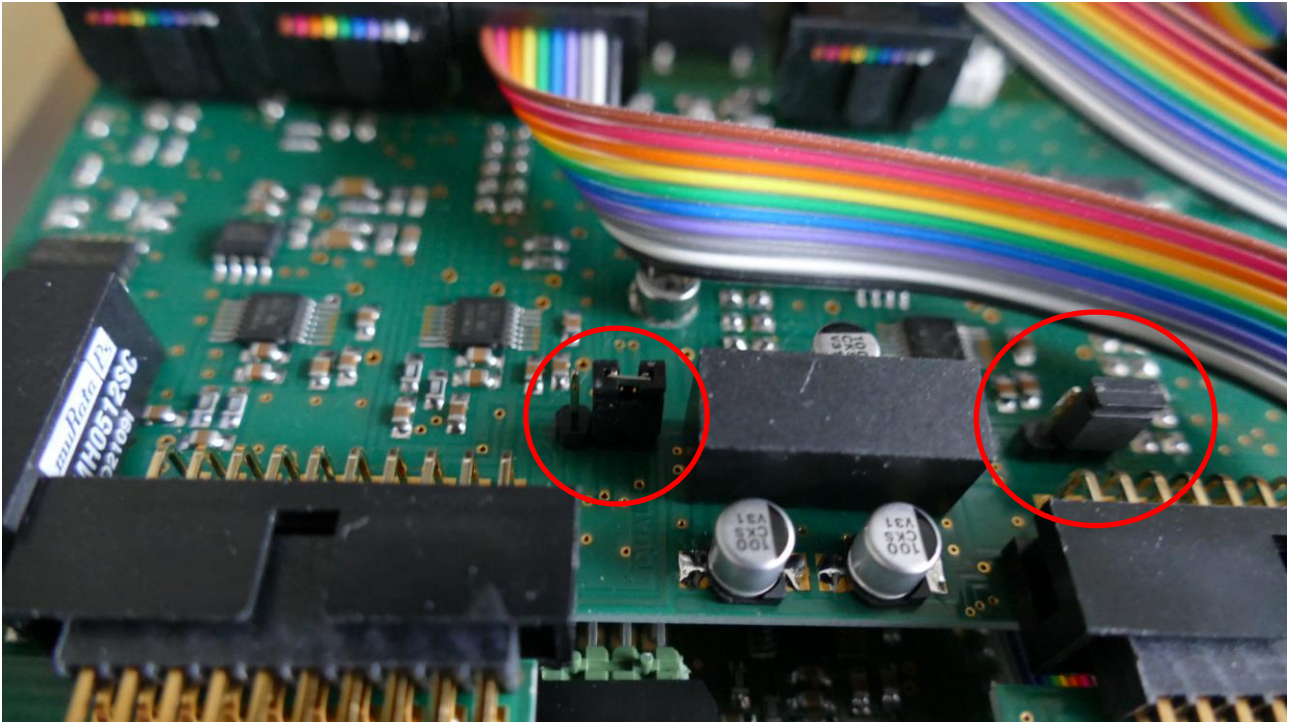


The jumpers are located near the filter board connectors. On this picture, both jumpers are set to dual filters.

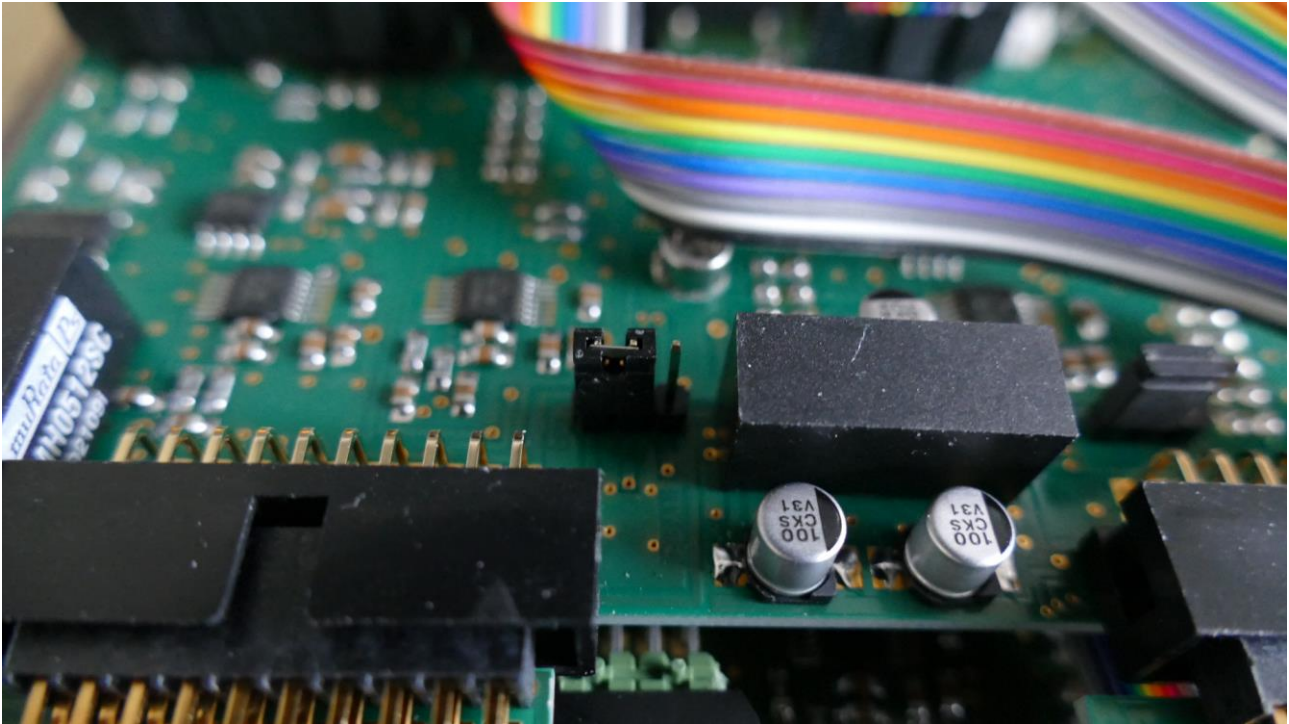

On this picture, a jumper is set to single filter.

Please set these jumpers as required. VCF50 and upwards are dual channel filters. All VCF's numbered lower than 50 are single channel filters.

You have now successfully installed a filter board!
Now it is time to put your Urano back together again.

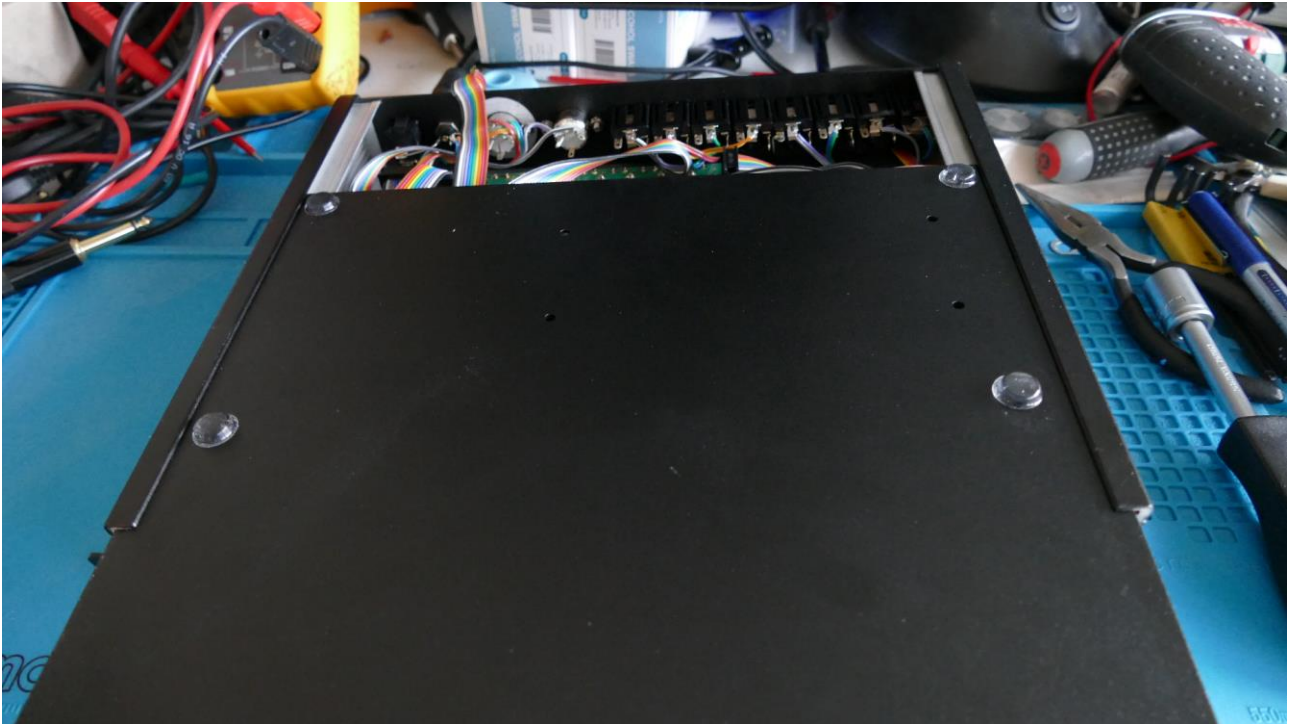


Slide the bottom panel back in to place. Take care, that all cables are inside, and that they are not "ran over" by the panel.



Turn Urano over and mount the hex screws. You will need to hold the end panel in place, when you are mounting these screws.

Turn your Urano on and enjoy!

History

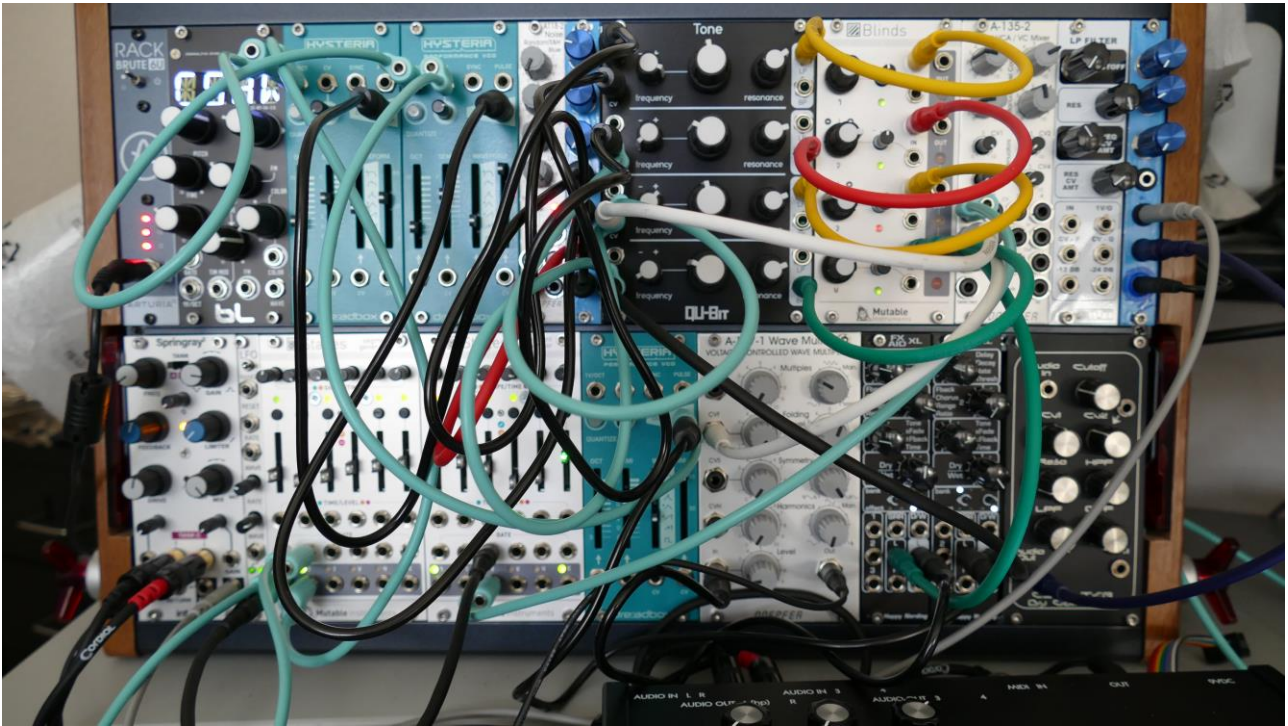


In the Christmas holidays 2020 I couldn't go anywhere on holidays, because of the pandemic travel restrictions, so I could right as well assemble a eurorack system. I did not have room for this on my studio desk, so I placed it on my computer desk. Soon I realized, that I needed a keyboard, a sequencer, and I would also like to have a sampler. How could I get this in the middle of the holidays? So I rebuilt a Tiny LD :) (Ok, I could have just moved one of my two LD3's from my studio desk to my computer desk, but that wouldn't have been fun, would it?) :)

I started out by putting a Tiny LD into a large plastic box, and added a slightly larger display, for better touch keyboard action.



This was however too big for my desk, and felt quite impractical. So I was putting the Tiny LD back in a Tiny LD case.



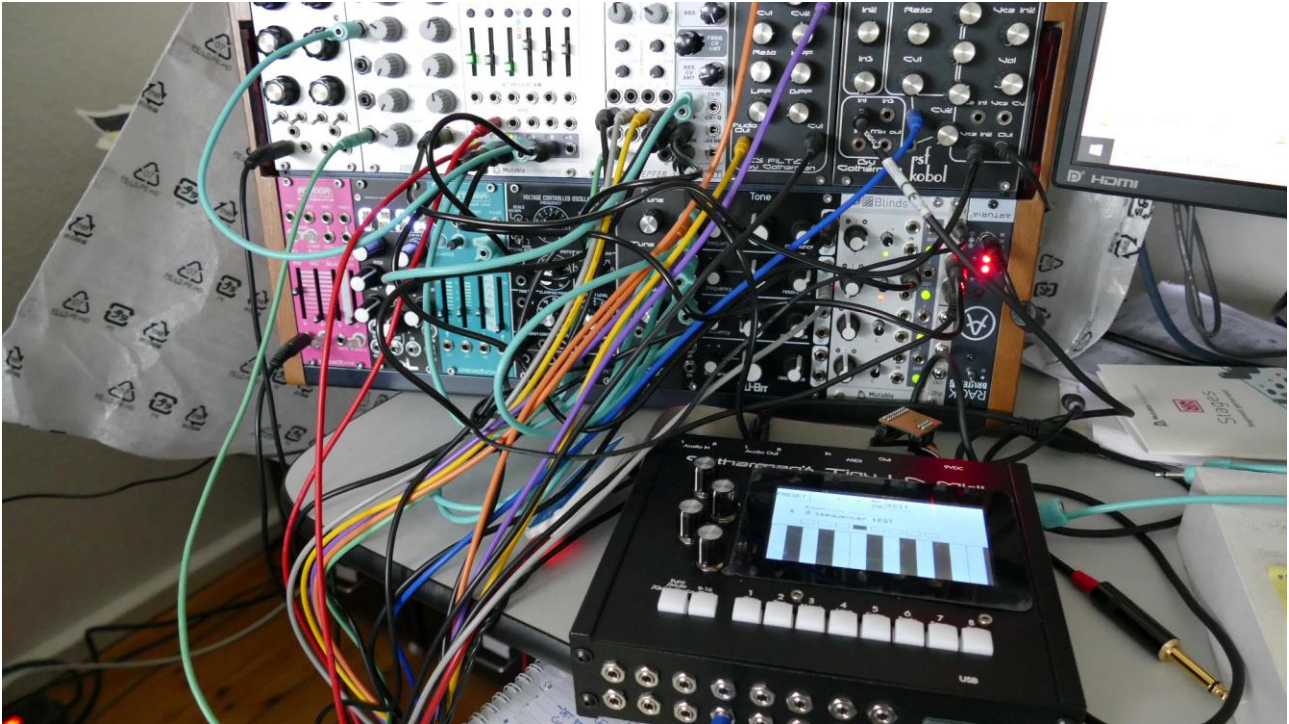

There wasn't room for all the required electronics in the small box, so not all of the minijack connectors worked (only the 4 trigger ins and outs worked), but it was ok for the Christmas holidays...

While playing with it, I got more and more ideas, and one day it grew up!



Urano Specs

Released: October 2021.

- 1024 user storable presets and 1024 user storable songs.
- 8 parts . Modules can be assigned to the parts, for multiple sounds at the same time.
- 67 modules:
 - 8 Oscillators - Waveforms (morph from sine to triangle to sawtooth to pulse to feedwave), resonator oscillator, Draw waveform oscillator, harmonic oscillator, Sine Function oscillator, noise, drum oscillators (3 x percussion, 2 x cymbal, clap), sample playback, wavetables.
 - Up to 4 analog filters . Compatible with the Gotharman filter board system. A pair of new dual line filterboards are installed as standard.
 - 8 digital filters - 27 filter types. Standard filters, triple filters, sharp filters, tube filters...
 - 8 VCA's - with ADSR envelope, various curves and a clip parameter. Can be triggered by any source.
 - 8 Effects Processors - Many of the LD effects plus a new reverb, a wavefolder and some new pitch effects.
 - 8 LFO's - With variable waveform, curve and draw waveforms. Key syncable.
 - 8 Envelopes - ADSR + decay envelope with loop options. Can be triggered by any source.
 - 5 Random Generators .
 - 4 Ring VCA's/Logic modules.
 - 2 Mixer modules , that can add extra inputs to any module.
 - Output module - Sends up to 8 sources to the outputs, and handles the stereo panning.
 - Trigger Input module - Assign the trigger inputs to parts and sequencer functions.
 - Trigger Output module - Sends any sources to the trigger outputs.

- CV Output module - Send any sources to the CV outputs. Can scale to 1V/oct and 1.2V/oct.

-Sample time: Available with either 18 minutes (91MB) or 43 minutes (217MB), max 2.048 samplings, or 93 minutes (477MB) or 193 minutes (977MB) of mono samplings, max 8.192 samplings, kept in super reliable NOR FLASH memory. Samplings are immediately available when turning on -No loading time. Samplings are kept in 1 to 4 banks. Each bank holds up to 2048 samplings. Each sampling can hold up to 64 (non-destructive) chop points.

-8 sequencer note tracks . Can be set to internal or MIDI out. Up to 64 steps per track and settable resolution. Position subtrack makes it possible for any step to play back at any position.

-16 sequencer controller tracks . Can transmit MIDI CC's. Up to 128 steps per track and settable resolution.

-Synthesizer Morph Knob and Sequencer Morph Knob.

-USB: Connect a USB drive for importing and exporting of wav samplings, presets and songs, and for updating the firmware. Imports: Urano presets and songs, wav samplings, 44.1 KHz 16 or 24 bit, broadcast wavs, cue points (will be used as chop points or loop points). Exports: Urano presets and songs, wav samplings 16 bit, 44.1 KHz. Chop points are exported as cue points, for use with many computer programs.

Audio : Stereo in and out, in and out 3 and 4. Left output also functions as a headphone connector.
Audio system :

-Inputs and outputs: 24 bit, 44.1 KHz Cirrus Logic high end ADC/DAC.

-Internal: 32 bit, 44.1 KHz.

-Sampler: 16 bit, 44.1 KHz.

-Maximum audio latency : 1 sample - 22 uS (microseconds). 450 times faster than Linux based instruments!!!

-MIDI : In and out.

-High quality MultiMec pushbuttons that should be able to withstand 1.000.000 operations.

The knobs has solid metal shafts.

Box is made of steel and aluminium.

Size : 26.5 x 22.5 x 4.5 cm

Weight : 2.4 KG